



AMMO BLUETOOTH SPEAKER
SC-AMMO

By:

soundcue.®

Thank you for choosing Soundcue® as your choice of audio powerhouse. To ensure correct operation and longevity of your Soundcue® Bluetooth® AMMO speaker, please read this user manual carefully before use.

Lia The Exclusive Voice of Soundcue | Tones by **Bandbasher Inc.**

Important Safety Instructions

- Charge the speaker to full capacity when using for the first time.
- Keep speaker away from any source of heat.
- Charge speaker for only the required time, excessive prolonged charging can damage the battery lifetime.
- When the battery level is low, the indicator light will flash and the voice prompt "out of battery" will let you know, please charge battery in time. Over killing battery affects battery longevity.
- If speaker will not be used for a long time and stored, please recharge at least once a month, in order to prevent the lithium battery from excessive consumption.
- Adjust the volume to appropriate level to avoid disturbing others.

Specifications:

Driver: [76mm 4Ω Bass] x 2 + [35mm 6Ω high frequency] x 2 + passive radiator x 2

Output:25W (10W x 2 +2.5W x 2)

Power Input:DC 5V 2A

Channel: 2.1

Aux In:3.5mm

FM Frequency: 87.5MHz ~ 108MHz

Built-in Battery 2200mAh x 4 (7.4V 4400 mAh) (Wh32.56)

Size: 282.5*138*145mm

Charging Time: 7-8 hours

Playing Time: 8 hours at 70% volume

Power Bank output: 2.1A

Net Weight: 2.04 kg

Bluetooth 4.2

Package Contents

Soundcue® Bluetooth® Speaker, Micro USB Cable, Aux in Cable, strap, User Manual

Features

- **Bluetooth®** wireless technology for music and mobile hands-free function
Bluetooth® 4.2 stereo music playing, support mobile hands-free function.
- **Aux-in:** Use as the external speaker by connecting to the audio source of computer, mobile device, MP3/MP4 etc.
- **Built-in EQ Modes:** With three audio effects choose between (Standard mode—Bass mode— Treble mode)
- **Micro SD Card Music playing:** Play MP3/WAV/WMA/-FLAC/APE music format, capacity up to 32G
- **FM Radio:** With built-in antenna for better signal reception, supports auto search for FM channels.
- **Card Reader and Charging Function:** The card reader and charging functions can be achieved via the same USB cable.
- **Power Bank Function:** With the built-in 8800mAh battery, you may charge a mobile phone, tablet or other digital devices [Max output at 2.1A]. Charge output function only works in MUSIC OFF position to protect battery.
- **Water-resistance at IPX4**
- **Voice guide:** The speaker will prompt the working mode and status for easy operation.



[1] Power Button: Press and HOLD to power on/off speaker until tone is heard and light shines on top.

[2] Change EQ: Press and RELEASE to switch the EQ mode for Standard mode, Bass mode, Treble mode

[3] Change Mode: Press and RELEASE to switch the between modes for Bluetooth® mode, FM mode, Memory Card mode, Aux In mode.

[4] Start Bluetooth® & Mobile hands free: Press and HOLD: To disconnect Bluetooth® pairing / Reject phone call | Press and RELEASE: To enable Bluetooth® Mode / Answer / hang up phone call | Press 2 times and RELEASE: To redial last number called. If not under Bluetooth® mode, Press and HOLD this button to turn on/off voice guide function.

[5] Power Bank Function: Press and RELEASE to turn ON/OFF (charge function only available when speaker is off)

[6] Battery Indicator Lights



[7] Volume Down: Press and RELEASE to choose:
previous track / previous FM channel / Switch the phone
conversation between the speaker and the mobile phone

Press and HOLD to: Decrease the volume

Press 2 times and RELEASE to: go to previous folder of
the Micro SD card[under memory card mode]

[8] Play: Press and RELEASE to: Play / Pause / Mute


Press and HOLD for 3 seconds for: auto-search feature
of FM radio Channels.

Press and HOLD for 8 seconds to: to restore the
speakers firmware

[9] Volume Up: Press and RELEASE for: next track / next
FM channel / Switch the phone conversation between the
speaker and the mobile phone

Press and HOLD to: Increase the volume

Press 2 times and RELEASE to: go to next folder of the
Micro SD card [under memory card mode]

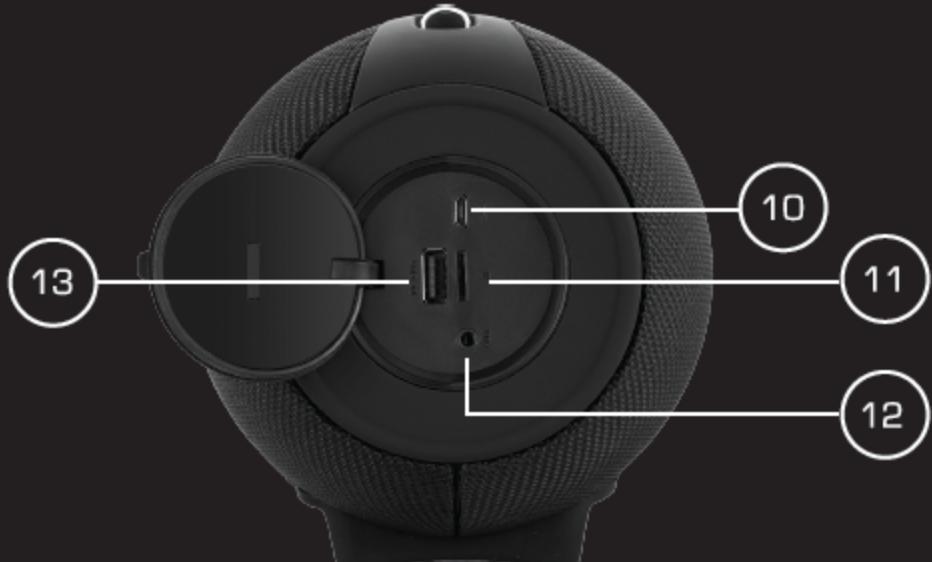

[10] Charging slot INPUT

[11] Micro SD card slot

[12] Aux in Jack

[13] Power bank slot OUTPUT

Instructions

1) Power on/off:

Press and HOLD button ① for 2 seconds to power speaker on/off .

The speaker features last user memory function- Each time speaker is turned ON, the speaker will enter into the mode last used before powering off.

Each time speaker is turned ON, the speaker's default volume will be under 30%. [Feature for comfort not to scare others around you.]

Bluetooth® Mode & Bluetooth® Pairing

Power ON the speaker and enter into Bluetooth® mode. The light indicator will blink. Now please turn on the Bluetooth® function on the device you desire to pair in Bluetooth® settings and search for devices near you available. "Soundcue AMMO" will appear in the options, please select it and allow for pairing to complete. When connected, the speaker will prompt "Device paired" and the AMMO light indicator will stop blinking and stay powered ON in blue.

By pressing button ④ you may also enter Bluetooth® mode directly or choose M button and select different Modes.

2] Bluetooth® Music playing: Please select desired source of audio being music/video etc. on your device and begin enjoying your Soundcue® AMMO Speaker. You may control volume, track, play, pause from both your device and speaker.

3) Mobile Hands-free Call and answer-

Press and RELEASE button ④ to answer the call or End the call-

Press and RELEASE button ④ again to end the call
Redial the call-

Press 2 times and RELEASE ④ button to redial to the last number called

Private call-

Press and RELEASE (+) or (-) to switch the call between the speaker and cellphone

Reject call-

Press and HOLD button ④ to reject the call

4) To Disconnect the Current Bluetooth® Connection: Every time you power ON speaker, the speaker will automatically pair with the last Bluetooth® device it was connected to when the device is in range. To pair a new device Press and HOLD the button ④ to disconnect the current Bluetooth® connection. The speaker will prompt "Device disconnected". At that moment other Bluetooth® devices will find "Soundcue® AMMO", to pair select speaker in Bluetooth® options of the new device you want to pair and allow for pairing to be completed.

5) Voice prompt: Power on the speaker, the speaker will prompt the working mode, such as "Bluetooth® mode, Aux in mode, device paired, device disconnected ..."

If you want to switch the voice guide function OFF, Press and HOLD the button ④ (not under Bluetooth® mode) to turn on/off the voice prompt. Device Voice: LIA www.LiaEscobar.com exclusively for Soundcue

6) Equalizer EQ setting: The DEFAULT mode is Standard, to change mode press and RELEASE button ② to switch to Bass mode, press ② again to switch to Treble mode.

7) Micro SD Card Music Playing: Insert the Micro SD Card into the speaker, Press and Release button ③ to enter the memory card mode , the speaker will play the Micro SD card music directly. Speaker will prompt "memory card mode".

Please note that the Micro SD card only supports memory size up to 32Gb, and the audio formats supported are MP3, WMA, WAV, APE, FLAC.

Press and RELEASE ⑧ : to play/pause

Press and RELEASE ⑦ : for previous track

Press and HOLD ⑦ : to decrease the volume

Press **⑦** 2 times and RELEASE: to go to previous folder of the Micro SD card

Press and RELEASE **⑨** : for next track

Press and HOLD **⑨**: increase the volume

Press **⑨** 2 times and RELEASE: to go to the next folder of the Micro SD card

8] Aux in Mode: Use the 3.5mm audio cable included to connect the speaker to an audio source [PC, MP3/MP4, mobile phone]. Press and RELEASE the **③** button to enter "AUX IN" mode (the speaker will prompt "Aux in" mode). The speaker will play the music from the audio source.

Please Note:

- When the speaker connects to the PC via the Aux In cable to play music. We suggest to use a[5V 2A] adaptor instead of the PC USB Port to charge the speaker. As the computer's power supply is weak.
- Make sure the speaker is under Aux In mode when using this function.
- Press and RELEASE the **⑧** button, the music will mute on the speaker. But the audio source will continue playing the music.

9] FM Radio: Press and RELEASE the **③** button to choose FM mode (the speaker will prompt "FM Radio"); Under FM Mode, Press and HOLD the **⑧** button to use auto searching feature and save the FM channels with best range. Press and RELEASE **⑦** button for previous/next channel **⑨** .

10] Adding music to SD card: Insert the Micro SD Card into the speaker and power speaker off. Use the USB cable included to connect the speaker to the computer. The speaker will enter into card reader mode, at that moment the Micro SD card can be read and written on the computer directly.

Please Note: The first time using this function, computer will install the driver automatically.

11) Intelligent power saving function: The speaker will be automatically powered off in below cases:

Under Bluetooth® mode, if the speaker is waiting to pair for more than 10 minutes

[2] Under Memory card mode / FM mode / Aux In mode, if the speaker is not in use for more than 10 minutes.

Please Note: Press and HOLD Button ① again to power ON the speaker again.

12) Power bank: The speaker has a built-in 8800 mAh battery. To use power bank function power OFF the speaker, connect the speaker to the device you wish to charge (mobile phone / mp3 / tablet / PC or other digital devices) using the charging jack with the USB connection in the speaker. Once connected press and RELEASE the ⑤ button to charge the device connected at voltage of 5V, max output current at 2.1A.

Please Note: Only when the speaker is powered OFF you may press button ⑤ for the speaker to work as a power bank.

13) Charging: When the speaker has low battery level, the speaker will prompt "out of battery", Please charge the battery via a USB adaptor. When fully charged, the four battery level indicator lights will light up

Please Note: Only use good quality 2A adaptor to charge the speaker. We suggest to use the adaptor specification at 5V/2A When the speaker is at low battery level, please charge the speaker immediately

The speaker can be charged by different charging current (500mA, 1A, 2A), if using the computer to charge the speaker, as the current is only 500 mA, the charging time will be longer.

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.