 




outdoor
lantern speaker

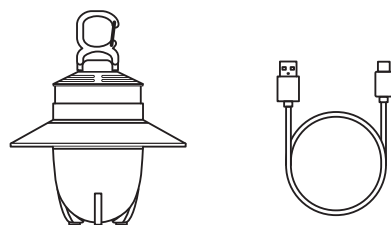

- INCLUDED:
1. Outdoor Lantern Speaker
 2. USB-A to USB-C Charging Cable

- AUDIO INDICATORS:
- Ascending Tones - Power on
 - Descending Tones - Power off
 - Three Rapid Tones - Ready to pair
 - Single Chime - Paired
 - Two Rapid Dings - Low battery
 - Quick Ascending Tone - Max volume
 - Quick Descending Tone - Min volume

- PAIRING:
1. Hold power button for 2 seconds to power on the speaker.
 2. The indicator light will flash white when it is ready to pair.
 3. Use the Bluetooth settings on your device to pair with 'Woolrich Target Speaker'.
 4. When pairing is successful the Bluetooth indicator will turn solid white, and there will be a chime.
 5. The speaker will automatically reconnect to the device it was most recently paired to when you turn the speaker on and it is in Bluetooth mode.
 6. Press and hold the mode button to disconnect from the current device, and short press the play button to reconnect to the last connected Bluetooth device.

- CHARGING:
1. A full charge requires approximately 2-3 hours.
 2. Plug the USB-C end of the charging cable into the charge port on the side of the speaker.
 3. Plug the opposite end of the charging cable into a power supply of at least 5V 1A.
 4. Charging is complete when the red light turns off.
Warning: Please use UL compliant power supply.

- “-” BUTTON
- Press: Volume Down
 - Hold: Previous Track

- POWER BUTTON:
- Hold 2 Sec.: On/Off
 - Hold 8 Sec.: Reset

- LED INDICATOR:
- Solid White: Power On
 - Solid Red: Charging
 - Red LED Off: Full Charged
 - Flash Red: Low Battery

 
 
- LIGHT BUTTON
- Press: On- Cold Light - Warm Light - Off
 - Hold: Adjust brightness from dark to bright or from bright to dark.
 - When the brightness is the brightest or the lowest, the light will flash twice as a reminder

- “+” BUTTON:
- Press: Volume Up
 - Hold: Next Track

- MODE BUTTON:
- Hold 5 Sec.: Pairing
 - Hold 2 Sec.: Bluetooth Disconnect

- BLUETOOTH INDICATOR:
- Flash White: Pairing Mode
 - Solid White: Bluetooth Connected

- PLAY BUTTON:
- Press: Play/Pause

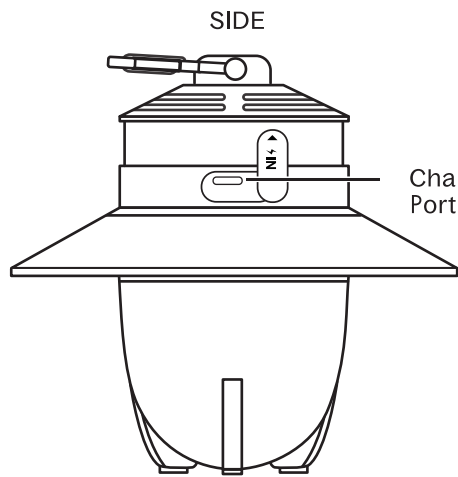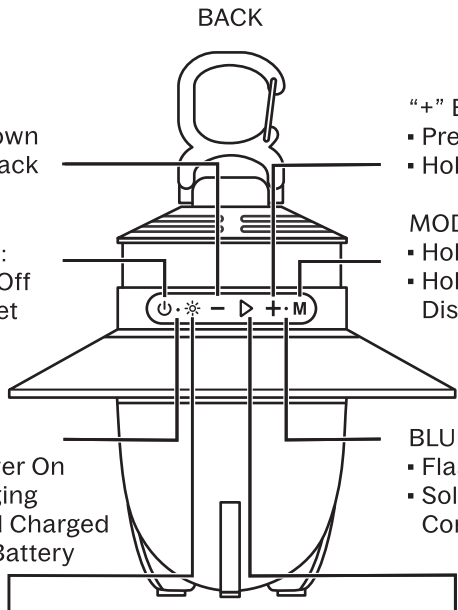


only at

Only at Target.com

© 2025 Target, The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.



 outdoor
lantern speaker

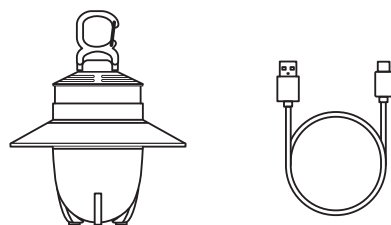

- TWS (TRUE WIRELESS STEREO) PAIRING:
1. You can pair two speakers of this same model together.
 2. Turn Bluetooth off on your device, place two matching speakers together, power them on and switch to Bluetooth mode.
 3. Quick press "+" and "-" at the same time on one speaker, that speaker will power on and will be the primary speaker. The other speaker will be the secondary speaker.
 4. They will automatically pair. When they are paired successfully, there will be a chime. The Bluetooth indicator for primary speaker will flash white and the Bluetooth indicator for secondary speaker will stay solid white.
 5. On your device, turn Bluetooth on and pair to one of the speakers.
 6. When the music is played, the primary speaker is the left channel and the secondary speaker is the right channel.
 7. To maintain TWS pairing, turn Bluetooth off on your device before powering the speakers back on, the speakers will pair automatically, then re-pair with your device.
Note: To disconnect, quick press "+" and "-" at the same time on one speaker again.

- TROUBLESHOOTING:
1. If the speaker is not working correctly, turn it on/off to restart.
 2. If the speaker won't turn on, recharge the battery and try again.
 3. If the speaker won't charge, make sure the supply works, is 5V 1A, and not damaged.
 4. If the speaker makes no sound or does not show as an available device, make sure it is not paired. If so, unpair the device and re-pair to the desired device.
 5. If the speaker cannot be operated despite being turned on, hold the power button for 8 seconds to reset.

- SAFETY:
1. Do not expose the product to fire, high temperature, direct sunlight, etc.
 2. Do not modify or repair this device.
 3. Do not allow small particles to get into the product.
 4. Do not use chemical detergents to clean, use a soft dry cloth.

FCC ID: 2A023-BTSPLO1 Model: BTSPLO1 Input: 5V/1A Max. Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Target Corp., Mpls, MN 55403 Phone: 1-612-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyour.com

only at

Only at Target.com

© 2025 Target, The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.