


# Light Up Karaoke Speaker

## Wireless Speaker with 2 Microphones

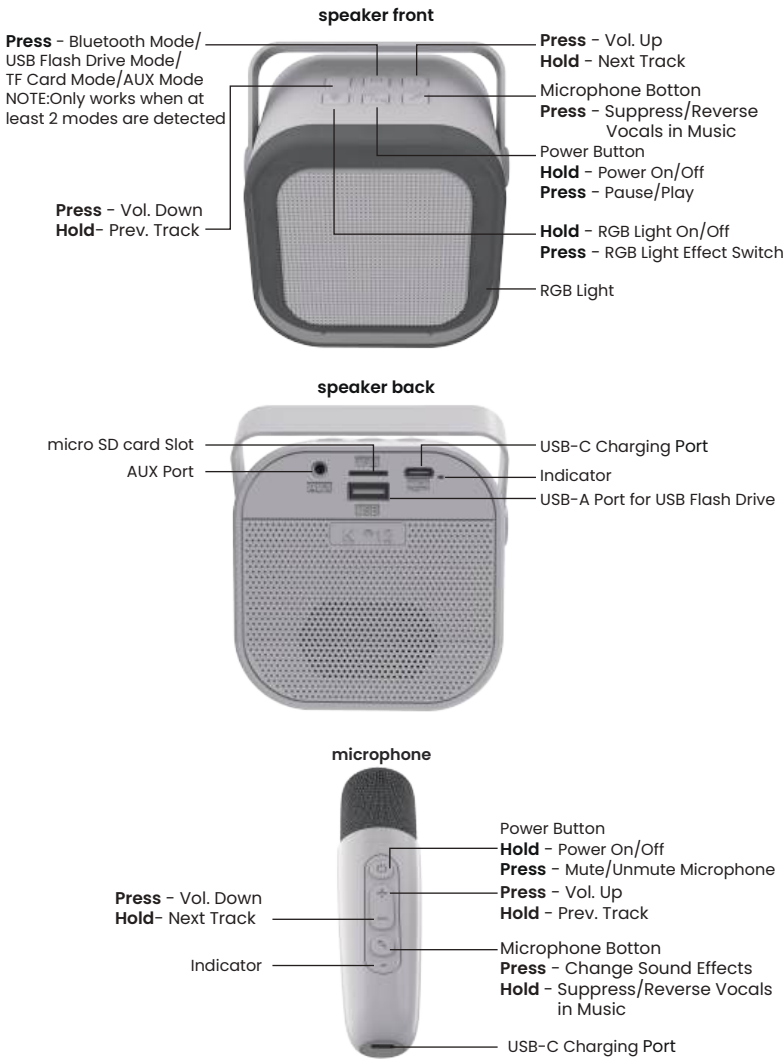

### Whats Included:

- Light Up Karaoke Speaker
- USB-C Charging Cable
- Two Microphones

### Indicator:

#### speaker

- Solid Red – Charging
- No Red Light – Fully Charged
- Flashing Blue – Ready to Pair
- Solid Blue – Paired
- Bing Bong Tone – Power On
- Descending Chime – Power Off
- Double Beeps – Ready to Pair
- Electric Tone – Paired
- Double Dial Beeps – Low Battery
- Double Beeps Followed by a Descending Chime – Disconnect
- Bing Bing Tone – Max/Min. volume

#### microphone

- Solid Red – Charging
- No Red Light – Fully Charged
- Flashing Blue – Disconnect from Speaker
- Solid Blue – Connected to Speaker
- One Beep – Switch Sound Effects
- Bing Bing Tone – Max/Min. volume

### Pairing:

- Hold the power button to turn the speaker on.
- Use Bluetooth settings on your phone to pair with Speaker 11.
- Electric tone – pairing successful.

Note: when the speaker is turned on and not connected to Bluetooth, it will automatically shut off after 10 minutes.

### Connect the Microphones to the Speaker:

The microphone is connected to the speaker by default after it is turned on.

Note: when the microphones is turned on and not connected to speaker, it will automatically shut off after 10 minutes.

### Charging:

#### Charging the speaker

- Full charge requires approximately 3 hours.
- Using the cable provided, plug the USB-C end into the speaker and the USB-A end into a USB power supply of at least DC 5V 1A warning: please use UL compliant power supply.
- The indicator light will turn red when charging, the indicator light will turn off when charging is complete.

#### Charging the microphone

- Full charge requires approximately 2 hours.
- Using the cable provided, plug the USB-C end into the microphone and the USB-A end into a USB power supply of at least DC 5V 1A warning: please use UL compliant power supply.
- The indicator light will turn red when charging, the indicator light will turn off when charging is complete.

NOTE: The microphone cannot be used while charging.

### AUX/Line in:

- Insert your AUX cable into the speaker AUX port.
- Insert the opposite end of your AUX cable into the media source (phone, laptop, etc.).

### TF Card Mode:

- Insert your TF Card into the speaker Micro SD Card Slot.
- Audio will automatically play after a few seconds.

NOTE: Only MP3 format can be played in this mode.

### USB Flash Drive Mode:

- Insert your USB flash drive into the speaker USB-A Port.
- Audio will automatically play after a few seconds.

NOTE: Only MP3 format can be played in this mode.

### Troubleshooting:

- If the speaker is not working correctly, switch it on/off to reset.
- If the speaker won't turn on, recharge the battery and try again.
- If the speaker won't charge, make sure the supply works, is 5V 1A, and not damaged.
- If the speaker makes no sound or does not show as an available device, make sure it is not paired with another device, if so unpair the device and repair the desired device.
- If the microphone is not picking up any sound, Ensure the microphone is turned on and the volume has been turned up.
- If microphone is whistling, do not place the powered microphone close to or facing the speaker.
- If unable to read USB drive or SD card, ensure the USB/SD card contain music in MP3 format.
- When playing music, if there is no original vocals, hold the "Microphone" button on the microphone or press the "Microphone" button on the speaker to turn the accompaniment off.

### Safety:

- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

FCC ID (Speaker): 2A023-KSET2; FCC ID (Microphone): 2A023-KSET2M; Model(Speaker): KSET2; Model(Microphone): KSET2M  
Input (Speaker): 5V=1A; Input (microphone): 5V=1A Made in Cambodia

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

gemsfindyours.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com



FRONT

BACK