


4.65 inches

# Wireless Charging Mouse Pad

## Removable Magnetic Wireless Charger

1 x Mouse Pad  
1 x Magnetic Attached Wireless Charger  
1 x USB-A to USB-C Charging Cable  
1 x Instruction Manual

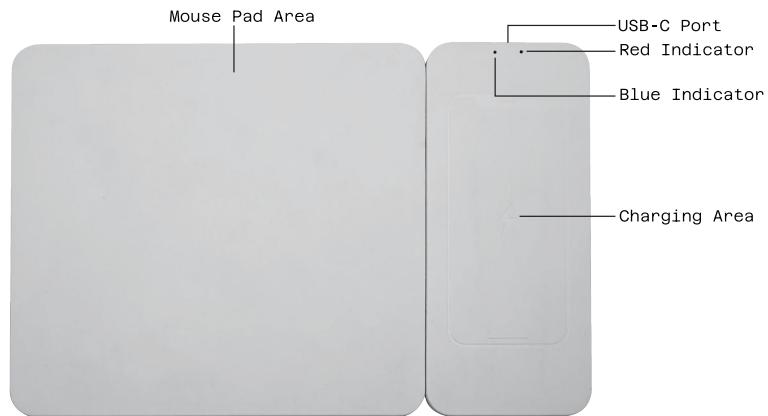

### Quick Tips:

- Double check your alignment - be sure to center the device on the charging surface to ensure the most efficient and fastest charge times.
- Certain materials and thicker phone cases can interfere with wireless charging.
- Not all devices are compatible with wireless charging, please check the devices user manual for compatibility information.
- Please use the USB-C cable that was included; using different charging cables may cause slower charging.

### How to Charge:

- Plug the USB-C end of charging cable into the wireless charger and plug the USB-A end into a power supply of DC 9V/2A minimum, when the red indicator lights up the mouse pad is ready to charge.
- Place your wireless charging enabled device onto the center of the wireless charger. The blue indicator will turn on and remain on any time your device is charging.
- Charge time will vary by device.

### Troubleshooting:

- If the charger is not working, double check that the power supply is plugged into a grounded wall outlet.
- Certain phone cases may interfere with wireless charging. Remove your phone case for the best results.
- Double check the placement of the device on the wireless charger. For best results the center of the device should be centered on the charger.
- Wireless charging is compatible with iPhone 8 and newer phones as well as other wireless charging enabled devices. Please consult your device's user manual if you are unsure if your device is compatible.

Note: Apple Watch® is not compatible with this device.

### Safety:

- Remove credit cards and other cards with magnetic strips to prevent damage to them.
- Keep the charger away from extreme heat and direct sunlight.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.
- Immediately unplug it from its power source if it gets wet.

SAVE THESE INSTRUCTIONS

FCC ID: 2AO23-PCW CMP001 Model: PCW CMP001 Wireless Charger Input: 9V=2A Wireless Charger Output: 15W Max. Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

gemfindyours.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyours.com

FRONT

BACK

7 inches