

7 inches

4.65 inches

Wireless Headphones

Rechargeable Over Ear Headphones



What's Included:

- Wireless Headphones
- USB-C Charging Cable
- 3.5mm AUX Cable

Indicator:

- Solid Red - Charging / Low Battery
- No Red Light - Charging Complete
- Flashing White - Pairing Mode
- Slow Flashing White - Paired / Playing

- Bing Bong Tone - Power On
- Descending Chime - Power Off
- Double Beeps - Ready to Pair
- Double Dial Beeps - Low Battery
- Double High Beeps - Max Volume
- Double Chirps - Min. Volume

FRONT

Pairing:

Pairing for the First Time

- When the headphones are off, hold the power button for 4 seconds until the indicator flashes white.
 - Use the Bluetooth settings on your device to pair with **Headphones 02**.
 - When the light flashes white slowly, the headphones have paired successfully.
- Note:** The headphones will automatically reconnect to the device it was most recently paired to when you turn the headphones on and it is in Bluetooth mode.

Pairing the Second and Subsequent Devices

- If you do not want to reconnect to the last device, when the headphones are off, hold the power button for 7 seconds until the indicator flashes white. Use the Bluetooth settings on your new device to pair with **Headphones 02** to establish a new pairing.

Charging:

- Plug the USB-C end of the charging cable into charge port of headphones.
 - Plug the USB end of the charging cable into a power supply of at least DC 5V 1A.
- Warning: please use UL compliant power supply.
- The indicator light will turn red when charging, a full charge requires approximately 2 hours.
 - The indicator light will turn off when charging is complete.
- Note: Headphones cannot playback when charging.

AUX/Line in:

- Insert your AUX cable into the AUX port of headphones.
 - Insert the opposite end of your AUX cable into the media source (phone, laptop, etc.).
- Note: When using the AUX/Line in function, the headphones will only work as wired headphones most of the button functions are temporarily disabled.

Troubleshooting

- If the headphones are not working correctly, turn them on/off to reset.
- If the headphones won't turn on, recharge the battery and try again.
- If the headphones won't charge, make sure the power supply works, is 5V 1A, and not damaged.
- If the headphones make no sound or do not show as an available device, make sure they are not paired to a different device already. If it is, unpair the device and repair the desired device.

Safety:

- Do not use near any water source.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

FCC ID: 2AO23-WOE21 Model: WOE21 Input: 5V ~ 300mA Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

gemsfindyour.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyour.com

BACK