


ILIFE-A7

Robot vacuum cleaner

User Manual

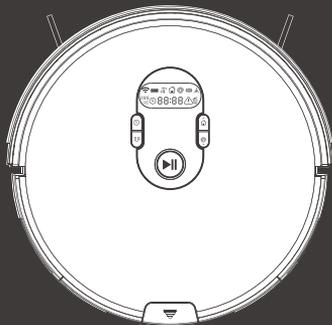

For more detailed information,
please visit: www.iliferobot.com

ILIFE

Dear Customer,

Thank you for purchasing ILIFE A7 robot vacuum cleaner!
You've joined the millions of people who clean with robots - the smarter way to get it down.

Please take a few moments to read this manual and get acquainted with your robot, to get the best performance from your robot. If you have any problem, please don't worry, you are supposed to contact our customer service first or visit our website at www.iliferobot.com for more information.

Stay connected with us on Facebook and twitter to enjoy these exclusive benefits:

- Get support tailored to your specific robot, including answers to questions, maintenance tips, video demos, live chat and more.
- Get product updates and other valuable information be among the first to find out about new robots, exclusive discounts and special promotions.

Connect with us right now at
Facebook: facebook.com/iliferobotics
Twitter: twitter.com/ILIFEROBOTIC

Enjoy a thorough clean every day in your life!
Best regards,
ILIFE Innovation

ILIFE Customer Service

Customer Service Number:

1-800-631-9676 (Toll free for USA & Canada)

+86-75521005927 (Outside USA & Canada)

Email: support@iliferobot.com

Important Tips



A7 contains electronic parts. Do Not submerge the robot or spray it with water. Clean with a dry cloth only.

For Best Usage

- Place the charge dock against wall in a wide open area, and do not put it near a door or stairs.
- Clear up excess clutters on floor before cleaning (e.g. cables, bar stools, etc.).
- Choose MAX mode to clean an area of highly concentrated dust.

Keep Peak Performance

- Remove the main brush, clean the both ends of the rolling brush and the brush motion link twice a week. (See figure 1)
- Take off the front wheel with a screwdriver, clean hairs in the wheel cavity and the axle twice a week. (See figure 2)
- Empty dustbin box and clean filter and rolling brush after each use. Replace a new filter every month.

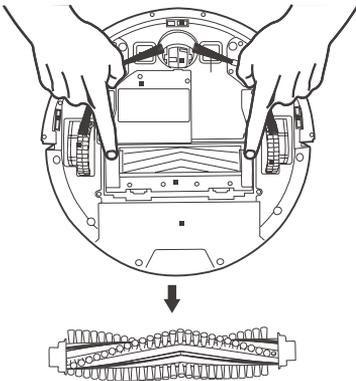


Figure 1

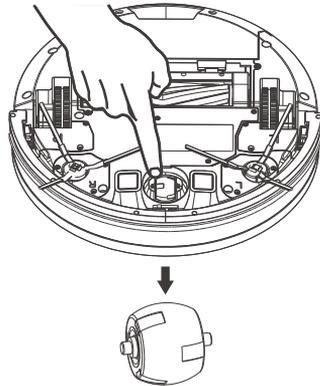


Figure 2

Contents

Safety precautions	4
Product Parts	6
How to Use	9
Tips for using the robot	9
Quick operation	10
Cleaning modes and functions	14
Setting a schedule	16
APP download & operations	18
Register and login	18
Adding a device	19
Unbinding a device	22
Sending commands	23
Device sharing	28
Problem feedback	29
Maintenance	30
Dustbin	30
Main brush and side brushes	31
Other parts	31
Alerts	32
Product specifications	33
FAQ&Troubleshooting	34

Safety precautions

Before using this product, please read the following safety precautions.

- Read this user manual thoroughly and carefully before using this product.
- Save this user manual.
- Any operations that oppose to descriptions in this user manual may lead to harm to human or this product.

WARNING

1. Only the certified technician may disassemble the product. Users are not allowed to disassemble or repair the product.
2. Only use the adapter provided by the factory. Using other un-matched adapter may cause electric shock, fire or product damage.
3. Do not touch the power cord, plug or adapter when your hands are wet.
4. Do not make clothes or part of a body drawn into the product's wheels.
5. Do not make this product close to cigarette, lighter, match or any flammables.
6. If the product is needed to clean, clean it after charging is stopped.
7. Do not over-bend the power cord or pressure the power cord with heavy or sharp objects.
8. This product is used only indoors, do not use it outdoors.
9. Do not sit on top of this product or attach an object on the top of it.
10. Do not use this product in wet or moist environment (any environment with liquid).
11. Before use, remove all the damageable objects (textile, glass, lighting, etc) and objects that could get caught in the brushes or suck passage(cords, clothing, papers, drapes, blinds, etc).
12. Do not place this product where it is easy to drop off (tables, chairs, etc).
13. Turn off the power switch during transportation or when you don't need to use this product for a long time.
14. Before use, check whether adapter and outlet are properly connected. Or else the battery may be damaged.
15. To avoid tripping, inform all the people in the house when this product is working.

Safety precautions

16. Do not use this product when dustbin is full.
17. Use this product in temperature from -10°to 50°(centigrade degree).
18. Do not place this product in high-temperature environment.
19. The battery must be removed from the product before it is scrapped.
20. The product must be disconnected from the supply mains when removing the battery.
21. The battery is to be disposed of safety.
22. Use factory-authorized battery only, do not use unmatched battery.



NOTE: This product could not be used by children, mentally challenged people or people lack of related experience and knowledge (Unless there people instruct or supervise them).

WARNING:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

FCC RF Exposure Warning:

This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.










To comply with FCC RF exposure requirements, the device must be installed and operated 20 cm (8 inches) or more between the product and all person's body.

This product may not be collocated or operated in conjunction with any other antenna or transmitter.

Product Parts


Main body and accessories

NO.	Description	Q'ty
1	Main Body	1
2	Charging Home Base	1
3	Remote Control (battery not included)	1
4	Adapter	1
5	Cleaning Tool	1
6	User Manual	1
7	Extra Side Brushes	2
8	High performance filter	1
9	Bristle brush	1

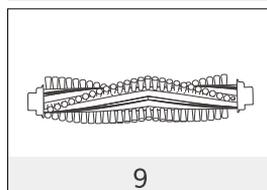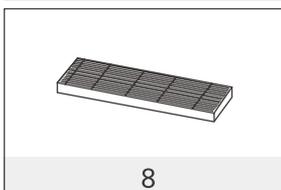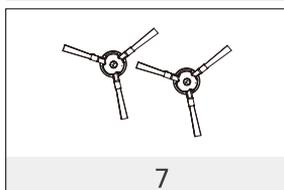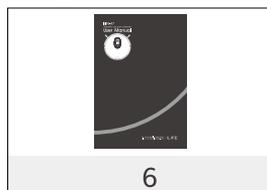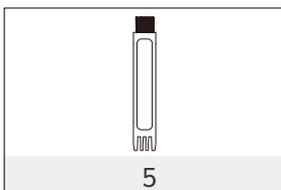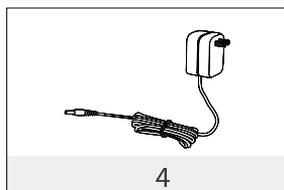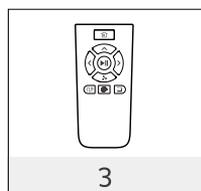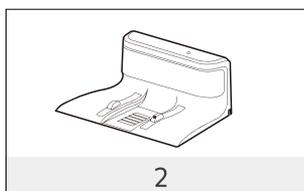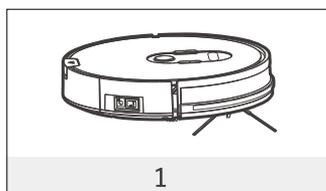


Product Parts

Main body

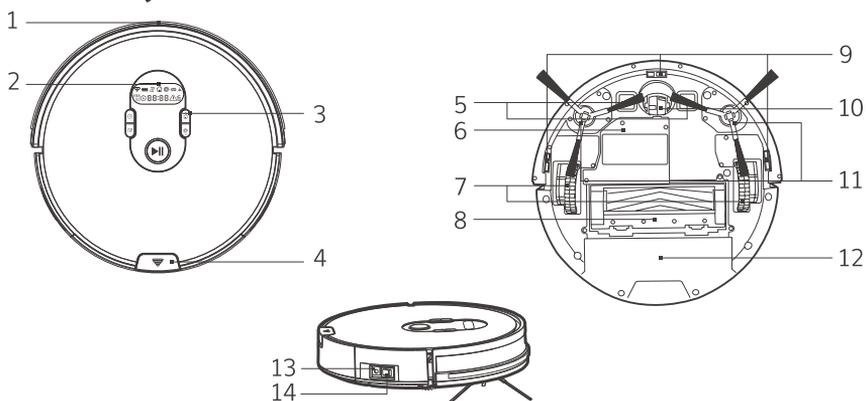


- | | | |
|---------------------------|------------------|-------------------|
| 1. Bumper | 6. Battery Cover | 11. Side Brushes |
| 2. Signal Lights | 7. Side Wheels | 12. Dustbin |
| 3. Control Panel | 8. Main Brush | 13. Power Socket |
| 4. Dustbin Release Button | 9. Cliff Swnsors | 14. ON/OFF Switch |
| 5. Charging Pins | 10. Nose Wheel | |

Control panel

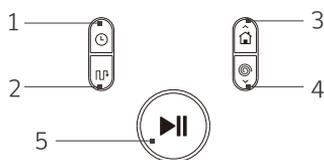

- | |
|---------------------------|
| 1. Schedule |
| 2. Path Mode |
| 3. Charging/Up Button |
| 4. Point Mode/Down Button |
| 5. AUTO Mode |

Dustbin

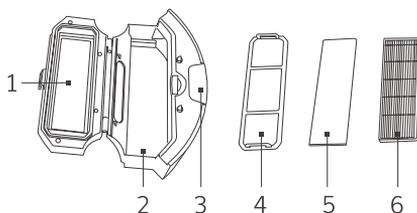

- | |
|----------------------------|
| 1. Dustbin Cover |
| 2. Dustbin |
| 3. Dustbin Release Button |
| 4. Primary Filter |
| 5. Cotton Filter |
| 6. High-Performance Filter |