


ILIFE-A7
Robot vacuum cleaner
User Manual

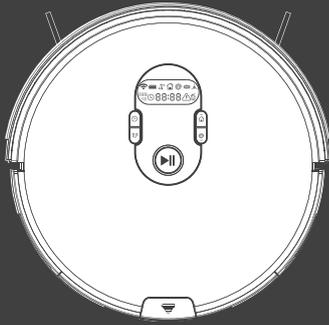

For more detailed information,
please visit: www.iliferobot.com

ILIFE

Dear Customer,

Thank you for purchasing ILIFE A7 robot vacuum cleaner!
You've joined the millions of people who clean with robots - the smarter way to get it down.

Please take a few moments to read this manual and get acquainted with your robot, to get the best performance from your robot. If you have any problem, please don't worry, you are supposed to contact our customer service first or visit our website at www.iliferobot.com for more information.

Stay connected with us on Facebook and twitter to enjoy these exclusive benefits:

- Get support tailored to your specific robot, including answers to questions, maintenance tips, video demos, live chat and more.
- Get product updates and other valuable information be among the first to find out about new robots, exclusive discounts and special promotions.

Connect with us right now at
Facebook: facebook.com/iliferobotics
Twitter: twitter.com/ILIFEROBOTIC

Enjoy a thorough clean every day in your life!
Best regards,
ILIFE Innovation

ILIFE Customer Service

Customer Service Number:
1-800-631-9676 (Toll free for USA & Canada)
+86-75521005927 (Outside USA & Canada)
Email: support@iliferobot.com

Important Tips



A7 contains electronic parts. Do Not submerge the robot or spray it with water. Clean with a dry cloth only.

For Best Usage

- Place the charge dock against wall in a wide open area, and do not put it near a door or stairs.
- Clear up excess clutters on floor before cleaning (e.g. cables, bar stools, etc.).
- Choose MAX mode to clean an area of highly concentrated dust.

Keep Peak Performance

- Remove the main brush, clean the both ends of the rolling brush and the brush motion link twice a week. (See figure 1)
- Take off the front wheel with a screwdriver, clean hairs in the wheel cavity and the axle twice a week. (See figure 2)
- Empty dustbin box and clean filter and rolling brush after each use. Replace a new filter every month.

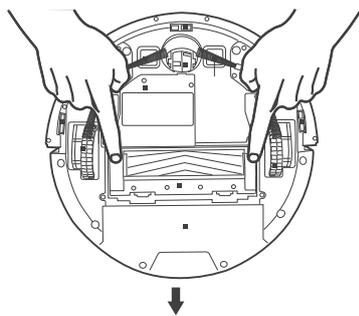


Figure 1

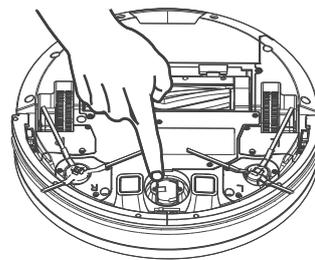


Figure 2

Contents

Safety precautions	4
Product Parts	6
How to Use	9
Tips for using the robot	9
Quick operation	10
Cleaning modes and functions	14
Setting a schedule	16
APP download & operations	18
Register and login	18
Adding a device	19
Unbinding a device	22
Sending commands	23
Device sharing	28
Problem feedback	29
Maintenance	30
Dustbin	30
Main brush and side brushes	31
Other parts	31
Alerts	32
Product specifications	33
FAQ&Troubleshooting	34

Safety precautions

Before using this product, please read the following safety precautions.

- Read this user manual thoroughly and carefully before using this product.
- Save this user manual.
- Any operations that oppose to descriptions in this user manual may lead to harm to human or this product.

WARNING

1. Only the certified technician may disassemble the product. Users are not allowed to disassemble or repair the product.
2. Only use the adapter provided by the factory. Using other un-matched adapter may cause electric shock, fire or product damage.
3. Do not touch the power cord, plug or adapter when your hands are wet.
4. Do not make clothes or part of a body drawn into the product's wheels.
5. Do not make this product close to cigarette, lighter, match or any flammables.
6. If the product is needed to clean, clean it after charging is stopped.
7. Do not over-bend the power cord or pressure the power cord with heavy or sharp objects.
8. This product is used only indoors, do not use it outdoors.
9. Do not sit on top of this product or attach an object on the top of it.
10. Do not use this product in wet or moist environment (any environment with liquid).
11. Before use, remove all the damageable objects (textile, glass, lighting, etc) and objects that could get caught in the brushes or suck passage(cords, clothing, papers, drapes, blinds, etc).
12. Do not place this product where it is easy to drop off (tables, chairs, etc).
13. Turn off the power switch during transportation or when you don't need to use this product for a long time.
14. Before use, check whether adapter and outlet are properly connected. Or else the battery may be damaged.
15. To avoid tripping, inform all the people in the house when this product is working.

Safety precautions

16. Do not use this product when dustbin is full.
17. Use this product in temperature from -10°to 50°(centigrade degree).
18. Do not place this product in high-temperature environment.
19. The battery must be removed from the product before it is scrapped.
20. The product must be disconnected from the supply mains when removing the battery.
21. The battery is to be disposed of safety.
22. Use factory-authorized battery only, do not use unmatched battery.



NOTE: This product could not be used by children, mentally challenged people or people lack of related experience and knowledge (Unless there people instruct or supervise them).

WARNING:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

RF radiation exposure statement

The Robotic Vacuum Cleaner complies with FCC RF radiation exposure limits set forth for an uncontrolled

environment. Caution: To maintain the compliance with the FCC's

RF exposure guideline, install the Robotic Vacuum Cleaner at least 7.9" (20 cm) from ALL persons. The


transmitter of this device must not be co-located or operating in conjunction with any other

antenna or transmitter.

Product Parts


Main body and accessories

NO.	Description	Q'ty
1	Main Body	1
2	Charging Home Base	1
3	Remote Control (battery not included)	1
4	Adapter	1
5	Cleaning Tool	1
6	User Manual	1
7	Extra Side Brushes	2
8	High performance filter	1
9	Bristle brush	1

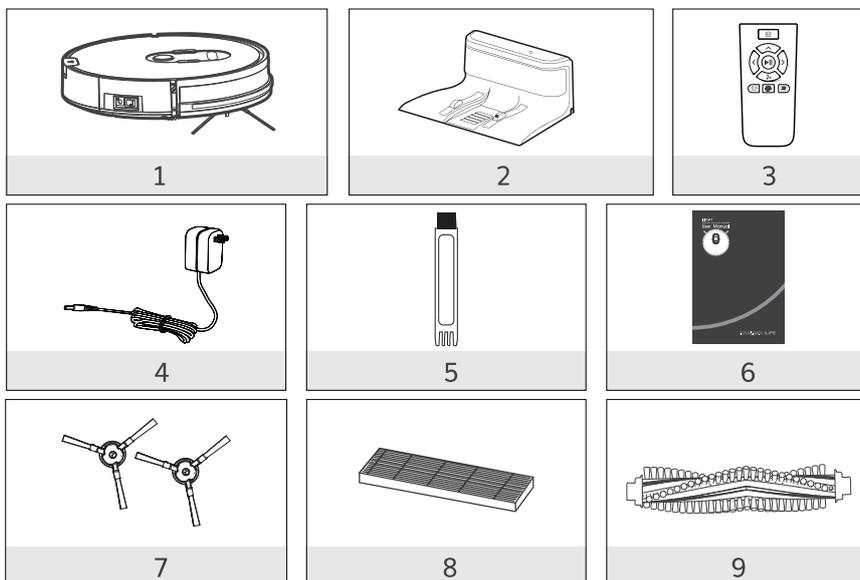


Product Parts

Main body

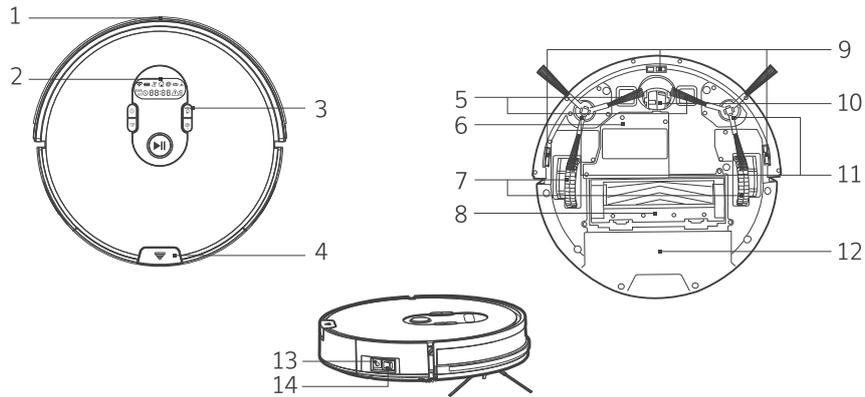


- | | | |
|---------------------------|------------------|-------------------|
| 1. Bumper | 6. Battery Cover | 11. Side Brushes |
| 2. Signal Lights | 7. Side Wheels | 12. Dustbin |
| 3. Control Panel | 8. Main Brush | 13. Power Socket |
| 4. Dustbin Release Button | 9. Cliff Swnsors | 14. ON/OFF Switch |
| 5. Charging Pins | 10. Nose Wheel | |

Control panel

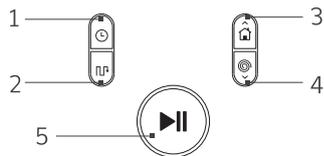

- | |
|---------------------------|
| 1. Schedule |
| 2. Path Mode |
| 3. Charging/Up Button |
| 4. Point Mode/Down Button |
| 5. AUTO Mode |


Dustbin

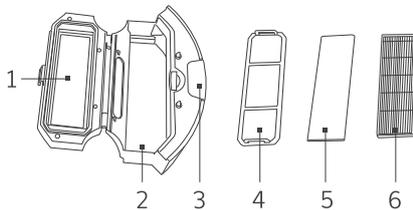

- | |
|----------------------------|
| 1. Dustbin Cover |
| 2. Dustbin |
| 3. Dustbin Release Button |
| 4. Primary Filter |
| 5. Cotton Filter |
| 6. High-Performance Filter |


Product Parts

Charging base

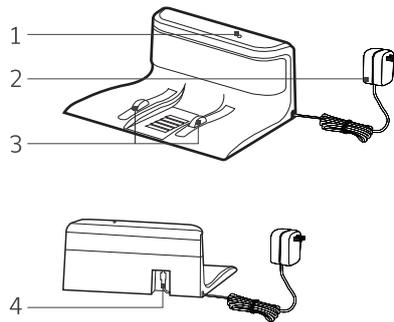

1. Power Supply Light
2. Adaptor
3. Charging Pins
4. Adaptor Power Socket

Remote control

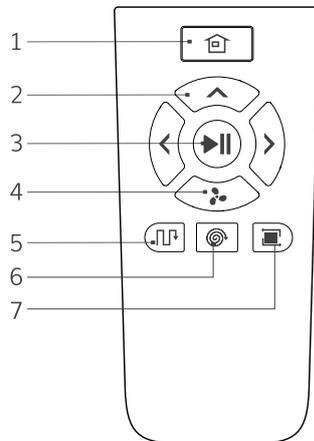


1. HOME (return to charging base)
2. Direction Button
3. Start/Pause
4. MAX Mode
5. Path Mode
6. Point Mode
7. Broder Mode

How to Use


A7 may miss some complex details in a single scan. Use the robot more often and remove obstacles to help it get familiar with your home every time it scans its surroundings.

Tips for using the robot


The following instructions will help the robot to get familiar with the environment and clean more efficiently.

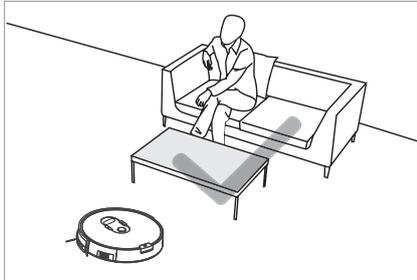


When the robot works for the first time, give it some assistance and remove obstacles on the floor.

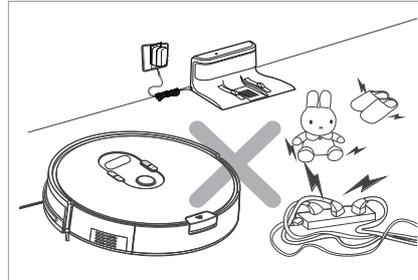

Before cleaning, remove objects on the floor (e.g. power line, toys) that may stumble the robot.

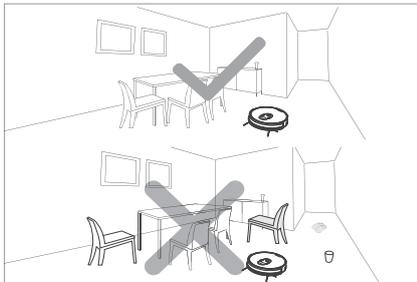


To clean more efficiently, put the furniture and electronic appliances in place.

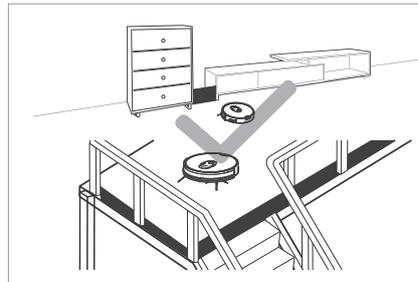

When the robot is cleaning the upper floor of a duplex or a raised platform, make sure no one stands near the stairs to avoid objects falling down the stairs.

How to Use

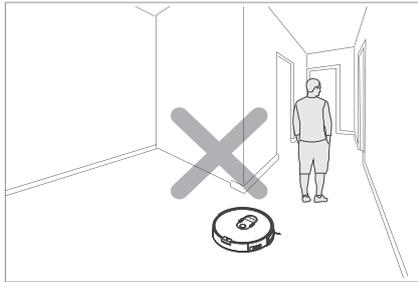

Do not stand near narrow spaces such as thresholds or passageways when the robot is working, or the robot may skip the area.



Quick operation

Charge preparation

1. Charging base and power supply

Connect the adaptor with the charging base. Put the charging base on a flat surface and against a wall. Remove obstacles about 1 meter on both sides and about 2 meters in front.

1
Step

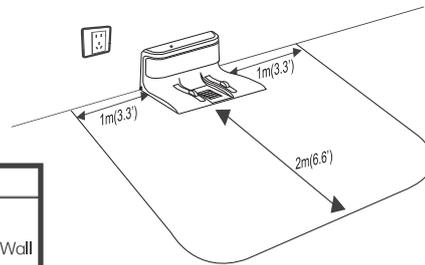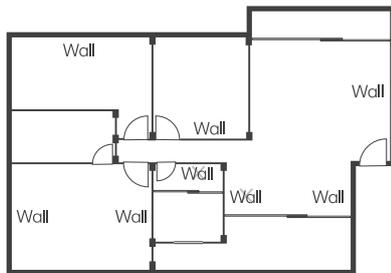


Connect to power supply

2
Step




How to Use


! Precautions

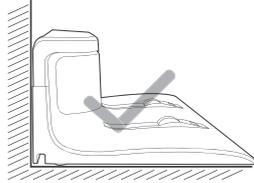

Put the charging base on a flat surface and against a wall.

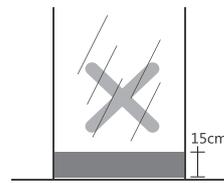

Cover reflective objects (eg. mirror) about 15cm from the floor.

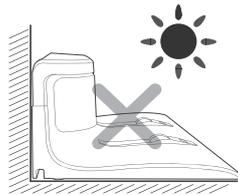


Do not put the charging base in direct sunlight.



Do not move the charging base while the robot is working. It may disturb the robot's return route for recharge.

2. Installing side brushes

- Follow the color codes when installing the sides brushes. Make sure both sides are securely installed.

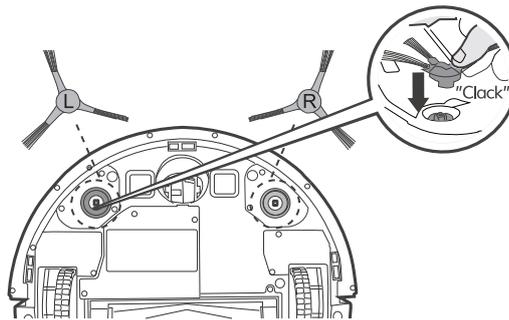


How to Use

> Charging begins

1. Switching on robot

- Turn on the power switch on the side. "I" is to turn on the robot and "O" is to turn off.

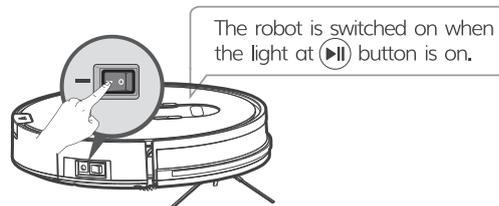


2. Charging

- Put the robot on the charging base.
 - ▶▶ Flashing light: Charging in progress.
 - ▶▶ Solid green light: Charging completed.
 - ▶▶ Light off: In energy-saving sleep mode.
- Before first use, put the robot on the charging base for charging.




! Precautions

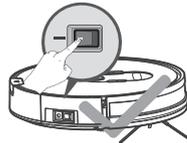

Keep the power switchon ("I") while charging.

> Start


- Press ▶▶ on the robot remote control. ▶▶ on the robot will flash. AUTO cleaning mode will begin when the light at ▶▶ turns solid.

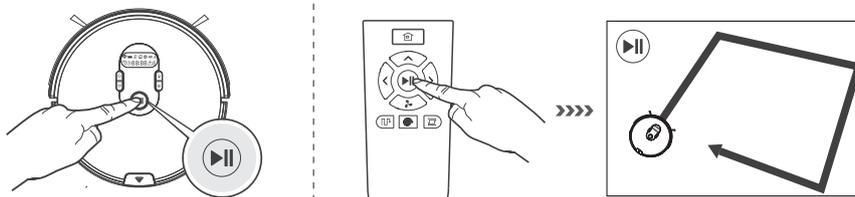

How to Use

> Pause


While the robot is working, press  on the robot or remote control to pause the cleaning cycle.

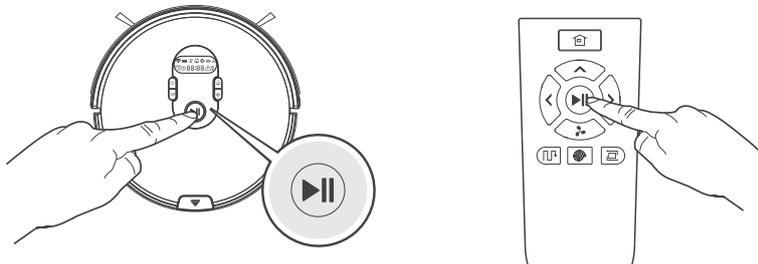

- * Robot will plan a new route after it is paused and restarted. It will repeat cleaning the areas it has covered.
- * Move the robot's position with the remote control when it is paused.
- * Robot will enter sleep mode after idling for 10 minutes, and the light on the right turned off. To reactivate it, press ,  or  on the remote control. To start cleaning, press any button.

> Switching off the robot

Turn the power switch to "O" after the robot is paused.

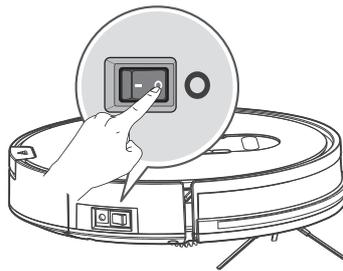

- * To get your robot ready to work anytime, always keep it fully charged by keeping the power switch on after each use.

How to Use

Cleaning modes and functions


The robot comes with several cleaning modes to achieve optimal cleaning performance and better user experience. To select cleaning modes, use the control panel on the robot, remote control or APP.

* When the robot is switched from AUTO mode to another, and returns to AUTO mode after the specific tasks are completed, it will reset a new route and repeat the route that has been covered.
Before setting a cleaning mode, make sure the robot is reactivated (the light at  is on). To reactivate the robot, press ,  or  on the remote control.

> AUTO mode


When the robot finishes cleaning an area in AUTO mode, it will move along the walls to the next area. AUTO mode is suitable for carpet cleaning.

Note: Presson  the robot or remote control to start AUTO mode.

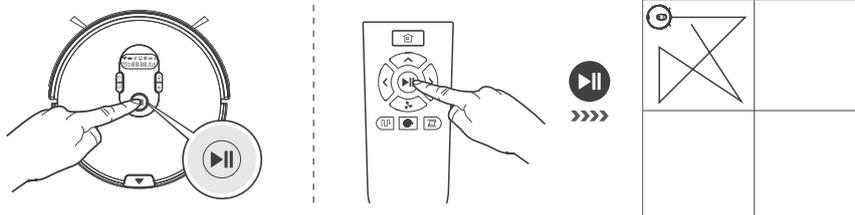

> Path mode


To start Path mode, press  button on the robot or  button on the remote control. The robot will take a M-shaped cleaning route, and approach and clean the areas it has missed during a cleaning cycle.

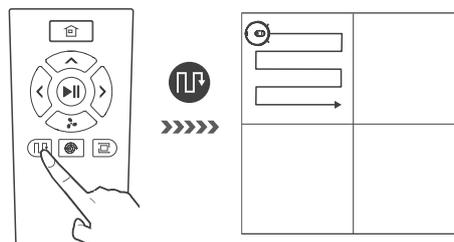

How to Use


> Point mode

For specific areas that require deep cleaning. Press  button on the robot or  button on the remote control to start Point mode.

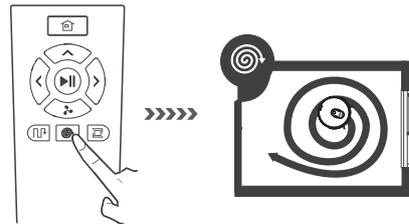


> MAX mode

For areas with concentrated dust and dirt. For increased suction power and deep cleaning, press  button on the robot when it is in AUTO mode. The display will show HI, denoting high suction power. To return to normal suction, press  button again. The display will show LO, denoting low suction power.

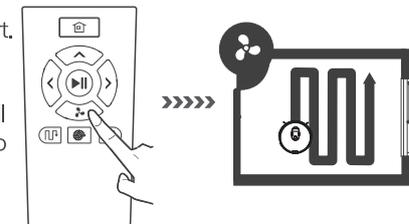


> Broder mode

For the edges and corners of the walls. The robot will clean along the barriers (eg. walls) and return to the charging base after the task is finished.

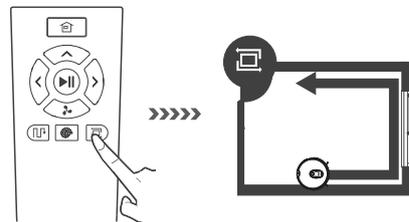

> Self-charging

When the battery runs low, the robot automatically pauses the cleaning cycle and returns to charging base for recharge.

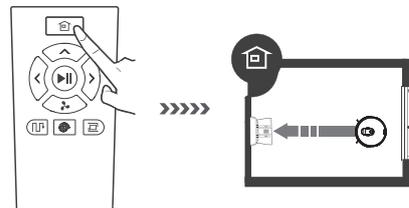

To return the robot to the charging base for recharge, press  button.


How to Use

Setting a schedule

Set a cleaning schedule for the robot and it will automatically clean your home at a specific time. Before setting a schedule with the APP or control panel on the robot, adjust local time on the robot control panel.


> Setting local time

To recover the robot from sleep mode, press and hold  button. Set the clock after a beep and when the first two digits on the display flash.

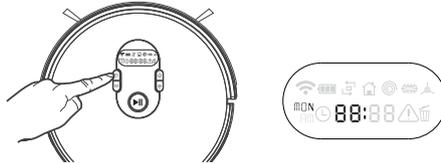


Use  button and  button to adjust the numbers. To adjust local time, use  button to adjust hour, minute, 12/24 hour format and week.

* To adjust the 12/24 hour format, press . The display will show "ON/OFF".

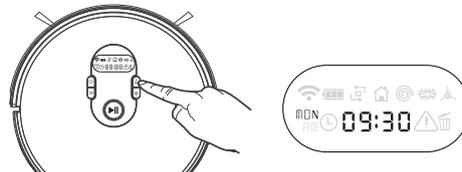

Press  to save the setting.

* The robot will exit the setting after idling for 15 seconds. The setting will not be saved.
Press  to confirm and save the setting.

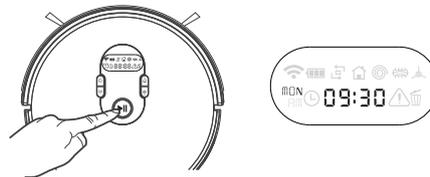


How to Use

> Setting a schedule


Method 1:

To reactivate the robot, and press  button. The robot will buzz and the  and "week" on the display will flash. As the robot enters schedule mode, use  and  to choose the day for scheduled cleaning. Click  to adjust the hour and minute. Press  and  to adjust the numbers and set a schedule.

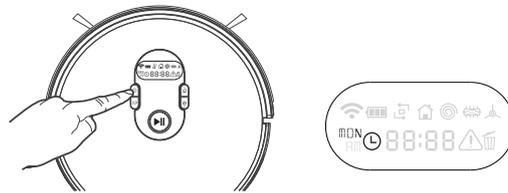


Press  to save the setting. The robot will start cleaning at the scheduled time.

- * The robot will exit the setting after idling for 15 seconds. The setting will not be saved.
- * Press  to confirm and save the setting.

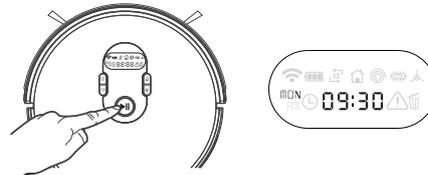

Canceling a schedule

To reactivate the robot, press  button. The robot will buzz and the  and "week" on the display will flash. As the robot enters schedule mode, use  and  to choose the day for scheduled cleaning. Click  to cancel the upcoming schedule, and the display will show "-:-." Keep pressing  to activate the upcoming schedule. The display shows the last cleaning schedule.

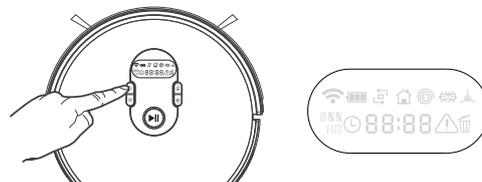


Method 2:

To set a schedule with the APP, see p.26 for details.

APP download & operation

Register & Login

The robot receives remote commands through "ILIFE Robot" APP. The instructions below or on the APP interface will guide you through the setup.

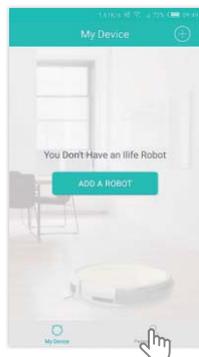

1 Click "Personal Center."



2 Click ">" icon to login or register.



3 Enter your email address and click "Read and Agreed User Agreement."



4 Click "Get Verification Code" to receive a verification code in your registered email account. Enter the code and set a password on the APP.




5 After registration completes, you will be directed to "My Device."

APP download & operation

Login

1. Click ⊕ on the upper right corner to add a robot. You will be directed to "Sign Up."
2. Enter your registered email and password.
3. Click "Log in."
4. After logging in, you will be directed to "My Device."

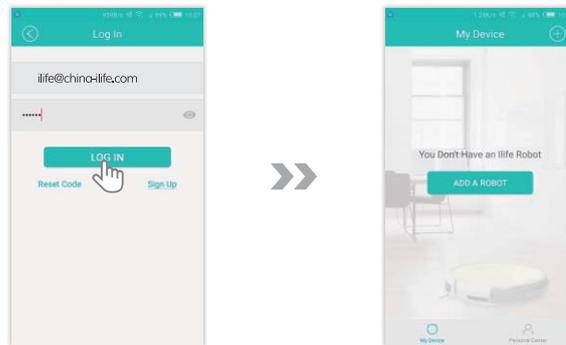


Adding a device

1. Connecting to WiFi

Connect your mobile phone to WiFi and make sure the signal is strong.

2. Network Distribution

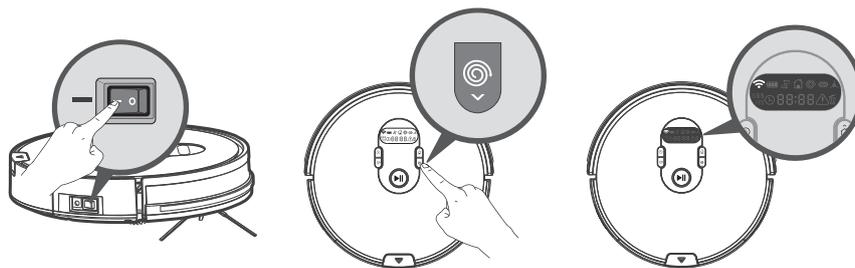


- 1 Switch on the robot. It is on standby.
- 2 While on standby, press and hold . Release the button after a buzz.
- 3 WiFi light on the robot flashes when network distribution is in progress.

APP download & operation

3. Using APP network distribution

Connect your mobile phone to WiFi and make sure the signal is strong.

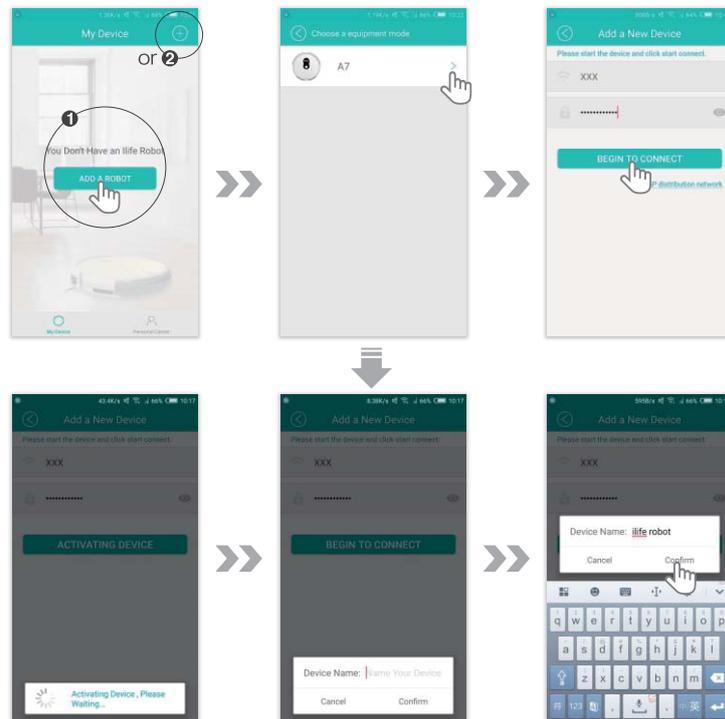


Note: if network distribution fails, restart the APP and repeat the steps or follow the steps in 4.22 "AP Distribution."

4. Completing Binding

- 1 When binding is completed, the robot will confirm with a buzz. The WiFi light stays on when the robot is successfully connected to WiFi.
- 2 When binding is successful, a prompt box "Device Name" will appear on the APP. Enter a name, click "Confirm" and you will be directed to "Setting."


APP download & operation

- 3 The first user adding a new device will become the administrator. Only administrator can share the device with other users. Before the administrator unbinds the device, other users cannot directly bind to the device.

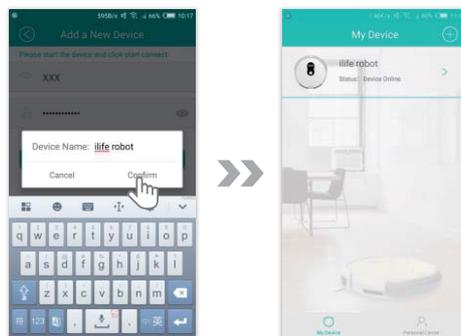

5. Using AP Distribution

- 1 Skip this step if the device has been bound.
- 2 Press and hold "AP Distribution," you will hear a buzz after 3 seconds. Continue to hold the button until you hear two buzzes, and the device enters "AP Distribution Mode." (See 4.22 for details)
- 3 To add a new device, click on (icon) on the upper right corner of the APP interface.
- 4 In "Add a New Device," choose the robot model (A7). In "AP Distribution Mode," follow these steps:
 - 1) Android users choose "Connect to the hotspot" and connect to "Robot" hotspot SSID. iPhone users connect to "Robot" hotspot SSID manually and return to the APP.
 - 2) Choose WiFi SSID from the popup list. Enter WiFi and SSID passwords and click "Start to Connect."
- 5 Enter a name for your robot. Click "Confirm" to start binding. It may take some time, please be patient.

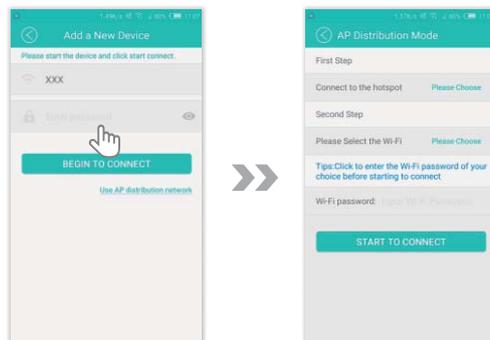

APP download & operation

Unbinding a device


1. Through administrator

- 1 Log into the APP as administrator.
- 2 In "My Device," click on the device that needs to be unbound, and swipe to right.
- 3 Click "Unbind" to remove devices and users.



2. Through the robot

- 1 Turn on the robot, wait for 30 seconds for WiFi connection. WiFi is connected when the robot buzzes and the flashing WiFi light turns solid.

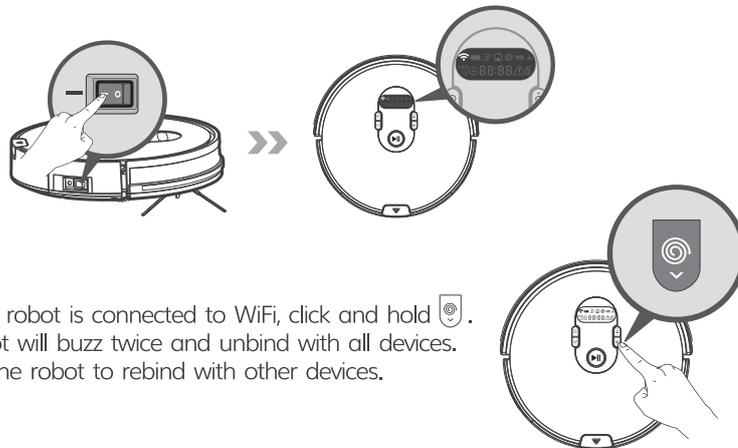

- 2 After the robot is connected to WiFi, click and hold . The robot will buzz twice and unbind with all devices. Restart the robot to rebind with other devices.


Note: if the robot cannot connect to a network, press and hold  on the robot. If the robot is in "AP Distribution Mode," open the APP and connect to the network. The APP will notify the device is already bound. Follow (2) to continue unbinding.

APP download & operation

Sending commands

1. Starting a cleaning mode


Choose a robot from the device list to enter "Setting."

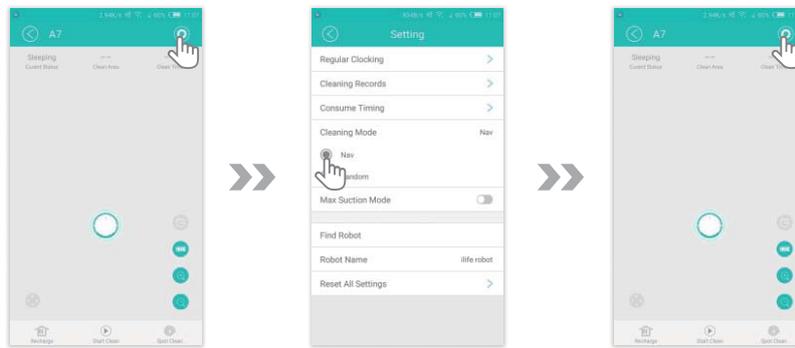

Note: Click  again to stop cleaning.

2. AUTO mode

Choose a robot from the device list to enter "Setting."

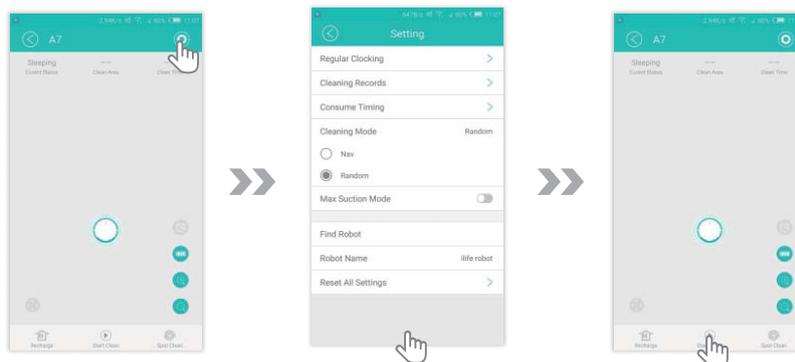

Note: Click  again to stop cleaning.

APP download & operation

3. MAX mode

To use MAX mode, make sure the robot is in a preset or AUTO mode, and the dustbin is installed.



Note: MAX mode can be turned on or off in "Setting."

4. Point mode

Choose a robot from the device list to enter "Setting."




Note: After finishing Point mode, the robot will enter sleep mode.
Click "Spot Clean" again to stop the cleaning.

APP download & operation

5. Self-charging


Choose a robot from the device list to enter "Setting."

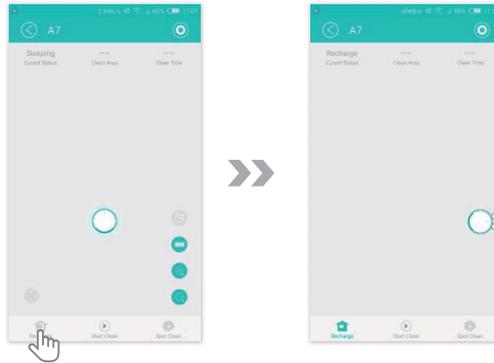

Note: Self-charging begins after the robot finds and returns to the charging base. Click "Recharge" again to stop it from finding the charging base.

6. Setting a schedule


Choose a robot from the device list to enter "Setting."

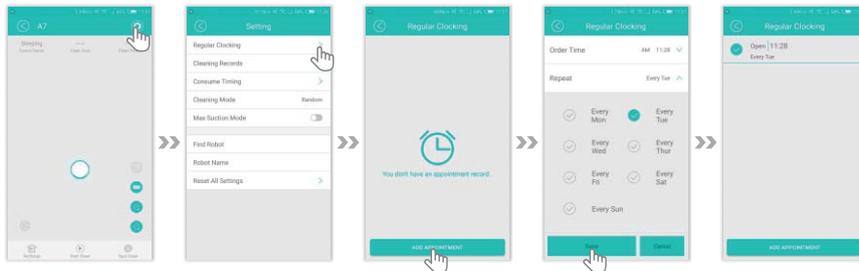

APP download & operation


7. Replacing parts

- Choose a robot from the device list to enter "Setting."
- In "Material Consume," check the life of each part. Click on and hold a part to reset its life, and "Confirm."

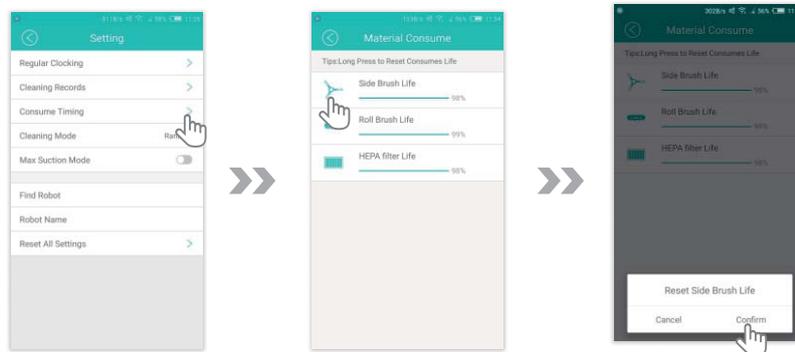

8. Finding robot


- Choose a robot from the device list to enter "Setting."
- Choose "Find Robot" in "Setting." The robot will buzz three times within 10 seconds to announce its position.

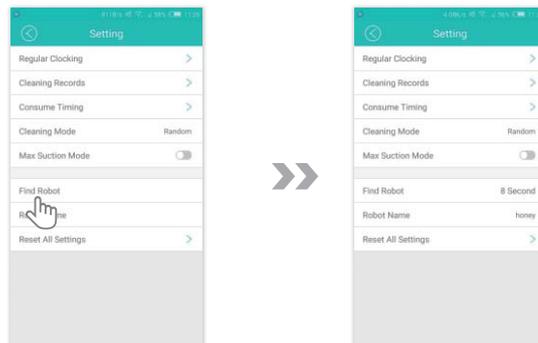

APP download & operation


9. Device name

- Choose a robot from the device list to enter "Setting."
- Choose "Robot Name" in "Setting," enter a name and click "Confirm."

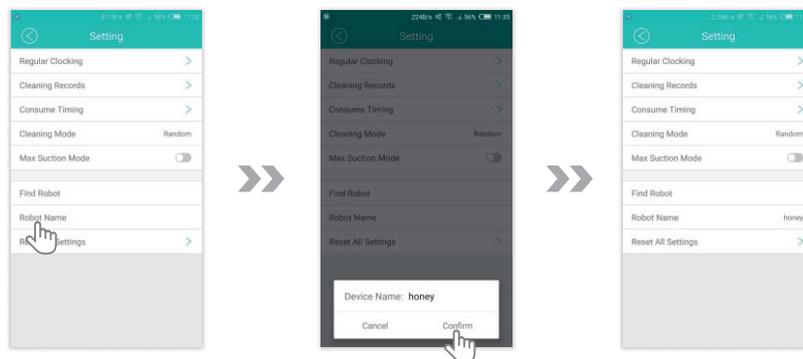

10. Resetting device


- For administrator use only.
- Choose "Reset All Settings" to enter "Setting."
- Click "Reset All Settings," then "Confirm" to reset all data, eg. "History Record" and "Consume Materials." All devices will be unbound. The devices will disconnect from WiFi and enter "AP Distribution Mode" for future binding.
- After resetting, the first user binding a device will become the administrator.

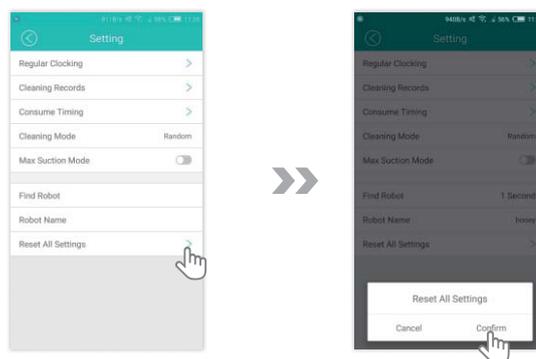

APP download & operation


Device sharing

- For administrator use only.
- Click "Device Sharing" in "Personal Center." A popup device list will appear.
- Click on "Device Sharing." A QR code will appear. Other users can scan the QR code to use the device.

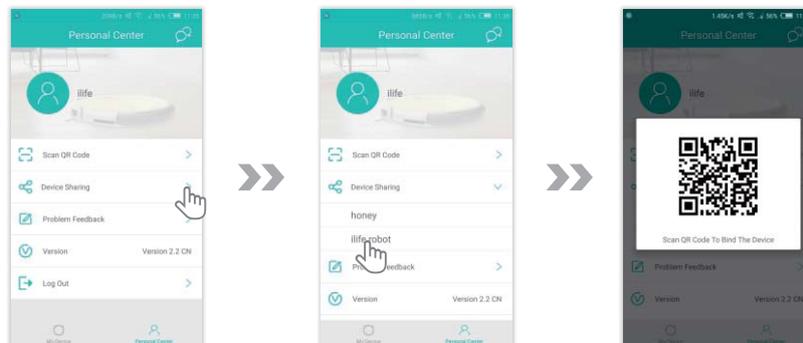

Accepting device sharing

Scan the QR code shared by the administrator to use the robot via the APP.

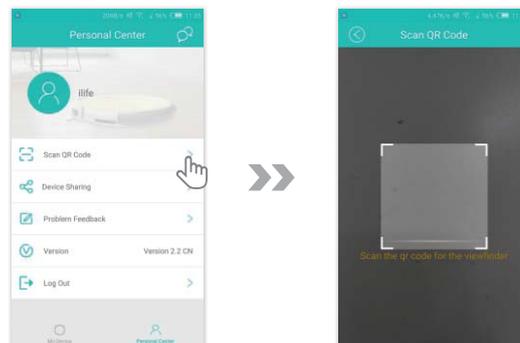

APP download & operation

Problem feedback

Choose "Problem Feedback" and enter your contact and feedbacks.




Maintenance


Switch off the robot and disconnect power supply from the charging base before maintenance.

Dustbin

Remove the dustbin. Open the cover and empty the content.

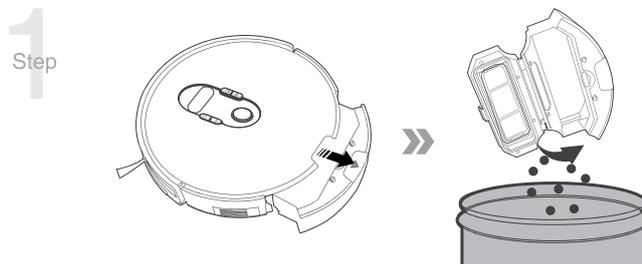


Remove filters. Tap to remove dust from the high-performance filter. Do not wash with water.

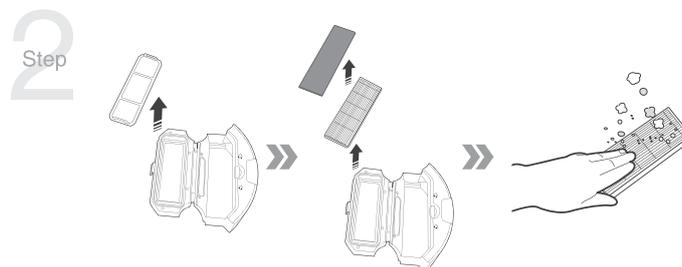

Rinse the dustbin and primary filter.

Air-dry the dustbin and filters. Keep them dry to extend their durability.

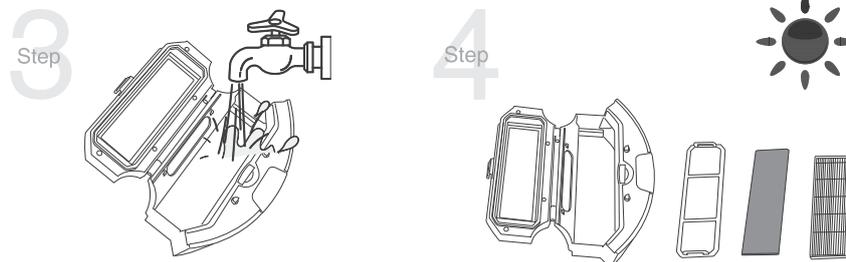


Maintenance

Main brush & side brushes


Cleaning main brush

Remove the cover and the brush. Cut the tangles around the brush for easy cleaning.

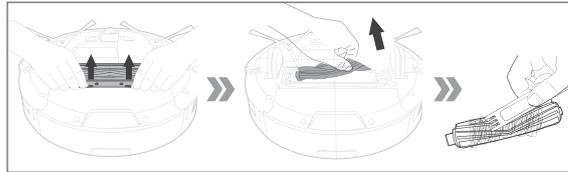


Cleaning side brushes

Remove the brushes. Remove the tangles with the enclosed cleaning tool.

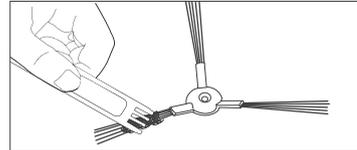


Other parts


Clean the nose wheel with the enclosed cleaning tool.

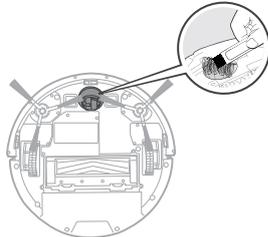


Clean the floor detector to maintain accuracy.

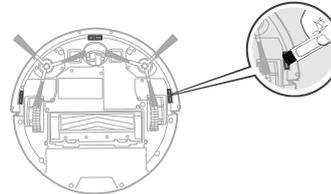

Clean the infrared sensor lens to maintain accuracy.

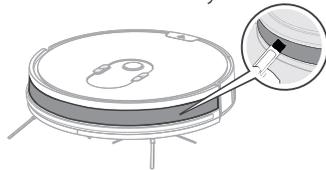

Clean the charging pads on the robot and charging base with a dry cloth.

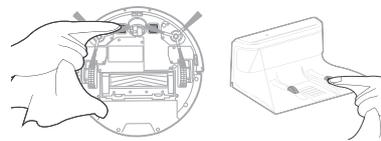

- Remove the battery if the robot will not be used for a long time. In case of battery leakage, remove the battery and clean the holder.
- The robot is powered by a long-life battery. Frequent replacement is not necessary. Contact our customer service if you require a new battery.

Alerts

A7 gives different alert sounds if any of its part is not functioning properly. Here are some common problems and solutions:

No	Possible cause	Error code	Alert sound	Solution
01	Left wheel isn't working properly.	E 11 	1 buzz	Check the left wheel.
02	Right wheel isn't working properly.	E 12 	1 buzz	Check the right wheel.
03	Left side brush isn't working properly.	E 13  	1 buzz	Check the left side brush.
04	Right side brush isn't working properly.	E 14  	1 buzz	Check the right side brush.
05	Main brush isn't working properly.	E 15  	1 buzz	Check the main brush.
06	Robot isn't on a flat surface.	E 21 	2 buzz	Put the robot in an open area and restart.
07	Cliff sensor problem.	E 22 	2 buzz	Clean the cliff sensor.
08	Infrared anti-collision sensor problem.	E 23 	2 buzz	Clean the anti-collision sensor.
09	Robot is trapped.	E 31 	3 buzz	Put the robot in an open area and restart.
10	Fan isn't working.	E 32 	3 buzz	Restart the robot. If problem persists, contact our customer service.
11	Battery problem	E 41 	3 buzz	Replace the battery.
12	Front view sensor isn't working	E 42 	4 buzz	<ul style="list-style-type: none"> Restart the robot. If problem persists, contact our customer service.
13	Gyro error	E 43 	5 buzz	<ul style="list-style-type: none"> Restart the robot. If problem persists, contact our customer service.

Product Specifications

No	Possible cause	Error code	Alert sound	Solution
14	Low battery	LO 	/	<ul style="list-style-type: none"> Return the robot to the charging base using the remote control. Always keep the robot fully charged for the next job by leaving it on the charging base even when it's on standby.
15	Filter is clogged		/	Clean the filter

Product Specifications

Classification	Item	Detail
Mechanical Specifications	Diameter	330mm
	Height	76mm
	Weight	2.6kg
Electrical Specifications	Voltage	14.4-14.8V
	Battery specifications	Lithium ion 2600mAh
Cleaning Specifications	Dust bin capacity	0.6L
	Charging type	Auto Charging / Manual Charging
	Cleaning mode	Auto, Spot, Edge, Daily Schedule
	Cleaning time	up to 120min
Main Body Button Type		Mechanical Button

Troubleshooting

If you encounter problems when using A7, find the possible causes and try the solutions below:

No	Symptom	Possible cause	Solution
01	Robot cannot be recharged.	Charging pads on robot and charging base aren't properly connected.	Make sure the charge pads on robot and charging base align.
		<ul style="list-style-type: none"> Charging base isn't connected to power. Power is lost if the power switch on robot is turned on. 	Keep the robot's power switch on and put the robot on the charging base.
02	Robot is stuck	Robot is trapped by cables, curtain or carpet fringes on the floor.	If the robot cannot fix the problems itself, look for voice alert code guide.
03	Robot returns to charging base before it finishes cleaning.	When the battery is running low, robot will return to charge base for recharge .	Recharge the robot.
		Working time varies on different floors (eg. wood, tile.)	Working time is affected by the complexity of the home setting, amount of debris and chosen cleaning mode.
04	Robot doesn't start cleaning at scheduled time.	Robot is switched off. Robot can't execute a schedule if it's turned off.	Switch robot on.
		Robot's battery is low.	Always leave robot on charging base even it's on standby to make sure it's fully charged for the next job.
		Robot's parts are clogged or jammed by debris.	Turn off the power switch and clean the dustbin. Turn robot upside down and clean other parts.
05	Remote control isn't working within 5 meters.	Battery in remote control is low.	Replace batteries and install them correctly.
		Robot's power switch is turned off or battery is low.	Make sure robot's power switch is turned on and robot is fully charged.
		Signal reception is affected by dusty infrared transmitter of the remote control or the receiver of robot.	Clean the remote control's infrared transmitter and the robot's receiver with a clean cotton.
		There is interferences caused by other equipment generating infrared signals around the remote control.	Avoid using other infrared equipment near the remote control.

ILIFE Customer Service

Customer Service Number:
1-800-631-9676 (Toll free for USA & Canada)
+86-75521005927 (Outside USA & Canada)
Email: support@iliferobot.com
Webstie: www.iliferobot.com