

SOUNDLOGIC™ XT
POWERSTACK
BLUETOOTH LED PARTY SPEAKER



5B750BT
INSTRUCTION MANUAL
 PLEASE READ ALL INSTRUCTIONS CAREFULLY AND
 RETAIN FOR FUTURE USE

Tips!!
 1. Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / FM radio / AUX.
 2. When the speaker is not in use, turn it OFF to conserve power.
 3. Do not overcharge the speaker.

Colour changing LED lights
 1. Turn on the speaker.
 2. Long press the “MODE” button can turn on/off the colour changing LED lights.
Using the Microphone
 1. Rotate the Main volume knob to attain desired sound level.
 2. Turn on the speaker.
 3. Insert the plug of the Microphone (not included) into the Microphone input of the speaker.
 4. Turn on the Microphone. You’re ready to use the microphone now. Karaoke is very popular with these speakers!
 5. Rotate the Mic volume & Main volume knob to attain desired sound level.

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

Care and maintenance
 Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

Product Specifications:

Bluetooth version	: 5.0
FM frequency range	: 87.5 – 108MHz
Unit size	: 31" H x 11" W x 7.5" D
Unit weight	: 8.47 lbs
Power Input	: DC 5V
Play Time	: 1.5 hours
Charging Time	: around 4 hours
Bluetooth range	: 27 - 33 feet
Built-In Rechargeable Battery	: 3.7V / 2000mAh

Getting Started

- Remove the product from the box.
- Please retain all the packaging until after you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Power Stack Bluetooth LED Party Speaker
- 3.5mm auxiliary cable
- USB charging cable
- Instruction Manual


Product Features

- Bluetooth LED Party Speaker
- Powerful Speaker System for iPhone, iPad, iPod, Android smart phones, MP3 players and other audio devices
- Streams music from any Bluetooth enabled devices
- Microphone & Aux input
- LED-light up speaker
- Built-in rechargeable battery

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

DESCRIPTION OF PARTS

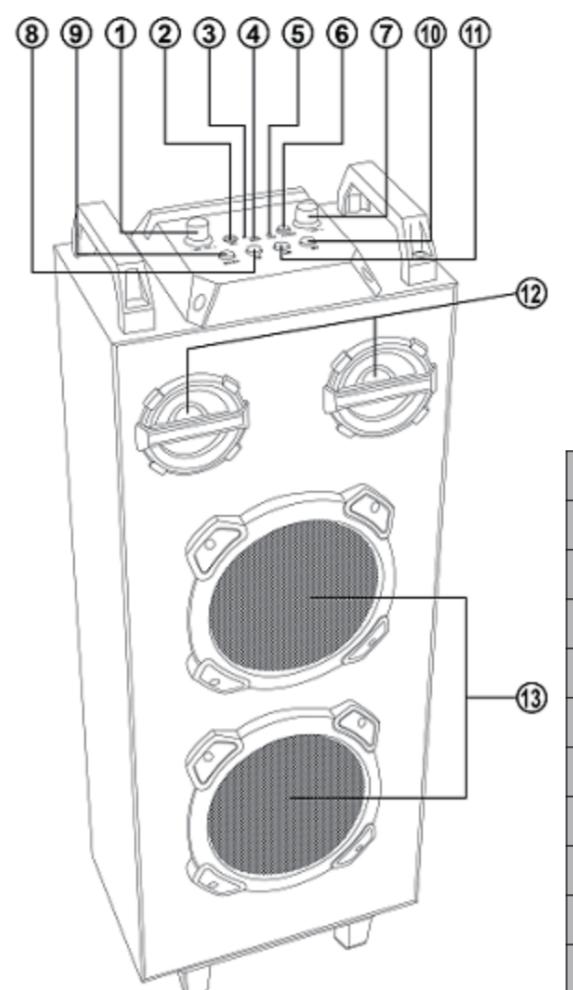

1	MIC VOLUME
2	MIC INPUT
3	LED INDICATOR
4	CHARGING PORT
5	AUX IN
6	POWER ON/OFF BUTTON
7	MAIN VOLUME
8	PLAY/PAUSE BUTTON
9	MODE/LED LIGHT BUTTON
10	NEXT TRACK BUTTON
11	PREVIOUS TRACK BUTTON
12	LED LIGHTS ON TWEETERS
13	LED LIGHTS ON SPEAKERS

INSTRUCTIONS FOR USE

Charging the Speaker

For best results, fully charge the speaker before its first use.
 1. Plug the Micro USB end of the USB charging cable (included) into the charging port. Plug the other end into a USB port on your computer or other devices suitable for USB charging.
 2. Red LED Light illuminates indicating that the speaker is being charged.
 3. It takes around 4 hours to fully charge the speaker. Once the speaker is fully charged, LED Light will turn OFF.

Turn on/off the Speaker

Press POWER ON/OFF button to turn on/off the speaker.

Pairing your device with the Speaker –

Your Bluetooth Speaker can stream wireless audio from any Bluetooth enabled device within the range of 27 - 33 feet. Simply follow the below steps.
 1. Rotate the Main volume knob to attain desired sound level.
 2. Turn on the speaker.
 3. You will hear an indication tone, blue LED indicator light will flash rapidly and color changing LED lights will turn on. The speaker is now in Bluetooth pairing mode.
 4. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
 5. It will search for available Bluetooth devices.
 6. Bluetooth Speaker would appear as “SL POWERSTACK”, in the list of searched devices. Select it from the available list of devices.
 7. If required, enter the password ‘0000’ to confirm pairing.
 8. Once paired successfully, another indication tone would be heard and the blue LED indicator light would stay on.
 9. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your mobile device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Turn MAIN VOLUME knob to adjust the volume to your desired level, or Adjust volume from the source device.
Pause	Playing music	Short press PLAY/PAUSE button once to pause music
Play	Pause	Short press PLAY/PAUSE button once to resume music
Previous track	Playing music	Short press the button to the previous track
Next track	Playing music	Short press the button to the next track

Listening to FM radio

- Rotate the Main volume knob to attain desired sound level.
- Turn ON the speaker.
- Short press the Mode button to FM radio mode with sound from a FM radio station.
- Short press the PLAY/PAUSE button once to begin scanning all radio stations within frequency range 87.5-108MHz
- Press the Next track or previous track button to go to the next or previous preset radio station.

Listening to Music using AUX-In

1. Rotate the Main volume knob to attain desired sound level.
2. Turn on the speaker.
3. Plug the 3.5 mm auxiliary cable (included) into the AUX IN port of the speaker for AUX function. And, the other end of the cable to the aux port of a suitable audio device (such as computer / tablet / MP3 Player etc.).
4. Play your favorite song at the source device.

(Note: While using AUX IN function, functions such as play/pause, playing next/previous track can be controlled only through your source device.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead.	Adjust source volume. Charge Battery.
No sound	Volume in minimum position. The connected device is not in play mode. Input source incorrect.	Turn MAIN VOLUME knob to increase the volume. Play the music in the connected device and make sure the volume level is in high level. Press the MODE button to set the input source to the desired function.
Sound distortion	Volume level too high	Turn MAIN VOLUME knob to decrease the volume.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repair by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact:

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.