


QUICK START INSTRUCTIONS

**BEFORE YOU POST A REVIEW, LET US MAKE SURE YOU ARE HAPPY WITH THIS PRODUCT.
CALL (800) 678-7873 OR EMAIL JSIEGEL@SPORTDIMENSION.COM WITH ANY ISSUE.**

1. CAREFULLY read this manual and follow all instructions.
2. Unfold the product and spread out FLAT onto grassy or sandy area with NO sharp objects.
3. GENTLY inflate the chambers in the recommended sequence (Refer to Inflation Sequence table to the right).
4. Close all valves COMPLETELY.
5. Install the Battery (Refer to "Using the speaker device" shown on the user manual) to your speaker, and test the Speaker is pairing with your music play device before install it to your the product.
6. Follow below instruction to operate your Speaker.

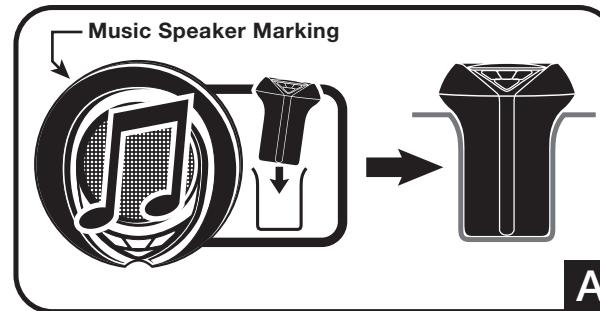

TURN ON & OFF YOUR SPEAKER

Press and hold the "O" icon button to turn on or turn off the device.

When Speaker is ON or OFF, you will hear a Music alert

PAIRING

Prior to using the speaker for the first time, you must pair it with a Bluetooth-enabled device eg. your Smartphone, iPad, iPhone etc.

You will hear a Music alert once pairing is completed, you may access the following functions.

- Press 1 time the "II▶" icon button, play or pause the music.
- Press and hold the "◀" or "▶" icon button to increase or decrease the volume.
- Press the "▶" icon button by 1 time, play next track.
- Press the "◀" icon button by 1 time, play previous track.

IMPORTANT NOTE: Whenever Bluetooth connection/link is removed, for example: power off on speakerphone/mobile handset or out of 10 meter sensing distance, please activate connection/link as suggested.


CAUTION :

- The user must read the user manual carefully and fully understand the usage before using this product.
- Always ensure the speaker is securely attached on the Inflatable and works properly every time before use.
- ALWAYS remove the speaker from the product after every use.
- Only change battery when you are on ground away from water. Make sure the speaker is completely dry before opening the battery chamber.
- Never place the speaker directly into water.
- When connected to your music player device, make sure your device is protected by water proof pouch (**not included**). We are not liable to the damage or loss of any music player device (e.g., smart phone, mp3 player) in any case.

7. Follow the Music Speaker Marking printed on the product, and GENTLY insert the bottom part of the Speaker to the hole on the product (Fig A).
8. Fill anchor bag with SAND ONLY.
9. Attach one end of the anchor bag rope (3 m or 10 ft.) to the Anchor Bag by threading the rope through holes on bag and tying a double knot at the end of rope. Thread the other end of the anchor bag rope to the inflatable product through the eyelets attached to the product. If ropes are attached to anchor bag correctly, the weight of the sand will cinch the anchor bag closed. This will ensure that no sand escapes from bag while in the water. Verify before each usage if anchor weight is sufficient for the number of users.
10. Measure the exact length between the eyelet on the product and anchor bag placed at the bottom of the lake (Use a longer rope (NOT INCLUDED) if the depth of the lake is over 3 m (10 ft.). Your rope needs to be adjusted in order for the product to be well anchored in the lake. Firmly tie the end of rope to the eyelet on the product to ensure anchor stays attached to the product.

INFLATION SEQUENCE TABLE

Inflate the chambers in following sequence:

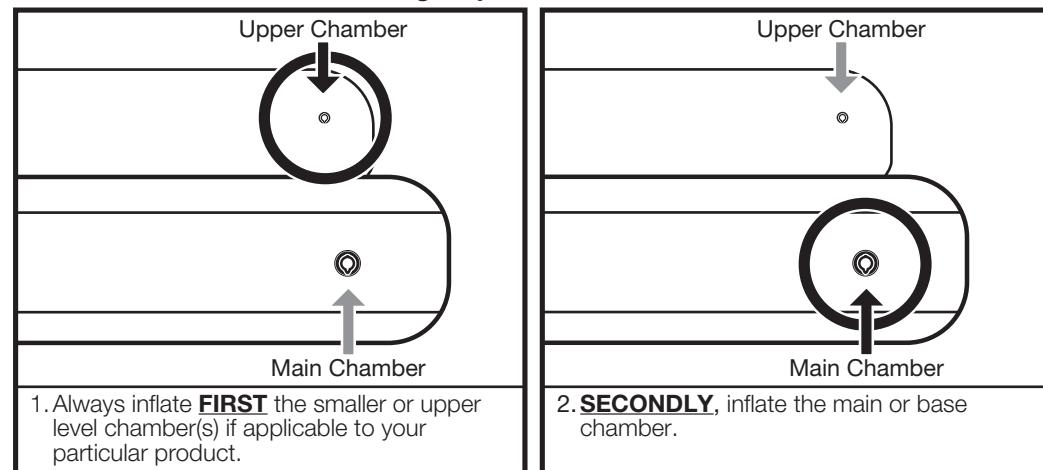

1. Always inflate **FIRST** the smaller or upper level chamber(s) if applicable to your particular product.

2. **SECONDLY**, inflate the main or base chamber.

Please make sure NOT to over inflate this product. The inflatable unit should be FULL, but NOT TOO FIRM. During the daytime or under hot temperatures, the air inside the product can heat up and expand causing an increase in pressure and a possible rupture. To avoid rupture on the product, air pressure can be released by letting out small amounts of air through the valves. BE SURE there are no people on the product during inflation and deflation.

Safety warning labels:

While assembling this product, take a few moments to read the warning labels for Safety Instructions.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help**

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.