

How to Enable & Disable the Apple Find My network

To check if the Find My network is enabled:

1. Double-click the Find My button. When the Slim Wallet is paired and connected, it will play a tune.

To enable the Find My network:

1. Press and hold the Find My button for 5 seconds. The Slim Wallet will play a tune.

To disable the Find My network:

1. When the device is on, press the device button 5 times in 2 seconds. The device will beep, and the device will be powered off.

Removing Slim Wallet from Find My App

1. To remove your Slim Wallet from the Find My app, select "Remove item".

After removing Slim Wallet, the device will beep three times. The device will not shut down and is in the pairing state. If there is no re-pairing within 10 minutes, the Slim Wallet will leave the pairing state. If you need to pair Slim Wallet at this time, you need to click the Find My button once, the device will sound, and the light will flash once. At this time, the Slim Wallet enters the pairing state and can be paired with the Find My app again.

How to Perform a Factory Reset

1. When the device is turned on, double-click the Find My button. The Slim Wallet will play a sound.

2. Press and hold the Find My button as soon as you hear the sound. After two seconds, the Slim Wallet will emit a "tick, tick, tick" sound. Do NOT release the button and continue holding for about 3 seconds.

3. The Slim Wallet will play a sound again. Release the button and the factory reset is complete.

How To Find The Serial Number

To find your device's serial number, follow the steps below.

1. Via the Find My app:

- a. Open the Find My app, tap the Items tab, and tap your Slim Wallet.
- b. Scroll to the bottom of the Item Detail Slim Wallet. The serial number is displayed below Manufacturer.

2. On the device:

3. The serial number is printed on the side of the Slim Wallet.

Warranty

Slim Wallet is designed to make your life easier. That's why every Slim Wallet is covered under warranty for one full year against defects in materials and workmanship. To learn more, visit nomadgoods.com/pages/support.

Use And Care

Slim Wallet is water-resistant but not waterproof. We encourage you to bring your Slim Wallet along on most of your wild adventures, but deep-sea explorations (and the like) are not recommended. It is not recommended that you expose the Slim Wallet to extreme hot or cold temperatures.



Slim Wallet

NOMAD

Hello,

Before you use Slim Wallet, let's get it connected to the Apple Find My app.

1

Press and hold the Find My button for 5 seconds to turn on your Slim Wallet.

2

Open the Apple Find My app on your iOS device. Choose "Items" > "Add New Item(+)". "Add Other Item".

3

Slim Wallet will appear on screen. Tap to connect and then set a custom name and icon for your card.

Charge Before Use

Make sure to fully charge the Slim Wallet battery using a wireless charging pad.

To Charge: Align the lightning bolt icon with the center of your wireless charger.

While Charging: The Slim Wallet in the boot state, each charge will emit a "beep" prompt to start charging.

Features of the Apple Find My app

Slim Wallet works exclusively with the Apple Find My network. The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, iPod touch, or Mac. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple or the maker of your personal item, can view its location.

Locate your Slim Wallet

1. Open Find My app and select the "Items" tab.
2. Tap on your Slim Wallet.
3. Tap "Play Sound" to trigger the Slim Wallet locator sound.
4. Tap "Stop Sound" to stop the sound once your Slim Wallet is found.

"Left Behind" Notifications

To enable "Left Behind" Notifications:

1. Open Find My app and select the "Items" tab.
2. Tap on your Slim Wallet.
3. Under "Notifications" enable the "Notify When Left Behind" toggle.
4. You will now receive a notification when your Slim Wallet is no longer in range of your device.

Privacy

The Apple Find My network uses advanced encryption to ensure that no one else, not even Apple or Nomad, can view the location of your Slim Wallet.

Requirements

To use the Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Legal

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS, and watchOS are the trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Leather Mag Wallet with Find My

NM014742858

Nomad Goods, Inc

1187 Coast Village Rd. #638
Suite 1 Santa Barbara, CA 93108

NOMAD

NOMAD