


# **marsboy**

## **Wireless Doorbell Kits ZB203**

### User's Manual


Thank you for choosing marsboy wireless doorbell. Please read the manual carefully before using the doorbell and keep this book for easy reference in future.

### User's Manual

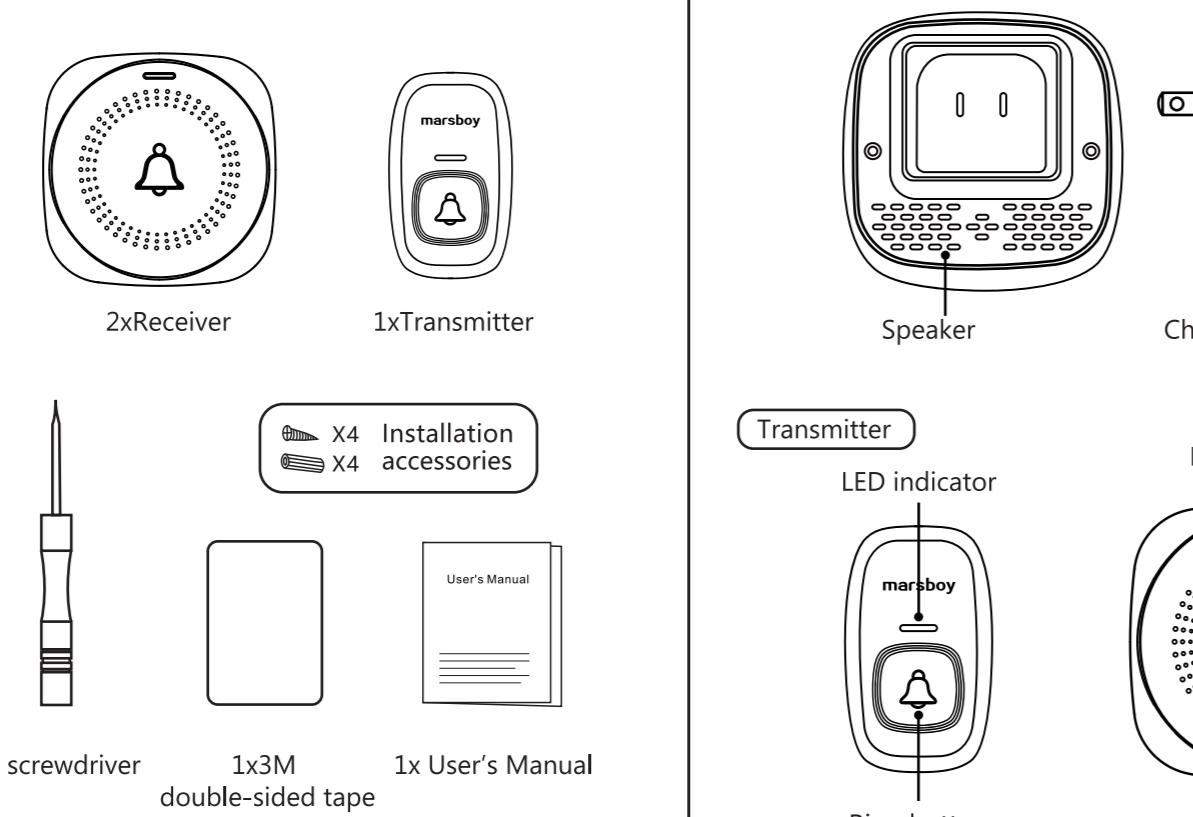

**1**

### Product diagram

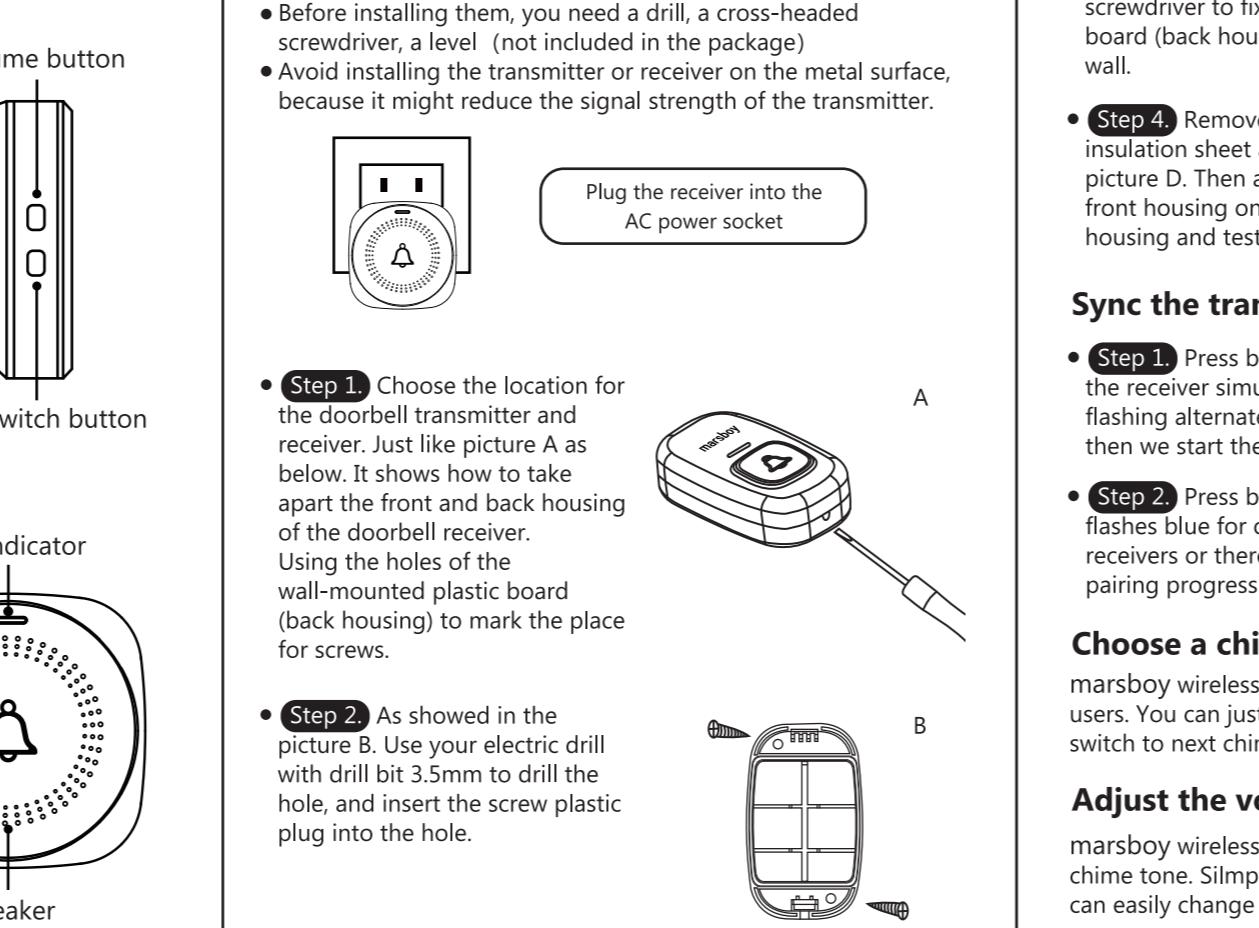

**2**

### Install the transmitter and receiver

#### Note before installation:


- Before installing them, you need a drill, a cross-headed screwdriver, a level (not included in the package)
- Avoid installing the transmitter or receiver on the metal surface, because it might reduce the signal strength of the transmitter.



**A**

### Maintenance

- For best results, please use qualified 2A, 2V battery. Replace battery regularly to keep the doorbell dry. If the doorbell were wet, please dry it immediately.

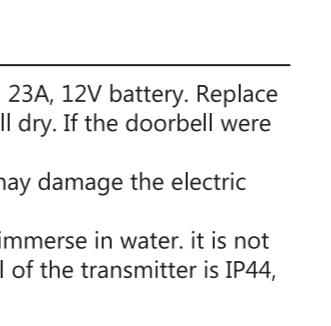

**C**

- Don't use chemical cleanser since it may damage the electric circuit.
- Don't expose the receivers to rain or immerse in water. It is not waterproof. The water resistance level of the transmitter is IP44, it can't immerse into water too.

### Sync the transmitter and receivers

- Step 1. Choose the location for the receiver simultaneously until the blue and LED light start flashing alternately and quickly or there is voice of dang dang... then we start the pairing process.

- Step 2. Press button on transmitter until LED indicator on it flashes blue for once. When it flashes slowly for 3 times on the receivers or there are 3 voice prompts on the receivers, our pairing progress finish.

### Choose a chime sound


marsboy wireless doorbell provide 30 kinds of chime tone for users. You can just press the chime switch button the receiver to switch to next chime tone.

### Adjust the volume

marsboy wireless doorbell provides you 4 level of volume for the chime tone. Silmly press the volume button on the receivers you can easily change the volume level.

**4**


### Product diagram

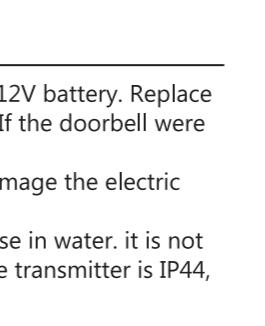

**D**

### Maintenance

- For best results, please use qualified 2A, 2V battery. Replace battery regularly to keep the doorbell dry. If the doorbell were wet, please dry it immediately.

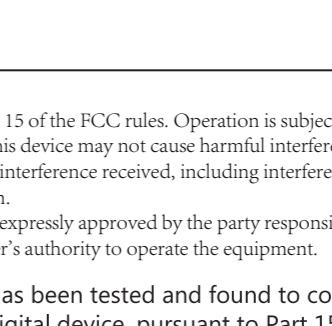

**C**

- Don't use chemical cleanser since it may damage the electric circuit.
- Don't expose the receivers to rain or immerse in water. It is not waterproof. The water resistance level of the transmitter is IP44, it can't immerse into water too.

### Sync the transmitter and receivers

- Step 1. Choose the location for the receiver simultaneously until the blue and LED light start flashing alternately and quickly or there is voice of dang dang... then we start the pairing process.

- Step 2. Press button on transmitter until LED indicator on it flashes blue for once. When it flashes slowly for 3 times on the receivers or there are 3 voice prompts on the receivers, our pairing progress finish.

### Choose a chime sound


marsboy wireless doorbell provide 30 kinds of chime tone for users. You can just press the chime switch button the receiver to switch to next chime tone.

### Adjust the volume

marsboy wireless doorbell provides you 4 level of volume for the chime tone. Silmly press the volume button on the receivers you can easily change the volume level.

**5**


### Product diagram

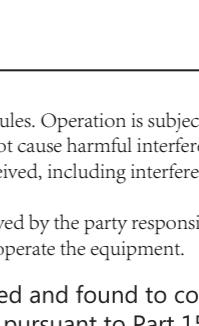

**D**

### Maintenance

- For best results, please use qualified 2A, 2V battery. Replace battery regularly to keep the doorbell dry. If the doorbell were wet, please dry it immediately.

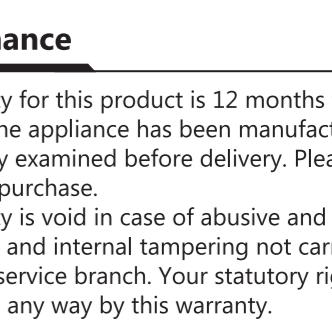

**C**

- Don't use chemical cleanser since it may damage the electric circuit.
- Don't expose the receivers to rain or immerse in water. It is not waterproof. The water resistance level of the transmitter is IP44, it can't immerse into water too.

### Sync the transmitter and receivers

- Step 1. Choose the location for the receiver simultaneously until the blue and LED light start flashing alternately and quickly or there is voice of dang dang... then we start the pairing process.

- Step 2. Press button on transmitter until LED indicator on it flashes blue for once. When it flashes slowly for 3 times on the receivers or there are 3 voice prompts on the receivers, our pairing progress finish.

### Choose a chime sound

marsboy wireless doorbell provide 30 kinds of chime tone for users. You can just press the chime switch button the receiver to switch to next chime tone.

### Adjust the volume

marsboy wireless doorbell provides you 4 level of volume for the chime tone. Silmly press the volume button on the receivers you can easily change the volume level.

**6**

### Product diagram



**D**

### Maintenance

- For best results, please use qualified 2A, 2V battery. Replace battery regularly to keep the doorbell dry. If the doorbell were wet, please dry it immediately.



**C**

- Don't use chemical cleanser since it may damage the electric circuit.
- Don't expose the receivers to rain or immerse in water. It is not waterproof. The water resistance level of the transmitter is IP44, it can't immerse into water too.

### Sync the transmitter and receivers

- Step 1. Choose the location for the receiver simultaneously until the blue and LED light start flashing alternately and quickly or there is voice of dang dang... then we start the pairing process.

- Step 2. Press button on transmitter until LED indicator on it flashes blue for once. When it flashes slowly for 3 times on the receivers or there are 3 voice prompts on the receivers, our pairing progress finish.

### Choose a chime sound

marsboy wireless doorbell provide 30 kinds of chime tone for users. You can just press the chime switch button the receiver to switch to next chime tone.

### Adjust the volume

marsboy wireless doorbell provides you 4 level of volume for the chime tone. Silmly press the volume button on the receivers you can easily change the volume level.

**7**