

GOFISH CAM QUICK START GUIDE


1. WiFi Button

Press to turn on/off WiFi

2. Record/Mode Button

Press on/off recording.
Hold to cycle through
video modes.

- Green Light is 1080@60fps,
- Dark Blue Light is 1080@30fps,
- Light Blue Light is 720@60fps.

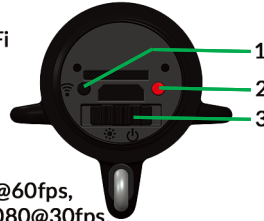

3. Power Switch

Switch to Left - On with night vision light
Switch in middle - Off
Switch to right - On

**Note: by holding down the WiFi button (#1)
and the Record/Mode Button (#2) at the same
time you will manually reset the camera.**

**Before using your GoFish Cam, it is highly
recommended to read the full instruction manual
available at www.GoFishCam.com/Instructions**

Prima di usare la Sua GoFish Cam, La invitiamo a leggere interamente
il manuale di istruzioni disponibile sul sito www.GoFishCam.com/Instructions

Avant d'utiliser votre GoFish Cam, il est fortement recommandé de
lire le manuel d'instruction au complet, disponible au
www.GoFishCam.com/Instructions

Antes de usar su GoFish Cam, es muy recomendable leer el manual
de instrucciones completo. Para obtener el manual de instrucciones
completo, visite www.GoFishCam.com/Instructions

GoFish Camを使う前に、下記のリンクにあるマニュアルの説明文を読まれ
ることを強くお勧めします。 www.GoFishCam.com/Instructions

在你使用GoFishCam之前，强烈推荐你先上 www.GoFishCam.com/Instructions
这个网站阅读 一下全面的人工操作使用说明

Vor der Verwendung ihre GoFish Cam, es wird dringend empfohlen
sich die vollständige Bedienungsanleitung zu lesen verfügbar unter
www.GoFishCam.com/Instructions