

# GS-65

2.1 BLUETOOTH SOUNDBAR



Instructions Guide

## Contents

<b>What's In The Box?</b>	<b>1</b>
<b>Controls And Functions</b>	<b>2-5</b>
<b>Support</b>	<b>6</b>
<b>Instructions Guide</b>	<b>7-12</b>
Using the HDMI (ARC) Input	7
Using the Optical Input	8
Using the MP3 Link Connection (Line In)	9
Connecting to the Mains Supply	10
Connecting the Soundbar and Subwoofer	11
Using the Bluetooth Operation	12
Using the USB Operation	13
<b>Troubleshooting</b>	<b>14</b>
<b>Specifications</b>	<b>15</b>
<b>Wall Mount Installation Guide</b>	<b>16</b>
<b>Quick System Installation Guide</b>	<b>17</b>
<b>Safety Information</b>	<b>18</b>

## What's In The Box?

### Box Contents

1. GS-65 Soundbar x 1
2. Remote Control x 1
3. Power Adapter x 1
4. User Manual
5. AUX In Cable x 1
- 6 . 3 .5mm to 3 .5mm Line In Cable x 1
7. Subwoofer x 1



1.GS-65 Soundbar



2. Remote Control



3. Power Adapter




4. User Manual



5. AUX IN Cable




6 . 3 .5mm to 3 .5mm LineIn Cable

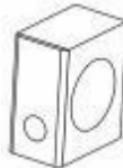


7. Subwoofer x 1

### Side View/ Control Buttons

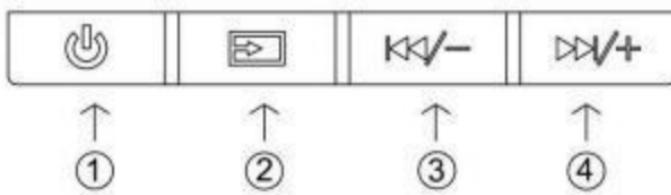

1. Power On/Off
2. Mode/Pair  
(short press/long press)
3. Volume-/Previous  
(short press/long press)
4. Volume+/Next  
(short press/long press)


### Back View

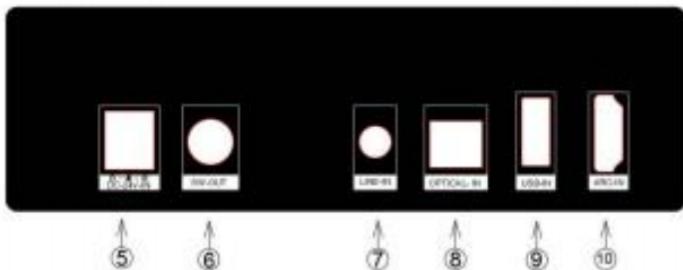

5. DC Power Input
6. Subwoofer Output
7. Line-In Input
8. Optical Input
9. ARC Input
10. USB Input

# Controls And Functions

## Remote Control

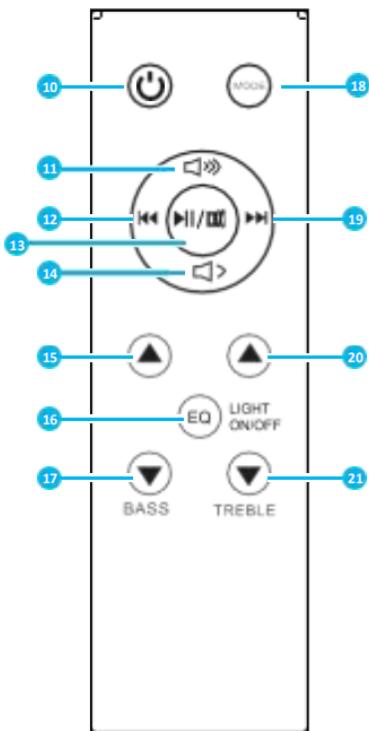

### 10. Power On/Off

Switch the unit between on and Standby mode

### 11. Volume +

Press to increase the volume

### 12. Back Step

Use in USB or Bluetooth mode to go back a track .

### 13. Play/Pause

Press to play and pause

### 14. Volume -

Press to decrease the volume

### 15. Bass Increase

Press to increase the bass

### 16. EQ

Press the button to adjust the equaliser. Press and hold the button to turn the soundbar LED light on and off.

### 17. Bass Decrease

Press to decrease the bass

### 18. MODE

Press button repeatedly to switch between soundbar modes

### 19. Forward Step

Use in USB or Bluetooth mode to go forward a track

### 20. Treble Increase

Press to increase the treble

### 21. Treble Decrease

Press to decrease the treble

### Using the Remote Control

---

The remote control sensor at the front of the soundbar is sensitive to the remote control's commands up to a maximum of 8 metres away and within a maximum arc of 30 degrees.

Please note that the operating distance may vary depending on the brightness of the room.


### Soundbar Wall Mount Dimensions

---




### Subwoofer

#### 6.5Inch Wireless Subwoofer

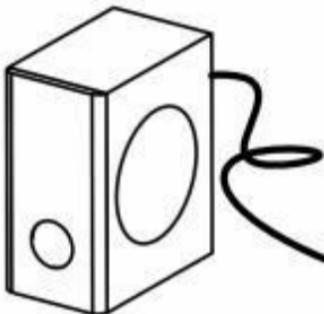

Connecting to the soundbar

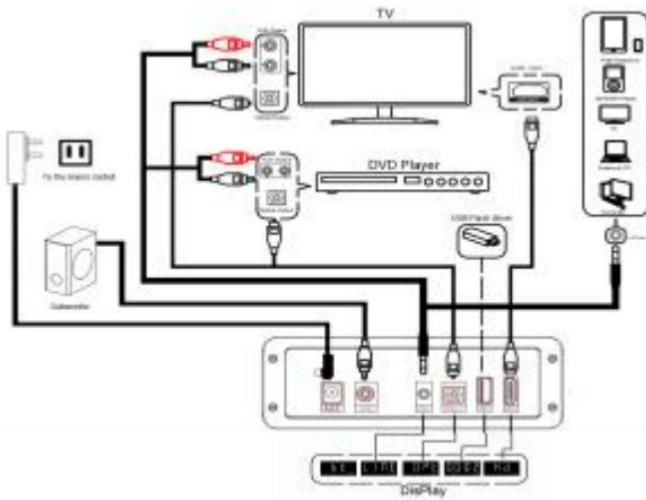

## Support

### Support

---

Thank you for your purchasing the GS- 65 Soundbar.

Please follow the guidance of the user manual to set up your new purchase and begin enjoying its features.

## Instructions Guide


### Using the HDMI ARC Input

You will need: An audio source with an ARC Audio Output and a ARC Audio cable (not included).

Connect the ARC Audio cable to the ARC output on the audio source and to the ARC Input on the soundbar.

Press the POWER button on the soundbar or POWER button directly on the remote control (Rem. 10) to switch on the unit. Press the MODE button on the remote control (Rem. 18) to switch to ARC mode or select the Mode button on main unit repeatedly to select the ARC mode.

Using the native controls on your connected device, make sure the audio settings are set to ARC or HDMI Audio and are turned on. Audio from the connected audio source will now be played through the speakers.

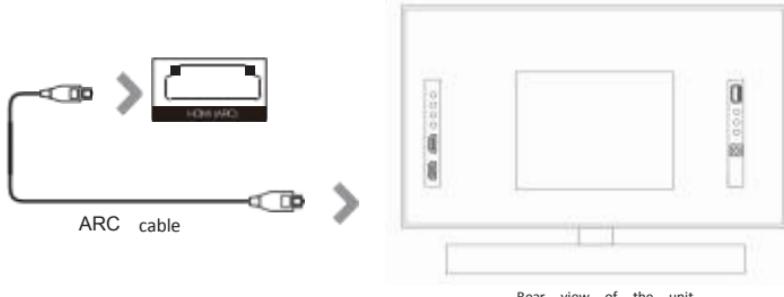

Rear view of the unit

### Using the Optical Input


You will need: An audio source with an Optical Audio Output and a Digital Optical Audio cable (included).

Connect the Digital Optical Audio cable to the optical output on the audio source and to the Optical Input on the soundbar .

Press the POWER button on the soundbar or POWER button directly on the remote control (**Rem.10**) to switch on the unit.

Press the MODE button on the remote control (**Rem .18** )to switch to Optical mode or select the Mode button on main unit repeatedly to select the Optical mode.

Using the native controls on your connected device, make sure the audio settings are set to PCM or Optical Audio and are turned On. Audio from the connected audio source will now be played through the speakers.

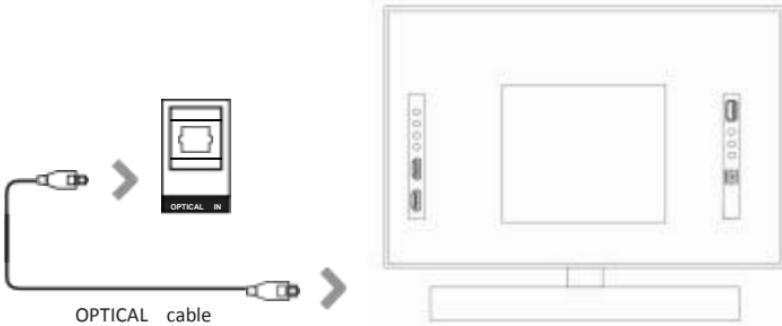

Rear view of the unit

## Instructions Guide

### Using the MP3 Link Connection (Line In)

Plug one end of a 3.5mm to 3.5mm Line In cable (included) into the Line In port on the unit. Before use, disconnect any cables connected to the Stereo RCAInputs.

Plug the other end of the cable into the audio output/headphone output on an MP3 player or other audio source .

Press the Power button on the soundbar or POWER button directly on the remote control ( **Rem . 10** ) to switch on the unit .

Press the Mode button repeatedly on the soundbar or press the MODE button on remote control ( **Rem.18** ) repeatedly to enter LINE in mode.

Audio played through the connected device will now be heard through the speakers.



### Connecting to the Mains Supply

Ensure that the power supply voltage is in the voltage of 100V~240V.

This unit is designed to use adapter.

Connecting the unit to any other power source may cause damage to the unit .


Unwind the mains cable to its full length.

Connect the mains plug to a mains socket.

Make sure the mains plug is fully inserted into the mains socket.

Connect the adapter to the unit via the DC input Socket.

(DC-24V- IN)

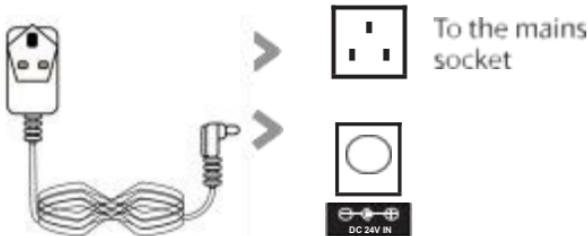

DC- In Power Cable

Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Unplug the power cord from the outlet when the unit is use for an extended period of time.




### Connecting the Soundbar and Subwoofer

---

Connect the subwoofer cable to the soundbar.

Please ensure that your soundbar is being mains powered and switched 'ON' for initial set up. To do this, press the Power button on the unit or the POWER button on the remote control .

If you are having connectivity issues, please move the subwoofer closer to the soundbar for set up.

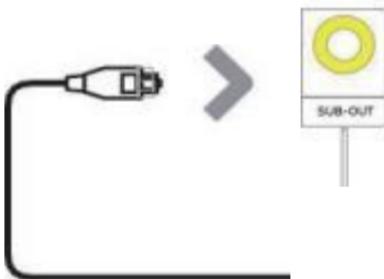

### Using the Bluetooth Operation

---

#### Pairing a Bluetooth Device for the First Time

Press the POWER button on the unit or the POWER button on the remote control (**Rem.10**) to switch on the unit.

Select and press the MODE button repeatedly on the remote control until in Bluetooth mode (**Rem .18**) or press the Mode button repeatedly on the soundbar to enter Bluetooth mode.

Using the native controls on your Bluetooth device, select the “GS-65” in your Bluetooth settings to pair.

Refer to the user manual for your specific device for instructions on pairing and connecting Bluetooth devices.

When successfully paired and connected, a beep will issue from the unit. After initial pairing, the unit will stay paired unless unpaired manually by the user.

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

### Playing Audio Wirelessly

---

Follow the instructions for pairing a Bluetooth device.

Use the native controls on the connected Bluetooth Device to select a track .

To Play/Pause the track or Skip Forwards/Backwards to a selected track, use the remote control (**Rem.13,12,19**).

Audio played through the connected Bluetooth device will now be heard through the speakers.

### Using the USB Operation

---

Insert USB to Play Music Automatically .

Select and press the MODE button repeatedly on the remote control until in USB mode (Rem.24) or press the Mode button repeatedly on the soundbar to enter USB mode.

To Play/Pause the track or Skip Forwards/Backwards to a selected track, use the remote control (**Rem.13,12,19**).

Audio played through the connected USB device will now be heard through the speakers.

## Troubleshooting

### Troubleshooting


If the soundbar does not work properly as desired, please check the following.

Malfunction	Possible causes/ measures
No power / function	<p>Check whether the power is switched on or off at the wall.</p> <p>Check whether the power adaptor is properly connected to power outlet or not.</p>
No sound	<p>Check whether cables are properly installed.</p> <p>If they are, please try alternative cable to connect to your TV if possible.</p> <p>Check unit is out of standby and in mode .</p>
No sound from bluetooth connection	<p>Forget the soundbar from your device and reconnect.</p>
Function disturbance	<p>Switch off and unplug the unit. Leave it for 2 minutes and switch it on again .</p> <p>If a particular mode is causing problems, please try an alternative connection to your TV such as Optical or Bluetooth.</p>
Remote control does not work [properly]	<p>Check whether the battery run out or not.</p> <p>Replace with a new one if necessary.</p> <p>Check whether there is obstacle on the front of remote sensor.</p>


## Specifications

Power Supply (Soundbar)	DC 24V / 2.5A
Power Consumption	2 x20W+60W
Speaker Size & Number of Speakers	2.25" Mid-Tweeter x 4 +6.5" x 1
Working Environment (Temperature)	-10~ +45C
Relative Humidity	5% ~ 90%
Frequency Response	40Hz - 20KHz
Bluetooth Version	V 5.0
Bluetooth Distance	≥10M
Dimension (LxDxH) (Soundbar)	90.6 x 10.7 x 7.0 cm(with hook / standing foot )
Dimension ( LxDxH) ( Subwoofer)	18 x 30 x 38cm(with standing foot)


## Hang the soundbar

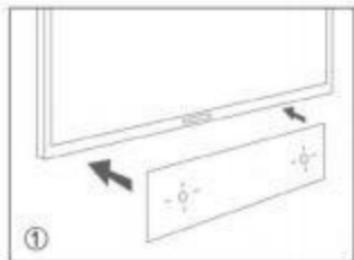


Place the paper guide on the wall where you want to hang the soundbar.

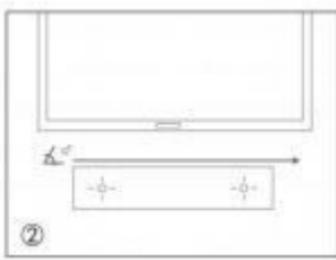


Verify with a level gauge that the inclination angle of the soundbar is zero degrees.

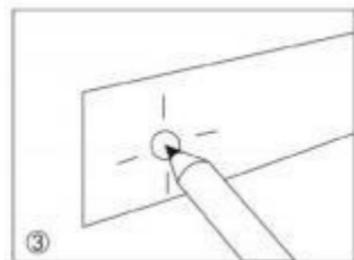


Locate the screw holes on the paper guide and mark a point with a pencil.

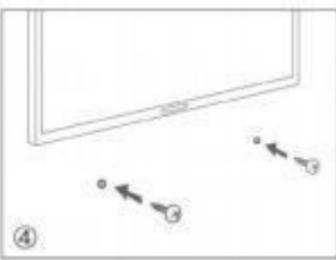


Make the holes with the corresponding drill bit according to the type of wall.

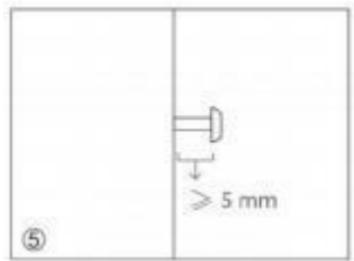

It is advisable to leave no more than 5mm between the head of the screw and the wall to minimize the inclination angle of the soundbar.

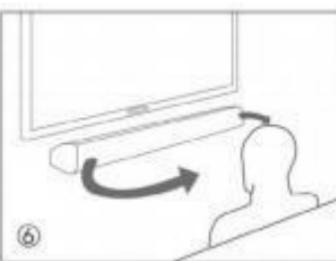

For a better sound experience, it is advisable to place the soundbar at the same height of the ear.

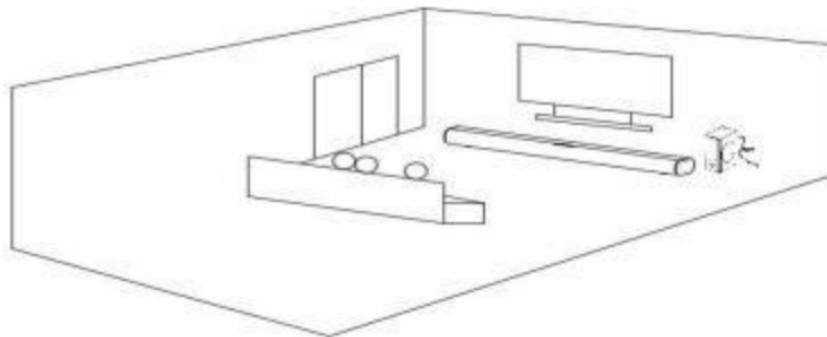

When all the kits connecting with power supply, the subwoofer is flat placed in the middle under the soundbar, or placed closely on the left and right side of the soundbar, but not too far from the soundbar.

Detached Surround Speaker from main Soundbar to be Standing Speaker.  
Each wireless surround speaker is flat placed on the left and right sides of the sofa, their speakers are facing right and left ears of people setting on the sofa.

For a better sound, the distance from left & right surround speaker to the soundbar cannot be far than 10 meters, it is better within 7 meters.

Soundbar is supported to hang on the wall by installing with a screw.

1. Read these user manual.
2. Keep these user manual.
3. Heed all Warnings
4. Follow all Instructions
5. Do no clean the apparatus near or with water
6. Do not block any ventilation openings . Install in accordance withthe manufacturer' sinstructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus ( including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus .
9. Only use attachments/accessories specified by the manufacturer .
10. Unplug this apparatus during light storms or when unused for long periods of time .
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus .
13. Dispose of used electrical products and batteries safely according to your local authority and regulations .

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be places on the apparatus . Main plug is used to disconnect device and it should remain readily operable during intended use . In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely .

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.  
Do not open



Read all instructions carefully before use  
and keep for future reference



When servicing, use only identical  
replacement parts

## CAUTION



RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**IMPORTANT: Please read all instructions carefully  
before use and keep for future reference.**

## FCC Statement

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.