

WHAT IS i-CADDIE

i-CADDIE is a proprietary technology that uses your pre-set 7-iron distance to calculate club suggestions based on your distance to the center of the green.

SETTING UP i-CADDIE

To set up i-Caddie, navigate to the settings tab and enter your average 7 iron distance using the and buttons. Once set, press the button, then press and hold the button again.

CHARGING

- 1. Pull down the rubber flap on the back of the unit and Insert the USB-C Charging end into the Swami GROOVE & then insert the USB end of the charging cord into a USB charging port or AC adapter (not included). The recommended charging rate is 5V, 2A.
- 2. A complete full charge will take roughly 4.5 hours

FORCE SHUT DOWN (GPS)

If you experience an error while using your GROOVE GPS, please follow the force shut down procedure. This will automatically power off your unit. **PRESS** the button, button and button at the same time to shut down the unit.

SWAMI GROOVE SPECIFICATIONS

- Music play 100% volume + GPS: 4 hrs
- Music play 70% volume + GPS: 6 hrs
- Music play 50% volume + GPS: 8 hrs
- Music play 30% volume + GPS: 10 hrs
- Music play 100% volume: 4.5 hrs
- Music play 70% volume: 6.5 hrs
- Music play 50% volume: 9 hrs
- Music play 30% volume: 12 hrs
- GPS only: 20 hrs
- Bluetooth standard: V5.3
- Net weight: 1.587lb (720g)
- Waterproof grade: IP5
- Frequency range: 2.402-2.480G
- Transmission power: Class2 and Class3
- Transmission distance: 45 YARDS (40 meters)
- Audio range: 20Hz-20KHz
- Distortion degree: THD≤0.2%
- Vocal unit: 4Ω 2x15W; woofer 2 unit
- Charging time: 2A / 2 hrs OR 1A / 4.5 hrs
- Battery Voltage capacity: 7.4V/3500mAh
- Charging voltage: DC5V/2A

1-Year Limited Warranty:

If for some reason your IZZO product isn't performing to the highest standards, we will be happy to repair or replace it at no charge for a period of 1 year after purchase.

A Return Authorization Number is required for all returns. Please call Customer Service before returning any goods to obtain this authorization. Customer Service may be reached at (800)-284-1220. Hours of operation are Monday-Friday, 8am to 6pm EST.

FOR MORE INFO VISIT: www.izzo.com or call (800)-284-1220



MANUAL



GPS BUTTONS

- GPS [Power]Button:** Long Press to power on/off
- GPS [Up]Button:** Press to scroll up, change holes.
- GPS [Down]Button:** Press to scroll down, change holes.
- GPS [SELECT]Button:** Tap to confirm selection. Long hold to go back.

SPEAKER BUTTONS

- SPEAKER [Volume Up]Button:** Tap volume up, Long press next song
- SPEAKER [Play/Pause]Button:** Tap to play / pause playback
- SPEAKER [Volume Down]Button:** Tap volume down, Long press previous song
- SPEAKER [Power]Button:** Long press to power on/off, Double tap to enter TWS mode.

NOTE: GPS and SPEAKER function independently of each other and do not need to run simultaneously


CONNECT SPEAKER TO MOBILE DEVICE

Long press the button to power on and enter BT pairing mode. You will hear an audible chime that confirms pairing mode is enabled. Find "SWAMI GROOVE" on your mobile device BT menu. Once your device has successfully connected, you will hear another audible chime.

CONNECTING TO ANOTHER GROOVE SPEAKER [TWS MODE]

To enter TWS Mode, first power on one Swami GROOVE and fully connect to your mobile device via the BT menu. Once connected, power on your second Swami GROOVE unit and simply double tap button to pair. You are now ready to play music simultaneously through both units.

GPS SCREEN LAYOUT

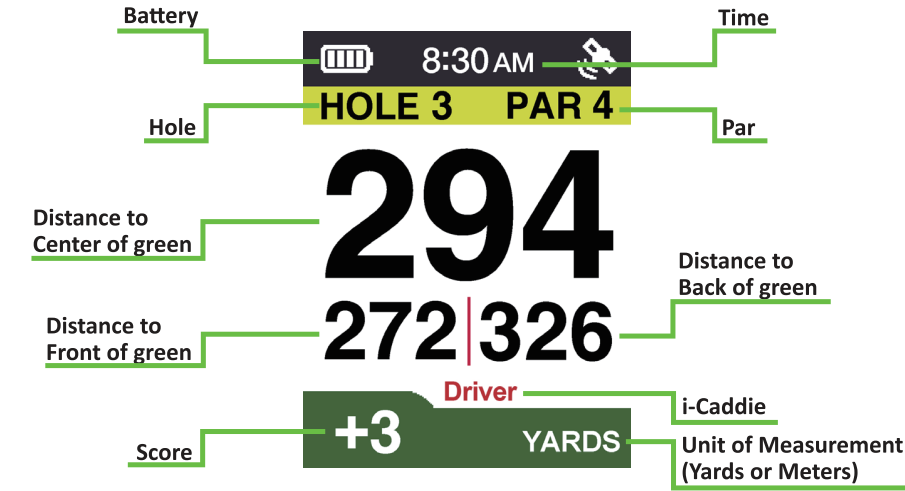

USING SWAMI GPS ON THE COURSE

PLAY MODE

Select the **Play** option from the **Start Menu** and press the button. The Swami GROOVE will search for surrounding courses that the device supports. Use the and buttons to select your golf course, then press the button. **Play Mode** will now display the distance to the front, center & back edge of the green for the current hole.

HAZARDS

While in **Play Mode**, press the button to access the **Hazards** screen. To return to the **Play Mode** screen (distances to green) continuously press the button till **Play Mode** appears.

SCORECARD

To access the **Scorecard**, press the button twice while on the **Play Mode** screen. Press the or buttons to enter you score, then continuously press the button till **Play Mode** appears.

Note: Scorecard can only be used if turned ON in settings

SHOT DISTANCE

While in **Play Mode**, press till **Shot Distance** appears and then travel from where you hit your shot to your ball. The distance that shot traveled will be displayed. To return to the **Play Mode** screen (distances to green) continuously press the button till **Play Mode** appears.

Note: Shot Distance can only be used if turned ON in settings.

封底

封面

封面的背面

封底的背面

成品尺寸：132X260

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.