

TECHNICAL SPECIFICATIONS

Categories	Items	Descriptions
Power	Power voltage	AC IN:100~240V DC IN:15V/2A
	Standby powerconsumption	< 1W
	Clock battery	CR2032
Audio	Total peak power	60W
	Frequency response	40Hz-20KHz ±3DB
	THD+N	≥70 DB
	AUX input sensitivity	850mV
Bluetooth	Support Bluetooth protocol	AVRCP 1.4 , HFP 1.6 , A2DP 1.2
	Bluetooth frequency range	2.402GHz-2.480GHz
Remote control	Battery	AAA

OTHER USEFUL NOTES

- The speaker will turn off automatically in 10 minutes if it is paused, not in use, or unpaired.
- press the button  if the Bluetooth is not connecting or cannot be found.
- If there are any other issues pairing or playing music, please press power button to power off the speaker and then unplug. Wait 15-20 seconds before powering on again.

FCC WARNING FOR BT

This speaker system is backed by a one year manufacturer's warranty against any manufactures defects.

To place any warranty claims you must provide proof of purchase showing the date of purchase.

This warranty excludes any damages due to user's negligence or fault and also any damages due to normal wear and tear.

INSTRUCTIONS


USB MODE

- Insert your USB stick to the USB slot on the back of the speaker and the speaker will automatically switch to USB mode. The speaker then will start playing the music files stored on the USB stick, while the display is showing "USB"
- Press  icon on the remote control to choose random or sequence playing modes.
- Press  icon on the remote control to repeat playing of the current song or playing all songs in sequence.

SETTING UP THE CLOCK

This speaker comes with a back up battery for the clock to save the time during the power outage or if the cord is disconnected.

To set up speaker clock,first,please make sure the small battery switch located on the button of the speaker is turned on. (as the below picture) .

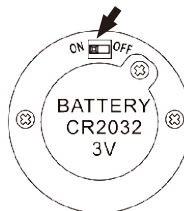

Once the switch is on, If the clock display turns off after disconnecting the power cord from speaker or AC source and the clock shows "00:00" after re-connecting the power cord, there is a good chance the battery must be replaced. There should be a replacement battery in the box. Please make sure to always use the following model CR2032 to replace this small button battery.

SET THE TIME

Set time using the touch buttons on the speaker
Long press  button when the speaker is in standby mode. While the display shows the time XX:XX and the hours' characters blink, press the button  or  to adjust the hours, and then press  to adjust minutes. Press  again to save the time.

SET TIME USING THE REMOTE CONTROL

Press "Clock Set" buttons when the speaker is in standby. While the display shows the time XX :XX. and the hours' characters blink , press the button  or  to adjust the hours time , and then press " Clock Set" to switch to minutes. Press " Clock Set" again to save the time.

ADJUSTING EQ AND SOUND LEVELS

To achieve the best sound quality from songs with good audio quality please set Treble and Bass to zero and then work your way up or down to achieve best sound output.

If you hear distorted or unbalanced sounds try adjusting Bass or Treble by lowering them.

Playing unbalanced sounds with too much bass or treble can damage the sound drivers and void warranty.

To adjust Base or Treble press T/B Button on the Remote and press + or - to increase or decrease levels.

ALARM SETUP

This Speaker has two alarms

Set alarm using the touch buttons on the Speaker:

Short press the  button when the speaker is at standby mode and display will show one the following icons, representing Buzz sound or FM as Alarm sound.

Press  or  to switch between " bb" (Buzz sound) and FM as alarm sound. Press  again to choose from these two options. At the same time hours' characters will stat blinking.

Press  or  to set the hour.

Press  again to set minutes. After adjusting the minutes press  again to save the time for this alarm.

Set alarm via remote control

Press  button to set the clock 1, while you can see the icon of  and " bb" blink, representing Buzz sound or FM as Alarm-sound. Press  or  to choose from FM or BB (Buzz sound) as the alarm sound. Press  again to set the hours of the clock , while you can see the digits blink. Press  again to switch to the minutes and then adjust accordingly. Press  again to save the while there is a  icon at the top right corner of the display.

- You can follow the same steps to set the second alarm but you will need to press + instead of  or  instead of 

BRILLIANT SOUL



FCC WARNING FOR BT

Federal Communications Commission (FCC) Interference Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate this equipment.
RF exposure warning
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

MAIN FEATURES


- Ability to play music through Bluetooth, AUX, and USB connections. This speaker system also comes with a FM tuner and an Alarm Clock.
- Ability to manually set Bass and Treble to desired levels and adjust audio output.
- 3 preset EQs for different sound outputs ranging from less intensity to max intensity as follows: Home, Lounge, and Party.
- You can control your speaker through the touch buttons on top of the speaker or by using the included remote control. The manual settings are mostly accessible through the remote control.
- Utilizing a 2.1 Ch stereo sound system and our patented bass re ex system with Dual active sub woofer symmetry technology creating a deeper bass and clearer highs.

FUNCTIONS & CONNECTIONS

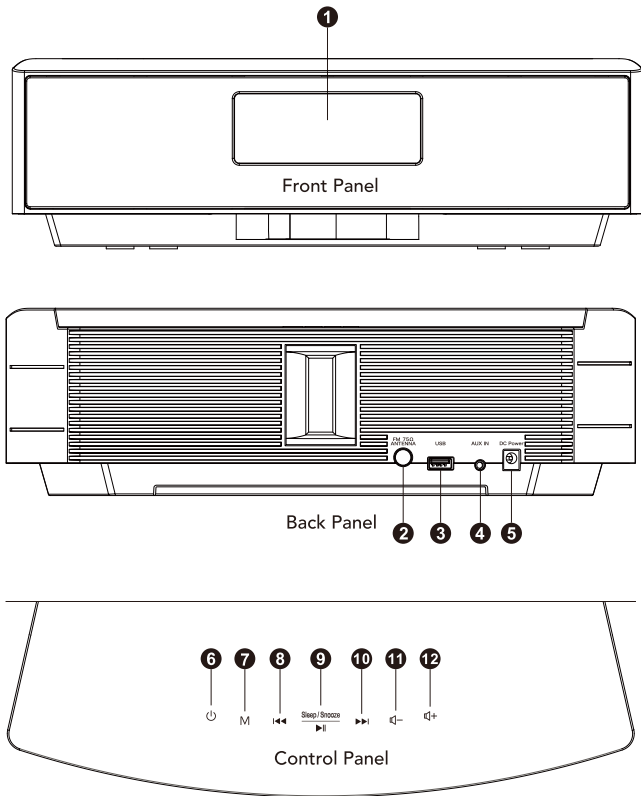

- | | |
|-------------------|------------------------------|
| ① LED Display | ⑦ Mode Selection |
| ② FM Antenna Port | ⑧ Previews |
| ③ USB Port | ⑨ Play, Pause, Sleep, Snooze |
| ④ AUX Port | ⑩ Next |
| ⑤ DC Power input | ⑪ Volume - |
| ⑥ Power Button | ⑫ Volume + |

IR REMOTE CONTROL FUNCTIONS

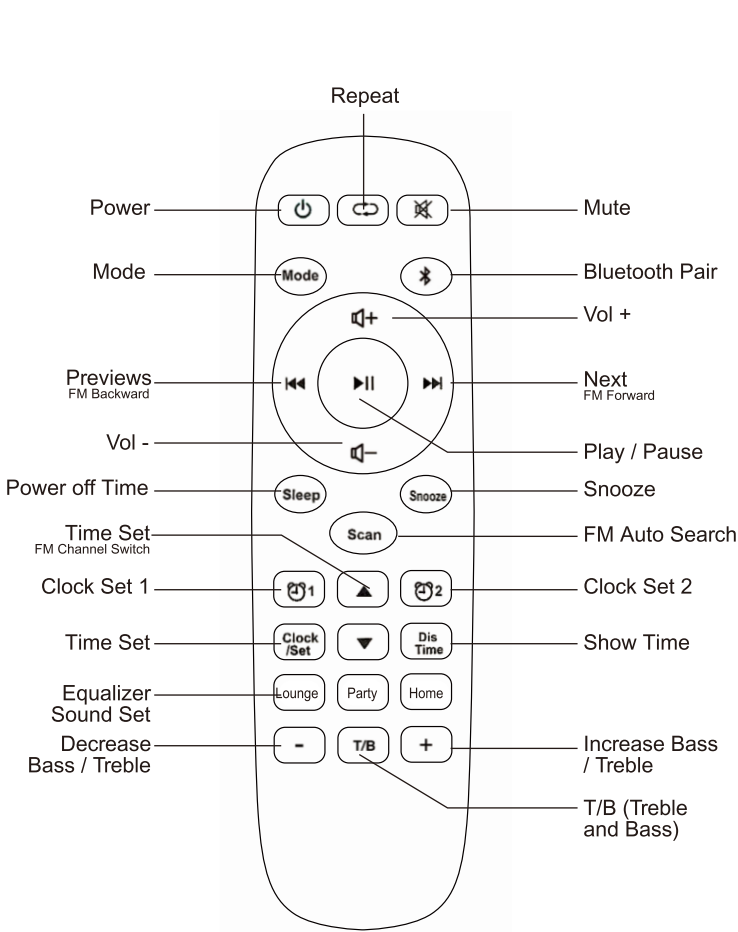

INSTRUCTIONS

POWER ON
Connect the speaker to the power adapter and plug it into the AC outlet. The speaker will enter the STANDBY MODE.

Press the button of on the speaker panel or remote control to turn on the speaker.

CHOOSING BETWEEN DIFFERENT AUDIO MODES.
To choose between Bluetooth, AUX, USB, and FM, you can press "MODE" on the remote or " M " on the speaker.

- BLUETOOTH MODE**
- Press the MODE button to switch to Bluetooth mode and the speaker display will show the Bluetooth icon and .
 - Scan for Bluetooth devices on your Phone or Computer. connect to " BRILLIANT SOUL " after the scan has inished.
 - The speaker will automatically start playing after it is connected.
 - Long press the button on the remote control to disconnect the Bluetooth.

- AUX MODE**
- Connect the auxiliary cable to the back of the speaker from one end and from the other end to your audio source such as phone, computer or TV.
 - Press "MODE" button on the Remote or "M" on the speaker to switch to AUX input and the display will show "AUX".

- FM MODE**
- Insert the FM antenna to the FM antenna slot on the back of the device, then press the MODE button on the remote control or touch button on the speaker to switch to FM mode. The display will show" RADIO " or" FM ".
 - Press the "SCAN" button to search different stations and save desired stations. Press or to go forward or backward between FM channels.
 - Press or to manually search FM radio stations