







soundcore



Soundcore  
Motion Boom Plus  
Quick Start Guide

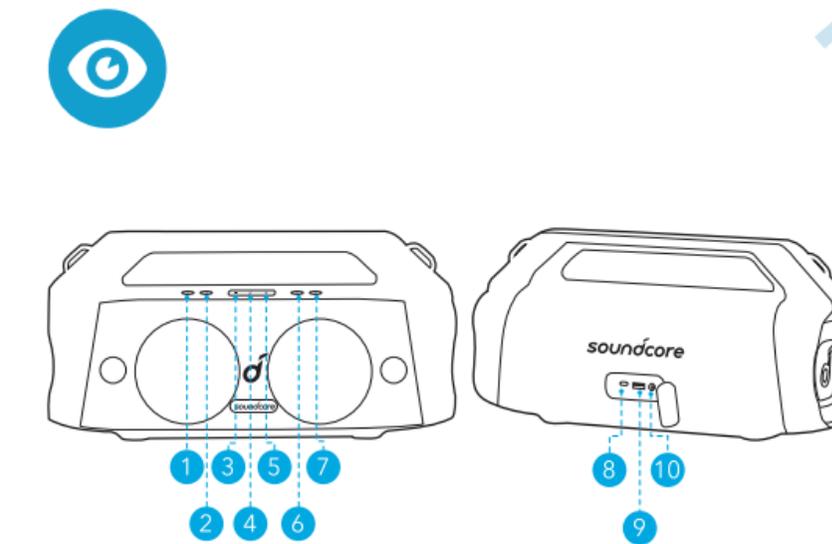


- 1 Bass button
- 2 Bluetooth button
- 3 Volume down button
- 4 Multi-function button
- 5 Volume up button
- 6 Power button
- 7 PartyCast button
- 8 USB-C port for charging in
- 9 USB-A port for charging out
- 10 Audio port

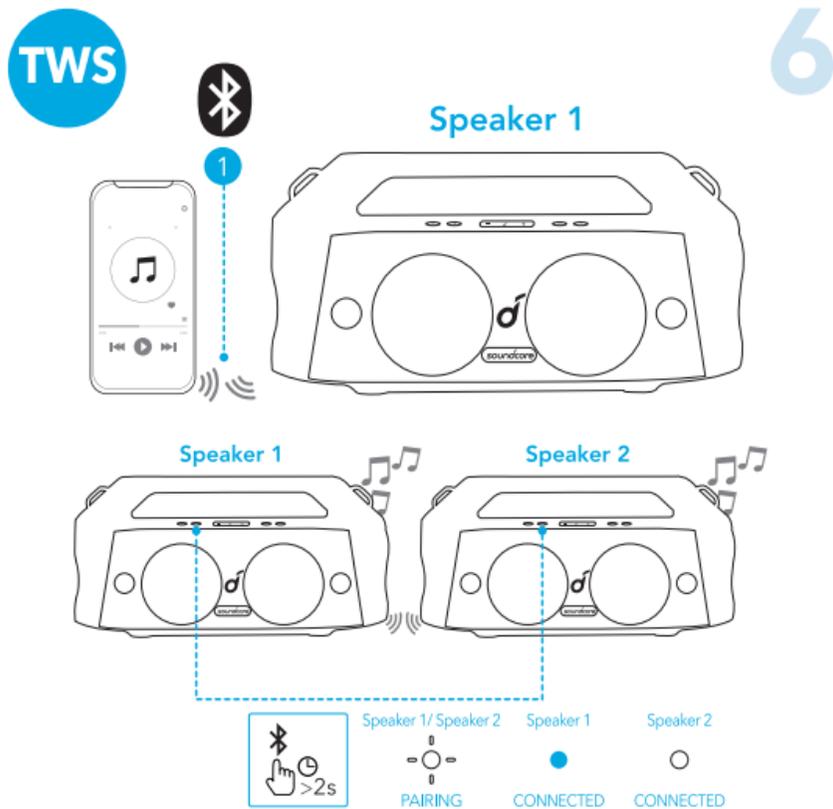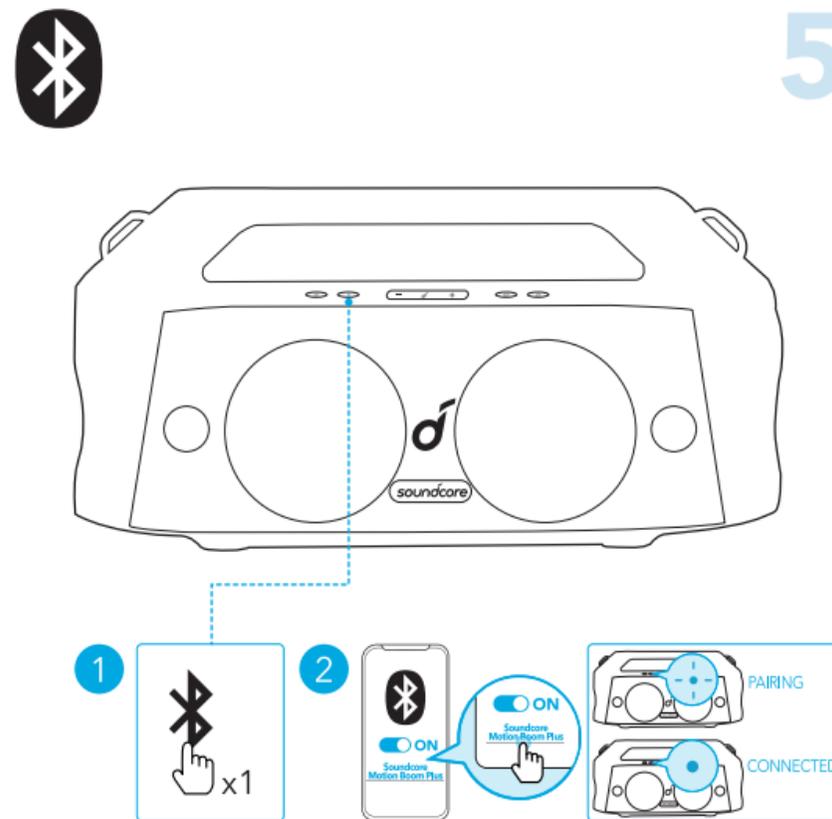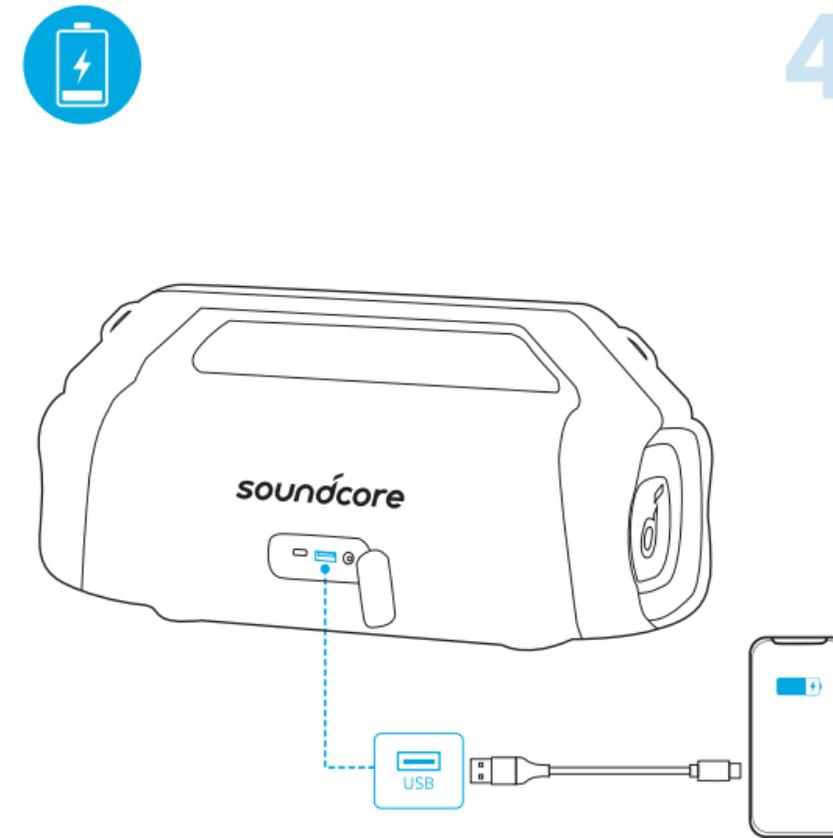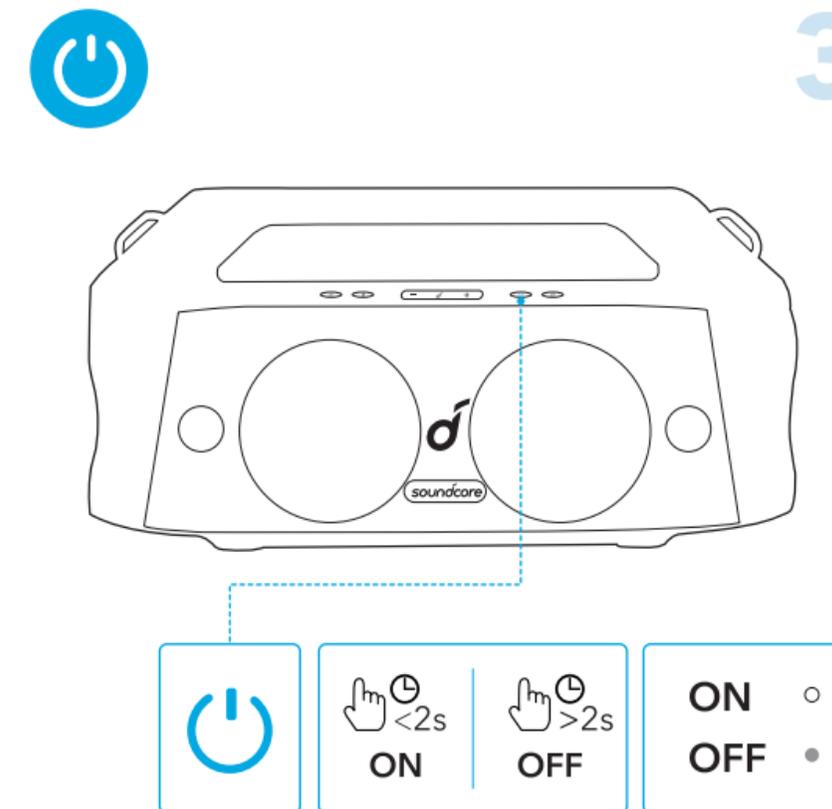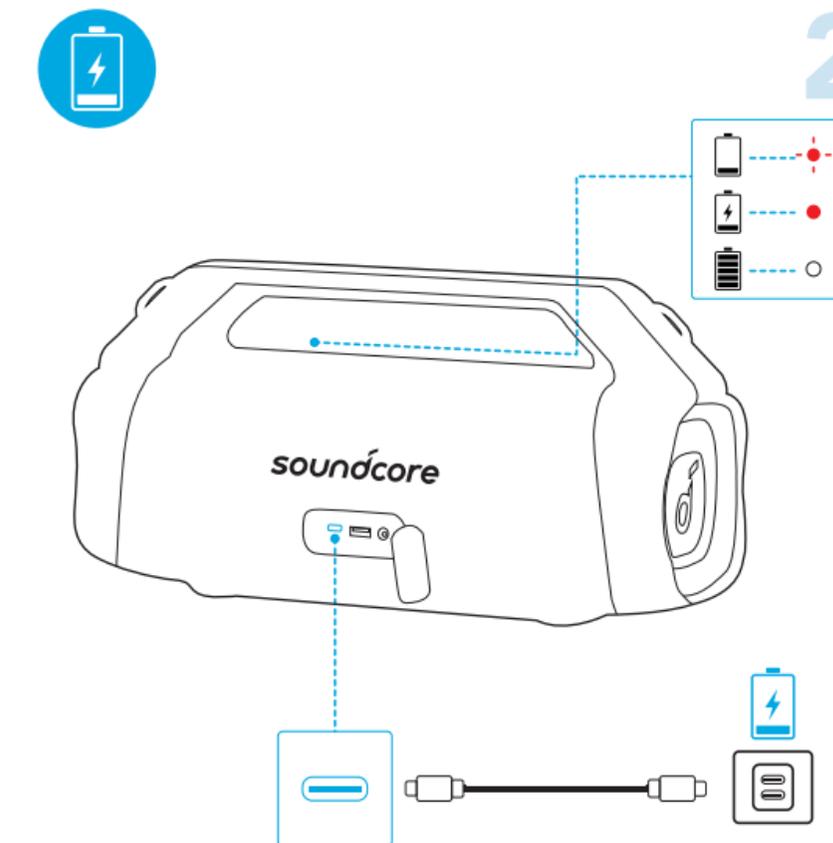


For FAQs and more information, please visit :  
<https://support.soundcore.com>



@SoundcoreAudio @soundcoreaudio @soundcoreaudio

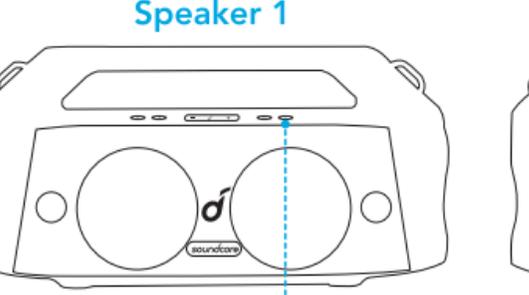


1

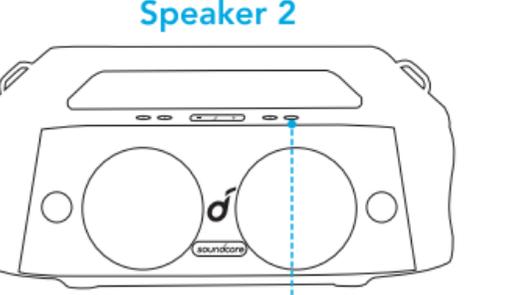

2




x1 PAIRING

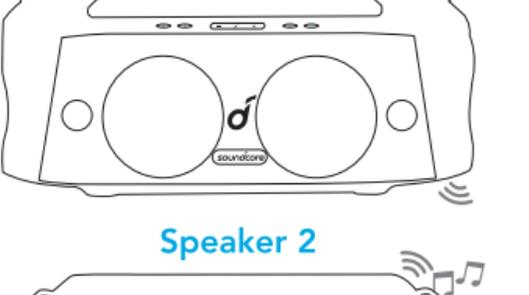

3



x1 PAIRING

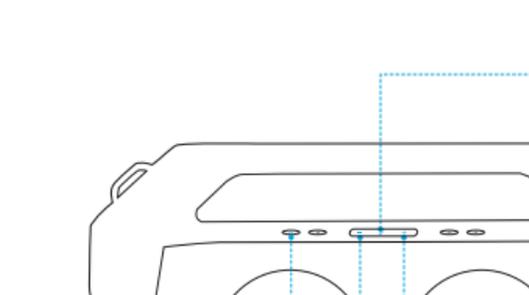

4




CONNECTED

Speaker 1

Speaker 2




7

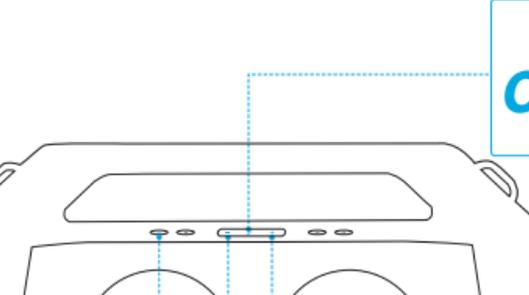

7



CONNECTED

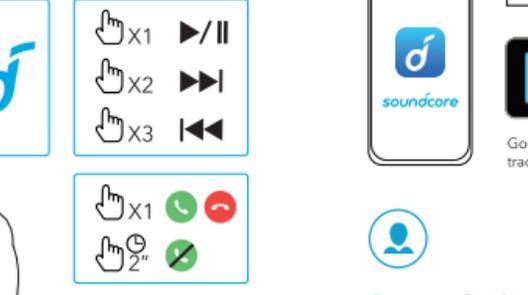

8



CONNECTED



9




CONNECTED



10



CONNECTED

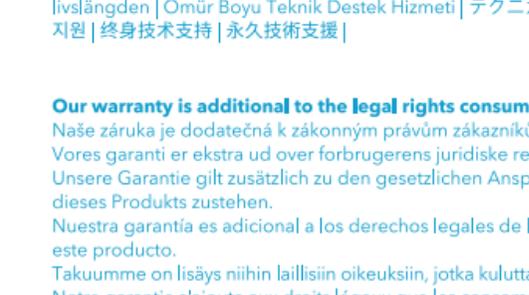

11



CONNECTED



12




CONNECTED



13



CONNECTED

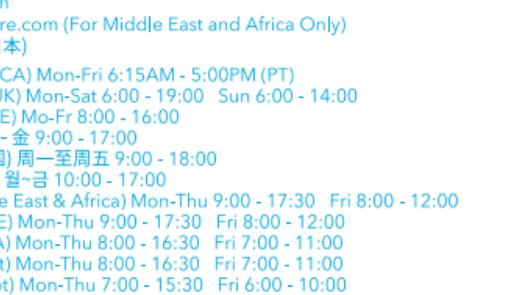

14



CONNECTED

Speaker 1

Speaker 2




7



7




CONNECTED

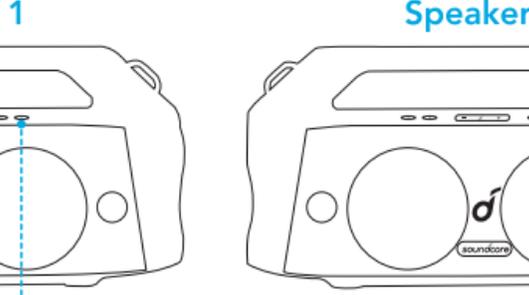

8




CONNECTED

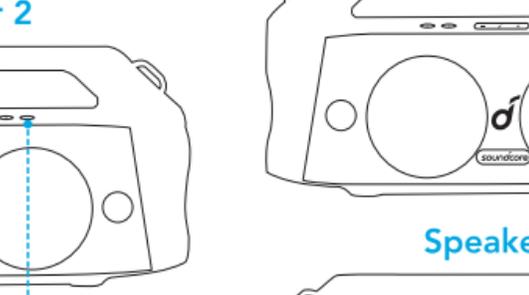

9




CONNECTED

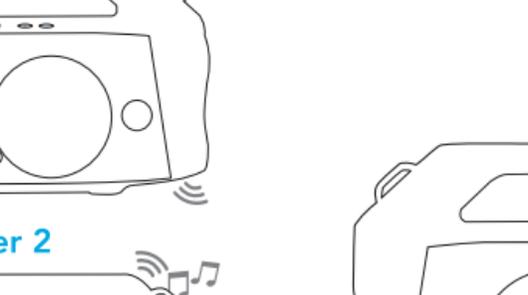

10




CONNECTED

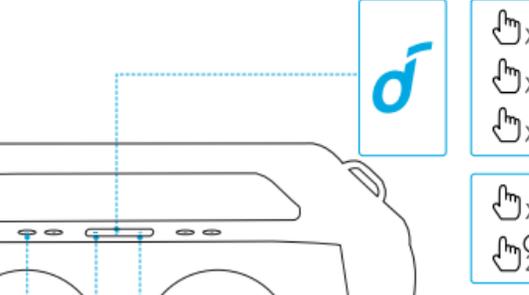

11




CONNECTED

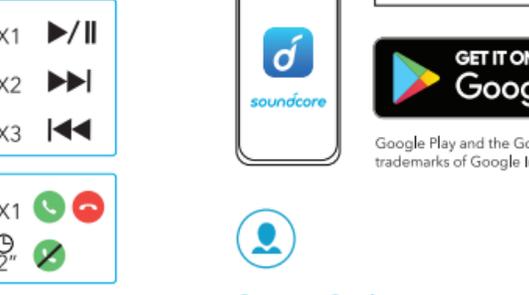

12



CONNECTED

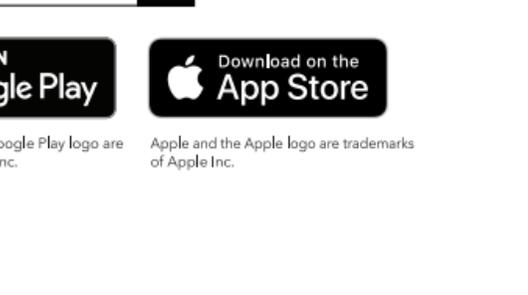

13



CONNECTED



14



CONNECTED



15



CONNECTED



16




CONNECTED



17



CONNECTED

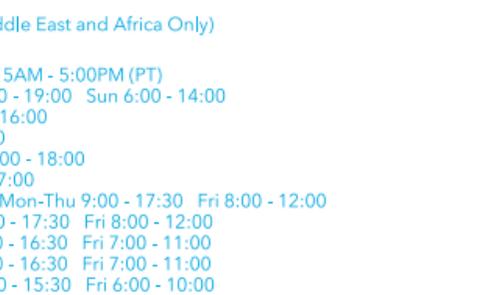

18



CONNECTED

Speaker 1

Speaker 2




7



7




CONNECTED

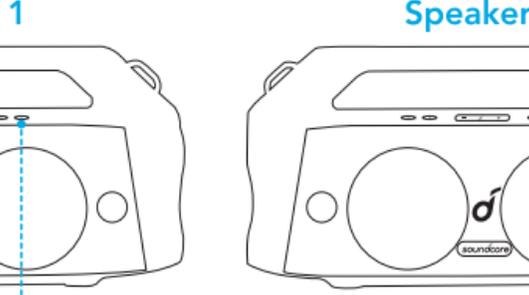

8




CONNECTED

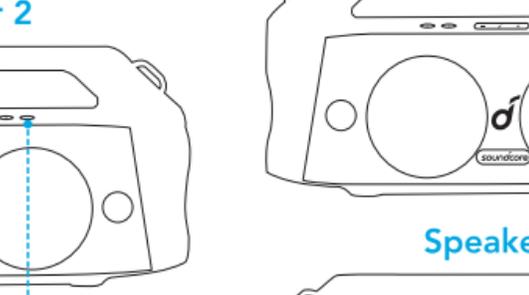

9




CONNECTED

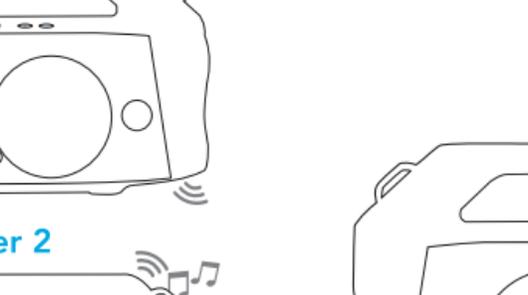

10




CONNECTED

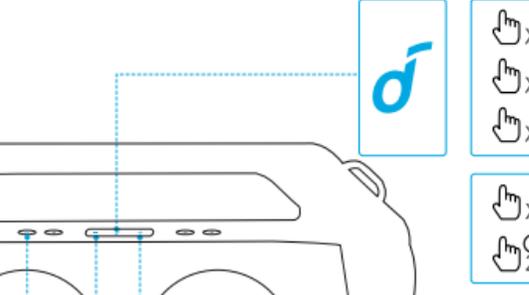

11



CONNECTED

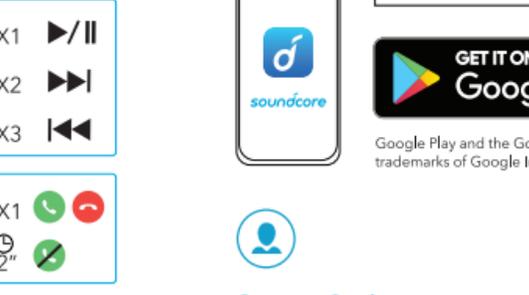

12



CONNECTED



13



CONNECTED



14




CONNECTED



15



CONNECTED

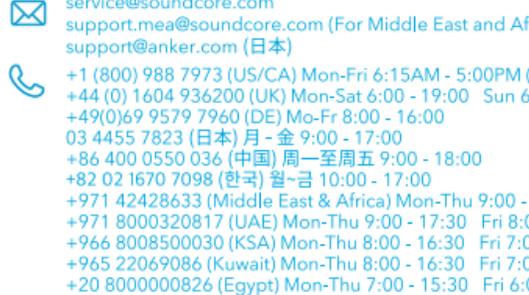

16



CONNECTED



17



CONNECTED



18



CONNECTED

Speaker 1

Speaker 2




7



7




CONNECTED

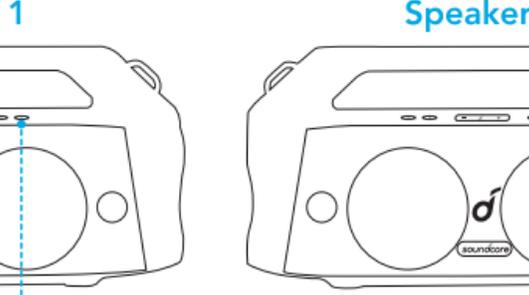

8




CONNECTED

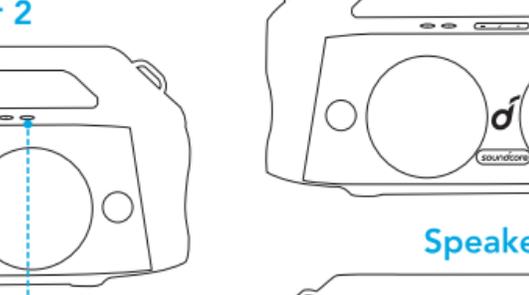

9




CONNECTED

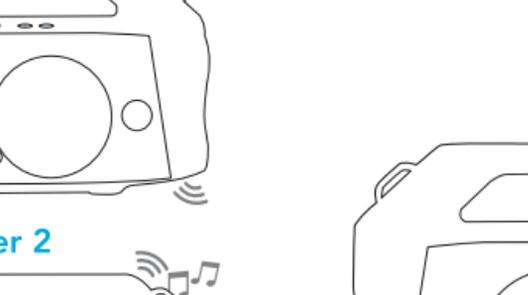

10




CONNECTED

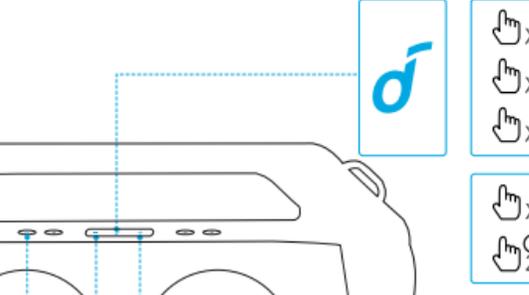

11




CONNECTED

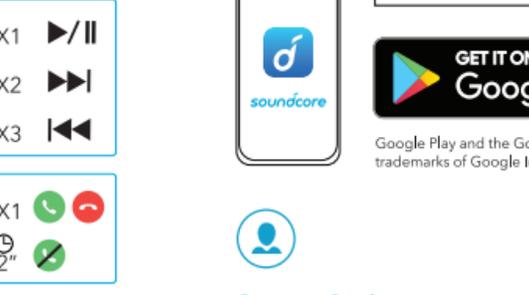

12



CONNECTED

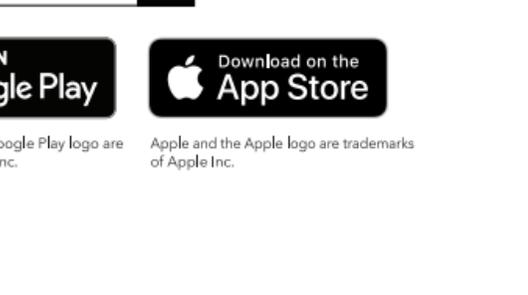

13



CONNECTED



14



CONNECTED



15



CONNECTED



16



CONNECTED



17



CONNECTED



18



CONNECTED

Speaker 1

Speaker 2




7



7




CONNECTED

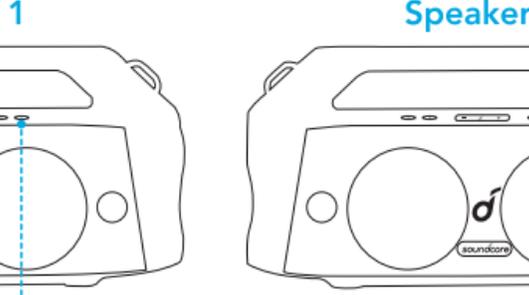

8




CONNECTED

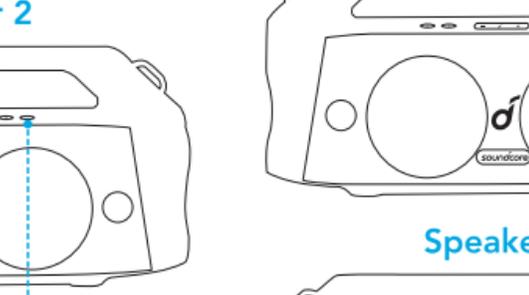

9




CONNECTED

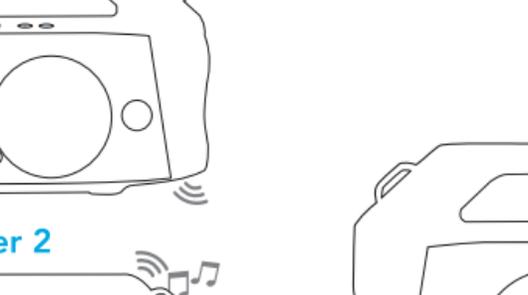

10




CONNECTED

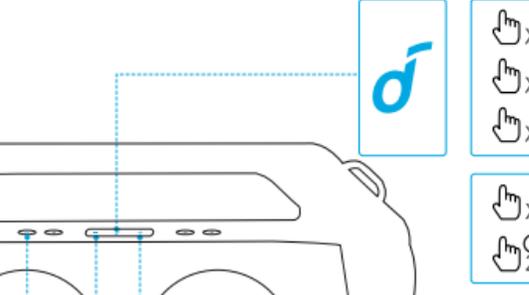

11




CONNECTED

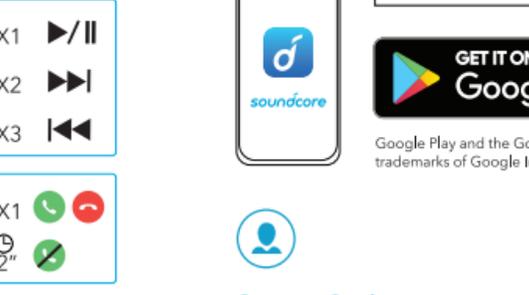

12



CONNECTED

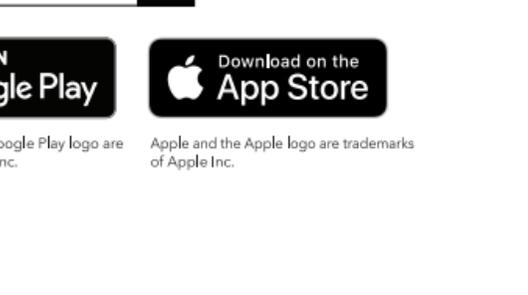

13



CONNECTED



14



CONNECTED



15



CONNECTED



16



CONNECTED



17



CONNECTED



18



CONNECTED

Speaker 1

Speaker 2




7



7




CONNECTED

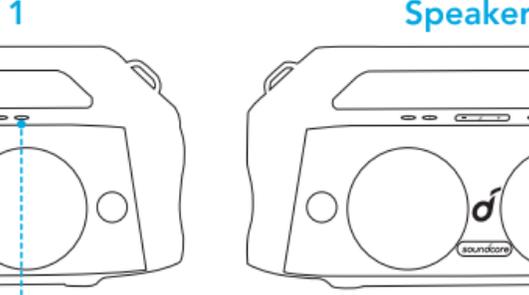

8




CONNECTED

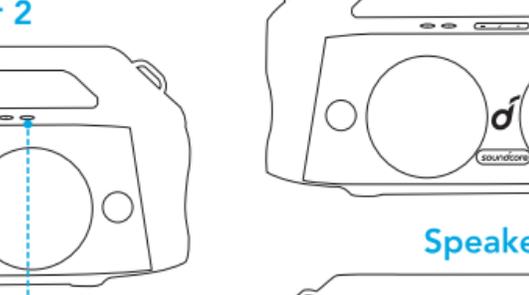

9




CONNECTED

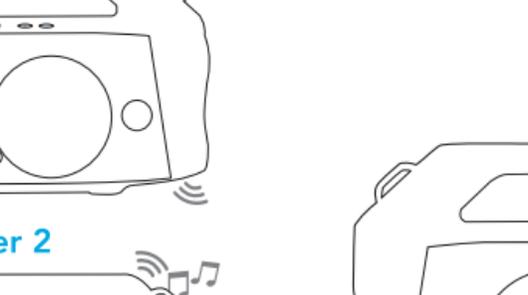

10




CONNECTED

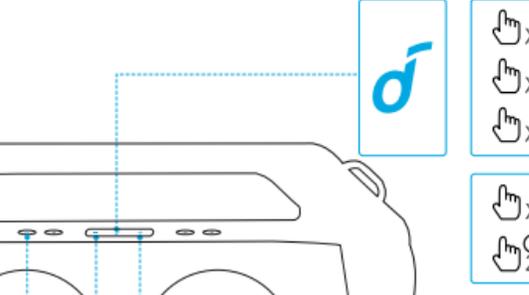

11




CONNECTED

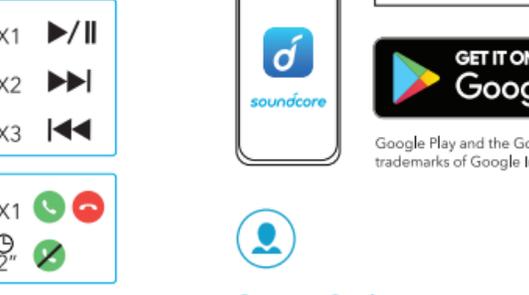

12



CONNECTED

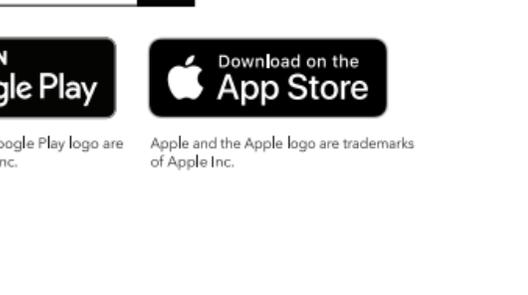

13



CONNECTED



14



CONNECTED



15

