 


What's in the Box



Indoor Cam C220



USB-C Charging Cable



 
Power Adapter



Mounting Bracket



Positioning Sticker




Screw Pack



Quick Start Guide

At a Glance

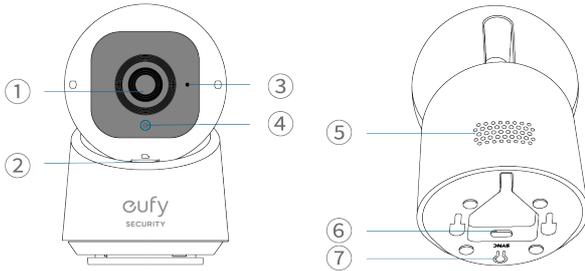


①	Lens
②	microSD Card Slot <ul style="list-style-type: none">• Insert a microSD card* (not included) to store recordings <p>*Use at least a Class 10 microSD card with a maximum of 128GB.</p>
③	Microphone
④	LED Indicator
⑤	Speaker
⑥	Power Input
⑦	SYNC Button

Setting up the System


1. Download and install the eufy Security app, then sign up or create an account.



2. Connect the camera to a power source and wait until the status LED turns solid blue.

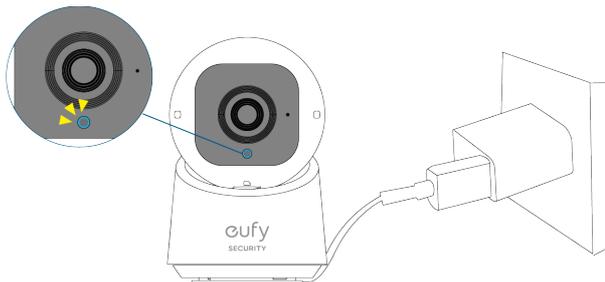

3. Tap + in the app and follow the in-app instructions to add your camera.

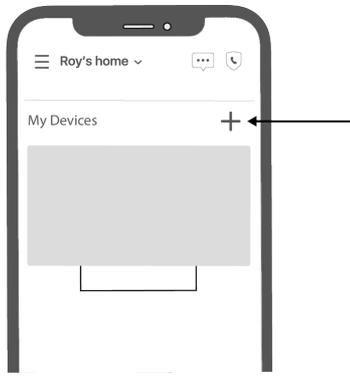

LED Light Guide

	Solid Violet	System is initializing
	Solid Blue	Working normally or ready for setup
	Blinking Red	Not connected to the internet
	Solid Red	Recording or the live stream is being viewed
	Flashing Blue and Red	Firmware upgrade in progress *Keep the camera connected to a power source

Installing your Camera

Choose a Location


The camera can be placed on a table or shelf, or mounted on a wall or ceiling. Choose a location and height that achieves your desired view and is within reach of a power outlet.

 Keep the camera at least 10 in (25 cm) away from any objects or walls to avoid infrared reflections that can impact night vision performance.

Camera Field of View


On a Table or Shelf

If you do not have children or pets to monitor, you can place your camera at a height of 40–60 in (100–150 cm). If you do have children or pets to monitor, you can place your camera at a height of 25–50 in (60–120 cm).

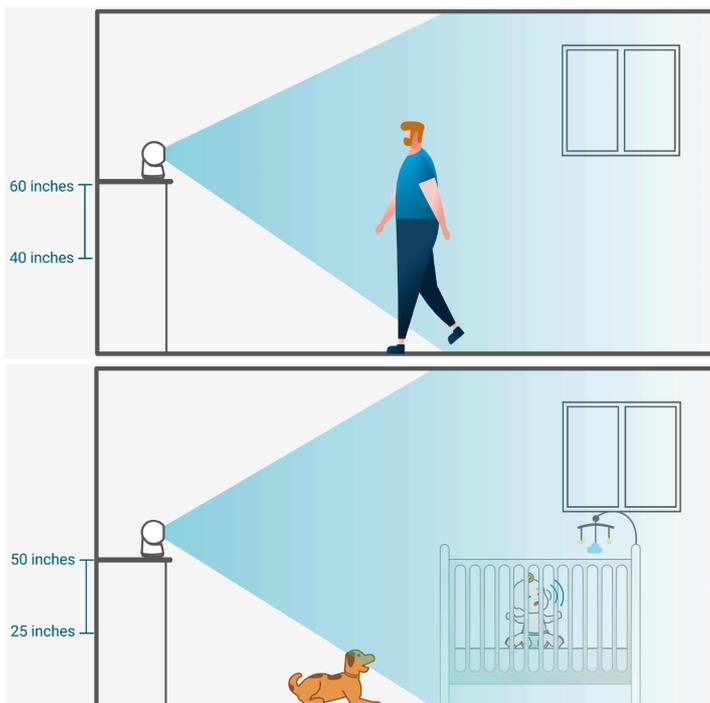

On the Wall

For the best results, we recommend mounting your camera on a side wall that is at least 8 ft (2.4 m) high.

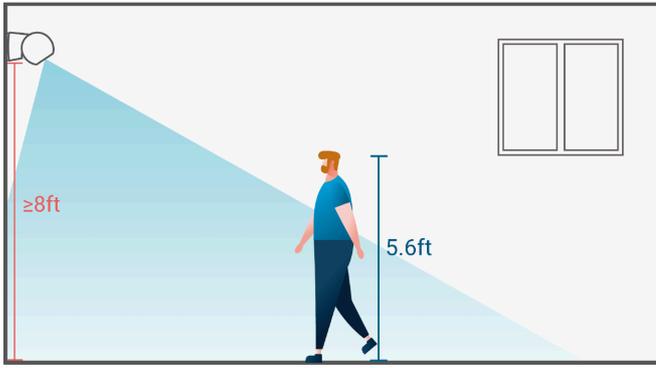


On the Ceiling

If you must install it on the ceiling, we recommend mounting it more than 10 ft (3 m) above the floor and as close to the wall as possible to ensure that the monitored objects are clearly visible.




Mount on a Wall or Ceiling

 **Warning:** Disconnect the camera from the power outlet before mounting.

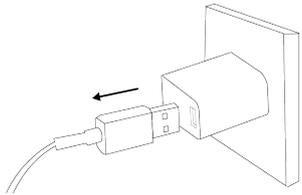


1. Mark the screw positions on the wall or ceiling with the positioning sticker and drill a pilot hole.

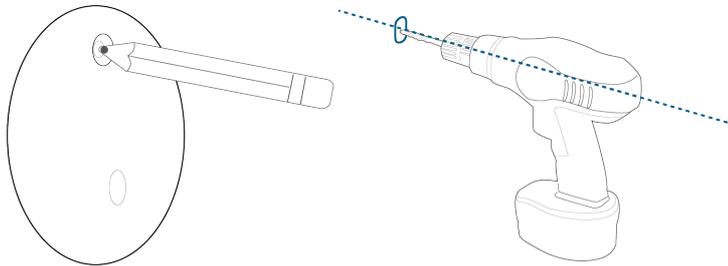


2. Align the mounting plate with the pilot holes, then screw the mounting plate to the wall or ceiling.


On the Wall

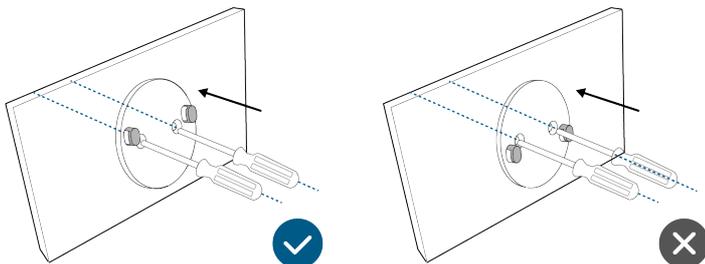

- On the Ceiling

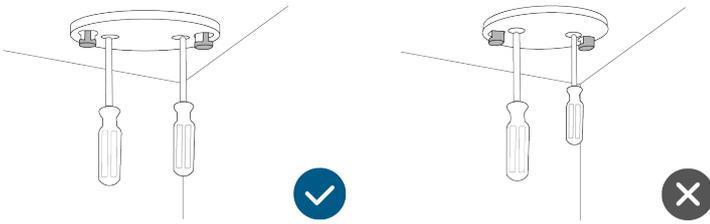


3. Unplug the camera. Connect the USB-C cable to the camera with the other end disconnected from a power source.

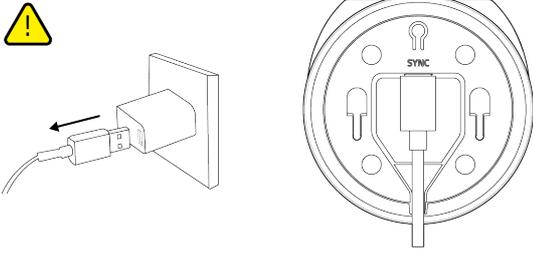


4. For wall mounting, place the cable into the cable channel of the mounting plate.

- Skip this step for ceiling installation.

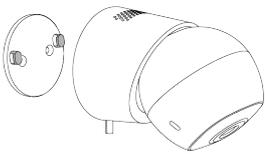


5. Slide the camera onto the mounting plate and make sure it is securely attached.

- On the Wall

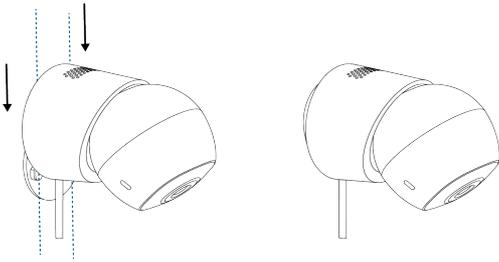

- On the Ceiling

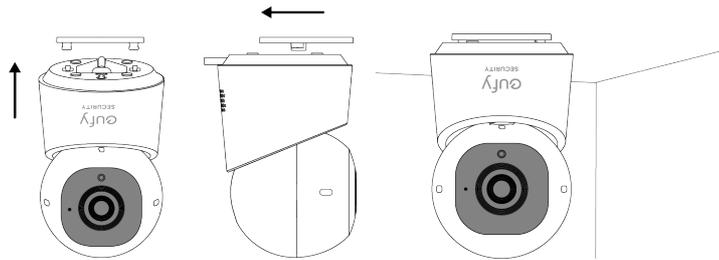

Note: The 'x' of SN Code: xxxxxxxxxxxxxxxx is a variable, see below table.

Variable 'x'	Range of variable	Content
Seventh	0-F	Denotes the hardware version which is not effected on the safety compliance.
Ninth and tenth	20,21,22,23,24...	Denotes the year, 20 means 2020, 21 means 2021, 22 means 2022, 23 means 2023, 24 means 2024, and so on.
Eleventh and twelfth	01,02,03...	Denotes weeks, 01 means the first week in this year, 02 means the secondary week in this year, and so on.
The last four	0001-FFFF	Denotes serial No.