

INSTRUCTION MANUAL – RÉVOLUTION LANTERN 2.0

Thank you for choosing RÉVOLUTION LANTERN 2.0 from TROUSSELIER!

Why a REVOLUTION ?

Because with this lantern multifunction you have several options to sooth your child while falling asleep.

- **« Soothing Nightlight »:** When turned on, animated picture rotates in front of your child's soothed and amazed eyes.
- **« Star Projector »:** Once the function is activated, the lantern will project stars all over the ceiling like a starry night sky in child's bedroom.
- **« Musical Nightlight »:** The lamp has 4 recorded lullabies and... because we want you to have multiple choices, you can also play your own stories and songs directly from your mobile devices. Simply connect your device in wireless mode to play any content you find on the internet.
- **« Cry Detector »:** In case your child has a nightmare, the lamp would detect cries and the light/lullaby would turn on automatically.



La French Tech is a label that bring all together the best of French leading toward creativity and innovation. TROUSSELIER is committed to developing products for our children that combine beauty, timelessness and the future around disruptive technical and technological solutions.

What's in my pack ?

- The RÉVOLUTION LANTERN 2.0
- A USB cable to charge the battery

First use

Put the lamp on a flat surface.

For charging, connect the USB cable to your computer/laptop's USB port, or you can also use your mobile phone's USB transformer.

« Micro USB » cables are compatible with the lamp.

When charge indicator is green, disconnect the USB cable from the lamp. It's ready to start!

When red indicator is blinking the lamp will shortly run out of battery. It's time to recharge your nightlight. The energy efficient LED will allow one week of operations under normal usage of 30 minutes per night.

Safety instructions

Please read carefully safety instructions before first use.

This nightlight is not a toy.

Not suitable for children under 3 years old

Do not disassemble the nightlight to get access to electronic system. This may damage the product.

This product is designed for indoor use only and is not waterproof.

Keep nightlight away from fire.

Please use a dry cloth to clean your nightlight.

Regularly inspect that cord, transformer and other electrical parts are not damaged. In any case of damage the product must not be used until it has been repaired.

Transformer is not a toy.

Misuse of transformer can cause electrical shock.

The product is only to be connected to Class II

equipment bearing the symbol .


This nightlight shall only be used with a transformer for toys and is not to be connected to more than 1 power supply.

Specification of suitable transformer:

Input: 100-240V~ 200mA 50-60Hz

Output: 5V  1500mA

How to operate your RÉVOLUTION LANTERN 2.0 ?

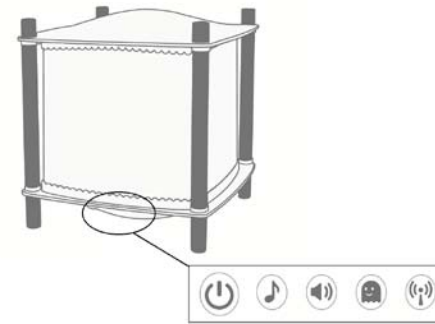

Buttons are located under the lamp



Settings

- 1st Press: Nightlight turns on
- 2nd Press: picture rotation
- 3rd Press: Nightlight + Star Projection
- 4th Press: Intensive star projection
- Long press to switch off your device



Lullabies

- 1st Press: Swan Lake melody Part 1
- 2nd Press: Swan Lake melody Part 2
- 3rd Press: Twinkle Twinkle Little Star
- 4th Press: Natural sound of waves



Volume

- 1st Press: Low
- 2nd Press: Medium
- 3rd Press: Loud

ENGLISH



Cry Detector - Anti Nightmare

Button turns green when Cry Detector is "On".

- In normal condition of use, the nightlight will turn off after 30 minutes and will automatically restart in case of crying.
- If only "cry detector" is on, and nightlight turned off on purpose, a delay of 30 seconds allows you to leave the room. Beyond this time limit the slightest noise detected during sleep will automatically turn on the nightlight as per the last saved settings.



Wireless Connection

This mode enables you to connect your mobile devices to your nightlight.

Your child can listen to the stories, music or lullabies of your choice before falling asleep.

- 1st Press: a beep tone indicates that the Wireless mode is activated. The button is blinking. Please activate the wireless mode of your mobile device. Select the device detected under TROUSSELIER name and connect. Another beep tone confirms you have successfully connected your mobile device.
- 2nd Press: Disconnect and turns off the wireless mode of your nightlight..

The device will automatically power off after 30mins and wireless mode will also be disconnected.



23 avenue des Prés
94260-Fresnes
infos@trousseLier.fr
www.trousseLier.paris

USA FCC REGULATION - SAFETY INFORMATION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.