


# HOTWAV


## Note12


### User Manual

Connect Passion with Life



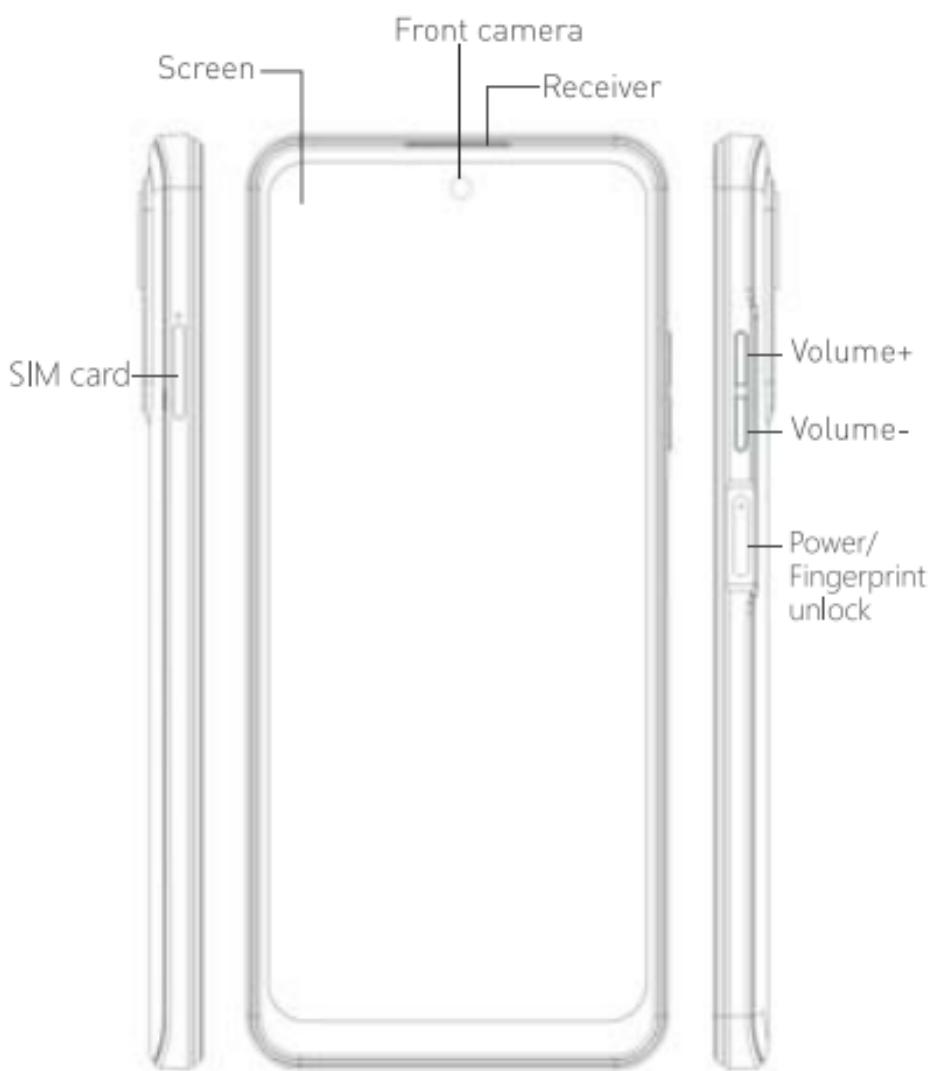

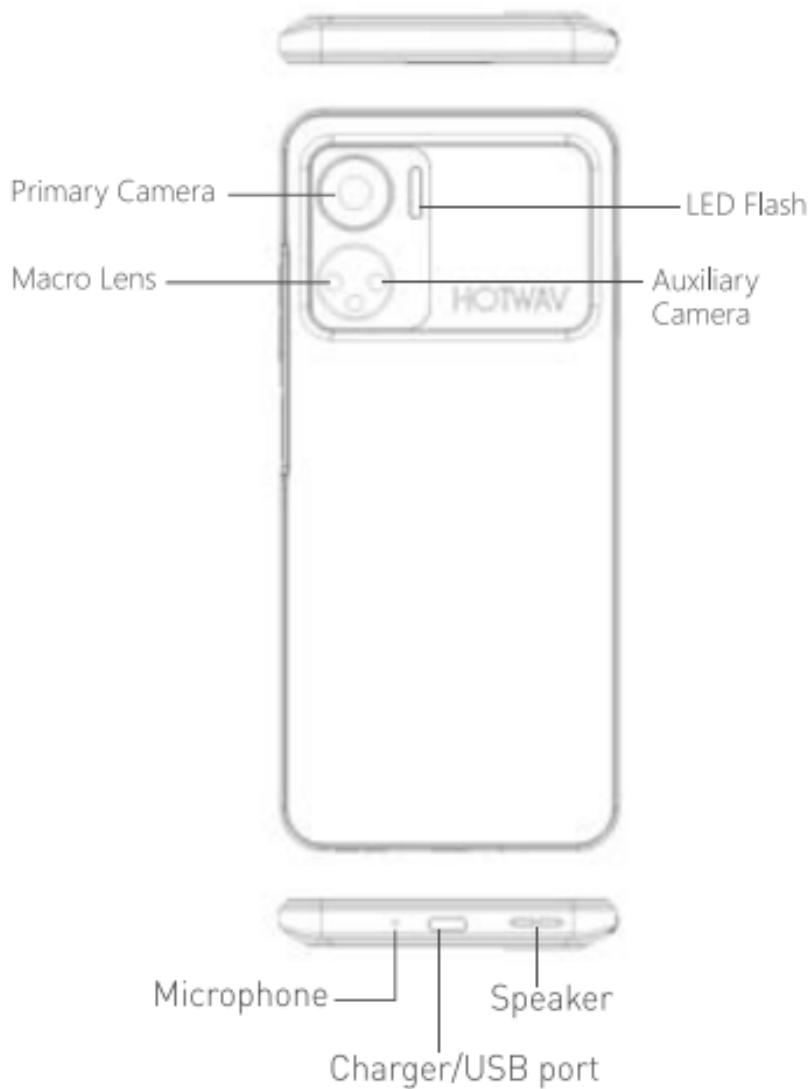

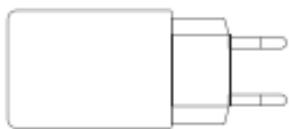

Power adapter



USB-Charger cable



Tempered film



Phone case



Card Removal Needle

## Turning the device on and off

Press and hold the Power key for a few seconds to turn on the device.

To turn off the device, press and hold the Power key, and then tap Power off.

## Sending messages or multimedia messages

### Messages

- Open the Messages
- Tap New Message
- Enter a phone number or a contact from your Contacts List
- Type your message into the messaging field.
- After your message is finished, Tap ►

### Multimedia Messages

- Tap the paper-clip icon on the New Messages screen
- Tap the photo or video you want to attach or you can take a new picture or video.
- After your message is finished, Tap ►

## Language settings

- Open the Settings app then tap "System"
- Tap "Language&input" ——> Tap "Languages" ——> Tap "Add Languages"
- Once your preferred language has been added, make it your Android's default language by pressing firmly on the two horizontal lines and moving it to the top.

## SAR

- The maximum electromagnetic radiation absorption ratio(SAR) of this product is < 2.0 W/kg .
- In line with the requirements of national standard GB 21288-2007.

## **Safety - In order to ensure safely using the product, you must strictly abide by the following advice**

- The phone should be at least 15 cm away from any medical implant or rhythm adjuster and never put the device in your coat pocket.
- Do not expose the device or the battery to a high-temperature environment such as sunlight, heaters, microwave ovens, ovens, or water heaters, etc. Overheating of the battery may cause its explosion.
- When charging is complete or not in use, disconnect the charger from the device and unplug the charger from the electrical socket.
- Use of an unapproved or incompatible power source, charger or battery may cause fire, explosion or other hazards.
- Do not disassemble or reset the battery and avoid battery contact with water or other liquids so as to prevent battery leakage, overheating, fires or explosions
- Do not drop, crush, scratch or puncture the battery so as to avoid subjecting the battery to excessive external pressure and the resultant short-circuit and overheating of the battery.
- The battery or the phone manufacturer does not bear responsibility for accidents caused by the use of non-standard charging equipment.
- For more information, please visit "[www.hotwav.com](http://www.hotwav.com)".

## Maintenance

- Proper use is important for the phone to work safely and effectively, also can extend the service life to the greatest extent.
- Please follow the instructions in the manual to open the phone, and do not try any other methods.
- Please avoid dropping, knocking or violently handling of the phone. Rough treatment can damage the screen, the internal circuit board or other components.
- Do not use any strong cleaning agent or solvent cleaner to clean your phone. Wipe the phone case with a soft cotton cloth dampened with water or mild water solution.
- Clean the camera lens with clean, dry, soft and non-abrasive cloth.
- If you encounter any software crash and the phone stops responding, please properly remove the back cover and the battery, then put the battery back in and restart the phone.
- When the battery charger is not in use, please unplug it from the electrical socket. If the battery is fully charged, please disconnect the charger from your phone as it may affect the battery life in the long term.
- If phone calls can not be connected, check if you have accessed the right cellular network. Check if you have not set call barring for the phone number you are dialling. Check if you have not set call barring for the incoming phone number.
- If your voice can not be heard or heard well on the other end of a phone call, check if you are covering the built-in microphone. Check if the microphone is close enough to your mouth. If you are using an earphone, check if it is properly connected.

# **HOTWAV Warranty Information**

Thank you for using HOTWAV mobile phone. We will provide our product with comprehensive warranty services in accordance with applicable national laws and regulations.

1. Your warranty is only valid under normal use of your device. All man-made damages and any of the following conditions are out of free warranty.

- A. The warranty period has expired;
- B. Damage caused by human factors, including damages caused by usage under improper operating environment and failure to properly follow instructions on the user manul.
- C. The customer disassembles, repairs or modifies the device without the Company's authorization;
- D. Damage caused by a force majeure (such as floods, fires, earthquakes,etc);
- E. The user is unable to provide the warranty card and valid proof of purchase or the product model and barcode do not match or are altered;
- F. Faults, damages or defects not caused by the company;
- G. Natural wear and tear of the product (such as casing, keypad, display screen, antenna and other accessories);
- H. Barcode and warranty labels are damaged and unrecognizable.

2. Others.

- A. A valid warranty card is pre-requisite for claiming warranty
- B. The warranty card contains important information related to your product. Please preserve it for your future reference.
- C. External damages (including wear, tear, and scratches) are not entitled to the warranty service;
- D. Our warranty does not cover services verbally promised by dealers that violate principles set forth on the warranty card.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device Note 12 (FCC ID: AOKU-NOTE12) has been tested against this SAR limit. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should be maintained to the user's bodies

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.