




BONE CONDUCTION EARPHONES

BLUETOOTH WIRELESS BONE CONDUCTION TECHNOLOGY



FQ1000

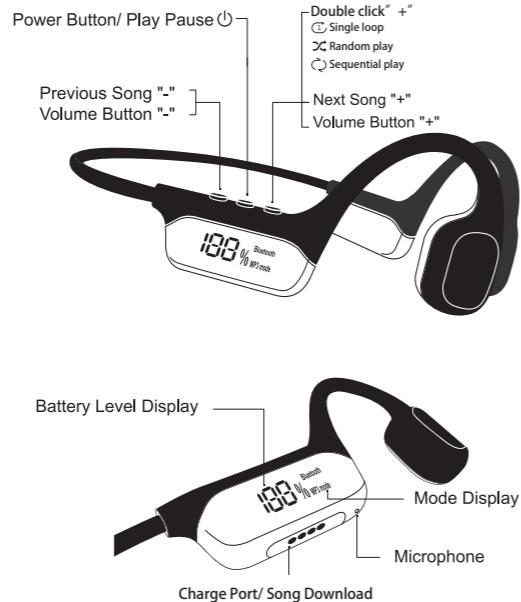

- 1 -



Power ON: Press and hold the Power Button for 2 seconds until the LCD Screen display Battery Level and Bluetooth mode with "power on" prompt sound.

Power Off: Press and hold the Power Button for 2 seconds until you hear the "power off" prompt sound

Bluetooth Pairing

To enable Bluetooth for the first time, you need to manually click on the connection button of your device. The earphones prompt sound is: Bluetooth is connected.

1. In power on state, the LCD screen will display Bluetooth mode.
2. Open your device's Bluetooth settings and select "FQ1000" headphones will say connected.

NOTE:

In order to save power, we have set the earphones to automatically shut down after leaving the Bluetooth range for 30 minutes.



- 2 -

VOLUME CONTROL + -

The volume control has 1-16 sections, when the volume is at its highest, there will be a "maximum volume" sound reminder.

Volume Up: In music or call mode, click the "+" button to increase the volume by one bar


Volume Down: In music or call mode, click the "-" button to decrease the volume by one bar

Note: Maxing out your phone's volume does not set the headphones to maximum. Use the '+' button on the phones to increase the volume further

MULTIFUNCTION BUTTON

1. Play/Pause Music Click once Power Button to play/pause
2. End Call under call status, click once Power Button to end call
3. Answer Call When in Bluetooth connection /music play, click once Power Button to answers the call when there is an incoming call
4. Reject Call When in Bluetooth connection /music play, long press the Power Button for 2 seconds to reject call when there is an incoming call
5. Previous Song In music mode, press and hold the "-" button for 2 seconds to play the previous song
6. Next Song In music mode, press and hold the "+" button for 2 seconds to play the next song previous song

- 3 -

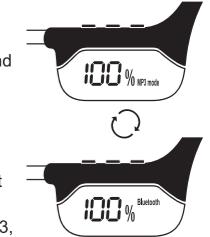

- 4 -

7. Voice Assistant:

(After connecting bluetooth, In the state of not making a phone call) continuously click power button 3 times to enter voice mode, then click power button 3 times to exit; (Note: to start siri, android, you need to open the "bluetooth headphone button start" in the voice assistant, ios need to turn off the background to open the siri function).

8. Double click "+" continuously in MP3 Mode to enter single song loop/random play/sequential play.

MP3 MODE

The system defaults to Bluetooth mode when each power on.

1. In Bluetooth mode, double click the power button to switch to MP3 mode, and the LCD screen will display MP3 mode and with "MP3 mode" prompt sound.
2. In MP3 mode, double click the power button to switch to Bluetooth mode, and the LCD screen will display Bluetooth mode and with "Bluetooth mode" prompt sound.
3. The MP3 function supports music in MP3, WAV, WMA, APE format.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FQ1000

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CHARGING

1. When the headphones is charging with the 5V charging cradle, the headphones is turned off and will not be turned on, and the last digit of the percentage of the display is flashing.
2. When charging, the percentage [100%] means the charged amount is full.



CHARGER AND BATTERY

1. Before using any charger to charge the headphones, please check whether the charger specifications are in line with the requirements(recommended charger output voltage DC5V +/-0.25V, output current: 100mA-500mA), charging voltage is too high may damage the Bluetooth headphones.
2. Warning: Only use approved chargers with this package, use of other chargers may violate the term of approval and warranty of the device and may result in danger. If the factory is shipped with a charging cable, you need to connect the charger or computer through the 3C certification to charge it. Prohibit serious collision with this product, serious impact may damage the electronic motherboar and battery.

CHARGING THE BATTERY

The headphones uses built-in non-removable rechargeable battery, please do not try to remove the battery from the headphones, so as not to damage the headphones. If a long term non-use headphones, please store it to a dry and ventilated place.

- 5 -

1. When the headphones connected to show 10% or less, and hear the low battery tone of low battery please charge, that the headphones power is insufficient. if you continue to use it will automatically shut down, then you need to charge.
2. Plug the charger into the AC power outlet.

ADJUSTABLE STRAP (FIXED STRAP)

Function 1: Adjustable Strap to Adjust Size




Function 2: Fixed Strap for Swimming

When swimming, using the fixed strap can prevent headphones from falling off due to water flow impact

Download or delete songs on your computer The computer is connected to the headset through the magnetic data cabie, and the computer will display it after 5 seconds

The MP3 function supports music in MP3,WAV, WMA, APE format.

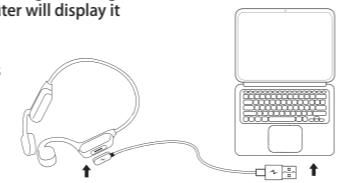

- 6 -

IMPORTANT NOTE

1. Store the headphones in cool and dry place. The working temperature should be 0~45°C(32~113°F). Working in a cold/hot environment or a highly humid area or an extremely low air pressure may reduce the battery life.
2. Keep the product away from heat sources, direct sunlight, combustible gas, fire, high voltage equipment.
3. Keep the charging port dry before connecting to charger will reduce the risk.
4. Do not throw, sit on the headphones or immerse it in salt water or stimulating liquid.
5. The correct position of the speaker of this headphones is the cheek bone in front of the ear, please do not place speaker in the ear.
6. Listening with headphones at highest volume may affect your hearing and the audio will be distorted.
7. Not suitable for children under three years old, including small parts.

PRODUCT SPECIFICATIONS

Music Play Time	8-16 Hours
Standby Time	10 Days
Charging Time	1-2 Hours
Bluetooth Version	5.4
Speaker Impedance	8Ω+3db
Microphone Sensitivity	-42 earth 2db
Product Weight	30g
Memory capacity	2G

- 7 -

WARRANTY DESCRIPTION

1. Please keep this warranty card properly for maintenance certificate
2. This product is guaranteed for one year from the date of purchase
3. Warranty equipment during the warranty period, in the state of normal use and maintenance, there are problems and failures in machine materials and processes. Upon verification, we will provide repair services free of charge
4. During the warranty period, if the following events occur, the company has the right to refuse service or collect materials and service fees according to the situation
 - (1) Cannot provide this warranty card and valid proof of purchase
 - (2) Product failure and damage caused by improper use by users
 - (3) Man-made abnormal external force damage
 - (4) Damage caused by disassembly by maintenance service personnel not authorized by our company
 - (5) Failure or damage caused by natural disasters or other force majeure factors
 - (6) Others intentionally damaged
5. Our company reserves the right to modify and explain all content

PRODUCT INFORMATION

Maintenance records	Date	Cause and treatment of failure
Product name		
Product model		
Customer name		
Customer phone		
Purchase date		
Customer address		

- 8 -