

Thank you for purchasing the Rocky2 Pro mobile phone. Please read the instructions in this manual carefully to keep your mobile phone in an optimal state.

User Information >>>

Our company' s products have obtained 3rd party certification and have passed waterproof tests before they leave our factory. Generally, it is difficult to identify the artificial factors that cause water damage for outgoing products. Therefore, it is hereby stated that water damage for outgoing products is beyond the scope of free swapping-old-for-new, free maintenance and return &refund. The OS canonly be updated by official version. In case that users use non-official system, users should shoulder the safety risk and loss arising from that. (The possible risksinclude leakage of personal information, automatic sending SMS,location your position and etc.)

⚠ Water droplets on the screen may affect touch screen sensitivity , causing oper

Disclaimer

To the extent permissible under applicable laws, Phonemax will not compensate for any special, attached, indirect and secondary damages that are produced by using relevant content and descriptions in this manual, as well as pay for any loss of profit, data, goodwill or expected savings. Maximum liability on suffering any loss is limited to the purchase price paid by you (Damages will be compensated according to provisions of applicable laws unless it is a case of personal injury).

Safety matters and environment protection

🚗 Please use hands-free devices to make or receive phone calls while driving , or use the mobile phone after parking the vehicle

🔥 Please turn off the mobile phone in case you are near medical devices that are marked with "wireless devices are forbidden" or in case you are in a hospital.

✈ Turn off the mobile phone onboard airplanes and confirm that the alarm clock or auto power-on settings are cancelled, so as to prevent auto power-on.

☀️ Avoid using the mobile phone under too high or too low temperature environments. Avoid exposing the mobile phone under intense sunlight or high humidity environments during thunderstorms.

🕒 Waste batteries should be placed in battery recycling bins and should not be discarded.

🔍 Ensure the battery cover, lock screw, screw hole rubber plug, earphone and USB rubber plugs are perfectly closed while using near water, or in case the phone may get drenched, so as to ensure the phone remains water proof and dust proof.

🚰 During vehicle refueling , Please don' t use this device near petrol stations, flammable fuel and chemicals

⚠️ Avoid using at explosive blasting areas, Turn off the mobile phone at any blasting site and follow relevant regulations.

🔌 Original package accessories, Please use original package accessories and batteries to ensure optimum performance. Please do not connect any incompatible accessories.

🔧 Do not disassemble the mobile phone. Please visit authorized service centers for any maintenance requirements.

 
📶 Please use the mobile phone within mobile phone network coverage area.

☎️ 112 Emergency calls, You can use the mobile phone to directly dial 112 to connect to local emergency services.

💾 Data backup, Please back up important information that is stored on the device to avoid data loss.

Getting Started >>>


>> Product Appearance and Button and Key Descriptions

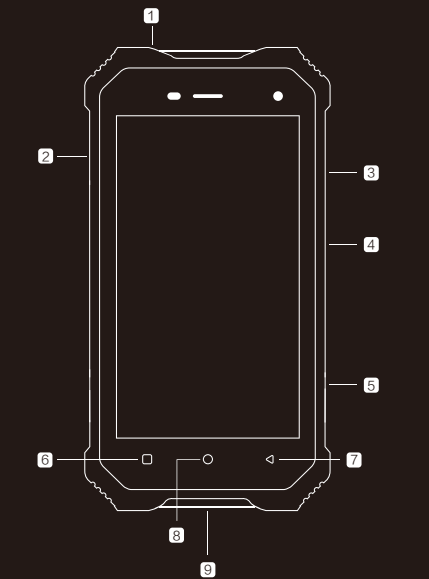


- | | | |
|------------------|-----------------|-----------------|
| 1 Headphone jack | 2 SIM Card slot | 3 Volume button |
| 4 Power Button | 5 Shoot Button | 6 Menu Key |
| 7 Back Key | 8 Home Key | 9 Micro USB |

Card Use Method >>>

 
1. Open the dust-proof rubber cover.

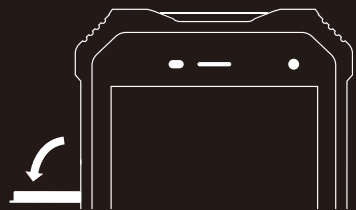

 2. Use PIN to pick out the sim card tray then place the Sim card as shown in the Sim card tray.

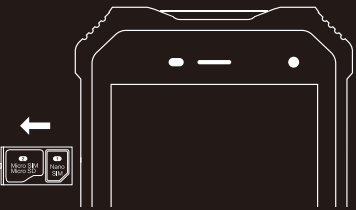

 3 Parallel to the Sim card and the tray, and push in the dust cover.

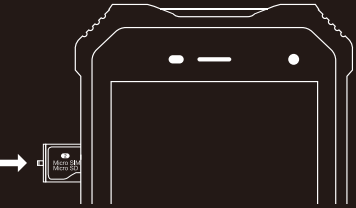

SHENZHEN PHONEMAX TECHNOLOGY CO.,LTD.

5001 East 2 Block, Laobing Building, Xingye Road, Xixiang, Bao'an District, Shenzhen, China
Tel:+86-755-83579180 Fax:+86-755-83579189 www.phonemax.cc

Switch on/off



Press and hold the button (If the mobile phone is in freezing state, long press this key for 10s to restart)

Cautions

- closed the ports before entering water. Ensure there are no hairs, sand grains or other particles in the soft rubber cover surrounding the phone, as this will affect how tightly the cover is closed.
- waterproof: 30 mins , up to 1.5m. destructive drop will affect the performance.
- MIL-STD-810: 2 m drop protection, impervious to dust, micro-particles and vibrations
- sound will be affected a little after immersed , will resume after dried.

Ensure battery cover, battery cover lock screw, screw hole rubber plugs, earphone and USB rubber plugs are perfectly closed to prevent water and dust from entering
There will be no specific mention of this cautionary notice again in the remainder of this manual



Please turn off the mobile phone and disconnect the battery charger from the phone prior to installing / uninstalling the SIM card

» Mobile Phone Specifications

Phone Type	Rugged Smartphone
Operating System	Android7.0
Frequency	GSM/GPRS /EDGE:850/1900 WCDMA:850/1900 FDD-LTE:B2/4/5/7/17
Size	148.5*78.1*12.8mm
Weight	210g
Chip	MTK 6737 Quad core
Default memory capacity	ROM: 16GB RAM: 2GB Micro-SD card maximum supported 128GB
Display	5.0 HD resolution for 720*1280 pixel
Dual SIM Dual Standby	Dual SIM Dual Standby(Micro sim card)
Network type	FDD-LTE,WCDMA,GPRS,EDGE, WAP
Battery capacity	4000mAh
Operating temperature	-40° C to 70° C
Call time	25 hours
Stand-by time	About 420 hours (depends on actual network conditions)
Camera (video recording)	Front Camera-500w, Rear camera 1300w; Supported photo size max: 3120 × 4280 Supports flash photography mode \Flashlight
Video player	Supported audio file formats: MP3,MIDI,AMR, AAC,WAV, Supported video file formats: MPEG4,3GP,MP4,AVI,MJPG
GPS FM/Sound recorder / MP3	GPS Supported
Earphone jack type supported	3.5mm earphones
Sensor	G-sensor, Proximity, Light, gyroscope
Waterproof level	IP68
SOS	Supported

» Preparation before putting in water

Waterproof bottom plug:
Please ensure the bottom plug is tightly fitted and closed in order to achieve perfect waterproof effect



- closed before entering water (For details, refer to "Installing and removing SIM card/Micro SD-card and Battery")

- Ensure there are no hairs, sand grains or other particles in the soft rubber cover surrounding the phone, as this will affect how tightly the cover is closed
Maintenance after removing from water
- After removing from water, do not uncover the phone body until it is completely wiped dry
- Open the cover facing downwards to prevent any water remaining in the cover slots from entering the phone' s body
- Shake away water drops from the phone' s speaker, earpiece and microphone after the entire phone has been removed from water, and then place to dry in open air. Do not use electric hair driers to dry the phone
Forbidden »
 - Do not use the phone in hot springs or hot water, as the waterproof soft rubber cover will be affected by high temperature leading to water entering the phone.
 - Do not open the battery cover if the phone' s body is not completely dry. Please remember at all times.
 - Do not use detergents or other chemical substances to wash the phone; only use clean water.

Menu Navigation



- Holding the Phone
Please do not cover the antenna area by hands or other objects. It may cause weaken or block signal
- Adjusting Volume
Press top or bottom volume buttons to adjust ring tone volume, or adjust speaker volume when playing music or videos
- ON/OFF
Start-up and Shutdown
Press and hold the Power button to start-up the phone.
Press and hold the Power button, then select Shutdown → Yes, to turn off the phone

Note

In areas where wireless device usage is restricted (such as on airplanes and hospitals), please follow posted warnings and instructions of authorized staff. You can switch the phone to Flight Mode if you would like to only use the device's non-network features.

Using the touch screen



- Single Tap
Single tap on the display to select one icon or option. For example, tap "Phone" on main screen to open the dial pad
- Double Tap
Zoom in/out function. For example, when viewing a picture or web page, double tap the screen to enlarge or shrink the image
- Long-press and Hold
Long-press and hold the current user interface, icon or input fields to display more operating options

For example

- Long-press and hold the icons in the App Drawer, to move the icon to the Home screen;
- Long-press and hold the blank area of the Home screen, to change wallpaper.

Android Tips



- Screenshot
You can take a screenshot using a shortcut by pressing and holding both the Power button and the Volume Down button until you hear a camera click sound. After the screenshot is taken, the picture can be viewed in the photo gallery
- Android Phone Power-saving Tips
 - Turn off unnecessary software processes: Long press the HOME button, select the appropriate app icon and slide to the left till it disappears;
 - Lower screen brightness: While using the phone continuously, you can lower screen brightness so that battery life can be extended;
 - For some settings like WLAN, GPS, network data, etc, turn them off if they are not required. Keeping these features ON also consumes lots of power.

Memory Card



- Storage Usage Tips
You can use the USB data cable to copy or move files. MP3 files are stored in the my music folder, MP4 or AVI files are stored in the Videos folder, and photos are stored in the DCIM folder

Note

Do not directly disconnect the USB data cable. Please tap Turn Off USB Storage, and exit before disconnecting to avoid data loss.



ROCKY 2 USER MANUAL



PHONEMAX

Quietly Outstanding

PHONEMAX's COPY

PHONEMAX Mobile Phone Warranty Card

Customer's Name:
Contact No.:
Address:
.....
.....
Email:
Purchase Date: DD MM YY
Invoice No.:
Product Model:
IMEI:
.....
.....

Company's Stamp



DEALER's COPY

PHONEMAX Mobile Phone Warranty Card

Customer's Name:
Contact No.:
Address:
.....
.....
Email:
Purchase Date: DD MM YY
Invoice No.:
Product Model:
IMEI:
.....
.....

Company's Stamp



CUSTOMER's COPY

PHONEMAX Mobile Phone Warranty Card

Customer's Name:
Contact No.:
Address:
.....
.....
Email:
Purchase Date: DD MM YY
Invoice No.:
Product Model:
IMEI:
.....
.....

Company's Stamp



Terms & Condition

1. PHONEMAX warrants to the original purchaser that PHONEMAX is free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the warranty period specifies below:
 - a. Transceiver-12months
 - b. LCD-12 months
 - c. Accessories,i.e.battery,charger,USB cable-6 months
 - d. This warranty is null and void if any alterations or repairs or attempted repairs or attempted repairs were carried out by any party other than a PHONEMAX authorised service center
- 2.The warranty does not cover damage resulting from:
 - a. Normal wear & tear
 - b. Usage other than in accordance with operating manual
 - c. Issue, abuse, negligence,accidental set dropped,or other acts which are beyond reasonable control of PHONEMAX.
 - d. Rough handling or transportation.
 - e. Improper installation, hardware or illegal software alteration and modification
 - f. Phone locked of security code
 - g. Set burned
 - h. Battery out of shape
 - i. Damage caused by fire,earthquake,flood,water or liquid corrosion,or acts of god
3. This warranty will be null and void in any of the following events:
 - a. If the serial number of warranty seal on the product has altered or removed.
 - b. If any term contained in this warranty card has been altered or modified in any way without the prior written consent of PHONEMAX.
4. Purchaser shall retain this warranty card and original proof of purchase at all time. Repair or request for replacement within the warranty period without producing this warranty card and the original proof of purchase will not be entertained
5. In the event of defects covered by this warranty arising during the warranty period, the product should be sent to the authorized service centre at the expenses of the purchaser
6. This warranty does not cover finishers, consumables, consumable part and cleaning. It also does not cover poor performance due to bad reception of handphone signal as a result of blind spot on in areas with poor signal penetration.
7. PHONEMAX shall not liable if during the repair of the product the contents in the products data storage media were altered, deleted, or in any way modified, also PHONEMAX shall not liable if during repair of the product any decorative items or screen protector is damaged.
8. This warranty does not cover general product maintenance, demonstration, installation, routine servicing, calibration and customisation of the product.
9. This warranty is in lieu of any, and all other warranties expresses or implied,specially including any implied warranty of merchantability of fitness for a particular purpose PHONEMAX assumes no liability for the breach of the warranty beyond correcting the breach in the manner described above.In no event shall PHONEMAX be consequential loss or damages, including loss of use or loss profits resulting from the product.
10. PHONEMAX reserves the right to add. Delete or amend the terms and conditions and without prior notice.



PHONEMAX
Warranty Certificate



PHONEMAX
Warranty Certificate

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.

Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each device are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.