

QFX

WIRELESS HEADPHONE



MODEL : HP-E160

USER MANUAL

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Cómo empezar

- Saque el producto de la caja.
- Retire cualquier embalaje del producto.
- Conserve todos los embalajes después de haber comprobado y contado todas las piezas y el contenido con respecto a la lista.

Mise en route

- Retirez le produit de sa boîte.
- Retirez l'emballage du produit.
- Conservez l'emballage après avoir vérifié et compté toutes les pièces et le contenu par rapport à la liste.

Package Contents

- Bluetooth Headphone
- USB cable
- Instruction Manual

Contenido del paquete

- Auriculares Bluetooth
- Cable USB
- Manual de instrucciones

Contenu de l'emballage

- Casque Bluetooth
 - Câble USB
 - Manuel d'instruction
-

Key Features

- Bluetooth stereo headphone
- Built-in microphone for hands-free use with Bluetooth enabled devices
- Comfortable adjustable design
- Connects automatically to previously connected devices

Características principales

- Auriculares estéreo Bluetooth
- Micrófono integrado para manos libres con dispositivos Bluetooth
- Cómodo diseño ajustable
- Connects automatically to previously connected devices

Caractéristiques principales

- Casque stéréo Bluetooth
- Microphone intégré pour une utilisation mains libres avec les appareils compatibles Bluetooth
- Conception ajustable et confortabl
- Se connecte automatiquement aux appareils précédemment connectés

Description of Parts:


1	Power on/off button ; Modes
2	Phone/Play/Pause button
3	Volume up/Next track
4	Volume down/Previous track
5	SD card slot
6	Charging port
7	AUX port
8	LED Light Indicator

Descripción de las piezas:

1	Botón de encendido/apagado ; Modos
2	Teléfono/Reproducir/Pausa
3	Subir volumen/Pista siguiente
4	Bajar volumen/Pista anterior
5	Ranura para tarjetas SD
6	Puerto de carga
7	Puerto AUX
8	Indicador luminoso LED

Description des pièces :

1	Bouton marche/arrêt ; Modes
2	Touche téléphone/lecture/pause
3	Augmentation du volume/Piste suivante
4	Diminution du volume/Piste précédente
5	Fente pour carte SD
6	Port de charge
7	Port AUX
8	Indicateur lumineux LED

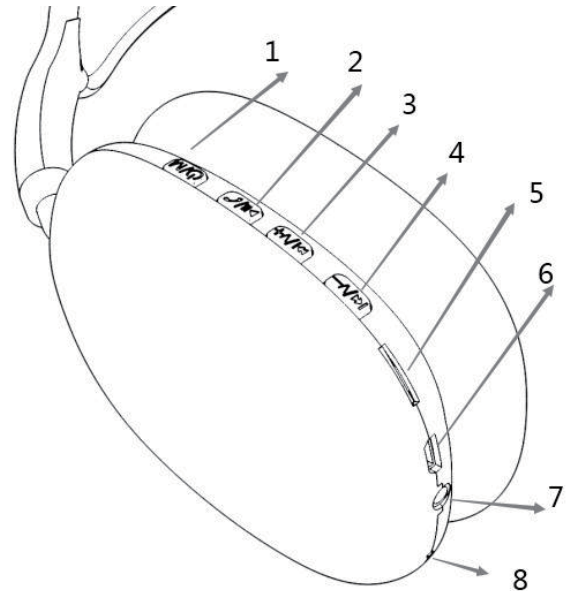

INSTRUCTIONS FOR USE

Charging Instructions

- Connect the USB-C cable to the USB-C port on the headphones. Then connect the other side to powered USB port (computer USB, etc.). The Red LED light turns on while the device is charging. It takes about 1.5 hours for the unit to fully charge. When the battery is fully charged, the red light will be off.

Turning on/off the device

- Press the "  " button for 2-4 seconds to turn ON or OFF the device with indication tone.

Pairing the device with Bluetooth devices (phone or music device)

- Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your device, select the "QFX HP-E160" from the list of available Bluetooth devices.
- You can now start to use the device.
- Please note pairing mode on the device will last for around 3 minutes. If no devices are paired within around 5 minutes the device will power off automatically.
- If pairing is unsuccessful, turn off the device and try again.
- Once you have paired the Bluetooth Headphone with a device, the Headphone will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

LED indicator

Please refer to the below tables for a list of the LED status while using the Bluetooth Headphone.

Charging Indication

LED indicator	Status of the BT Headphone
Solid Red LED	Charging
Red LED turns off	Charging Completed

LED Indication

LED indicator	Status of the BT Headphone
LED green and blue lights flashing alternately	Pairing mode

FM RADIO

To play FM radio, press the Power ON/OFF/Mode button to change to FM Radio mode. Then, press the Phone/Play/Pause button and the device will auto-search and save FM radio stations in your area. For best radio station capture, plug in one end of the USB-C cable to the headphones. This process may take up to two minutes to complete. Once completed, disconnect the USB cable, and press the Next or Previous buttons to move the next or previous saved FM radio stations.

Function Summary

Control Function—Music mode

Function	Operation	Button
Increase Volume	Playing music	Press and hold on the “+>>” button
Decrease Volume	Playing music	Press and hold on the “<<-” button
Play/Pause	Playing music	Press on the “⏮⏭” button
Previous track	Playing music	Press on the “<<-” button
Next track	Playing music	Press on the “+>>” button

Control Function—Phone mode

Function	Operation	Button
Answer a call	Incoming Call	Press the “⏮⏭” button.
End a call	Incoming Call	Press the “⏮⏭” button.
Reject call	Incoming call	Press and hold the “⏮⏭” button
Increase Volume	During a call	Press and hold on the “+>>” button
Decrease Volume	During a call	Press and hold on the “<<-” button
Redial last number	Standby mode and connected to a device	Press the “⏮⏭” button twice

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone’s user manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

Specifications

Bluetooth version	V5.3
Operating distance	Up to 66 Feet
Working time (in middle volume)	Up to 5 hours
Charging input voltage	DC 5V
Charging time	About 1.5 hours
Driver unit :	40mm 32Ω

(Note: Battery life & charging time may vary based on usage & types of devices used.)

INSTRUCCIONES DE USO

Instrucciones de carga

- Conecta el cable USB-C al puerto USB-C de los auriculares. A continuación, conecta el otro lado a un puerto USB con alimentación (USB del ordenador, etc.). La luz LED roja se enciende mientras el dispositivo se está cargando. La unidad tarda aproximadamente 1,5 horas en cargarse por completo. Cuando la batería esté completamente cargada, la luz roja se apagará.

Encender y apagar el aparato

- Pulse el botón "⏻" durante 2-4 segundos para encender o apagar el aparato con tono de indicación.

Emparejar el dispositivo con dispositivos Bluetooth (teléfono o aparato de música)

- Activa la función Bluetooth en tu dispositivo Bluetooth (teléfono o aparato de música). Consulta las instrucciones del fabricante para activar la función Bluetooth en tu dispositivo.
- Una vez que haya activado Bluetooth en su dispositivo, seleccione el "QFX HP-E160" de la lista de dispositivos Bluetooth disponibles.
- Ya puedes empezar a utilizar el dispositivo.
- Tenga en cuenta que el modo de emparejamiento del dispositivo durará unos 3 minutos. Si no se empareja ningún dispositivo en unos 5 minutos, el dispositivo se apagará automáticamente.
- Si el emparejamiento no tiene éxito, apague el dispositivo e inténtelo de nuevo.
- Una vez que haya emparejado el auricular Bluetooth con un dispositivo, el auricular recordará este dispositivo y se emparejará automáticamente cuando el Bluetooth del dispositivo esté activado y dentro del alcance. No es necesario volver a emparejar ningún dispositivo conectado previamente.

Conmutador de función TF Card/FM Radio/Bluetooth

Pulse brevemente el botón "M/⏻" para cambiar

Indicador LED

Consulte las tablas siguientes para obtener una lista del estado de los LED durante el uso de los auriculares Bluetooth.

Indicación de carga

Indicador LED	Estado del auricular BT
LED rojo fijo	Cargando
El LED rojo se apaga	Carga completada

LED Indication

Indicador LED	Estado del auricular BT
Las luces LED verde y azul parpadean alternativamente	Modo de emparejamiento

RADIO FM

Para reproducir radio FM, pulse el botón Encendido/Apagado/Modo para cambiar al modo Radio FM. A continuación, pulsa el botón Teléfono/Reproducir/Pausa y el dispositivo buscará automáticamente y guardará las emisoras de radio FM de tu zona. Para capturar mejor las emisoras de radio, conecta un extremo del cable USB-C a los auriculares. Este proceso puede tardar hasta dos minutos en completarse. Una vez completado, desconecte el cable USB y pulse los botones Siguiente o Anterior para desplazarse a las emisoras de radio FM guardadas siguientes o anteriores.

Resumen de funciones

Función de control-Modo música

Función	Operación	Botón
Aumentar el volumen	Reproducir música	Mantenga pulsado el botón "+>"
Disminuir el volumen	Reproducir música	Mantenga pulsado el botón "<-"
Reproducir/Pausa	Reproducir música	Pulse el botón "⏮ ⏭".
Pista anterior	Reproducir música	Pulse el botón "<-".
Siguiente pista	Reproducir música	Pulse el botón "+>".

Control Function—Phone mode

Función	Operación	Botón
Responder a una llamada	Llamada entrante	Pulse el botón "⏮ ⏭ "
Finalizar una llamada	Llamada entrante	Pulse el botón "⏮ ⏭ "
Rechazar llamada	Llamada entrante	Mantenga pulsado el botón "⏮ ⏭ "
Aumentar el volumen	Durante una llamada	Mantenga pulsado el botón "+>"
Disminuir el volumen	Durante una llamada	Mantenga pulsado el botón "<-"
Re llamada al último número	Modo de espera y conectado a un dispositivo	Pulse dos veces el botón "⏮ ⏭ "

Atención

- No todos los teléfonos móviles admiten todas las funciones enumeradas anteriormente. Consulte el manual de usuario de su teléfono móvil para obtener más información.
- Algunas funciones y el tono de indicación pueden variar en función del teléfono móvil.

Especificaciones

Versión Bluetooth	V5.3
Distancia de funcionamiento	Hasta 66 Pies
Tiempo de trabajo (en volumen medio)	Hasta 5 horas
Tensión de entrada de carga	DC 5V
Tiempo de carga	Alrededor de 1.5 horas
Unidad del conductor	40mm 32Ω

(Nota: La duración de la batería y el tiempo de carga pueden variar en función del uso y los tipos de dispositivos utilizados).

MODE D'EMPLOI

Instructions de chargement

- Connectez le câble USB-C au port USB-C du casque. Branchez ensuite l'autre côté sur un port USB alimenté (USB de l'ordinateur, etc.). Le voyant rouge s'allume lorsque l'appareil est en cours de chargement. Il faut environ 1,5 heure pour que l'appareil se charge complètement. Lorsque la batterie est entièrement chargée, le voyant rouge s'éteint.

Allumer/éteindre l'appareil

- Appuyez sur la touche "  " pendant 2 à 4 secondes pour allumer ou éteindre l'appareil avec une tonalité d'indication.

Appairage de l'appareil avec des appareils Bluetooth (téléphone ou appareil de musique)

- Activez la fonction Bluetooth sur votre appareil Bluetooth (téléphone ou appareil de musique). Veuillez consulter les instructions du fabricant pour savoir comment activer la fonction Bluetooth sur votre appareil.
- Une fois que vous avez activé Bluetooth sur votre appareil, sélectionnez le "QFX HP-E160" dans la liste des appareils Bluetooth disponibles.
- Vous pouvez maintenant commencer à utiliser l'appareil.
- Veuillez noter que le mode d'appairage de l'appareil dure environ 3 minutes. Si aucun appareil n'est apparié dans un délai d'environ 5 minutes, l'appareil s'éteint automatiquement.
- Si le couplage échoue, éteignez l'appareil et réessayez.
- Une fois que vous avez apparié l'écouteur Bluetooth avec un appareil, l'écouteur se souviendra de cet appareil et s'appairera automatiquement lorsque le Bluetooth de l'appareil sera activé et à portée. Il n'est pas nécessaire d'appairer à nouveau les appareils précédemment connectés.

Commutateur de la fonction carte TF/radio FM/bluetooth

Appuyez brièvement sur la touche "  " pour passer de l'un à l'autre.

Indicateur LED

Veuillez vous référer aux tableaux ci-dessous pour une liste de l'état des LED lors de l'utilisation de l'écouteur Bluetooth.

Indication de charge

Indicateur LED	Status of the BT Headphone
DEL rouge fixe	Chargement
La LED rouge s'éteint	Chargement terminé

LED Indication

Indicateur LED	Status of the BT Headphone
Les LED vertes et bleues clignotent alternativement	Mode d'appairage

RADIO FM

Pour écouter la radio FM, appuyez sur la touche Marche/Arrêt/Mode pour passer en mode Radio FM. Ensuite, appuyez sur le bouton Téléphone/Lecture/Pause et l'appareil recherchera et enregistrera automatiquement les stations de radio FM dans votre région. Pour une meilleure capture des stations de radio, branchez une extrémité du câble USB-C au casque. Ce processus peut prendre jusqu'à deux minutes. Une fois le processus terminé, débranchez le câble USB et appuyez sur les boutons Suivant ou Précédent pour passer aux stations de radio FM enregistrées suivantes ou précédentes.

Résumé des fonctions

Fonction de contrôle - Mode musique

Fonction	Fonctionnement	Bouton
Augmenter le volume	Jouer de la musique	Appuyez sur le bouton "+>>" et maintenez-le enfoncé
Diminution du volume	Jouer de la musique	Appuyez sur le bouton "<<-" et maintenez-le enfoncé
Lecture/Pause	Jouer de la musique	Appuyez sur le bouton "⏮⏭"
Voie précédente	Jouer de la musique	Appuyez sur le bouton "<<-"
Prochaine piste	Jouer de la musique	Appuyez sur le bouton "+>>"

Control Function—Phone mode

Fonction	Fonctionnement	Bouton
Répondre à un appel	Appel entrant	Appuyez sur le bouton "⏮⏭"
Mettre fin à un appel	Appel entrant	Appuyez sur le bouton "⏮⏭"
Rejeter l'appel	Appel entrant	Appuyez sur le bouton "⏮⏭" et maintenez-le enfoncé
Augmenter le volume	Pendant un appel	Appuyez sur le bouton "+>>" et maintenez-le enfoncé
Diminution du volume	Pendant un appel	Appuyez sur le bouton "<<-" et maintenez-le enfoncé
Redial last number	Mode veille et connexion à un appareil	Appuyer deux fois sur le bouton "⏮⏭".

A noter

- Tous les téléphones portables ne prennent pas en charge toutes les fonctions énumérées ci-dessus. Veuillez consulter le manuel d'utilisation de votre téléphone portable pour plus d'informations.
- Certaines fonctions et tonalités d'indication peuvent varier en fonction de votre téléphone mobile.

Spécifications

Version Bluetooth	V5.3
Distance de fonctionnement	Jusqu'à 66 Pieds
Temps de travail (en volume moyen)	Jusqu'à 5 heures
Tension d'entrée de charge	DC 5V
Temps de charge	Environ 1.5 heure
Unité de conduite	40mm 32Ω

(Remarque : l'autonomie de la batterie et le temps de charge peuvent varier en fonction de l'utilisation et des types d'appareils utilisés).



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©



www.qfxusa.com


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your HP-E160 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

