

Q: Cannot connect to camera.

A: 1. Please ensure the camera is charging.
2. Make sure the camera and the monitor are within the effective distance.
3. Please confirm if the antenna is tightened

Q: The video changed to unclear.

A: 1. Please try to remove the camera near to monitor.
2. Please clear the obstacle between camera and monitor.

Q: The baby monitor has some noise.

A: 1. The camera and monitor may be too close. Move them further apart.
2. Please adjust the angle of the antenna to minimize wireless interference.

Q: How long this monitor can standby?

A: After charged fully, the monitor can standby about 12 hours.

Q: Can I hear my baby's voice when turn off the screen?


A: Yes. You should turn on **VOX**, and it will wake up the screen if a loud sound is detected.

Q: Picture is black and white?

A: The Night Vision Mode will be activated if the camera worked in a dark environment. Turn on room light can force monitor out of night vision mode.

QUICK START GUIDE

5.0 Inch Video Baby Monitor

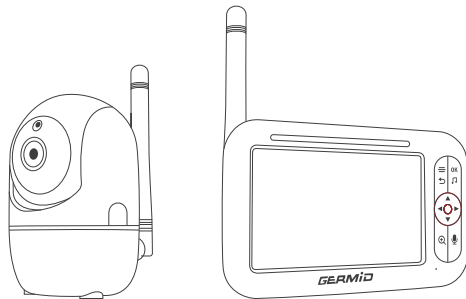

WARNING

1. Strangulation Hazard - Children have strangled in cords. Keep this cord out of the reach of children (more than 3 feet away).
2. Never Place the Camera of Cord in or Near Crib or Playpen. Secure the cord at least three feet away from crib or playpen.
3. Never use the transmitter or receiver near water, including near a bathtub, sink, laundry tub, wet basement, etc.
4. Use the Power Adapter(s) provided by us ONLY. Using unauthorized charging cables and Power Adapters may result in overheating or even explosion.
5. Adult assembly is required. Keep small parts away from children.
6. This product is not a toy. Do not allow children to play with it.
7. This product is not intended to replace proper adult supervision of children.
8. You must check your child's activity regularly, as this product will not alert parents to silent activities of a child.
9. This product is intended for indoor use only.
10. This product is not intended for use as a medical monitor and its use should not replace adult supervision.
11. Test monitor before use and after changing camera location. Check reception regularly. Obstacles, such as concrete walls, may shorten the wireless signal transfer range.
12. Always unplug AC adapters from wall outlets and power sources during periods of non-use.
13. Do not touch the plug contacts with sharp or metal objects.
14. Do not allow water damage to the monitor unit, charging port, or charging cable which cause overheating of the charging components.
15. Before using this product, read and follow all instructions and warnings contained in this booklet.


PACKING LIST




BC50 Camera



BC50 Monitor

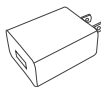


Power Adapter x2

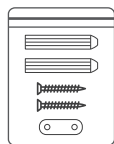


Mount Kit



Antenna

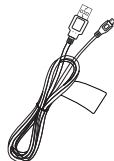

Power Cable x2

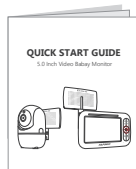

Quick Start Guide

ICONS EXPLANATION



Signal strength



No signal connection



80°F Current room temperature



CAM1 Current camera



Battery Level



VOX-L Sound detection enabled



Zoom in



Lullabies enabled



Two-way talk enabled



Feeding reminder enabled




Night vision enabled




Mute

GETTING STARTED

Step 1: Charge the monitor by connecting the Power Adapter to the monitor and a socket. The monitor takes about 10 hours to be fully charged (Enlarged 6000 mAh battery), and it lasts about 12 hours.

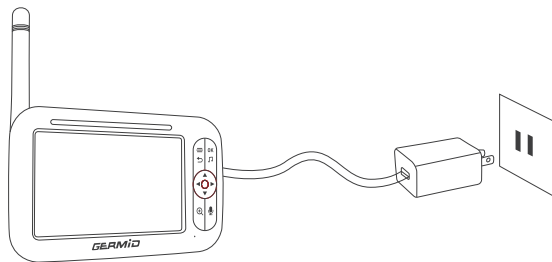

Step 2: Connect the Power Adapter to the camera and a socket to power on the camera.



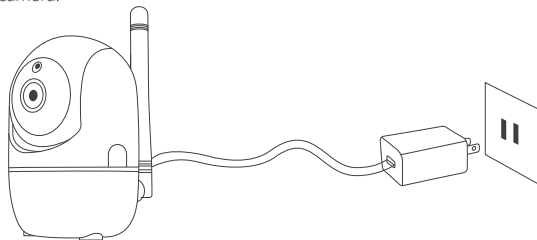


Step 3: Place the camera at least 3ft/1m away from your baby.

Step 4: Long press the Power button to turn on the monitor, then you can see the monitoring interface.



OVERVIEW

1. Camera Unit

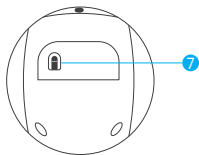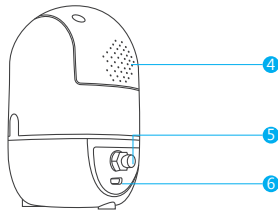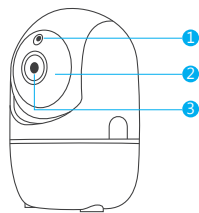

- 1. Light sensor
- 2. IR LED lights
- 3. Lens
- 4. Speaker
- 5. Antenna interface
- 6. Power cable interface
- 7. Pair button

2. Parent Unit

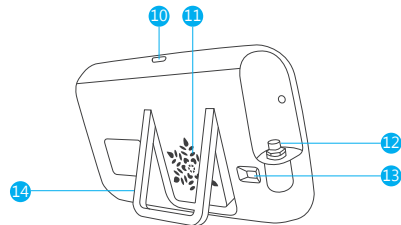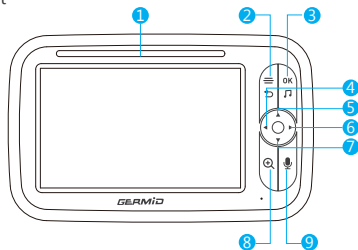

- 1. Light indicator
- 2. **Menu/Back:** Press to enter menu page in the monitoring image or press as a Back button in menu page.
- 3. **Lullaby/Confirm:** Press to play lullabies in the monitoring image or press as a Confirm button in menu page.
- 4. **Left:** Press to pan the camera leftward in the monitoring image or to change your selection leftward in menu page.
- 5. **Up:** Press to tilt the camera upward in main interface or to change your selection upward in menu page.
- 6. **Right:** Press to pan the camera rightward in the monitoring image or to change your selection rightward in menu page.
- 7. **Down:** Press to tilt the camera downward in the monitoring image or to change your selection downward in menu page.
- 8. **Zoom:** In the monitoring image, long press to zoom in/out, short press to switch temperature unit.
- 9. **Talk:** Press to talk to your baby in the monitoring image.
- 10. **Power/Sleep Button:** Long press to turn on/off the monitor; short press to turn on/off the screen.
- 11. Speaker
- 12. Antenna interface
- 13. Power cable interface
- 14. Support Stand



MENU SETTINGS

PAIR THE CAMERA



You do not need to pair it again unless the Camera Unit loses its link with the Monitor Unit or pair to a new Camera Unit.

If it shows "Lost Link!!!" after turning on the monitor, this is likely due to the far distance between the monitor and camera, or the unsuccessful factory pairing. Please move the monitor closer to the camera, or manually pair the monitor with the camera following the next section accordingly.

1. Press "≡" to enter the menu page. Choose "📷" and press "OK".
2. Select "📷", then press "OK".

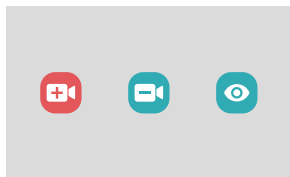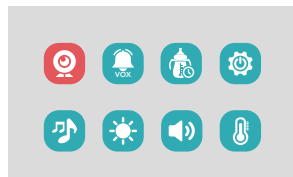

3. Select "1", then press "OK". you will see the prompt paired.
4. Long press "Pair Button" on the top of the camera.

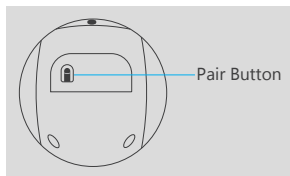
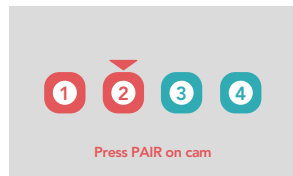


5. If the pairing is successful, the monitor screen will prompt "PAIR SUCCEED".


NOTED: "About step 3", a cyan-blue icon indicates that there is no camera paired with this channel, while a red icon indicates there is a camera paired with this channel.

DELETE CAMERAS

1. Press "≡" to enter the menu page. Choose "📷" and press "OK".
2. Select "📷", then press "OK".

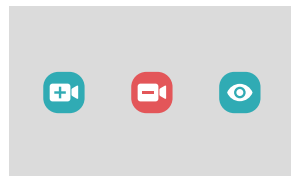
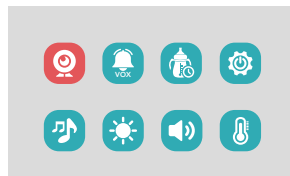


3. Select a paired camera "1", then press "OK".
4. Your camera is deleted.

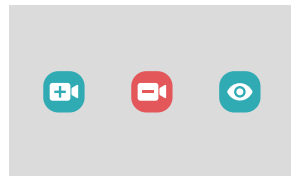

CAMERAS DISPLAY MODE

1. Press "≡" to enter the menu page. Choose "📷" and press "OK".
2. Select "📷", then press "OK".

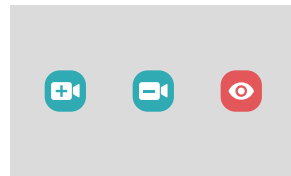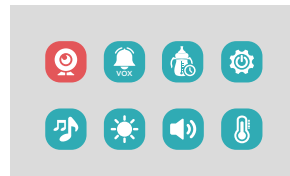

4 cameras at most can be connected to one monitor. When you have more than 1 Camera Unit paired (For example 4). The following display modes are available.


MODE 1:

When selects  or  or  , CAM1, CAM2, CAM3 can display separately.



MODE 2:

When selects  , CAM1, CAM2, CAM3 will split screen display.

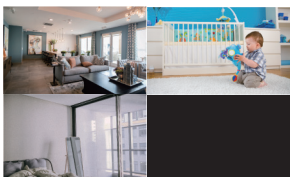

MODE 3:

When selects  , Two of CAM1, CAM2, and CAM3 are displayed on the left and right side of split screen. There are totally 6 display modes, which can be switched by pressing ▲ and ▼ button.

MODE 4:


When selects  , scan camera function will be activated. It automatically cycles through your paired camera channels to display each camera for 20 seconds.

VOX SETTING

The monitor has a voice operated switch, also known as **VOX**. If you enable this function, it will turn on the screen when the sound over a certain threshold is detected. There are 4 options to adjust the sensitivity of sound detection:

OFF  , LOW  , MEDIUM  and HIGH  .

1. Press " " to enter the menu page. Choose " " and press "OK".
2. Select the item you want.

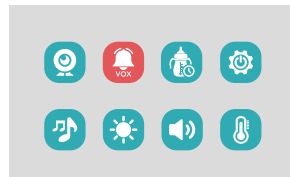


NOTED: This function is used in conjunction with "Auto LCD Off". For "Auto LCD Off", please refer to "SYSTEM SETTING" on page 10.

FEEDING TIMER

This function is to remind you of feeding your baby. **OFF** means you shut down the function; 2 hour means it reminds you every 2 hours and so on for the other options.

1. Press " " to enter the menu page. Choose " " and press "OK".
2. Select the item you want.

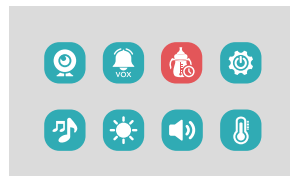


SYSTEM SETTINGS


This function is to set System Date & Time, LCD Auto Off, and Factory Reset.

System Date & Time

1. Press "≡" to enter the menu page. Choose "⚙️" and press "OK".
2. Select "System Date & Time", then press "OK".

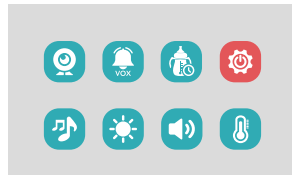


3. Press "▲" and "▼" to change the value. Press "↩️" to finish setting.
4. Press "◀️" and "▶️" to Switch to the next item; Press "↩️" to finish setting.

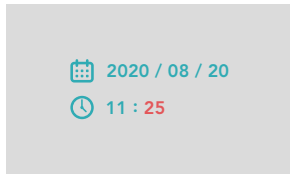



LCD Auto Off

1. Select "LCD Auto Off", press "OK".
2. Select the item you want.

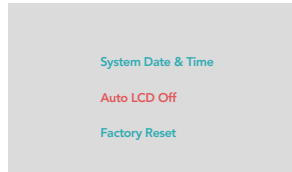

Factory Reset

1. Select "Factory Reset", press "OK".
2. Confirm "YES" to reset.

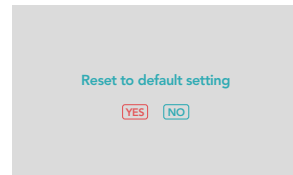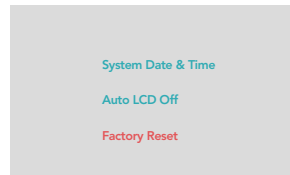



NOTED: If you restore the monitor to Factory Reset, the camera paired before will be deleted. It's required to pair the camera and monitor again for image streaming. Therefore, please do it with caution.

LULLABIES

This function is to comfort your baby when needed. The volume and type of each lullaby are distinctive, please select the best one for your baby.

"🔁" mean loop playing the lullabies in the system; "🔊 OFF" means you shut down the function.

1. Press "≡" to enter the menu page. Choose "🎵" and press "OK".
2. Select the lullaby you want; Select "🔁" to play the lullabies in a loop.

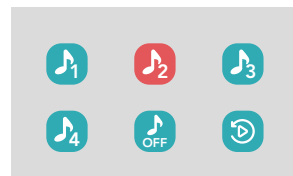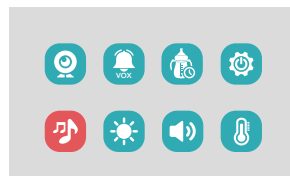


Tip:


You can also quickly turn on the function of playing lullaby by pressing "🎵" in the monitoring image.

BRIGHTNESS SETTING

1. Press "≡" to enter the menu page.
Choose "☀️" and press "OK".

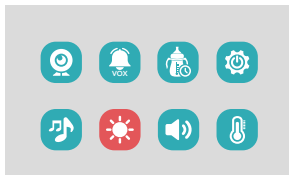


2. Press "◀️" and "▶️" to decrease or increase screen brightness.

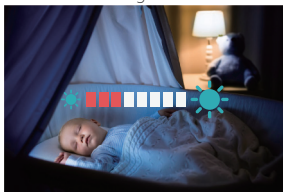


VOLUME SETTING

1. Press "≡" to enter the menu page.
Choose "🔊" and press "OK".


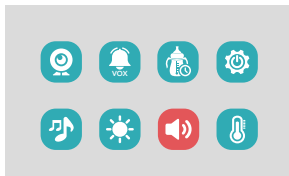


2. Press "◀️" and "▶️" to decrease or increase system volume.

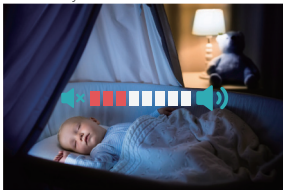

TEMPERATURE SETTING

You can set a comfort zone, when the indoor temperature is higher or lower than the temperature you set, the monitor will emit a "Bi..Bi" sound to alarm you. You can also switch the temperature unit.

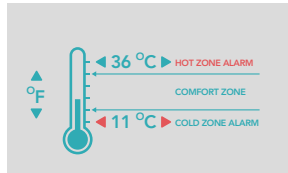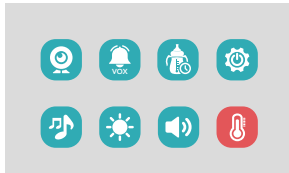

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body