

<h1>HOPESTAR-H20</h1> <h2>Wireless Speaker Instructions</h2> <p>Portable Wireless Speaker</p> 	<h3>Wireless Speaker H20</h3> <p>Wireless Speaker</p>	<h3>Wireless Speaker H20</h3> <p>Wireless Speaker</p>	<h3>Wireless Speaker H20</h3> <p>Wireless Speaker</p>	<h3>Wireless Speaker H20</h3> <p>Wireless Speaker</p>	<h3>Wireless Speaker H20</h3> <p>Wireless Speaker</p>	<h3>Wireless Speaker H20</h3> <p>Wireless Speaker</p>
<p>Features:</p> <ol style="list-style-type: none"> 1.Wireless connection 2 memory function, short broadcast 3. Support U disk 4 built-in lithium battery 5. Built-in microphone, to achieve hands-free mobile phone voice calls. 6. Support MP3 music format decoding 7. Mobile power function 8. Use high-fidelity speakers, make the sound more natural and delicate 9. Multi-device serial function <p>Charging to use: The machine built overcharge protection circuit, can be connected to a computer or charger for a long time, about four hours to fully charge. Every battery playback time will be different due to the use of different size of the volume.</p> <p>Troubleshooting:</p> <ol style="list-style-type: none"> 1. Auto power off: the battery power will automatically open the battery protection,Please charge 5 hours after use. 	<p>Features:</p> <ol style="list-style-type: none"> 2. Can not play music: MP3 music files stored path can not be the player identification, save the file stored in the root directory of removable devices. 3. The speaker mute: the volume is turned on. 4. Connect the computer no sound: Computer interface connection error, please select the correct audio output port 5. No function or function keys wrong: try again after shutdown. 6. Machine to provide reset button headphone hole abnormal card machine situation, available Slender buttons on the stick buttons. <p>Special Note:</p> <ol style="list-style-type: none"> 1. Before using a Wireless pairing must first open the audio power, it has been the default Wireless mode, enter pairing status, such as using a mobile phone: HOPESTAR-H20 find the device displays the Wireless interface on your phone, choose Open Wireless interface, search for Wireless devices, search, press Select HOPESTAR-H20, connection pairing (pairing this machine without a password), the connection OK. Return to the menu interface, you can use Wireless to play music. 2. Suitable for all kinds of mobile phones equipped with Wireless technology, Wireless adapter, Wireless players, such as mobile phones (iPhone, 	<p>HTC, NOKIA, MOTOROLA) and so on.</p> <ol style="list-style-type: none"> 3. Bluetooth indicator: waiting to connect flash / connect successfully or suspend the long bright Flash slowly when playing. 4. Concatenation function: wait for the connection status short press will automatically search for the slave and connect A short press with the phone will automatically disconnect the phone and automatically search for a second Machine connection, when the connection to the box is successful, the phone again using Bluetooth connection <p>Technical Specifications:</p> <p>Wireless standard: 10+ESR Transmission distance: 10 meters Output power: 8W*2+15W Play time:4H Frequency effect: 100Hz ~ 18KHZ Inside the speaker : 52MM*2,4Ω10W 93MM*1,4Ω15W Input Power: DC5V 2A Maximum current consumption: 2A Battery type: Polymer Li-ion 7.4V/4400mAh Audio signal input interface: standard Φ3.5mm headphone jack (stereo)</p>	 <ol style="list-style-type: none"> 1. Mode switch / long press to turn off all button lights 2. Press the previous song / long press to reduce the volume 3. The first four lights for the power indicator light / the first five lights for the Bluetooth indicator 4. Long press the switch, short press cancel / restore pairing 5. Press the next song / long press the volume increase 6. Long press on the box connection, short press play pause, double-click call back 7. wheat head 8.DCSV interface, when inserted into the DC5V data cable defaults to charging the device 9. TF card interface, when inserted TF card default TF card playback 10.USB socket, when inserted into the U disk, the default U disk playback, insert the USB data cable for the mobile power function 11.IN interface, when inserted IN data line default IN data playback 12.OUT interface, when inserted OUT data line default OUT data playback (including reset button) 	 <p>Wireless pairing</p> <p>Listen wirelessly, Charge Endlessly.</p>	<p>username: _____</p> <p>contact number: _____</p> <p>Date of purchase: _____</p> <p>Product number: _____</p> <p>Maintenance failure: _____</p> <p>Note: The product warranty is 6 months</p>	

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.