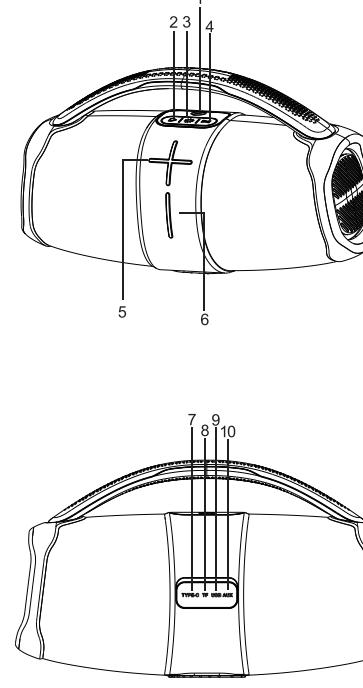
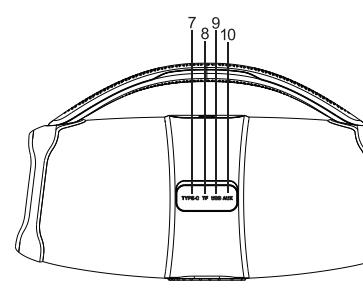
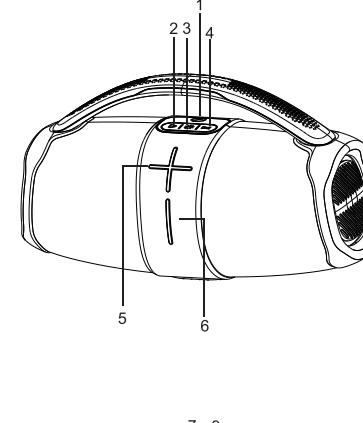
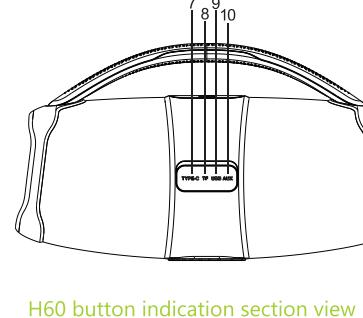


 <p><b>HOPESTAR - H60</b> 便携式无线音箱</p> <p><b>无线扬声器说明书</b></p>					
<p><b>技术规格:</b></p> <p>无线标准: 5.3 传输距离: 10米 输出功率: 10W*2 播放时间: 4 - 6小时 频率效应: 80Hz-20Khz 扬声器: 66mm 4Ω, 10W*2 输入电源: 5V === 1A 最大电流消耗: 1A 电池类型: 18650 锂离子电池 3000 mAh 音频信号输入接口: 标准Φ3.5mm耳机插孔(立体声)</p> <p><b>特点:</b></p> <ol style="list-style-type: none"> <li>1. 无线连接</li> <li>2. 记忆功能, 断点续播</li> <li>3. 支持U盘/ TF卡/ AUX播放模式</li> <li>4. 内置锂离子电池</li> <li>5. 支持MP3/ WAV/ WMA/ FLAC/ APE音乐格式解码</li> <li>6. 使用高保真的扬声器, 发出声音更自然和细腻</li> <li>7. 6级防水</li> <li>8. 1+1 设备串连功能</li> <li>9. 支持收音机功能</li> </ol>	<p><b>HOPESTAR</b></p> <p>无线扬声器 - H60</p>   <p>H60按键指示剖面图</p>	<p><b>HOPESTAR</b></p> <p>无线扬声器 - H60</p> <p><b>按键说明:</b></p> <ol style="list-style-type: none"> <li>1.开机按键 长按开关机 约3秒/次</li> <li>2.暂停/播放键 单击: 播放/暂停 长按: 退出/回连<b>无线</b>连接 <b>无线</b>模式下双击为拒接电话 来电情况下长按2秒为拒接电话 在收音机模式下 单击: 静音 长按: 收台</li> <li>3.灯按键 单击: 转换灯光模式 长按: 开/关灯</li> <li>4.串联键 单击: 串联/退出串联 长按: 转换模式</li> <li>5. +键 单击: 音量加 长按: 下一曲</li> <li>6. -键 单击: 音量减 长按: 上一曲</li> <li>7.Type-C 插孔 1. 充电线接口, 插入Type-C充电线时, 默认为设备充电 2. 使用收音机功能时, 需插入充电线, 作为收音天线, 收音机功能才能正常使用</li> <li>8.TF插孔 插入TF卡时, 默认为TF卡播放模式</li> <li>9.USB插孔 插入U盘时, 默认为USB播放模式</li> <li>10. AUX 插孔 标准Φ3.5mm耳机插孔, 插入时, 默认为AUX播放模式</li> </ol>	<p><b>HOPESTAR</b></p> <p>无线扬声器 - H60</p> <p><b>使用说明:</b></p> <ol style="list-style-type: none"> <li>1.无线配对 1.1. 使用无线配对前, 首先打开音频电源, 它已经是默认的无线模式。 1.2. 打开无线设备, 搜索HOPESTAR-H60, 连接配对, 连接成功后, 开始播放音乐体验。</li> <li>2.适用于各种手机配件无线技术, 无线适配器, 无线播放器。</li> <li>3.语音提示 3.1. 开/关机有语音提示; 3.2. 音量加到最大音量有语音提示, 最小音量无语音提示。 3.3. 检测到3.4V低电提示3次后关机;</li> <li>4.模式切换 4.1. 开机默认进入无线模式, 模式切换顺序: 无线模式-FM模式-TF卡模式-U盘模式-AUX模式 4.2. 模式: 后插优先。</li> <li>5.播放指示灯 无线搜索状态: 白灯快闪, 约0.5秒/次; 无线配对状态: 白灯常亮 播放状态: 白灯慢闪 约1秒/次; 6.充电指示灯 充电为3颗流水灯从左至右闪烁 电量30%第1颗常亮2.3.颗闪烁 电量40%第1-2颗常亮3颗闪烁 电量100%第1-2-3颗常亮 7.音量 开机默认音箱70%音量。</li> </ol>	<p><b>HOPESTAR</b></p> <p>无线扬声器 - H60</p> <p><b>产品保修</b></p> <p>用户名: _____</p> <p>联系电话: _____</p> <p>购买日期: _____</p> <p>产品编号: _____</p> <p>维护故障: _____</p>	
<p><b>HOPESTAR - H60</b> Portable Wireless Speaker</p> <p><b>WIRELESS SPEAKER INSTRUCTIONS</b></p>	<p><b>HOPESTAR</b></p> <p>Wireless speaker - H60</p>   <p>H60 button indication section view</p>	<p><b>HOPESTAR</b></p> <p>Wireless speaker - H60</p> <p><b>Button instruction:</b></p> <ol style="list-style-type: none"> <li>1. Power on button Long press the switch for about 3 seconds/time</li> <li>2. Pause/play key Click: Play/Pause Long press: Exit/reconnect Wireless connection Double click in <b>Wireless</b> mode to call back; Click: answer/end In case of a call, long press for 2 seconds to reject the call In radio mode, click: mute Long press: receive</li> <li>3. Lamp button Click: Convert light mode Long press: Turn lights on/off</li> <li>4. Serial key Click: Tandem/Exit Tandem Long press: Convert Mode</li> <li>5.+key Click: Volume up Long press: next song</li> <li>6. - key Click: Volume Down Long press: Previous song</li> <li>7. Type-C jack 1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default 2. When using the radio function, you need to plug in the charging line as the radio antenna. The radio function can be used normally</li> <li>8. TF jack When the TF card is inserted, the default is the TF card playing mode</li> <li>9. USB connector When the USB stick is inserted, it defaults to USB playback mode</li> <li>10. AUX jack Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in</li> </ol>	<p><b>HOPESTAR</b></p> <p>Wireless speaker - H60</p> <p><b>Directions for use:</b></p> <ol style="list-style-type: none"> <li>1. Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model. 1.2. Turn on the wireless device, search for HOPESTAR-H60, connect and pair, connect After success, start playing music experience.</li> <li>2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.</li> <li>3. Voice prompt 3.1. There is a voice prompt when turning on/off; 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3. Shut down after detecting 3.4V low power prompt 3 times;</li> <li>4. Mode switching 4.1. It enters wireless mode by default when power on. Mode switching sequence: wireless mode - FM mode - TF card mode - U disk mode - AUX mode 4.2. Mode: Post-insertion priority.</li> <li>5. Play indicator: Wireless search status: white light flashes quickly, about 0.5 seconds/time; Wireless pairing status: white light is always on Playing status: the white light flashes slowly about 1 second/time;</li> <li>6. Charging indicator When the TF card is inserted, 3 water lamps flash from left to right Power 30%, the first one is normally on 2.3. The second one flashes Battery 40%, the first two are normally on, and the third one is flashing The 1-2-3 are always on when the power is 100%</li> <li>7. Volume Turn on the default speaker volume at 70%.</li> </ol>	<p><b>HOPESTAR</b></p> <p>Wireless speaker - H55</p> <p><b>Product warranty</b></p> <p>Username: _____</p> <p>Contact number: _____</p> <p>Date of purchase: _____</p> <p>Product number: _____</p> <p>Maintenance failure: _____</p>	

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.