

# AuthenTrend

## Quick Start Guide 簡易使用手冊

### ATKey.BLE Bluetooth Fingerprint Authenticator 藍牙指紋認證裝置



ATKEY.BLE is a wireless fingerprint authenticator that adopts 2.4GHz wireless technology of Bluetooth Low Energy 4.0 to prove to a PC or mobile system that you really are who you are via the verification of enrolled fingerprints.

ATKEY.BLE內建了先進的指紋辨識以及低功耗藍牙無線訊技術，主要應用於與綁定的個人電腦或是行動裝置系統進行可靠的身份認證機制。


#### SYSTEM REQUIREMENTS:

- Windows 10 RS2 (Creators Update, build 1703)
- ATKey app (download from Windows Store: <https://www.microsoft.com/store/apps/9P7GR8W9SJD3>)

#### 系統要求：

- Windows 10 RS2 (Creators Update, build 1703)
- ATKey 應用程式 (下載路徑: <https://www.microsoft.com/store/apps/9P7GR8W9SJD3>)

1

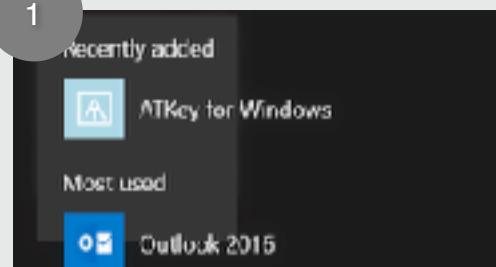

#### INSTALLATION:

1. Enable PIN of Windows 10 from "Sign-In Option" of "Accounts" in Windows Settings page.
2. Install ATKey app from Windows Store.

#### 安裝：

1. 透過系統設定中的"Sign-In Option"啟用並設定PIN碼。
2. 從Windows Store下載ATKey應用程式並執行安裝。

2




#### GET STARTED:

1. Plug in USB cable to power up ATKey.BLE (Blue LED appears).
2. Keep USB cable plugged to charge ATKey.BLE (Red LED on) until it's fully charged (Red LED off).

#### 啟動裝置：

1. 插上USB充電線將ATKey.BLE啟動並開始運作（顯示藍燈）。
2. 紅燈恆亮表示ATKey.BLE正在進行充電，充電完成紅燈將會自行熄滅。

3

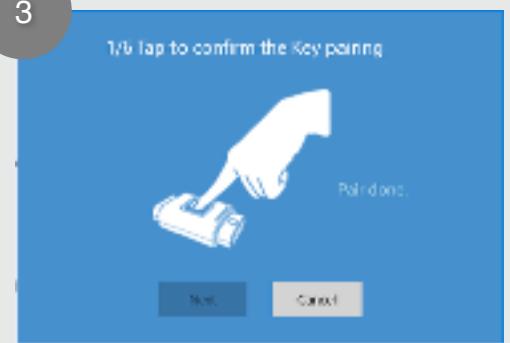

#### REGISTER DEVICE:

Run ATKey App to pair up and register ATKey.BLE with your computer. Be sure to touch the fingerprint sensing area to confirm the pairing procedures (Blue LED flashing).

#### FCC Label Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### To assure continued FCC compliance:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

#### Exposure to Radio Frequency Radiation:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### NCC警語:

本產品符合低功率電波輻射性電機管理辦法 第十二條、第十四條等條文規定


1. 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
2. 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

#### 綁定裝置：

1. 執行ATKey應用程式開始進行藍芽配對以及裝置註冊的程序。當ATKey.BLE上出現閃爍藍燈，請觸碰指紋感應區塊進行綁定確認。

4

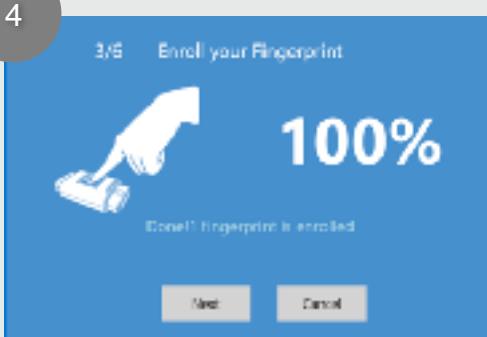


#### ENROLL FINGERPRINTS:

1. Following the instruction of ATKey App and place your fingertip over the sensing area as when flashing Blue LED appears.
2. Repeating 8 to 10 times to complete the fingerprint enrollment procedures.

#### 註冊指紋資料：

1. 遵從ATKey應用程式的指示進行指紋註冊的程序，當ATKey.BLE裝置上出現閃爍藍燈時請將您希望註冊的指紋碰觸感應區域。
2. 此動作需要重複八至十次來完成註冊的程序。

5

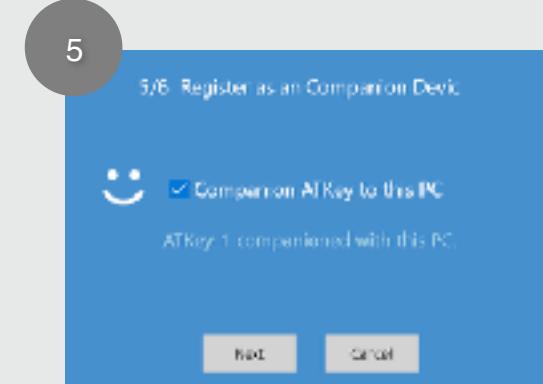

#### WINDOWS HELLO & DYNAMIC LOCK:

1. Select to companion ATKey.BLE with your computer to enable Windows CDF service.
2. "Dynamic Lock" (your computer will be automatically locked as when the registered ATKey.BLE goes away) can be enabled only if your Windows 10 system is build 1703 or later version.

#### 啟用WINDOWS HELLO與自動鎖屏：

1. 請點選將ATKey.BLE設定為綁定電腦的隨附裝置以享用Windows Hello功能。
2. 唯有當Windows 10作業系統版本等於或高於build 1703才能夠選用自動鎖屏功能。