True Wireless Calls

and Music Experience

5.0 TWS+

\ ·—· /

Available devices 🗢

ZOpid-M8

Charging Case

with Built-in

Battery

Wireless Earbuds

WARNING: Prolonged use of loud music may harm your hearing

5.0 | Deep Bass | Adjustable Soft Earhooks

Preface	3
Safety and General Information	3
Notes Regarding FCC Compliance	4
Technical Specifications and Product Features	5
Included In the Box	5
Optional Accessories	6
Product Overview	7
Activating and Charging the Earbuds	7
ZOpid-M8 TWS Earbuds Pairing with Cell Phone, Tablet	, or
Laptop	7
For first-time pairing with a new device	8
Wearing Earbuds	8
Main Function Button (MFB) Operations	9
Out de Bafanan au Talala	_

Volume+/Volume	11
Voice Assistant	11
Reset Earbuds	12
Smart and Seamless Single Earbud or Both Earbu	uds Use

pg. 2

TABLE OF CONTENT

TABLE OF CONTENT	
ice3	
ry and General Information3	
s Regarding FCC Compliance4	
nical Specifications and Product Features5	
luded In the Box5	
tional Accessories6	
uct Overview7	
ating and Charging the Earbuds7	
d-M8 TWS Earbuds Pairing with Cell Phone, Tablet, or	
pp7	
r first-time pairing with a new device	
ing Earbuds8	
Function Button (MFB) Operations9	
uick Reference Table9	
etailed Description9	
Power-On9	
Power-Off10	
Reject Call10	
Answer an Incoming Call/End Call10	
Play/Pause Music10	
Next Track/Previous Track11	

....12

12
Limited One (1) Year Warranty13
Exclusions
Company & Contact Information

The Earbuds and the Charging Case feature built-in rechargeable

recharged.

Before operating the Earplugs and the Charging case, make sure to read

reading it, please keep it in a safe place for future reference. This User

Manual is also available in pdf format on out support website www.hittusa.com.

We reserve the right to make changes to these Earbuds, the Charging

Please visit our company's website www.hittusa.com for additional

 $\textbf{NOTE:} \ The \ pictures, \ diagrams \ and \ certain \ functions \ described \ in \ this$

different models. Please see product packaging and/or this User Manual for included and optional features and accessories

Safety and General Information

READ THIS INFORMATION BEFORE USING THESE EARBUDS

- charged and discharged two or three times.
- recharge them periodically.
- Earbuds for no less than 2 hours before first time use or it until the LED on the Charging Case becomes solid Green and the LEDs on the Earbuds turn
- Do not operate the Earbuds or the Charging Case in extremely cold, hot,
- Avoid leaving the Earbuds or the Charging Case under direct sunlight for
- Don't put the Earbuds or the Charging Case LED light close to human or

Thanks for purchasing ZOpid-M8 True Wireless Stereo Earbuds!

batteries, providing approximately 30 hours of total combined Play time before requiring the Charging Case to be

this user manual carefully. Afte

Case, or this User Manual without notice.

product information and/or updates.

manual may differ from the actual product due to

- Loud music may harm your hearing if you listen to it for a long time. • New battery reaches its best performance after it has completely
- If the Earbuds are left unused for more than a couple of weeks, please
- Please charge the charging case battery for no less than 6 hours and the
- off, indicating batteries on all devices are fully charged.
- dusty or damp environment
- an extended period
- Do not scrub the Earbuds or the Charging Case with a hard object; it may

20pid

result in scratches on the surface and/or damage to the hardware. Use a damp cotton cloth to gently wipe the shell of the Earbuds or the Charging

- Case. Using other chemical cleaning solutions is strictly prohibited.
 - Keep the Earbuds, Charging Case, and all other accessories out of reach of children under 3 years old • Charge the Earbuds when:

 - o The Earbuds power off automatically or immediately after they are turned on, or the Red LED flashes fast (about 2 times per second), indicating low battery charge level

 - Charge the Charging Case when o The LED on the Charging Case does not light up when you put Earbuds to
 - charge in the case ◆ Avoid operating these Earbuds or Charging Case in a very dry
 - environment to prevent damage from
 - ◆ These Earbuds and the Charging Case do not have any user-serviceable parts or accessories. DO NOT TRY TO DISASSEMBLE THE EARBUDS OR THE CHARGING CASE
 - Use USB charging device with DC Power Output of 5V and between 500mA and 1A - you can buy a Zopid USB 5W Power Adapter Model HA-
 - ZC5V1A online Use battery charger and accessories permitted by the manufacturer.
 - Using other accessories or charger may be a safety hazard or affect product performance and/or void product warranty. • Please properly dispose of the obsolete Earbuds, charging case (both have rechargeable batteries), and any other accessories following your
 - local environmental laws • If you have any problem using this player, please visit www.hittusa.com or email help@hittusa.com for assistance.

Notes Regarding FCC Compliance

Users are not permitted to make changes or modify the device in any way Changes or modifications that are not authorized by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AORM-M8

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

20pid

This device many not cause harmful interference, and

 This device must accept any interference received, including nterference that may cause undesired

Technical Specifications and Product Features

- True Wireless Stereo (TWS) Call and Music Experience
- Smart and Seamless Single or Both Farbuds use (see page 12 for details). Adjustable and Soft Farhook
- Single Button Operation
- Deep Bass
- Sweatproof, IPX5 Waterproof
- Bluetooth Version: 5.0 + EDR
- Profiles: HEP / HSP / A2DP / AVRCP
- Chipset: JL Ac6936
- Earbud Battery: 80mAh/3 7V A+ Grade Li-ion Rechargeable Battery Charging Case Battery: 480 mAh/3.7V A+ Grade Li-ion Rechargeable
- Low Power Consumption Up to 30 hours of Total Playtime
- * Earbuds Charging Time: 2 hours
- Standby Time: 100 hours
- Operating distance range between Earbuds and wireless device: up to 30 feet (line of sight)

Included In the Box

- Fabric Cover Charging Case Farbuds (2)
- USB Charging cable
- Extra Earplugs + User Manual


Optional Accessories

USB Wall Charger with DC Power Out of 5V and 1A (not included) - you can ouy a ZOpid USB 5W Power Adapter Model HA-ZC5V1A online

IMPORTANT NOTE: Please charge the Charging Case using the included USB cable through computer's USB port or any other USB charging device with DC Power Output of 5V and between 500mA and 1A – you can buy a ZOpid USB 5W Power Adapter Model HA-ZC5V1A online

20pid° pg. 5

Product Overview

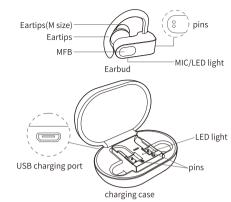

IMPORTANT: Make sure the Earbuds and Charging Case are fully charged before first time use. Charging the Case:

Please charge the case using the included USB cable through your computer's USB port or any other USB charging device with DC Power Output of 5V and between 500mA and 1A you can buy a ZOpid USB 5W Power Adapter Model HA-ZC5V1A.

The LED flashes green while charging, and changes to steady green once the charging case is fully charged.


pg. 6

Activating and Charging the Earbuds

Put both Earbuds into the charging case to activate and charge them.

IMPORTANT: Make sure charging pins on the Earbuds make proper contact with magnetic charging pins of the Charging Case Solid red charging status lights on the Earbuds indicate the earplugs

are getting charged. The LED light will turn off when the Earbuds are fully charged.

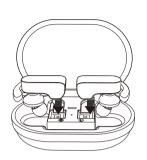

ZOpid-M8 TWS Earbuds Pairing with Cell Phone, Tablet, or Laptop 1. Take both Earbuds out of the case at the same time

- 2. Both Earbuds will auto Power ON after 2-3 seconds.
- 3. Both Earbuds will switch to Auto-Pairing mode, which is indicated by the LED flashing Blue on one Earbud and flashing Red & Blue on the other.

20pid

For first-time pairing with a new device 4. Go to Bluetooth™ or Wireless Settings of that wireless device while the earplugs are in pairing-mode 5. Under Available devices list, look for "ZOpid-M8" and select 70 nid-M8 to connect both Farbuds with the wireless device.

NOTE: If Earbuds fail to connect, please insert both Earbuds into charging

IMPORTANT: Once the Earbuds are successfully paired with a wireless device, on subsequent use the Earbuds will automatically connect with that device when removed from the charging case. as long as the wireless device and Earbuds

Wearing Earbuds

are in close proximity.



Please note that Earbud-hooks are made of soft and adjustable material. To wear the Earbuds, straighten the earhook of the Earbud and gently insert Earplugs in ear-canal and wrap the earhook around the backside of the ear.

Repeat this process for the other Earbud.

20pid

Main Function Button (MFB) Operations **Quick Reference Table**

Function Right	Earbud MFB	Left Earbud MFB	
Power On (one or both)	Remove both or either one of the Earbuds from the Charging Case		
Ear buds out of Case →	Press and Hold for 2 seconds	Press and Hold for 2 seconds	
Power Off (one or both)	Put both or either one of the Earbuds back in the Charging Case		
Don't have charging Case→	Press and Hold, either one of the MFB, for 4 seconds to power off both		
Reject Call	Press and Hold, either one of the MFB, for 1 second		
Answer or End a Call	Quickly Press and Release either one of the MFB		
Play or Pause Music	Quickly Press and Release either one of the MFB		
Next or Previous Track	Quickly Press and Release 2 times	Quickly Press and Release 2 times	
Volume Up or Down	Quickly Press and Release 3 times	Quickly Press and Release 3 times	
Voice Assistant e.g. Siri™	When in Standby or Pause Mode Press, either one of the MFB, until Beepis heard		

NOTE: Please be patient, as it will take some practice to operate functions of the Earplugs requiring quickly pressing and releasing MFB multiple times

Detailed Description

ireless device in close proximity

Method 1: Take both Earbuds out of the Charging Case and both Earbuds vill auto power on. (LED lights will urn Blue with voice prompt saying "Connected" from both Earbuds if the Earbuds are already paired to a

Method 2 (Earbuds already out of the charging case and powered off): Press MFB on both the Earbuds for 2s to power on (LED light on Earbuds will turn Blue with voice prompt saying "Power On" followed by 'Connected" from both the Earbuds)

pg. 9



Power-Off Method 1: Put both Farbuds back in the Charging Case and both Farbuds will auto power off. (LED lights on Earbuds will turn on red on both the Earbuds indicating both Earbuds are getting charged)

Method 2 (you do not have the charging case near-by): Press MFB on

either one of the Earbuds for 4 seconds to power off both Earbuds (voice



Press and hold MFB, on either Earbud, for 1 second to reject an incoming

- Press and Release

Answer an Incoming Call/End Call Quickly press and release MFB, on either Earbud, to answer an incoming

Reiect Call

— Press and Release Play/Pause Music

call, and press and release MFB again to end the call.

When playing music, press & release MFB on either Earbud to Pause or Play Music

When playing music, quickly Press and Release MFB two (2) times on

Right (R) Earbud to skip forward (Next Track) Left (L) Earbud to go back (Previous Track)

Quickly press 2 times

Quickly press 3 times

Right (R) Earbud to increase sound volume

Left (L) Earbud to decrease sound volume

Volume+/Volume When playing music or on a phone call, quickly Press and Release MFB three (3) times on

When Earbuds are in Standby or Pause mode, press and hold MFB, on either Earbud, for about one (1) second until a "beep" is heard indicating activation of voice assistant (Like: Siri)



Blue alternatively

repeat the above listed steps.

pg. 4

n case Earbuds fail to connect with Cellphone, or there is no sound in left r right Earbud, follow these steps to RESET the Earbuds: . Take both Farbuds out of the case.

2. Make sure both the Earbuds are powered off (LEDs on the Earbuds are 3. Press and hold the MFBs for about 5 seconds, as shown in the picture



4. Don't release your fingers until the LEDs on both Earbuds flash Red and

5. Once the LED of both Earbuds flash Red & Blue, Immediately Double Press the MFB of Right @ Earbud. 6. Both Earbuds will auto pair with each other after 3-5 seconds - the LED on one Earbud will flash blue and the other Earbud will flash Red & Blue

. Delete the ZOpid-M8 from the list of paired devices on the wireless

device (Cellphone, Tablet, Laptop etc.) 3. Once deleted, ZOpid-M8 will appear again under the available devices list, select ZOpid-M8 to reconnect both Earbuds with that Wireless Device. 9. In case Earbuds fail to connect, put both Earbuds into charging case and

Smart and Seamless Single Earbud or Both Earbuds Use One of the features of these Earplugs is the automatic and seamless

operation, switching from single Earbud use to using both the Earbuds or vice versa. The following two scenarios will demonstrate this feature, and assume that the Earplugs are already paired with the wireless device: Scenario 1: If user removes just one of the Earplugs from the Charging Case, that Earplug functions independent of the other Earplug, and if the user later decides to use the Earplug that's still in the Charging case, both the Earplugs will function in Stereo Mode. Scenario 2: While listening to music or answering a phone call a user can

remove any one of the earplugs and put that Earplug back in the Charging pg. 12

Case, the other Earplugs will continue to function in Mono Mode - and if at any time the user decides to reuse the Earplug that's in the Charging Case, then both Earplugs will function in Stereo Mode.

date of purchase. HiTT, at its option, will at no charge repair, replace or

Limited One (1) Year Warranty Coverage: Hi-Tech Trading (USA), Inc. ("HiTT") warrants these Earbuds ("product") against defects in materials and workmanship under normal consumer use for one (1) year from the

refund the purchase price of this product should it not conform to this warranty. This limited warranty is a consumer's exclusive remedy, extends only to the first consumer purchaser, is not transferable, and is valid only on products purchased by consumers in the United States.

result from:

20pid

Normal Wear and Tear: Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage. Batteries: Only batteries whose fully charged capacity falls below 60% of their rated capacity during the warranty period are covered by this limited

IMPORTANT: If the Earbuds and Charging Case are not used for a few weeks please make sure you still charge the batteries every 3 to 4 weeks to optimize batteries life span. Miscellaneous: This warranty does NOT cover defects or damage that

(a) Improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the Product resulting from misuse. (b) Extended contact with liquid, water or rain, or sand, dirt or the like

extreme heat, or food (c) Use of the Product for commercial purposes or subjecting the Product to abnormal usage or conditions. (d) Service, installation, alteration, or modification in any way by

omeone other than HiTT and (e) Other acts which are not the fault of HiTT.

Obtaining Service: To obtain service or information, please send email to help@hittusa.com. You will receive instructions on how to ship the Product, at your expense, to a HiTT Service Center. To obtain service, you must include a copy of your purchase

receipt (as proof-of-purchase). 20pid°



Company & Contact Information Hi-Tech Trading USA 217 Woodbury Rd, # 179 Woodbury, NY 11797

Web: www.hittusa.com Email: help@hittusa.com

ZOpid and the Stylized Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© 2020 Hi-Tech Trading USA

be correct at the time of printing. HiTT reserves the right to change or modify any information or specifications without notice. The contents of this User Manual are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide. Unauthorized copying or reproduction of this user manual is strictly prohibited.

The information contained in this User Manual is believed to

20pid pq. 13

20pid 20pid 20pid pq. 10

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna.

- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.