



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product, **DO NOT RETURN IT TO THE STORE**, please contact us toll free @:

gameroom@escaladesports.com

Or write to:
Escalade Sports
Customer Service Department
P.O. Box 889
Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number **G04800W/F**

Date Code **2 - G04800W/F - HL**

Purchase Date _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODI-
FIED
TO SHOW DETAILS.



**FOUR ADULTS ARE REQUIRED TO ASSEMBLE
THIS 90" CONTOUR AIR HOCKEY TABLE WITH SCORELINX**

Tools Required:

T1 - Allen Wrench (Included)
Phillips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



 
**CAUTION: THIS TABLE INCLUDES ONE SET OF DEVICE HOLDER
THIS HOLDER ONLY FOR SMART DEVICE SMALLER THAN 10 inch**




WARNING:

**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO PUT THIS HOCKEY TABLE
TOGETHER.**


HARDWARE IDENTIFIER (To Scale)



H1 = 8 pcs
8 mm x 35 mm
Allen Head Bolt

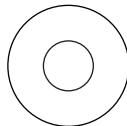


H2 = 16 pcs
8.5 mm x 22 mm
Flat Washer

 

H3 = 8 pcs
8 mm x 40 mm
Allen Head Bolt




H4 = 3 pcs
3.5 mm x 14 mm
Phillips Round
Head Screw

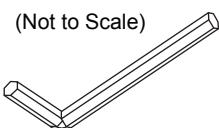


T1 = 1 pc
Allen Wrench


PARTS IDENTIFIER (Not to Scale)

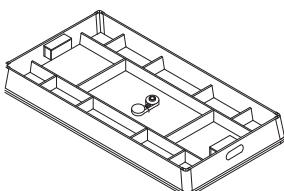

 
P1 = 1 pc
Air Hockey Cabinet
w/ Air Motor and P8
Bluetooth Battery Box



P2 = 2 pcs
Left Leg

 


P3 = 2 pcs
Right Leg

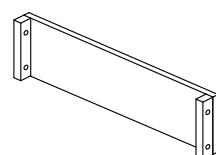

P4 = 2 pcs
End Leg Panel



 
P5 = 4 pcs
Leg Leveler




P6 = 1 pc
Device Holder
(with Plastic Nut pre-installed)



P7 = 1 pc
Device Holder Pole
(with Ball Connector
and Base pre-installed)

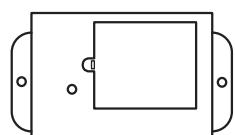

 
P8 = 1 pc
Bluetooth Battery Box
(factory installed)



A1 = 4 pcs
Black Striker



 A2 = 4 pcs
Black Puck



A3 = 4 pcs
Felt Pad

NOTE: A3 Felt Pads may already
be attached to A1 Strikers.

PARTS REQUIRED:

8 pcs - **H1** 8 x 35mm Allen Head Bolt

8 pcs - **H2** 8.5 x 22mm Flat Washer

2 pcs - **P2** Left Leg

2 pcs - **P3** Right Leg

1 pc - **P1** Air Hockey Table Cabinet w/ Air Motor

1 pc - **T1** Allen Wrench

STEP:1

Leave Air Hockey Table Cabinet (**P1**) face down in the carton to assemble.

Install Left Legs (**P2**) and Right Legs (**P3**) onto Air Hockey Table Cabinet (**P1**) with Allen Head Bolts (**H1**) and Flat Washers (**H2**) using Allen Wrench (**T1**) as shown in **FIGURE 1**.

Do not tighten Bolts (H1) at this time.

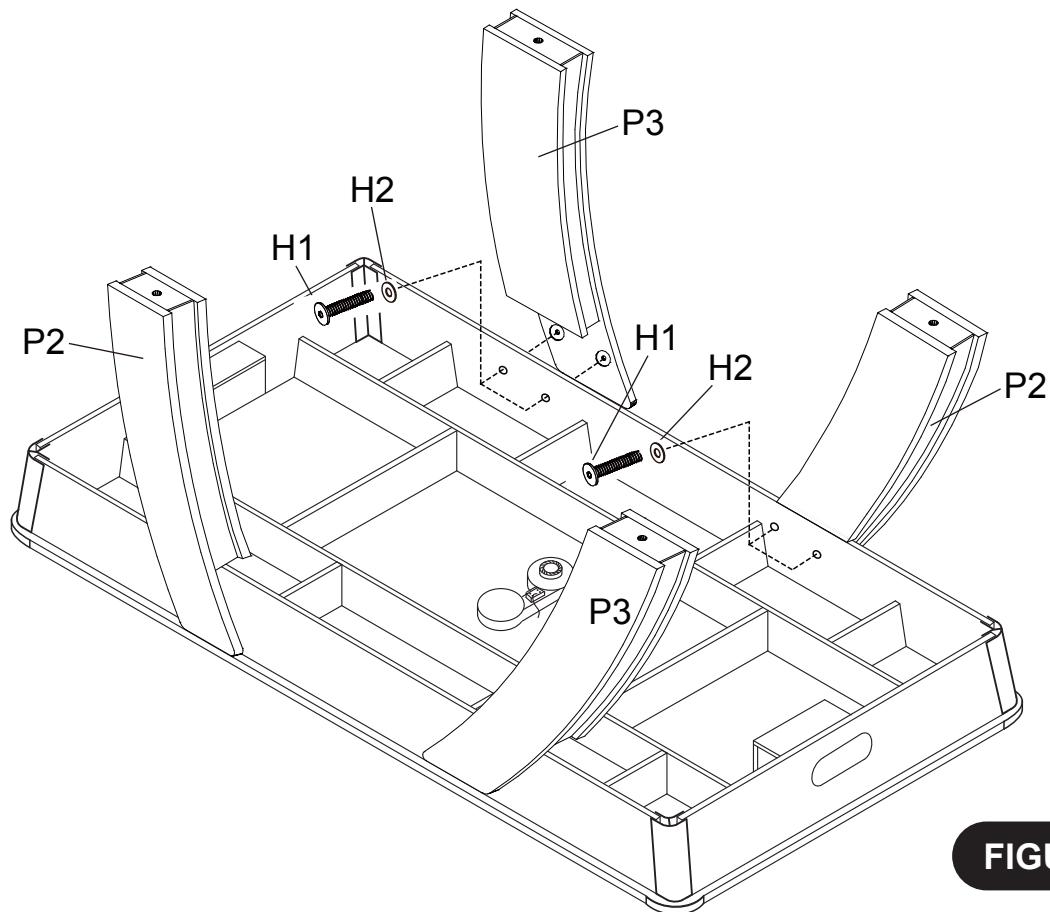


FIGURE 1

PARTS REQUIRED:

8 pcs - **H3** 8 x 40mm Allen Head Bolt

2 pcs - **P4** End Leg Panel

8 pcs - **H2** 8.5 x 22mm Flat Washer

4 pcs - **P5** Leg Leveler

STEP:2

Install End Leg Panels (**P4**) onto the Legs using Bolts (**H3**) and Flat Washers (**H2**) as shown in **FIGURE 2**.



Tighten Bolts (**H1**) from **STEP 1** and Bolts (**H3**) at this time.

Screw **P5** Leg Levelers into the bottom of each leg as shown in **FIGURE 2**.

Remove the battery cover of **P8** Bluetooth Battery Box and insert 3 AA Batteries (not included) into the battery compartment.

See "FIRST TIME BATTERY INSTALLATION AND NOTICE" , before installing batteries, located on **page 10**.

Lift the table assembly from the floor with at least four strong adults, turn it over, and set the table assembly on its legs in the location where you will play.

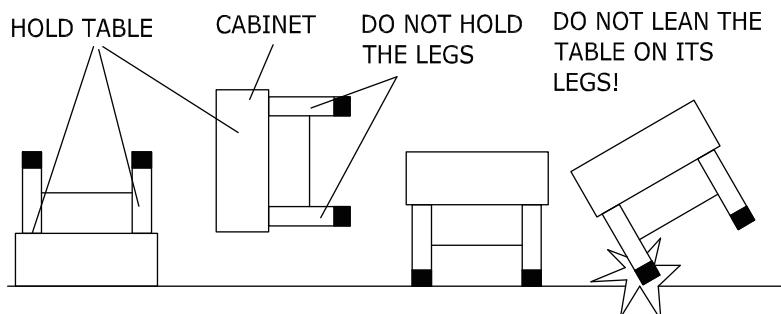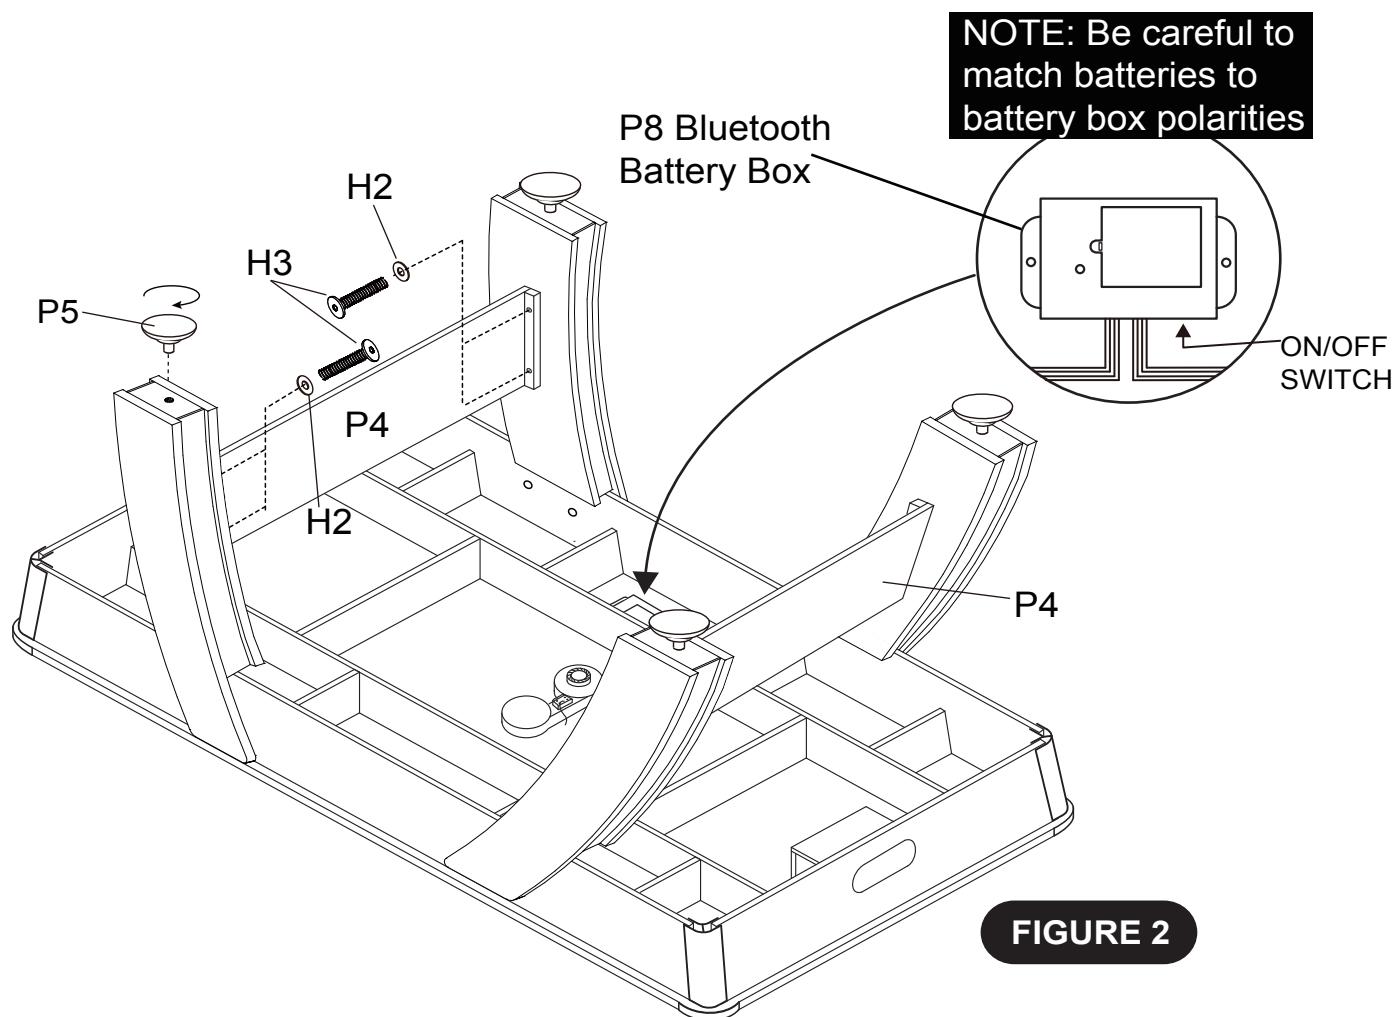

CAUTION: Four strong adults are recommended to flip the table as shown.

1. Grab the table on the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.

PARTS REQUIRED:

3 pcs - **H1** 3.5 x 14mm Phillips Round Head Screw

1 pc - **P6** Device Holder

1 pc - **P7** Device Holder Pole




STEP:3

Attach the Base of **P7** Device Holder Pole onto one side apron which has a label on it.

Screw the Base using pilot holes on this side apron with three **H4** Screws as shown in **DETAIL A**.

Tighten, but do not strip out H4 screws.

Unscrew the plastic nut of **P6** Device Holder, and insert the Ball Connector of **P7** Device Holder Pole into the **P6** Device Holder. Lastly, adjust the angle of **P7** Device Holder by Ball connector and then tighten the Plastic Nut as shown in **DETAIL B**.

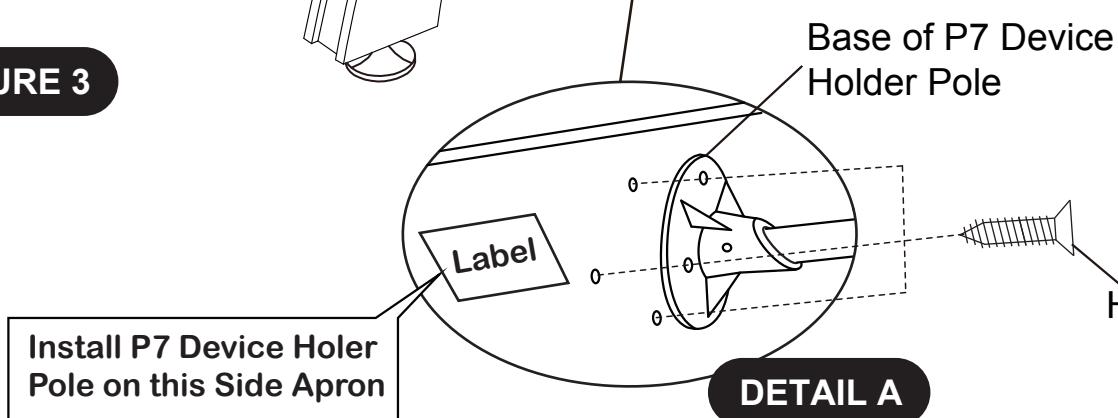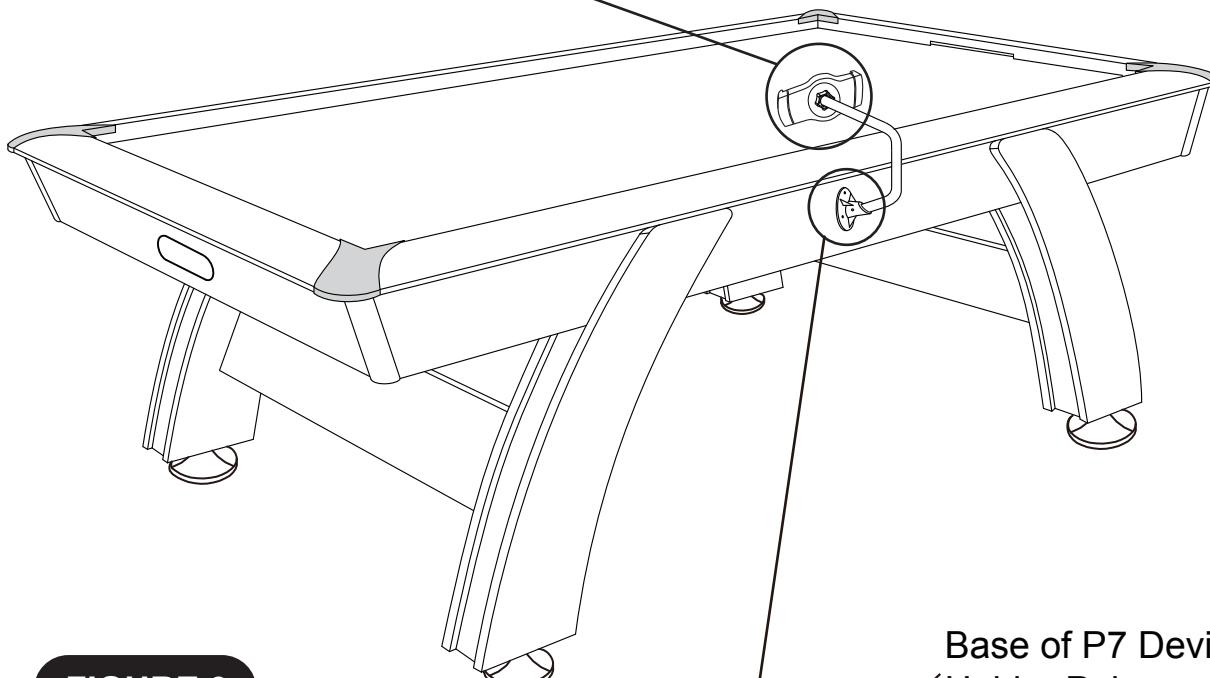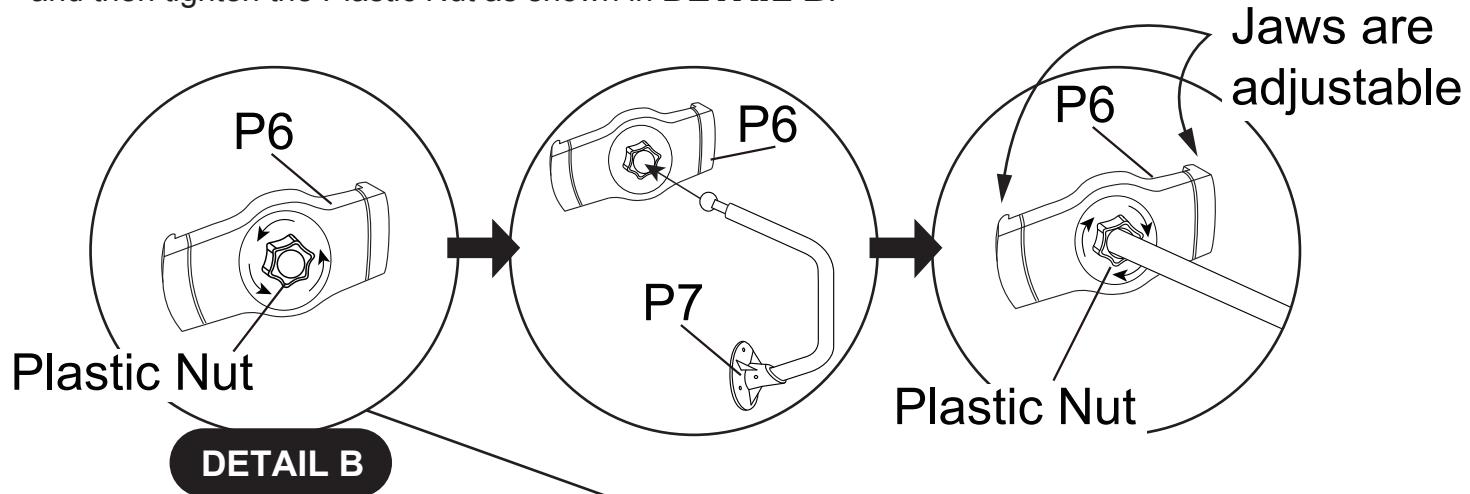

Congratulations! You have now assembled your Hockey Table. Please note the Care and Use instructions below to ensure many years of trouble free use of your Hockey Table.

CARE AND USE OF YOUR HOCKEY TABLE

1. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
2. For long life and best play from your air hockey table, apply spray furniture polish to a clean cloth and wipe down the playfield with air motor running to make the best play and frequently thereafter.
3. This product is intended for **INDOOR** use only.
4. **DO NOT** operate the motor if the cord is damaged in any way.
5. **DO NOT** sit, climb or lean on the table.
6. **DO NOT** drag the table when moving it. This will damage the legs.
7. **DO NOT** set drinks on the table.
8. It is suggested that this table be placed close to wall thus allowing the air motor cord to **NOT** be a trip hazard. Always turn air motor off when table is not in use.
9. Use a carpenters level to properly level table using the leg levelers.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

DOWNLOAD “ScoreLinx” APP

1. Download the "Scorelinx" App to your device from the Apple APP Store or Google Play. And you can also Scan the QR code on the right.
2. Follow the on-screen instructions to install the App.

Phone System Requirements:

IOS 11 / 16G and above. Android 4.4 / 16G and above.




POSITION YOUR SMART DEVICE

1. Place your Smart Device on P6 Device Holder, and make sure your device is clipped tightly by the holder.
2. You can position your device both vertically and horizontally by rotating the Device Holder.

The Holder goes to vertical position to support tablet view in landscape.

Note: The maximum work length of Device Holder is 7.5 inch. This Holder only for Smart Device smaller than 10 inch.

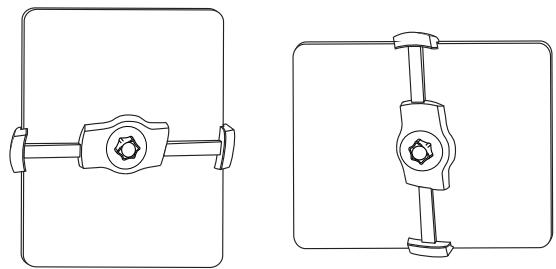

BLUETOOTH SETTINGS


1. Open the Bluetooth capability of your Smart Device.
2. Turn on the switch of P8 Bluetooth Battery Box under the table.
3. Open the "Scorelinx" APP on the phone and then the Bluetooth Box will automatically pair to your device.
4. Only one Bluetooth Battery Box can be paired to one Smart Device at one time.
5. Only open the APP on Smart Device at a time otherwise the Bluetooth connection will be interrupted.
6. Keep your Smart Device on the Device Holder to ensure constant Bluetooth connectivity.

Troubleshooting: Make sure Bluetooth is in the ON position to pair to the the table. You can see the item is successfully paired when you click on the Bluetooth menu item in your settings and see the device is properly paired.

And in game interface, the RED Bluetooth icon will also turn BLUE.

The normal time of Bluetooth connection is within 5-60 seconds. You can turn off and turn on the Switch of P8 Bluetooth Battery Box if connection timeout.

Do not forget to turn off the switch when you finish playing.

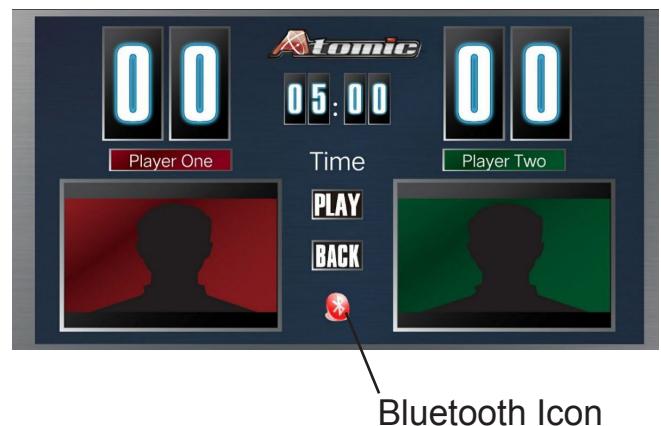


HOW TO PLAY

1. To play a quick game without utilizing the customized options, simply press start game and choose the length of your game Choose 5,10, or 15 minutes and then press PLAY to start the game.
2. To edit the player name, press inside the Player box to activate the on screen keyboard, delete the word "player" and enter your own name. Repeat this process for player two. Use the hide keyboard function in lower right hand corner of the on screen keyboard to hide the keyboard when finished entering the names.
3. Press the camera icon and you will have the choice to upload a picture from your own picture gallery or take a new photo to represent your avatar on the scoring display. After you take the photo, you simply press the "USE PHOTO" to choose that photo. Or you can retake the photo if you want to use a different one. Repeat this step for player 2
4. To create a custom voice command when you score a goal, simply press the Microphone icon and speak into the phone. The microphone icon will turn red when recording. Press the microphone icon again to end your recording After you are finished recording your voice effect, you can preview and playback the recording if you wish before you use it for game play. To see how your new recording sounds, press the speaker icon just below the microphone icon to hear it. You can repeat the recording process again if you do not like what you have done to create a new one. Repeat the same process for player 2.
5. You would then press enter to advance to the next screen where you would select the game length.
6. Press "PLAY" to start the game.
7. When the "PLAYER 1" scores, the display on the "PLAYER 1" side increases by 1.
8. When the "PLAYER 2" scores, the display on the "PLAYER 2" side increases by 1.
9. The winner is the the player with the highest score when the game time ends.

Note: It is not mandatory that you select both a custom picture and sound recording. You can choose to do both or none at all. You can choose your own celebration or heckle your opponent with your recording. It's up to you! Traditional goal scoring hockey horns will be the default sound for goals scored if no custom sounds are recorded.

ELECTRICAL CONNECTIONS & SPARE PARTS DRAWINGS

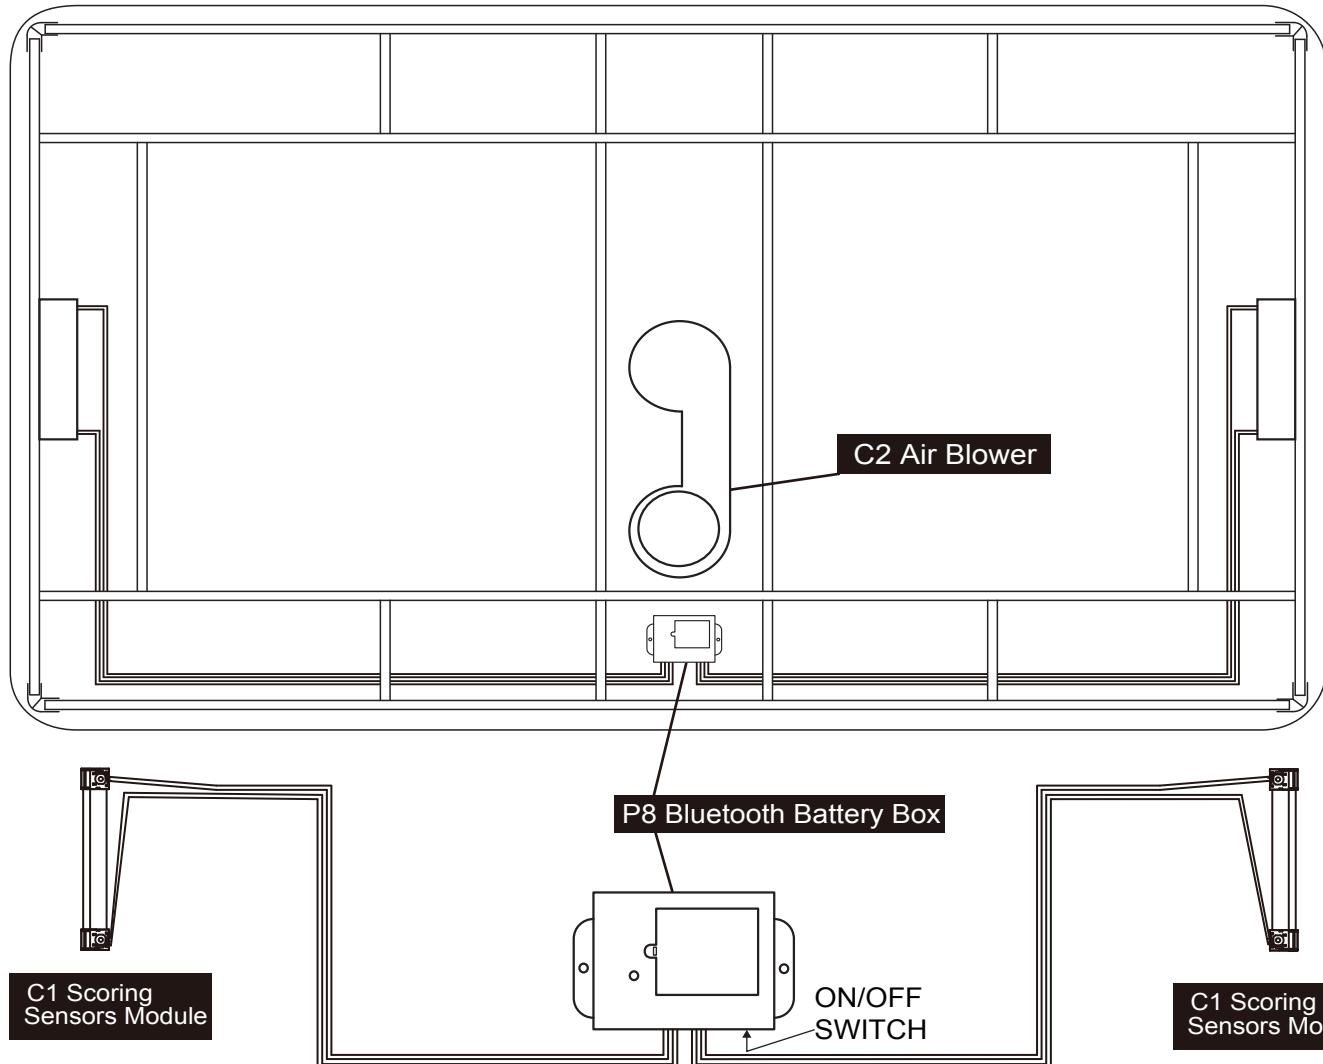

PRODUCT PARTS LIST

MODEL: G04800

Part#	Description	Qty
G04800HLH1	8 x 35 mm Allen Head Bolt	8
G04800HLH2	8 x 22 mm Flat Washer	16
G04800HLH3	8 x 40 mm Allen Head Bolt	8
G04800HLH4	3.5 x 14 mm Phillips Round Head Screw	3
G04800HLT1	Allen Wrench	1
G04800HLP1	Air Hockey Cabinet w/ Air Motor	1
G04800HLP2	Left Leg	2
G04800HLP3	Right Leg	2
G04800HLP4	End Leg Panel	2
G04800HLP5	Leg Leveler	4
G04800HLP6	Device Holder	1
G04800HLP7	Device Holder Pole	1
G04800HLP8	Bluetooth Battery Box	1
G04800HLA1	Black Striker	4
G04800HLA2	Black Puck	4
G04800HLA3	Felt Pad	4
G04800HLC1	Scoring Sensor Module	2

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking, weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADESPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-888-996-2729 / Customer Service Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Customer Service Dept.

Or E-mail us at:

gamerom@escaladesports.com

Other than shipping requirements, no charge will be made for such replacement of in-warranty products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

FCC Warning:

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.