


Internal Photographs

EUT - Open View




EUT – PCB View


Antenna location

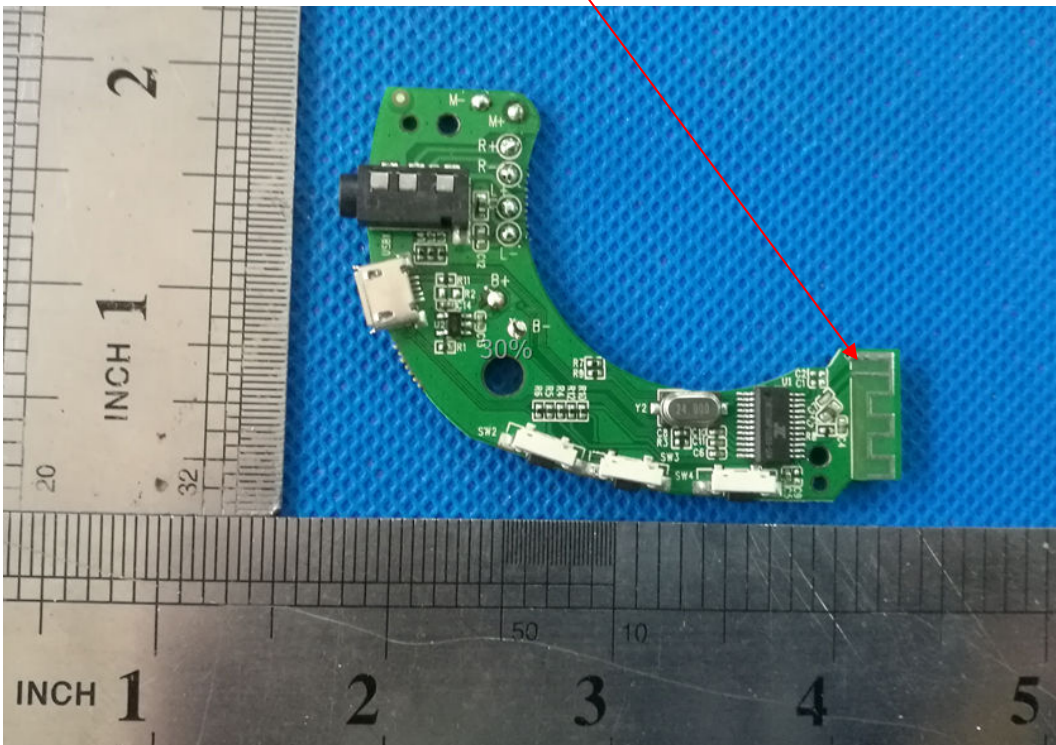


EUT – PCB View

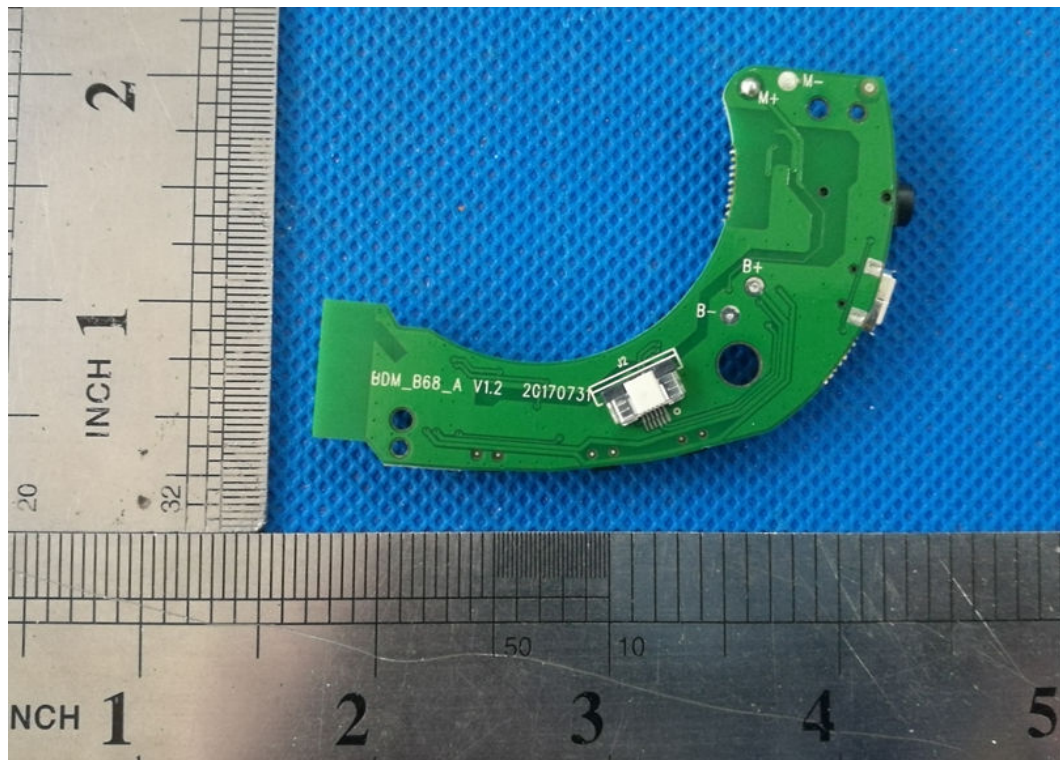


EUT – PCB View

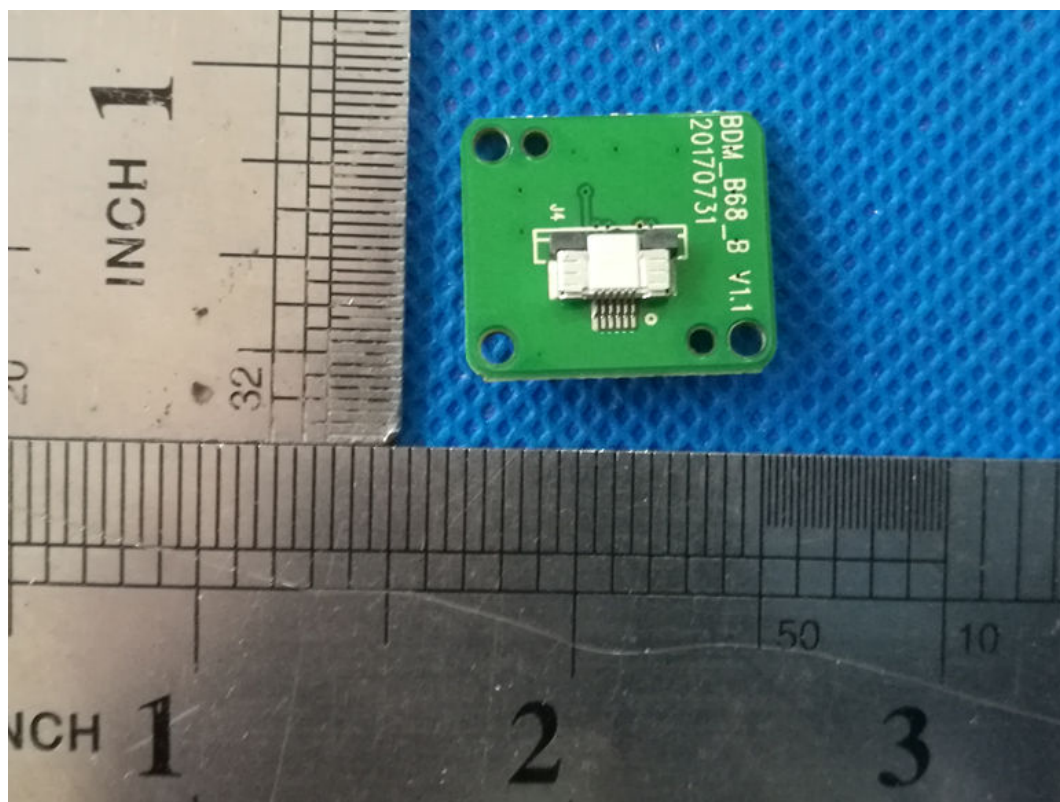



EUT – PCB View

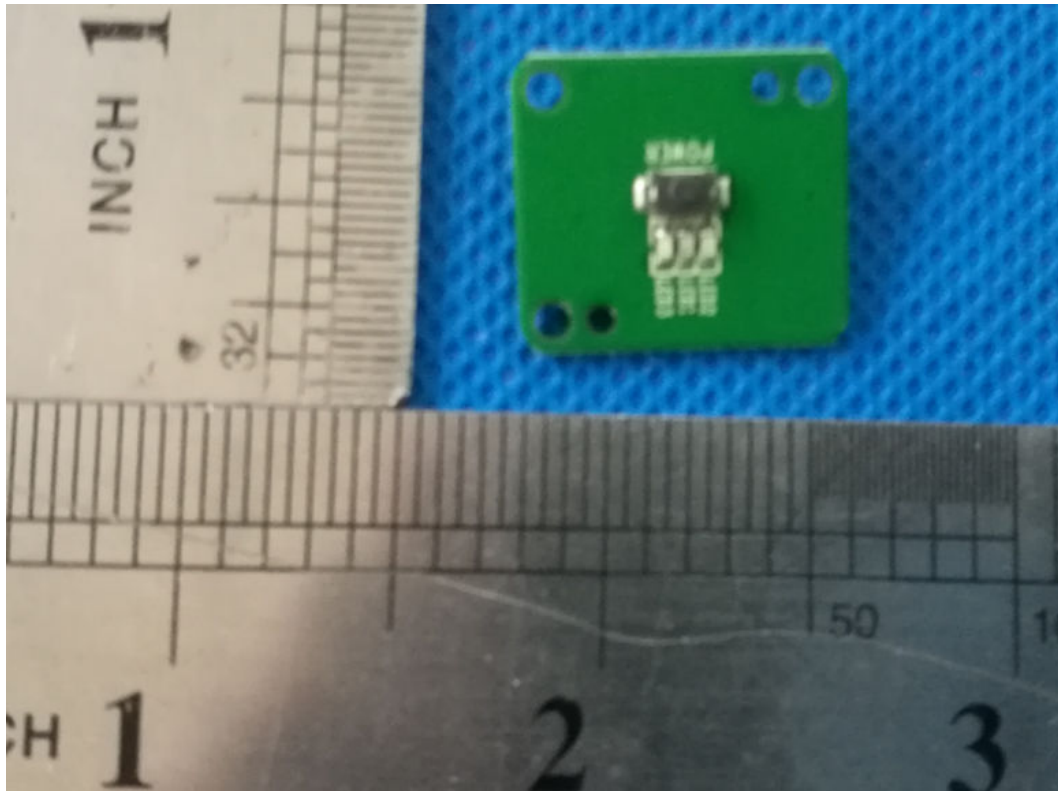

EUT – BT MODULE View

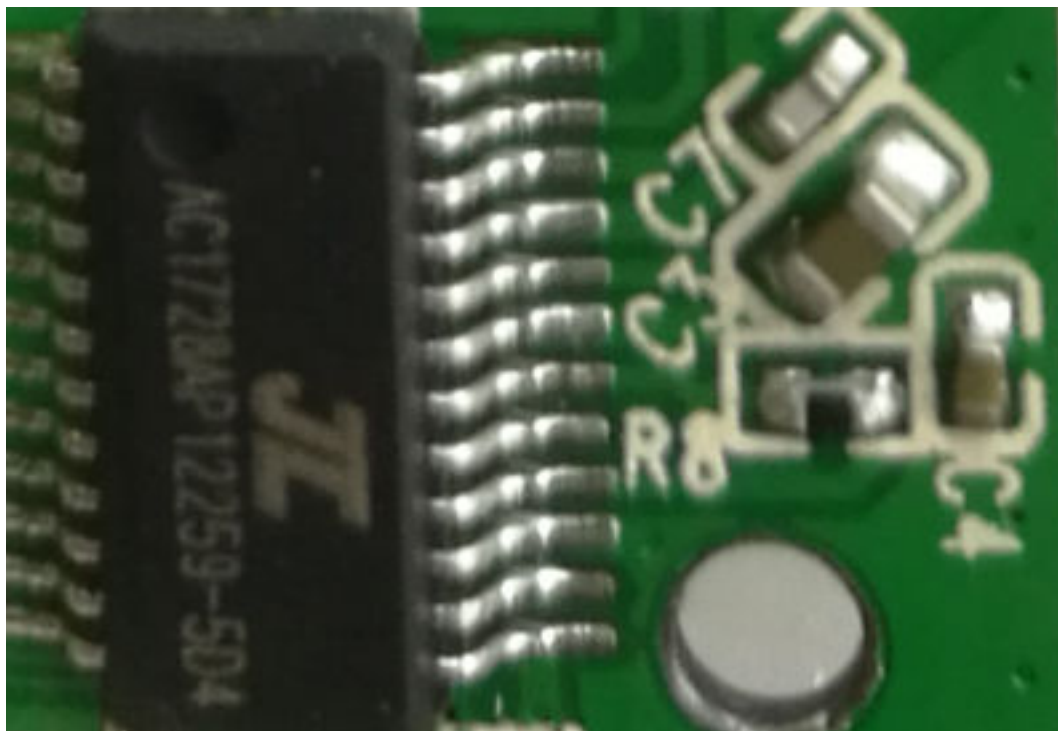

EUT –Battery View

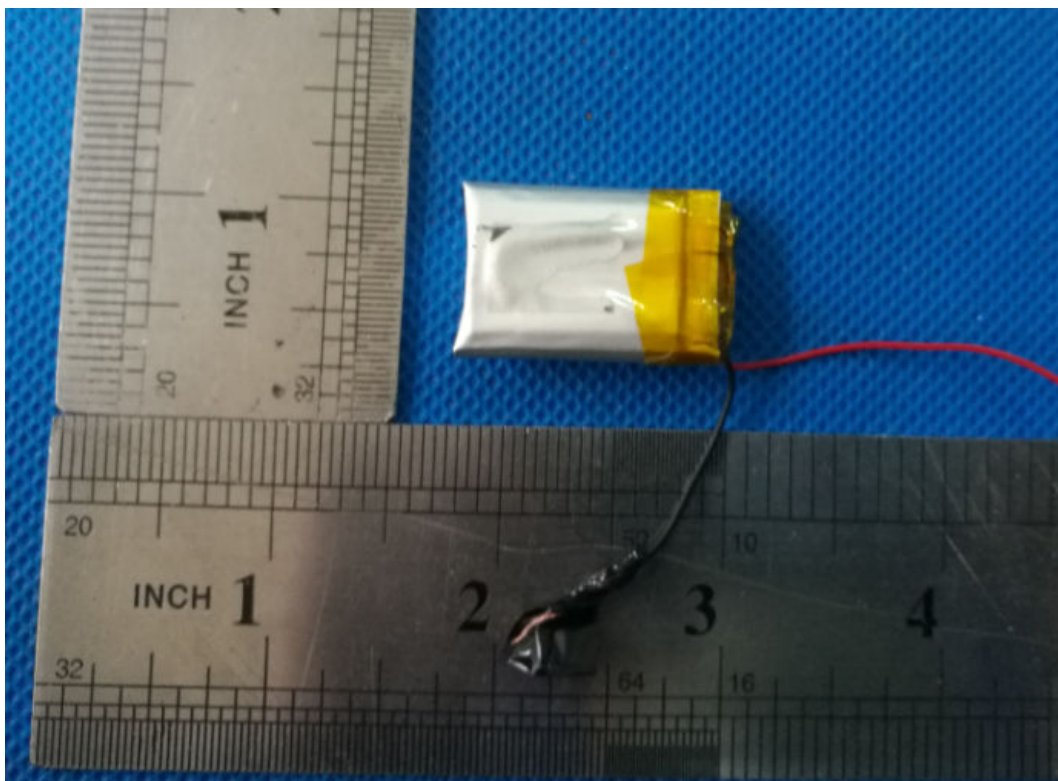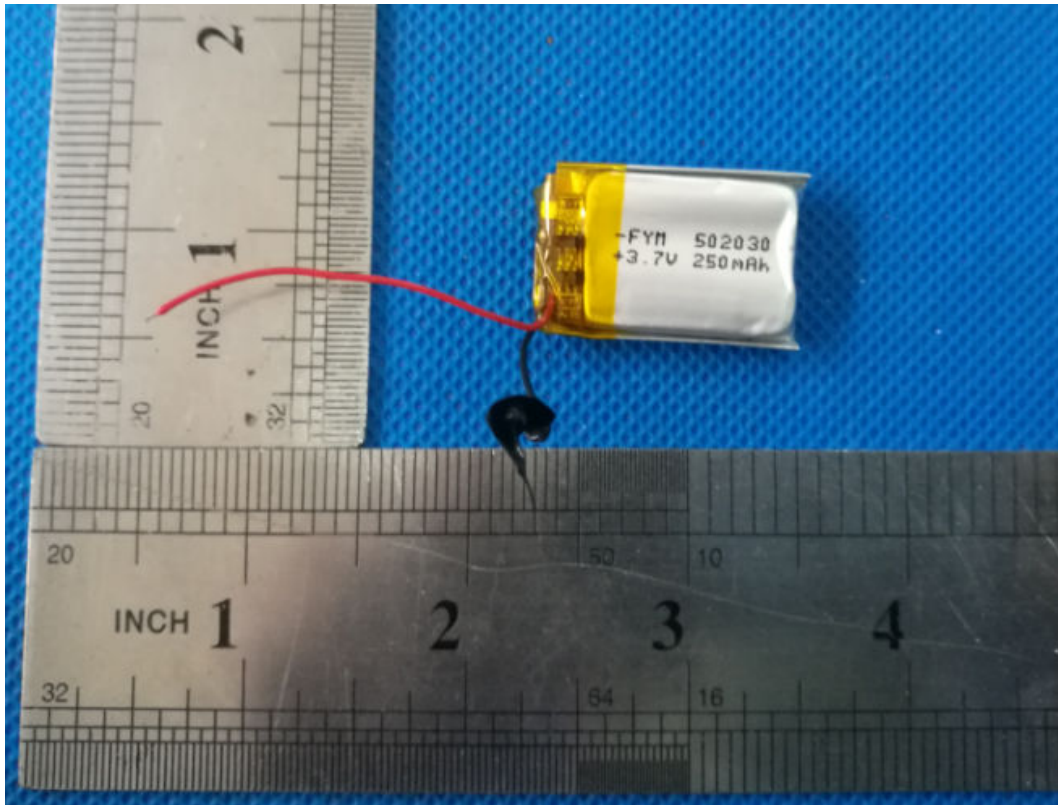

EUT –Speaker View

