


Wireless Handset User Manual

1. Performance parameter

Model	KDH243A
Voltage	4.5VDC (3AAA 1.5V battery)
Current	MAX 60mA
Keys	17
Protection class	IP 42
Main material	ABS
RF	2402MHz, 2426MHz, 2480MHz

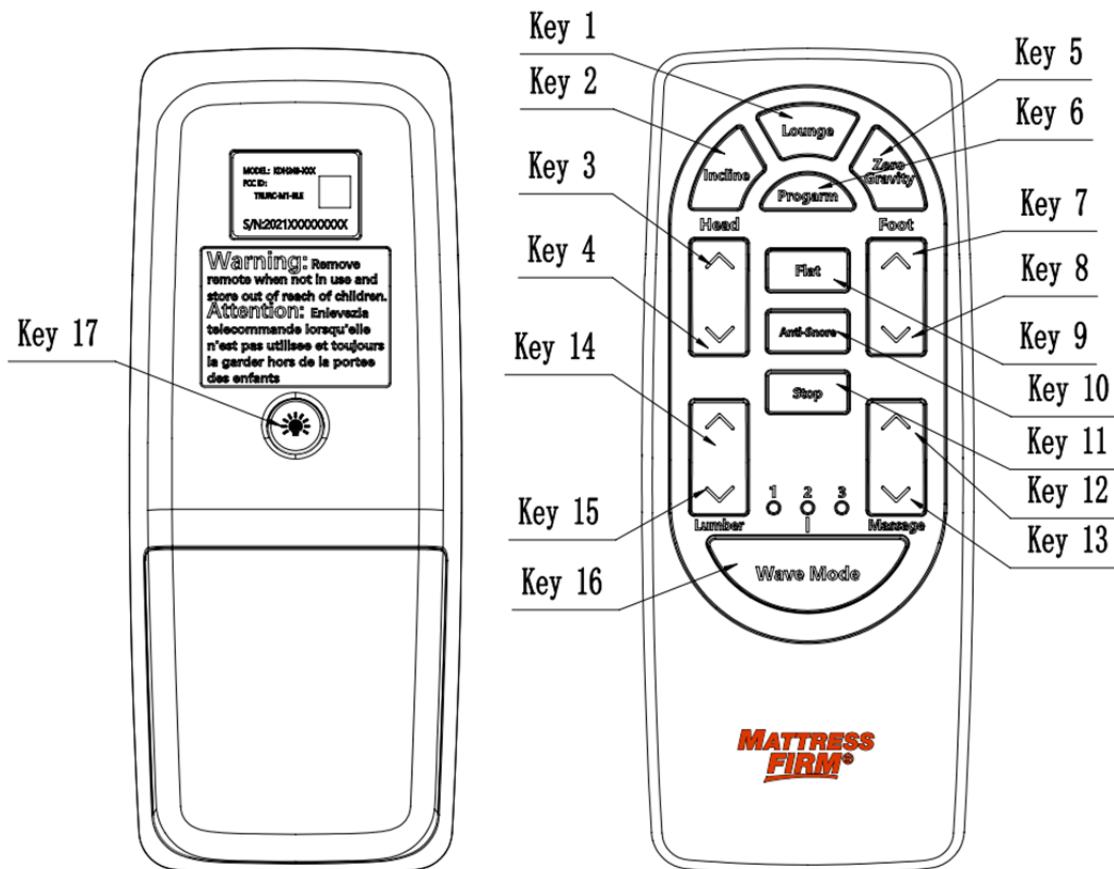

Key 1: Short press button 1 to stop the push rod running to a fixed position (Lounge gravity mode) ;

Key 2: Short press button 2 to stop the push rod running to a fixed position (Incline gravity mode) ;

Key 5: Short press button 5 to stop the push rod running to a fixed position (Zero gravity mode) ;

Key 10: Short press button 10 to stop the push rod running to a fixed position

(Anti-Snore gravity mode);

Key6+Key1、Key6+ Key2、Key6+ Key5:Press Key6+ Key1/Key6+ Key2/Key6+ Key5 at the same time; for 3 seconds, remember the current position (cover the memory before), while backlight flash 3 times, control box buzzing 1 time; After remembering the position, press the button 1、2、3, the bed body switch to the memory location;

Key 3: Press button 3, The head putter is extended;

Key 4: press button 4, Head push back;

Key 7: Press button 7, The leg putter is sticking out;

Key 8: press button 8, Leg push back;

Key 14: press button 14, Back putter protruding;

Key 15: press button 15, Back putter retracted;

Key 9: press button 9 for 3 seconds; The head and leg putters are retracted at the same time; Press any key to stop during the operation of the push rod;

Key 12: Short press button 12, Vibration motor enhancement(intensity divided into four levels);Every time you press it, it enhances one step.

Key 13: Short press button 13, Vibration motor reduction(intensity divided into four levels);Every time you press it, it weakens one step.

Key 11: Short press button 11, Vibration motor stop.

Key 16: Every time you press the button 16, the vibration mode will be switched, and switch in tun according to 123. (Note:The indicator of the corresponding gear position is highlighted when it is on.);

Key 17: Short press button 17, Light strip on, press the button again, light strip off;

Key 3+ Key 7: Long press the pairing button of the control box for 3 seconds to enter the pairing state; Press button 3 and button 7 of the hand controller within 15 seconds, hold for 3 seconds, the control box buzzes once, the pairing button stops flashing, and the backlight if the hand controller flashes three times. The match was successful.

Key 3+Key 8: Long press the pairing button of the control box for 3 seconds to enter the pairing state; Press button 3 and button 7 of the hand controller within 15 seconds, hold for 3 seconds, the control box buzzes once, the pairing button stops flashing, and the backlight if the hand controller flashes three times. The factory Settings are restored successfully.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.