

Professional in your excellent experience

Cosy

Wireless Headset
Proxelle

User manual
Manuale delle istruzioni
Manual de instrucciones
Manuel d'utilisation
Bedienungsanleitung
イヤホン取扱説明書

Manufacture Forluck Electronics factory

www.proxelle.com

English 1-11

User manual

What's in The Box




Safety Instructions

Hearing Safety :

1.To avoid hearing damage,please do not listen for a long time at high volume.
2. Please be cautiously using or stop using in potentially dangerous situations.
3. Do not use the headphones while driving.
4. For your safety, please do not turn the volume too high while running outside, so that you can hear surrounding.
Operation Safety :

1. Avoid dropping.
2. Do not disassemble.
3. Keep away from children to avoid danger from improper use.
4. Do not submerge in water.
5. Do not use the device outdoor during thunderstorm.
6. Avoid operate in extreme temperatures, please use the device within its operation temperature: -15 (5 °F) - 55 (131 °F).
7. Use original or certified cables to charge.
8. Do not use any corrosive cleaner/al to clean the headphones.

At a Glance

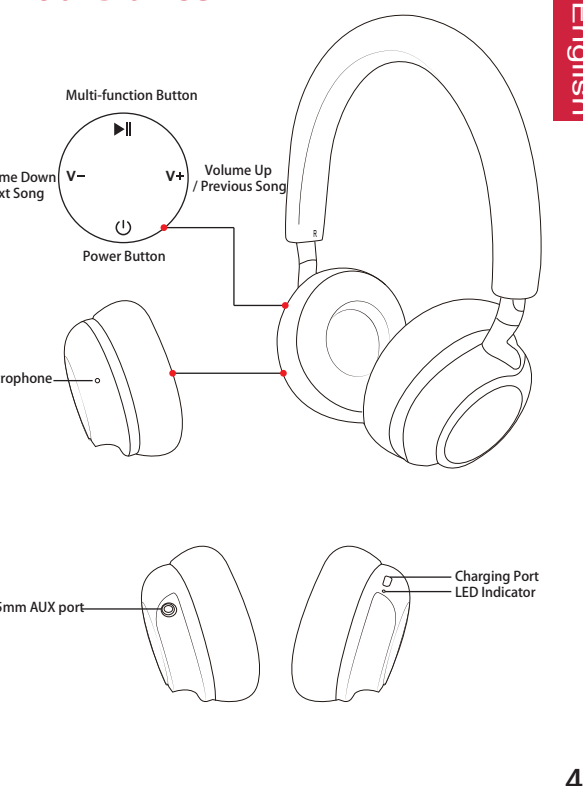

How to Use

1. Press and hold Power Button for 3 seconds to turn on the headphones, and then the device enter pairing mode.

2. Press and hold Power Button for 3 seconds to turn off the headphones.

3. Short press to adjust volume. Long press to skip to next/previous song.

4. Short press Multi-function Button to play/pause music.

5. Short press Multi-function Button to answer/end call.

6. Double press Power Button to reject coming call.

7. Double press Power Button to redial last number.

8. Long press Multi-function Button for 3 seconds to enter charging mode.

Functions

Easy Pairing

1.Press and hold Power Button for 3 seconds to turn on the headphones, and then the device enter pairing mode.
2.Keep the headphones and your Bluetooth device as close as possible during the pairing process.
3.Turn on Bluetooth function of your Bluetooth enable device. Search headphones. Bluetooth signal on your Bluetooth enable device, and select "Proxelle Cosy" to pair it with your Bluetooth enable device. The LED Indicator Light slowly flash blue when the headphones paired successfully.
4.If you are asked for the Password(PIN) code during the pairing procedure, enter "0000" (four zeros).

Pair to The Second Bluetooth Device

1.Make sure the headphones has been connected to the first Bluetooth device successfully. And the headphones is not playing music.
2.Press and hold Multi-function Button until the headphones enter pairing mode. LED Indicator flash red and blue alternately.
3.Pair the headphones to the second device according to "Easy Pairing" steps.


4. Back to the first Bluetooth device and connect to the headphones again. Then both of your device are connected to the headphones.

AUX wired connection

The headphones supports AUX input for wired external audio source connection. Simply Power Off the headphones and plug in the audio cable.

Voice Dialling

Double press Multi-function Button to activate voice dialling function. (Compatible with iPhone Siri, and part of Android voice dialling software)

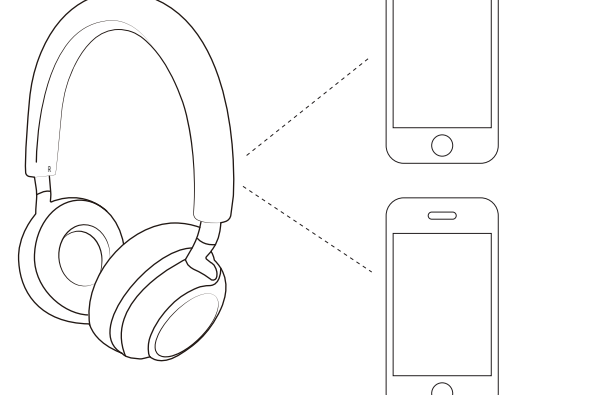

How to Wear



Specification

LED Indicator

• Pairing: Red and blue light blink alternately
• Paired: Blue light flash
• Playing: Slow blinking blue light
• Charging: Red light bright
• Full Charge: Red light turns off, blue light bright
• Battery Low: Red light turns on with voice prompt

Technical Specification

• Product Name: Cosy
• Battery capacity: 250mAh
• Input: 5V/200mA
• Charging time: 1.5 hours
• Using time: 15 hours
• Bluetooth version: V4.1
• Chip: CSR
• Bluetooth profile: A2DP, AVRCP, HSP, HFP, APTX, CVC
• Bluetooth Range: 10m/33ft
• Waterproof rating: IPX4
• Net weight: 168g
• Impedance: 22 Ω
• Driver: 40mm
• Frequency response: 20-20KHz

Q&A

1.Q: Why the headphones can't pair with mobile phone?

A: Please check whether your headphones is in pairing mode or reconnection mode. Check whether Bluetooth search function of your Bluetooth device has been turned on. And then go to Bluetooth menu of your Bluetooth device, delete/forget the headphones, and reconnect the headphones.

2.Q: Headphones can't be turned on.

A: Please double check battery status of your headphones.

3.Q: Can I replace battery for the headphones?

A: No, this headphones use built-in non-detachable Li-Polymer battery. It can't be replaced.

4.Q: Can I use the headphones while driving?

A: For your safety, we strongly recommend you do not use headphones to avoid distraction while driving.

5.Q: Why the headphones sometimes disconnect with Bluetooth device within 10 meters?

A: Please check if there is metal material within relatively close range may interfere Bluetooth connection. Because Bluetooth is a radio technology that is sensitive to objects between the headphones and its connected devices.

6.Q: Why cannot hear sound from your computer or mobile phone?

A: Please check whether the output channel of your computer support A2DP profile. And please check volume of your headphones, as well as computer/mobile phone.

7.Q: Why unable to use the headphones to control volume of select track of APP in my mobile phone?

A: Due to competition for different applications/software, the headphones may not totally compatible with some applications.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.