



Owner's Manual

Saveiro



5U7.012.720.AG

Owner's Manual:
Saveiro
Stand: 25.08.2023 | PAN - XXXXXX
Englisch: 10.2023
Artikel-Nr.: 24A.5L1.SAV.20

Vehicle data sticker

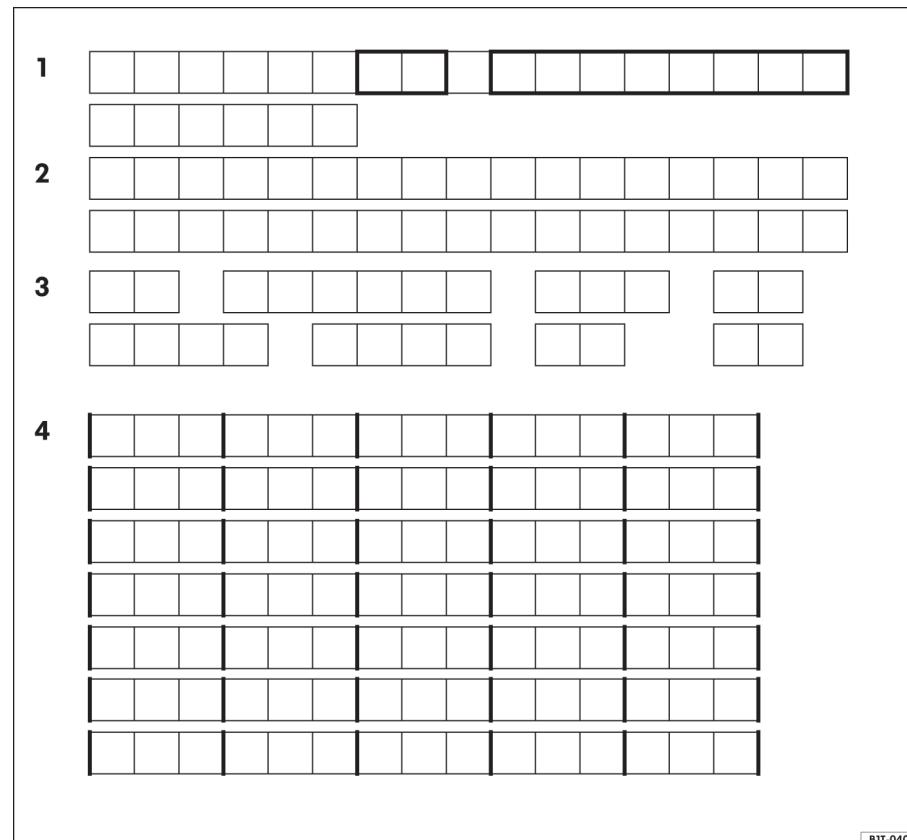


Fig. 1

- ① Vehicle identification number
- ② Model, engine power, transmission
- ③ Engine code letters, transmission code letters, paint code, internal equipment
- ④ Optional equipment, PR numbers

Delivery date:
Volkswagen Dealership stamp

Volkswagen Brazil works continuously to develop and improve all its vehicles. Please understand that we must therefore reserve the right to alter any part of the vehicle and its equipment or technical specifications at any time. The data provided concerning scope of delivery, appearance, performance, dimensions, weights, fuel consumption, standards and vehicle functions are all correct at the time of going to print. Some of the equipment described might not yet be available in a particular vehicle (information can be provided by your local Volkswagen Dealership), and some equipment may not be available in certain countries. No legal commitment may be inferred from the information, illustrations or descriptions in this manual.

No part of this manual may be entirely or partially reprinted, reproduced or translated without the written permission of Volkswagen do Brasil.

All rights under the copyright laws are expressly reserved by Volkswagen do Brasil. Subject to alteration and amendment.

Printed in Brazil.

© 2023 Volkswagen do Brasil

 Manual printed in paper bleached without the use of chlorine.

Thank you for choosing Volkswagen

By purchasing this Volkswagen, you have become the owner of a vehicle fitted with the most up-to-date technology and a multitude of convenience functions for your use and enjoyment.

Before using your vehicle for the first time, carefully read and observe the information in this Owner's Manual to become familiar with your vehicle and all of its functions, in addition to learning about the potential dangers to yourself and others and how to avoid them.

If you have any further questions about your vehicle, or if you think that the manual set has not covered everything, please contact your local Volkswagen Dealership. Volkswagen Dealerships are always happy to deal with your questions, suggestions or issues.

We hope you have a great driving experience in your new vehicle. Happy motoring.

Volkswagen do Brasil



Table of Contents

About this Owner's Manual	4
Description of symbols	5
<hr/>	
Owner's Manual	
Overview of the vehicle	
– Front view	6
– Side view	7
– Rear view	8
– Driver door	9
– Driver's side	10
– Centre console	11
– Front passenger side	12
– Symbols in the roof headliner	12
<hr/>	
Driver's information	
– Warning lamps and indicator lamps	13
– Instrument cluster	14
– Dash panel insert operation	21
<hr/>	
Safety	
– Overall guidelines	23
– Adjusting the seat position	24
– Seat belts	26
– Airbag system	34
– Transporting children in the vehicle	39
– In an emergency	42
<hr/>	
Open and close	
– Vehicle key	45
– Central locking button and doors	47
– Bed cover	52
– Bed canvas	53
– Windows	56
<hr/>	
Steering wheel	
– Adjusting the steering wheel position	59
<hr/>	
Seats and head restraints	
– Front seat	60
– Rear seat	61
– Head restraints	61
<hr/>	
Lights	
– Turn signals	63
– Driving lights	63
– Parking light	66
– Interior lighting	67
<hr/>	
Visibility	
– Windscreen wiper and washer	68
– Mirrors	70
– Sliding headliner	73
<hr/>	
Heating and air conditioning	
– Heating, ventilating, cooling	74
<hr/>	
Driving	
– Driving guidelines	79
– Starting and stopping the engine	86
– Manual gearbox	88
– Steering assistance	89
<hr/>	
Driver assist systems	
– Starter assist system	92
– Hill descent control system	93
– Cruise control system (GRA)	94
<hr/>	
Parking and manoeuvring	
– Parking	95
– Handbrake	96
– Park distance control (Park Pilot)	97
– Rear view camera	99
– Brake support systems	101
<hr/>	
Practical equipment	
– Stowage compartment	106
– Cup holder	108
– Socket	109
<hr/>	
Radio	
– Before using the unit for the first time	112
– Overview of the convenience consumers	112
– Aerial and radio feed	112
– Special precaution areas	113
– Safety recommendations	113
– Instructions for use	115
– Power management	115
– Anti-theft coding	116
– Device overview	116
– Basic operating information	119
<hr/>	
Connectivity	
– App-Connect	121
– Apple CarPlay™	122
– Android Auto™	123

Composition Touch (R 340G)	
– Radio	125
– Media	128
– Wired or wireless connections	132
– Telephone	134
– Settings	142
Media Plus (RCD 320G 2 DIN)	
– Radio	145
– Media	150
– Wired and wireless connections	157
– Telephone	158
– Settings	164
Transporting	
– Stowing cargo	166
– Luggage compartment	166
– Roof rack	170
– Towing a trailer	172
Fuel	
– Fuel handling safety guidelines	176
– Fuelling and fuel types	177
– Engine control unit and exhaust gas emission control system	180
If and when	
– Vehicle toolkit	182
– Wiper blades	185
– Exterior lighting	187
– Fuses	193
– Jump starting	197
– Tow starting and towing	200
Checking and refuelling	
– In the engine compartment	200
– Service fluids and consumables	204
– Washer fluid	204
– Engine oil	205
– Engine coolant	208
– Brake fluid	211
– Warm starting system (E-FLEX)	212
– Vehicle battery	213
Wheels and tyres	
– Tyre monitoring system	217
– Important information on wheels and tyres	219
– Hub caps	231
– Changing a wheel	232
Maintenance	
– Service	238
Vehicle conservation	
– Guidelines for the conservation of the vehicle	241
– Washing of the vehicle	241
– Clean and conserve the exterior of the vehicle	243
– Cleaning and conserving the interior of the vehicle	245
Accessories, modifications, repairs and part replacement	
– Accessories and spare parts	249
– Repairs and technical modifications	250
– Repairs and limitations in the airbag system	250
– Retrofitting two-way radios	251
– Information stored in control units	252
– Using a mobile telephone in the vehicle without a connection to the external aerial	252
– Vehicle lifting points	253
Consumer information	
– Volkswagen warranty	255
– Additional service offers	255
– Information stickers and plates	256
– Installing the radio	257
– Headphones	257
– Declaration of conformity	257
– License to use the remote control key	257
– License to use the electronic immobilizer	257
Technical data	
– Guidelines on the technical data	258
– Petrol engine	263
– TOTALFLEX engines	264
Abbreviations	267
Index	269

About this Owner's Manual

This Owner's Manual is valid for all available models and versions of this vehicle. The Owner's Manual describes all of the equipment and models, without identifying as special equipment or model variations. Thus, there may be pieces of equipment described which are not included in your vehicle or which are only available to specific markets. The equipment contained in your vehicle is detailed in the product's sale documentation. Contact your local Volkswagen Dealership for further information.

All data in this Owner's Manual correspond to the information available at the time of going to print. Due to continuous technical improvement of the vehicle, actual vehicle features and equipment may differ from the indications provided in this manual. No discrepancy in data, illustrations or descriptions shall form the basis for any legal claim.

Please ensure that the complete manual set is always in the vehicle when lending or selling the vehicle.

- An **alphabetical index** is included at the end of this manual.
- A **list of abbreviations** detailing technical terms and acronyms can be found at the end of the manual.
- **Directions and positions** such as left, right, front and rear are normally relative to the vehicle's direction of travel, unless otherwise indicated.
- **Illustrations** assist with orientation and should be regarded as schematic representations.
- **Short definitions** highlighted before some of the sections in this manual, summarize the functions and use of a system or piece of equipment. Further information on the systems and equipment, apart from their features, commands and system limitations, is found in the respective sections.
- Any technical changes made to the vehicle after publication of this booklet are provided in a **Supplement** that is included with the manual set.

Standard booklets in the manual set:

- Owner's Manual
- Service records (*may not be available for some countries*)

Additional booklets in the manual set (optional):

- Supplement
- Radio manual



Description of symbols

-  Refers to an excerpt within a chapter that contains important information and safety notes . Such reference must always be observed.
-  Indicates that the section is continued on the next page.
-  Indicates the end of a section.
-  Indicates situations in which the vehicle must be stopped as quickly as possible.
-  The symbol indicates a registered trademark. However, the absence of this symbol does not constitute a waiver of the rights concerning any term.
-  Symbols of this type reference warnings within the same section or page, indicating potential risks of accidents and injuries, as well as how they can be avoided.
-  →  Symbols of this type reference warnings within the same section or page, indicating potential risks of accidents and injuries, as well as how they can be avoided.
-  Cross reference to information about possible damage to your vehicle within the same section or on a given page.

DANGER

Texts with this symbol indicate extremely dangerous situations, which may lead to fatal or severe injuries if you do not observe the warning.

WARNING

Texts with this symbol indicate dangerous situations which will lead to fatal or severe injuries if you do not observe the warning.

CAUTION

Texts with this symbol indicate dangerous situations, which may lead to light or severe injuries if you do not observe the warning.

NOTICE

Texts with this symbol indicate dangerous situations, which may lead to vehicle damages if you do not observe the warning.



Texts with this symbol are environment preservation recommendations.



Texts with this symbol contain additional information.



Overview of the vehicle

Front view



Fig. 2 Front view of the vehicle.

Key for→ Fig. 2:

①	Windscreen	70
②	Exterior mirrors..... – Additional turn signal light.....	63
③	Bonnet release lever.....	202
④	Headlights.....	187
⑤	Fog light.....	63

Side view

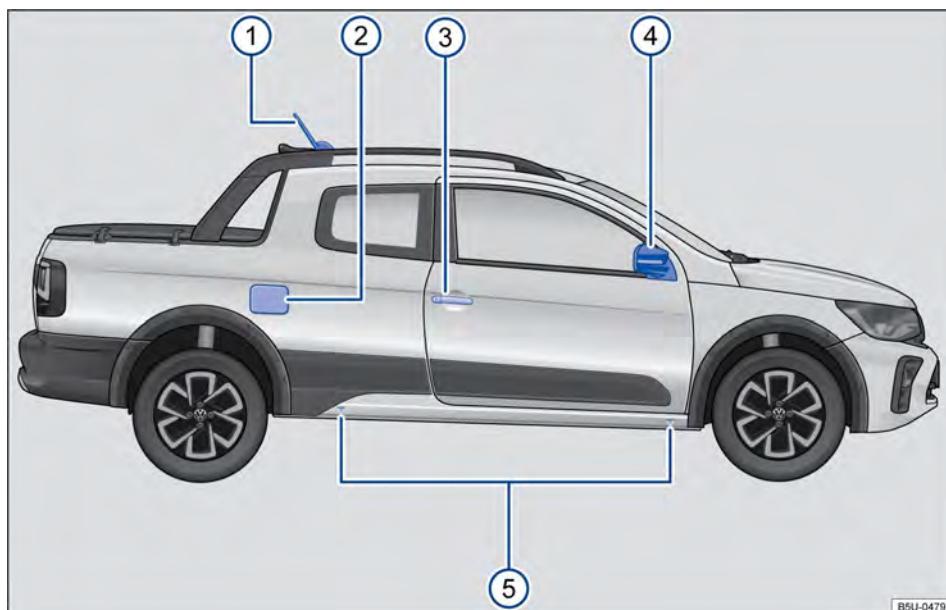


Fig. 3 Side view of the vehicle.

Key for→ Fig. 3:

①	Roof aerial.	255
②	Tank flap.	177
③	Roof luggage compartment vertical rib (Nova Saveiro with extended cab)	170
④	External door handle	
⑤	Jacking points	232 ▲

Rear view



Fig. 4 Rear view of the vehicle.

Key for→ Fig. 4:

①	Elevated brake lights and luggage compartment lighting.....	187, 193
②	Volkswagen logo to open the dropside.....	52
③	Tail lights.....	187
④	Rear parking distance control sensors.....	97
⑤	Tailgate.....	52



Driver door

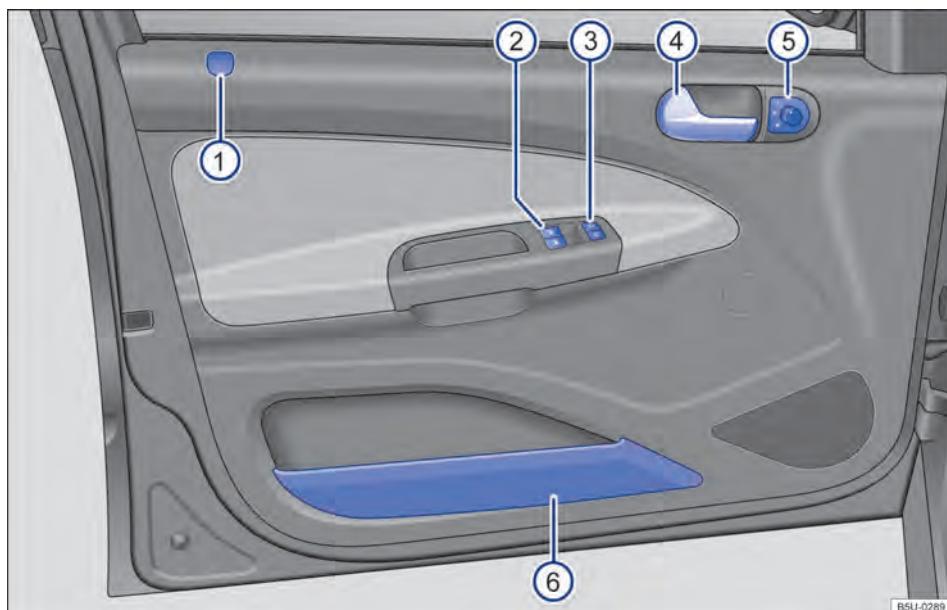


Fig. 5 Overview of the controls in the driver door.

Key for→ **Fig. 5:**

① Driver door locking pin lining (locking pin only for vehicles with mechanical locking).....	48
② Buttons for operating electric windows	56
③ Central locking button for locking and unlocking the vehicle -	47
④ Interior door handle	
⑤ Setting rotary control for electric exterior mirrors.....	70
– Exterior mirror setting - -	
⑥ Storage compartment.....	106

Driver's side

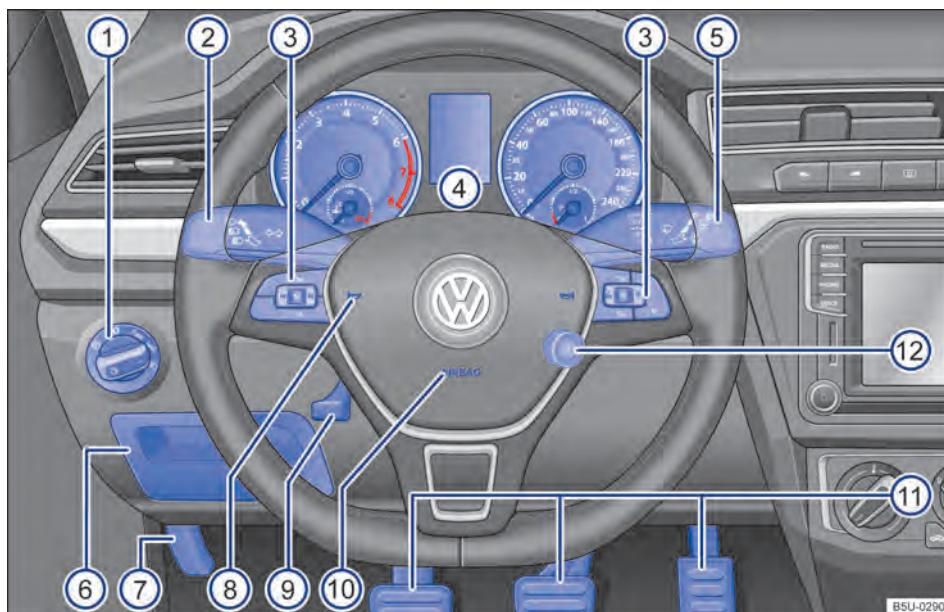


Fig. 6 Overview of the driver side.

Key for → Fig. 6:

Air vents	74
Instrument cluster	47
① Light switch	63
– Light switched off	
– Automatic light control	
– Side light and dipped beam	
– Fog lights	
② Lever for	63
– Main beam/long-range beam	
– Headlight flasher	
– Turn signal	
– Cruise control system (GRA)	94
③ Multifunction steering wheel controls:	
– Volume settings for the radio or phone calls	
– Mute function for the radio or activating the voice control system	
– Opening the main telephone menu or answering phone calls	
– Audio ▷ - ◁	
– Control buttons of the Volkswagen information system – OK – □, △ – ▽	

④	Instrument cluster:	14
—	Instruments	14
—	Display	17
—	Warning lamps and indicator lamps	13
⑤	Lever for	68
—	Windscreen wipers HIGH – LOW	
—	Interval wipe for the windscreen	
—	Single windscreen wiper movement fx	
—	Windscreen wipers	
—	Automatic windscreen washing and wiping system	
—	Controls of the Volkswagen information system TRIP- , OK/RESET	21
⑥	Storage compartment and fuse box cover	106, 193
⑦	Bonnet release lever	200
⑧	Horn (works only when the ignition is switched on)	
⑨	Lever for adjusting the steering column	59
⑩	Driver front airbag	34
⑪	Pedals	79
⑫	Ignition lock	86 ▲

Centre console

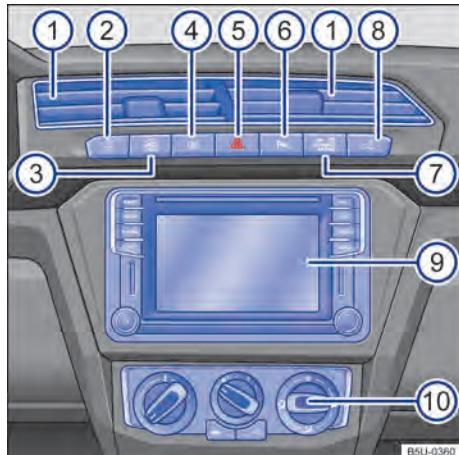


Fig. 7 Overview of the upper section of the centre console.

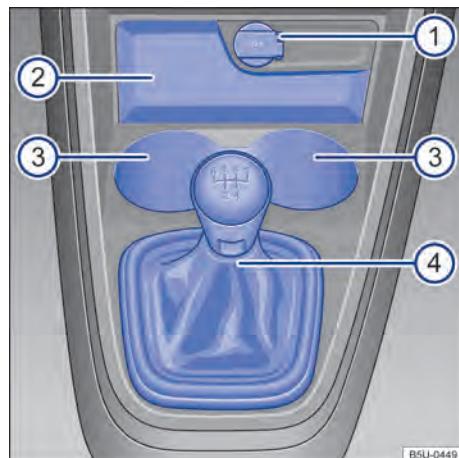


Fig. 8 Overview of the lower section of the centre console.

Key for → Fig. 7:

①	Air vent	74
②	Electronic stability control (ESC) button	104
③	Off-road feature on/off button	92
④	Rear window heating button	74
⑤	Hazard warning lights button	42 ▶

⑥	Parking distance control on/off button.....	97
⑦	Indicator light OFF PASSENGER AIR BAG indicator light regarding front passenger airbag deactivation (not available in some versions).....	34
⑧	Luggage compartment light button.....	68
⑨	Radio (factory fitted).....	112
⑩	Controls for: – Heating and fresh air system..... – Air conditioning system.....	74 74

Key for→ Fig. 8:

①	12-volt socket.....	109
②	Storage compartment.....	106
③	Drink holder in the centre console...	108
④	Lever for: – Manual gearbox.....	88

Front passenger side

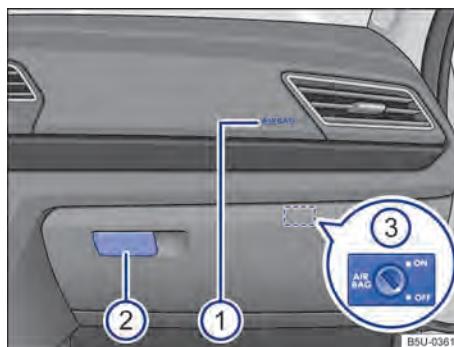


Fig. 9 Overview of the front passenger side.

Key for→ Fig. 9:		
①	Location of front passenger front airbag in the dashboard.....	34
②	Opening lever for the stowage compartment.....	106
③	Switch activated by the vehicle key to switch the front passenger airbag off (not available in some versions).....	34

Symbols in the roof headliner

Symbol	Definition
	Interior and reading lights switches → page 67

Driver's information

Warning lamps and indicator lamps

Warning and indicator lamps indicate a number of warnings → , faults →  or other specific functions. Some warning and indicator lamps light up when the ignition is switched on and should go out once the engine is running or the vehicle is in motion.

Depending on the version, additional text messages could appear in the display on the instrument cluster to provide further information or to ask you to perform certain tasks → page 14.

Depending on the vehicle equipment level, symbols may be displayed in the instrument cluster instead of warning lamps.

Sound signals can also be heard when certain warning or indicator lamps light up.

Symbol	Meaning → 
	Stop driving! Parking brake activated, low brake fluid level or damaged brake system. → page 95
	Lit: Stop driving! Coolant temperature too high or engine coolant level too low. → page 208
	Flashing: fault in engine coolant system. → page 208
	Stop driving! Engine oil pressure too low. → page 205
	Seatbelt not fastened by the driver. → page 26
	Fault in the alternator. → page 213
	Flashing: alarm activated. → page 50
	Lit: ESC faulty or malfunctioning. → page 101
	Flashing: ESC running. → page 101
	Lit: ESC disabled by driver. → page 101

Symbol	Meaning → 
	ABS faulty or not functioning. → page 101
	Fog light switched on. → page 63
	Fault in pollutant emission control system. → page 180
	Fault in electronic engine output control. → page 180
	Fuel tank almost empty. → page 16
	Fault in front belt tensioner system or airbag. → page 34
	Tyre pressure too low or damaged tyre pressure control system. → page 217
	Cold start system heating. → page 212
	Left or right turn signal. → page 63
	Hazard warning lights switched on. → page 42
	Emergency brake activation lights. → page 42
	Cruise control system (GRA) on. → page 94
	Lit up: hill descent control system switched on. → page 93
	Flashing: hill descent control system operating. → page 93
	Main beam is switched on or the headlight flasher is being operated. → page 63
	Electronic immobilizer activated. → page 88
	Service interval display. → page 20

WARNING

Failure to observe the warning lamps could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore any warning lamps or text messages that appear.
- Stop the vehicle as soon as possible and when safe to do so.
- Stop the vehicle at a safe distance away from moving traffic and ensure that no part of the exhaust system can come into contact with any inflammable material underneath the vehicle, e.g. dry grass, fuel or oil, etc.
- Broken-down vehicles lacking due signalling increase the risk of accidents both for you and for other road users. Always switch on the hazard warning lights and set up the warning triangle to warn other road users.
- Before opening the engine compartment cover, switch off the engine and allow it to cool down sufficiently.
- The engine compartment of any motor vehicle is a dangerous area and may cause severe injuries → page 200, *Safety guidelines for work in the engine compartment*.

! NOTICE

Failure to observe the illuminated indicator lamps could lead to vehicle damages.

Instrument cluster

 **Introduction**

After starting the engine with the vehicle's battery completely flat, or with a replacement battery in the vehicle, the system's configuration (time, date, comfort and programming configurations) may have been deleted or become corrupted. Check and adjust the settings after the vehicle battery has been sufficiently recharged.

! WARNING

Accidents and injuries can occur if the driver is distracted.

- Never operate the instrument cluster's buttons while the vehicle is in motion.
- To prevent the risk of accidents and injuries proceed with all the settings of the indicators of the instrument cluster's display and those of the radio system's display only when the vehicle is stopped.

Analogue instrument cluster

 Please refer to at the start of the chapter on page 14.

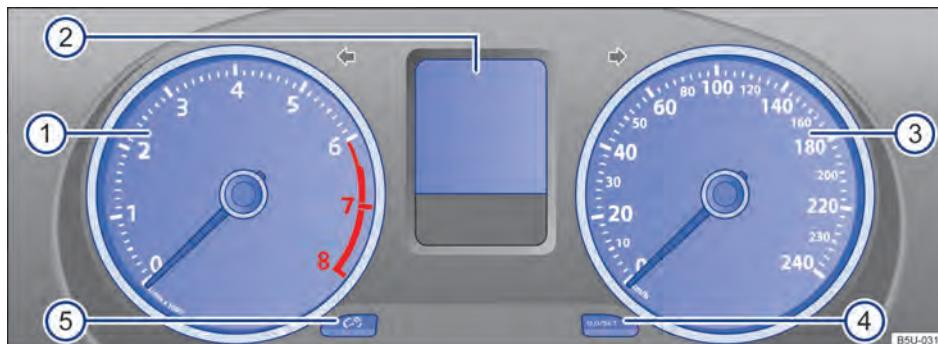


Fig. 10 Instrument cluster in the dashboard (variable 1).

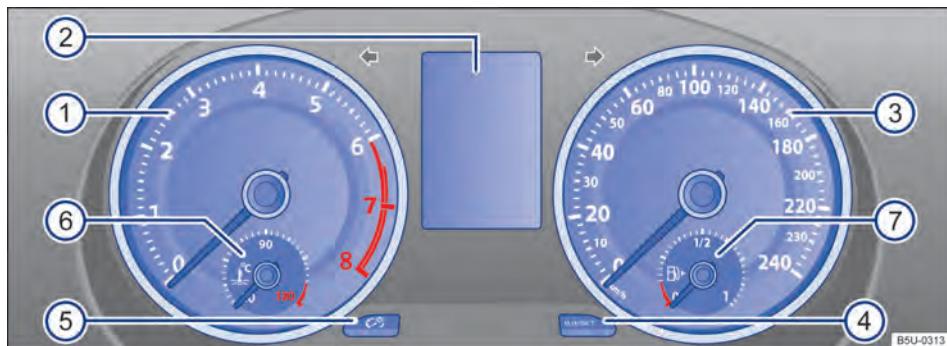


Fig. 11 Instrument cluster in the dashboard (variable 2).

Some of the controls and functions depicted are specific to certain models/versions or are optional.

Explanations about the → **Fig. 10** and → **Fig. 11**:

- ① **Rev. counter** (running engine speed in revolutions x 1,000 per minute).
- ② **Display indicators** → page 17.
- ③ **Speedometer** (speed indicator).
- ④ **Reset button** or to display the (trip) recorder.
 - Press the button **0.0/SET** for approximately 2 seconds to reset the trip recorder and other multi-function display indicators, if necessary → page 18.
- ⑤ **Clock settings knob** **0.0/SET**.
- ⑥ **Service interval display reset button** → page 20.
- ⑦ **Dashboard lighting adjustment button**  → page 67
- ⑧ **Engine coolant temperature display**  (depending on the vehicle version) → page 16.
- ⑨ **Fuel level display** (depending on the vehicle version) → page 16.

Tachometer (Rev counter)

 Please refer to  at the start of the chapter on page 14.

- To avoid engine damages, the rev. counter needle must not remain in the red area of the scale for more than a short period of time.

 Switching to higher gears in advance helps save fuel and reduce operating noises.

The start of the red zone on the rev counter indicates the maximum engine speed of a run and warm engine for each selected gear. Change to the next higher gear, position the selector lever to **D** or **S**, or relieve the accelerator pedal before the needle reaches the red zone → ①.

NOTICE

- While the engine is cool, avoid high rotations, total acceleration and increased engine load.

Fuel gauge

□ Please refer to  at the start of the chapter on page 14.



Fig. 12 On the instrument cluster display: fuel gauge (variable 1).



Fig. 13 On the instrument cluster: fuel gauge (variable 2).

When switching the ignition on, certain warning and indicator lamps flash to check functions. Such lamps go out after a few seconds.

The fuel gauge may vary depending on the vehicle model → Fig. 12 or → Fig. 13.

For vehicles with Volkswagen information system, the control light  lights up in the instrument cluster display.

Fuel tank almost empty

The indicator light flashes for approximately 10 seconds, indicator position in the four small segments → Fig. 12. The reserve fuel is consumed, fuel up as soon as possible.

Fuel tank almost empty

The indicator lamp lights up in yellow, indicator in red marking (arrow) → Fig. 13. The reserve fuel is consumed, fuel up as soon as possible.

WARNING

Driving the vehicle when the fuel level is too low could lead to your vehicle breaking down in traffic, accidents and serious injuries.

- When the fuel level is too low, the fuel supply to the engine could be irregular, especially when driving up or down hills and inclines.
- The steering, all driver assist systems and brake assist systems will not function if the engine stops due to a lack of fuel or irregular fuel supply.
- Always fill the tank when it is still 1/4 full. This reduces the risk of running out of fuel and breaking down.

NOTICE

- Failure to observe the illuminated indicator lamps and its descriptions and meanings could lead to vehicle damages.
- Do not run the tank completely empty. Irregular filling periods can cause backfiring and allow unburnt fuel to enter the exhaust system. This could damage the catalytic converter!

 The small arrow next to the fuel pump symbol → Fig. 12 or → Fig. 13 in the display instrument indicates the side of the vehicle on which the fuel tank flap is located.



Engine coolant temperature indicator

□ Please refer to  at the start of the chapter on page 14.

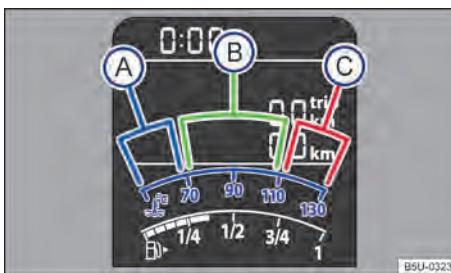


Fig. 14 Engine coolant temperature indicator in the instrument cluster (variable 1): (A) cold zone; (B) normal zone; (C) warning zone.



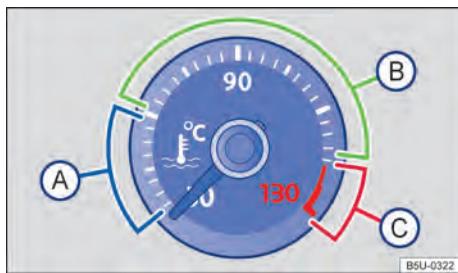


Fig. 15 Engine coolant temperature indicator in the instrument cluster (variable 2): (A) cold zone; (B) normal zone; (C) warning zone.

- (A) **Cold zone.** The engine has not yet reached its operating temperature. Avoid engine overloading and high rotation while the engine is cooled.
- (B) **Normal zone.**
- (C) **Warning zone.** Coolant temperature too high.



Engine coolant

The red indicator lamp flashes.

The engine coolant level is not correct or the coolant system is faulty.

Stop driving!

- Stop the vehicle, turn the engine off and let it cool down.
- Check coolant level, if the level is low, refill with engine coolant → page 210.
- If the warning lamp remains lit despite the coolant level being correct, then there is a fault in the system. Go to a Volkswagen Dealership or qualified workshop.



WARNING

Failure to observe the warning lamps and text messages could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore any warning lamps or text messages that appear.
- Stop the vehicle as soon as possible and when safe to do so.



NOTICE

Failure to observe the illuminated indicator lamps could lead to vehicle damages.

Display indicators

Please refer to at the start of the chapter on page 14.

On the dash panel insert display several different pieces of information may be displayed according to the version of the vehicle:

- Warning and information displays → page 19
- Distance displays
- Time
- Exterior temperature
- Gear recommendation → page 80
- Multifunction display and menus for various settings → page 21
- Service interval display → page 20
- Fuel level display → page 16
- Engine coolant temperature display → page 16

Distance displays

The **odometer** records the total distance travelled by the car.

The **trip recorder (trip)** shows the distance travelled since the trip recorder was last reset. The last digit stands for 100 m.

Exterior temperature indicator

Whenever the exterior temperature is below $+4^{\circ}\text{C}$, a "snowflake symbol" appears on the exterior temperature indicator (ice on the road).

This symbol starts to flash and lights up until the exterior temperature rises above $+6^{\circ}\text{C}$ → .

If the vehicle is parked or moving at a very low speed, the indicated temperature may be slightly higher than the actual exterior temperature, due to the heat generated by the engine.

The measurement range is -40°C to $+50^{\circ}\text{C}$.

Gear-change indicator

Depending on the vehicle version, a gear selection recommendation may be indicated on the instrument cluster display to optimize fuel savings → page 80.

Radio

In some versions, certain radio functions are indicated on the instrument cluster display only while the vehicle is running.

WARNING

There may be ice layers on roads and bridges even if the exterior temperature is above freezing temperature.

- There may be ice layers on roads even if the exterior temperature is above +4°C and the "snowflake symbol" is not indicated on the display.
- Never consider only the exterior temperature indicator!

Indicator "Current fuel consumption"

While the vehicle is in motion, current fuel consumption is displayed in km/l while the engine is running. The current value is calculated in 30 meter intervals and updated approximately every second.

Indicator "Average fuel consumption"

The average consumption in km/l is shown after a distance of 300 meters, after switching on the ignition. The display will show dashes up to this point. Displayed values are updated every 5 seconds.

Indicator "Fuel range"

Approximate calculation of the distance in km that can still be travelled with the current fuel level, under the current driving conditions. One factor used for calculating this figure is the current level of fuel consumption.

"Travel time" Indicator

Travel time in hours (h) and minutes (min) elapsed since the ignition was switched on.

Indicator "Distance travelled"

Distance travelled in km since the ignition was switched on.

"Average speed" Indicator

The average speed will be shown after a distance of 300 meters travelled since the ignition was switched on. The display will show dashes up to this point. Displayed values are updated every 5 seconds.

Digital speed indicator

Current vehicle speed displayed digitally.

Saving a speed for the speed warning

- Select the **Speed warning** display.
- Press the **OK** button to store the current speed or activate the warning system.
- If necessary, set the desired speed with the menu item +5 km/h or -5 km/h and press the **OK** button to increase or decrease speed. Press **OK** again. The speed will be stored and the warning will be activated.
- *To deactivate, select the **Speed warning** display again and press **OK**. The speed warning will be deactivated.*

Menu On-board Computer

 Please refer to  at the start of the chapter on page 14.

Switching between displays

- *Vehicles without multifunction steering wheel:* press the windscreens wiper lever switch.
- *Vehicles with multifunction steering wheel:* press  or .

Toggle memory

Press **OK** to toggle between memories.

Memory 1 - "trip"

The memory records trip and consumption data from the moment the ignition is switched on until the moment it is switched back off.

If the trip is interrupted for more than two hours, the memory is automatically reset. If the journey is continued within two hours of the ignition being switched off, the new values will be added to the existing trip recorder.

Memory 2 - "total trip"

The memory collects journey data for any number of individual journeys up to a total of 99 hours and 59 minutes of travel time, 9,999 km distance travelled, or 999 litres of fuel consumed. If any of these maximum limits is exceeded, the memory is automatically deleted and reset to zero.

Manually deletion of memory 1 or 2

- Select the memory that you wish to delete.
- Press and hold the **OK** button for approximately two seconds.

Personal selection of displays

In the Settings menu, On-board Computer submenu, it is possible to select which multifunction display indicators are shown in the instrument cluster display.

 Different instrument clusters are available, which means that the versions and displays may vary. In displays without warning or information messages, faults are indicated exclusively by the indicator lamps.

Warning and information texts

 Please refer to  at the start of the chapter on page 14.

The system runs a check on certain components and functions in the vehicle when the ignition is switched on or while the vehicle is in motion. Functional faults are indicated by red and yellow symbols with warning and information messages on the instrument cluster display (→ page 13). An acoustic warning is also given in certain cases. The screen may vary according to the version of the instrument cluster fitted.

Existing functional faults can also be accessed manually. Access such faults through the selection menu **Vehicle Est.**

Priority 1 warning message (red)

Symbol lit up or flashing – partially, along with acoustic warnings.  **Stop driving!** Dangerous situation. Check the damaged function and eliminate its cause. If necessary, go to a Volkswagen dealership or a qualified workshop.

Priority 2 warning message (yellow)

Symbol lit up or flashing – partially, along with acoustic warnings. Faulty functions or lack of fluids may damage or interrupt vehicle operation. Check the faulty function as soon as possible. If necessary, go to a Volkswagen dealership or a qualified workshop.

Guidance on information in the owner's manual

Further guidance on the current warning message can be found in the owner's manual.

Information text.

Information about various procedures within the vehicle.

 When there are several warnings, the icons will be displayed in sequence a few seconds each. The symbols will appear until the faults are rectified.

Time

 Please refer to  at the start of the chapter on page 14.

- Switch on the ignition.
- To set the clock, press and hold **0.0/SET** on the instrument cluster → page 14 for approximately five seconds.
- Press and hold **0.0/SET** until the hour display starts to flash.
- Briefly press button **0.0/SET** to set the hour. Numbers are displayed in ascending order.
- Briefly press **0.0/SET** once again to flash the minute display.
- Briefly press **0.0/SET** to set the minutes. Numbers are displayed in ascending order.
- Press **0.0/SET** again to close the clock settings.

Settings Menu

 Please refer to  at the start of the chapter on page 14.

The scope of the menus and information indicators depends on the electronic components shipped with the vehicle and vehicle version scope.

Language

Select the language used in display messages.

MFI

Settings for which MFI data should appear in the instrument cluster display → page 18.

Parking sensor

The parking distance control acoustic warning settings. Increase or decrease the rear parking sensor sound warning volume.

ECO Comfort

Settings for which ECO Comfort data should appear in the instrument cluster display.

The purpose of the ECO Comfort function is to show assistance messages in the instrument cluster display to improve the vehicle's fuel consumption rate.

Which data will be shown in the display can be defined in the ECO Comfort submenu. Data may be defined separately, as groups (all options) or also disabling options, so that no alert is shown in the display.

Data available for the vehicle is not shown in the instrument cluster display, since it varies according to the vehicle's electronic system and assembled equipment.

In addition to the warning message shown in the display, other warnings with additional information may also appear.

Warning messages

- ECO COMFORT Air resistance: Close windows.
- ECO COMFORT Air conditioning on: Close windows.
- ECO COMFORT Observe the gearshift indicator.
- ECO COMFORT When breaking, only declutch below 1300 rpm.
- ECO COMFORT Do not activate the gas pedal when starting engine.
- ECO COMFORT Do not activate the gas pedal when stationary.
- ECO COMFORT Avoid running the engine when stationary.

Convenience

Settings for the vehicle's convenience functions:

- **Sound warning:** turn the sounds function on or off when locking or unlocking the vehicle. If the sounds function is turned on, a sound (horn) will be made whenever the vehicle is locked, and two sounds whenever the vehicle is unlocked.
- **Light warning:** turn the light warning function on or off when locking or unlocking the vehicle. If the lights function is turned on, turn signals will flash once when the vehicle is locked, and twice when the vehicle is unlocked.
- **Automatic closing:** electric window settings: all windows can be closed or open when locking or unlocking.

Maintenance

Define the mileage in which a visual and acoustic warning must be issued indicating that the vehicle requires maintenance → ①.

Factory setting

Some functions in the **Settings** menu are reset to factory settings.

NOTICE

The **Maintenance** function is an additional guidance feature for established vehicle maintenance procedures. The mileage to be defined must not exceed the mileage established in → page 238.

Service interval display

 Please refer to  at the start of the chapter on page 14.

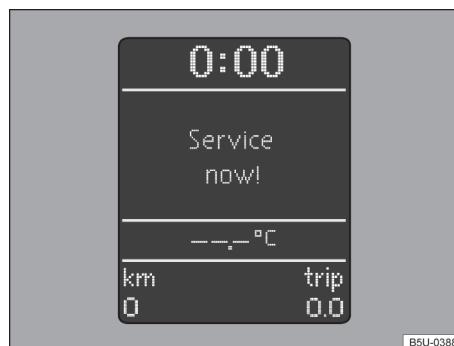


Fig. 16 Instrument cluster display: service interval display.

The service interval display is shown on the instrument cluster → Fig. 10 ② or → Fig. 11 ②.

Different instrument clusters are available, which means that the versions and displays may vary.

Service warning

When a service is becoming due, a service warning is displayed when turning the ignition on.

The mileage or specified interval time correspond to the mileage or interval until the next service.

Service reminder

If the vehicle is **due to be serviced**, the display **INSP** or **Service now!** (for vehicles equipped with the Volkswagen Information System), it will appear in the instrument cluster display for 20 seconds after the vehicle is started.

Resetting the service interval display

If the service was not performed by a Volkswagen Dealership, the instrument cluster display can be reset as follows:

- Switch off the ignition.
- Press and hold the button **OK/SET**.
- Switch on the ignition.
- Release **OK/SET** and press it again within approximately 10 seconds.

Do not reset the display between service intervals. This may result in incorrect displays.

i The service message will disappear after a few seconds with the engine running or after pressing the **OK** button on the windscreen wiper lever.

On-board Computer → page 18

Audio → page 112

Vehicle status → page 21

Settings → page 19

⚠ WARNING

Accidents and injuries can occur if the driver is distracted.

- Never access the instrument cluster menus while driving.

i The menus in the instrument cluster display depend on the vehicle electronics and the level of vehicle equipment.

i Display information may be abbreviated or slightly different than described in this document.

Dash panel insert operation

📖 Introduction

With the ignition switched on, the different display functions can be accessed via the menus.

⚠ WARNING

Drivers distracted while driving could lead to accidents and injuries.

- Never access the instrument cluster menus while the vehicle is in motion.

Dash panel insert menus

📖 Please refer to **⚠ at the start of the chapter on page 21.**

The scope of the menus and information indicators depends on the electronic components shipped with the vehicle and vehicle version scope.

A qualified workshop can program and modify other functions depending on the vehicle equipment level. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Some menu options can only be called up when the vehicle is stationary.

Operation by way of the windshield wiper lever

📖 Please refer to **⚠ at the start of the chapter on page 21.**

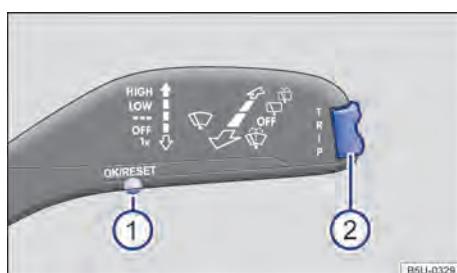


Fig. 17 Vehicles without multifunction steering wheel: press button ① in the windscreen wiper lever to confirm the menu point and rocker switch ② to switch between menus.

While a priority 1 warning message is displayed, it is not possible to call up any menu. All warning messages automatically disappear after a few seconds. Additionally, certain warning messages can be confirmed and hidden by pressing the **OK** button.

Calling up the main menu

- Switch on the ignition.
- If a message or vehicle pictogram is displayed, press **OK** (→ [Fig. 17 ①](#)).
- Press and hold → [Fig. 17 ②](#) or press upward and downward for at least 2 seconds. The main menu will be displayed.

Opening a submenu

- Press key **②** up or down, until the desired menu item is selected.
- The selected menu option is located between the two horizontal lines.
- Press **OK** to view a submenu item.

Making settings in the menu

- Make the desired changes using the key of the windshield wiper lever. If necessary, press and hold the controls to increase or decrease the values quickly.
- Select or confirm your selection by pressing **OK**.

Returning to the main menu

- *Menu*: select the **Back** menu option to leave the submenu.
- *When operated using the windscreens wiper lever*: press and hold the rocker.

Windscreen wiper lever buttons are not available in certain vehicles equipped with multifunction steering wheels. In these cases, the multifunction display is controlled exclusively through the multifunction steering wheel buttons.

Calling up the main menu

- Switch on the ignition.
- If a message or vehicle pictogram is displayed, press **OK** → [Fig. 18](#).
- The main menu is not displayed. To navigate through menu options, press **OK** or **OK** several times.

Opening a submenu

- Press **OK** or **OK** until the desired menu option is selected.
- The selected menu option is located between the two horizontal lines.
- Press **OK** to view a submenu item.

Making settings in the menu

- Using the arrow keys of the multifunction steering wheel select the desired changes. If necessary, press and hold the controls to increase or decrease the values quickly.
- Select or confirm your selection by pressing **OK**.

Returning to the main menu

- *Menu*: select the **Back** menu option to leave the submenu.

Returning to the previous item

Press **OK**.

 For vehicles without a radio, the controls for the multifunction steering wheel are deactivated. If an original Volkswagen radio is subsequently installed at a Volkswagen Dealership, it is possible to activate the controls on the multifunction steering wheel.

Operation by way of the multifunction steering wheel

 Please refer to  at the start of the chapter on [page 21](#).



Fig. 18 Right-hand side of the multifunction steering wheel: instrument cluster menu control buttons.

Safety

Overall guidelines

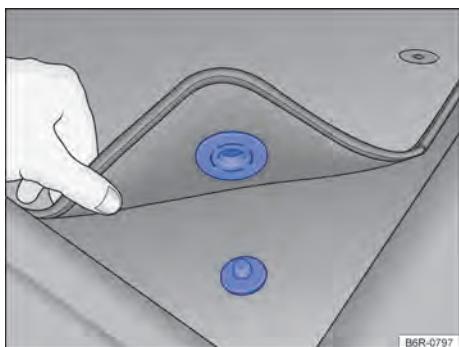


Fig. 19 Driver side mat attached to the floor pin.

Preparations for travel and driving safety

Observe the following information both before and during every journey to ensure your own safety, and the safety of all passengers and other road users → .

- ✓ The driver is responsible for all vehicle passengers, especially if they are children.
- ✓ Check that all lights and turn signals are working properly.
- ✓ Check the tyre pressure (→ page 223) and fuel level (→ page 16).
- ✓ Ensure that you have a good, clear view through all of the windows.
- ✓ The supply of air to the engine may not be suppressed and the engine should not be covered with covers or insulating materials → page 200.
- ✓ Secure any objects and luggage in the stowage compartments, the luggage compartment or on the roof → page 166.
- ✓ Ensure that you are able to operate the pedals freely at all times.
- ✓ Secure any children travelling in the vehicle in a restraint system suitable for their weight and size → page 39.
- ✓ Adjust the front seats, headrests and mirrors properly in accordance with the size of the occupants → page 24.
- ✓ Wear proper shoes that provide good grip for your feet when using the pedals.

- ✓ The floor mat in the footwell on the driver side must be securely fastened to ensure the pedal area is unobstructed. Depending on the vehicle equipment, the driver mat may be attached to the floor mat pin → Fig. 19.
- ✓ Assume a correct sitting position before and while driving. This also applies to all passengers → page 24.
- ✓ Fasten your seat belt correctly before setting off and keep it properly fastened throughout the journey. This also applies to all passengers → page 26.
- ✓ Each vehicle occupant must sit in a seat of their own and must have their own seat belt.
- ✓ Never drive if your driving ability is impaired, e.g. by medication, alcohol, drugs, among other substances capable of influencing your perception and reaction.
- ✓ Do not allow yourself to be distracted from the traffic (e.g. by passengers, telephone calls, browsing through display menus.)
- ✓ Always adjust speed and driving pattern according to visibility, climate, road, and traffic conditions, under respective speed limits.
- ✓ Observe traffic regulations and speed limits.
- ✓ When travelling long distances, stop and take a break regularly – at least every two hours.
- ✓ Carry animals in the vehicle using restraint systems based on their weight and size.

Driving abroad

Some countries adopt special safety regulations and relevant prescriptions for exhaust gases which may differ from the structural condition of the vehicle. Volkswagen recommends that you visit your local Volkswagen Dealership before travelling abroad in order to learn about any legal requirement and the following issues concerning your destination:

- ✓ Does the vehicle need any technical modifications for driving abroad, e.g. masking or switching the headlights over?
- ✓ Are the necessary tools, diagnostic equipment and spare parts available for service and repair work?
- ✓ Is there a Volkswagen Dealership in the destination country? ▶

Driving abroad (Continued)

- ✓ Is there unleaded petrol with the correct octane number and free of metallic additives (such as manganese) in the destination country?
- ✓ Are the correct engine oil (→ page 205) and other service fluids that comply with Volkswagen specifications available in the destination country?
- ✓ Are special tyres required for travelling in the destination country?

Checks when fuelling

Never carry out any work on the engine or in the engine compartment if you are not familiar with the necessary procedures and the general safety requirements, as well as without available resources, fluids and tools → page 200, *Safety guidelines for work in the engine compartment!* The work should be carried out by a Volkswagen Dealership or qualified workshop. Please ensure that the following points are checked regularly, preferably every time you fill the tank:

- ✓ Windscreen washer fluid level → page 204
- ✓ Engine oil level → page 205
- ✓ Engine coolant level → page 208
- ✓ Brake fluid level → page 211
- ✓ Tyre pressure → page 223
- ✓ Vehicle lighting necessary for traffic safety:
 - Turn signals
 - Side light, dipped beam and main beam headlights
 - Tail light lamps
 - Brake light
 - Rear fog light
 - Number plate light

Information about changing bulbs → page 187.

DANGER

Follow the important safety instructions related to the front passenger's front airbag → page 39, *Child seat types*.

WARNING

Driving under the influence of alcohol, drugs, medication or narcotics can cause serious accidents and fatal injuries.

- Alcohol, drugs, medication and narcotics can severely impair perception, reaction times and driving safety. This could cause you to lose control of the vehicle.

WARNING

Always observe current traffic regulations and speed limits, and think ahead when driving. Correct interpretation of a driving situation can make the difference between reaching your destination safely and having an accident with severe injuries.

NOTICE

Volkswagen may not be held liable for damages caused to the vehicle due to low-quality fuel, insufficient/incorrect maintenance, and use of non-genuine parts.

 Regular servicing of your vehicle not only maintains its value, but also ensures that your vehicle remains roadworthy and in perfect working order. Servicing work should therefore always be carried out in accordance with the Volkswagen maintenance guidelines. Under severe operating conditions it may be necessary to carry out some maintenance jobs prior the next scheduled service. Additional information on adverse conditions is available on → page 238, which prior reading is essential. Contact a Volkswagen Dealership for more information.



Adjusting the seat position

Introduction

Number of seats

Rear seats only apply to the New Extended Cab Saveiro.

The vehicle has a total of **2** seats: 2 front seats. The Extended Cab New Saveiro has a total of **5** seats: 2 front seats and 3 rear seats. Each seat is equipped with safety belts.



WARNING

Assuming an incorrect sitting position in the vehicle can increase the risk of severe or fatal injuries during a sudden driving or braking manoeuvre, in the event of a collision or accident, or if the airbags are triggered.

- All vehicle occupants must assume a correct sitting position before setting off and maintain this position throughout the trip. This also applies to the use of seat belts.
- The number of vehicle occupants must never exceed the number of seats with seat belts in the vehicle.
- Secure any children travelling in the vehicle in a restraint system approved and suitable for their age → page 39, *Transporting children in the vehicle*, → page 34, *Airbag system*.
- Always keep your feet in the footwell while the vehicle is in motion. Never place your feet on the seat or on the dash panel and never hold your feet out the window. The airbag and seat belt can otherwise not provide optimal protection and can actually increase the risk of injury during an accident.

Whenever the vehicle is in motion:

- Never stand in the vehicle.
- Never stand on the seats.
- Never kneel over the seats.
- Never tilt the backrest too far to the rear.
- Never lean against the dash panel.
- Never lay down on the rear seat (applicable to the New Extended Cab Saveiro only).
- Never sit on the front edge of a seat.
- Never sit sideways.
- Never lean out of a window.
- Never put your feet out of a window.
- Never put your feet on the dash panel.
- Never place your feet on the seat cushion or seat backrest.
- Never travel in a footwell.
- Never travel on a seat without wearing the seat belt.
- Never travel in the internal luggage compartment.

WARNING

Any incorrect sitting position in the vehicle increases the risk of severe or fatal injuries in the event of an accident or sudden driving or braking manoeuvre.

- All vehicle occupants must maintain a correct sitting position and wear their seat belt properly while the vehicle is in motion.
- Sitting in an incorrect position, not fastening the seat belt, or leaving too short a distance to the airbag exposes the occupants to the risk of sustaining critical or fatal injuries, especially if the airbags are triggered and strike an occupant who has assumed an incorrect sitting position.

Dangers of an incorrect sitting position

 Please refer to  at the start of the chapter on page 25.

If the seat belts are not worn or are worn incorrectly, the risk of severe or fatal injuries increases. Seat belts can only provide optimal protection if the seat belt routing is correct. An incorrect sitting position considerably impairs the level of protection provided by the seat belts. This could lead to severe or even fatal injuries. The risk of severe or fatal injuries is especially augmented when a triggered airbag hits an occupant who has assumed an incorrect sitting position. The driver is responsible for all vehicle passengers, especially if they are children.

The following list contains examples of sitting positions that could be dangerous for all occupants.

Correct sitting position

 Please refer to  at the start of the chapter on page 25.

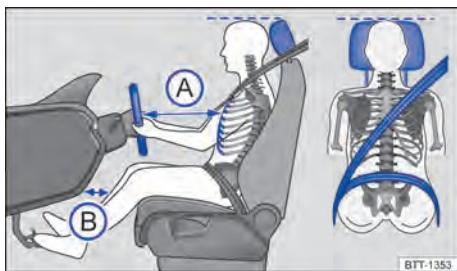


Fig. 20 Correct distance between the driver and the steering wheel, correct seatbelt position and correct headrest adjustment.

The following points describe the correct sitting positions for the driver and passenger.

Persons who due to their physical build are unable to sit correctly in the vehicle should contact a specialized workshop to be informed on possible special installations. The seat belts and airbags can only provide a maximum level of protection if a correct sitting position is assumed. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Volkswagen recommends the following sitting positions on the seats for the occupants own safety and to reduce the level of injury in the event of a sudden braking manoeuvre or an accident:

Points for the driver:

- Move the backrest into an upright position so that your back rests fully against it.
- Adjust the seat so that the distance between the steering wheel and the driver's chest is at least of 25 cm → Fig. 20 (A) and so the driver can firmly hold the steering wheel by its outer rim with both hands and with slightly flexed arms.
- The steering wheel must always point towards the breastbone and not towards the face.
- Adjust the driver's seat lengthwise so that the pedals may be reached with slightly flexed legs and so that the distance between the knees and the dashboard is at least 10 cm → Fig. 20 (B).

- Adjust the height so that you can reach the highest point of the steering wheel.
- Always leave both feet in the footwell to maintain control of the vehicle at all times.
- Fasten seat belts properly → page 26.

Points for the front passenger:

- Move the backrest into an upright position so that your back rests fully against it.
- Push the front passenger seat as far back as possible so that the airbag can provide maximum protection if it is triggered.
- Always keep your feet in the footwell while the vehicle is in motion.
- Fasten seat belts properly → page 26.

Points for rear vehicle passengers:

Valid only for the New Extended Cab Saveiro.

- Adjust the head rest so its top edge is at the same height as the top of the head → Fig. 20 – but not below eye level. Position the back of your head as close to the head restraint as possible.
- In case of short stature individuals, push the head restraint all the way down, even if the head is then located underneath the top edge of the head rest.
- For taller people, push the head rest up as far as possible.
- Always keep your feet in the footwell while the vehicle is in motion.
- Adjust and fasten seat belts properly → page 26.



Seat belts

Introduction

Check the condition of all seat belts regularly. In case of damages to belts, connections, automatic belt retractor, or seat belt latches, the respective seat belt must be immediately replaced by a Volkswagen Dealership → . One must use correct spare parts that are compatible with the vehicle, equipment level and model year. Volkswagen recommends using a Volkswagen Dealership for this purpose.



⚠ WARNING

Incorrectly fastened or unfastened seat belts increase the risk of severe or fatal injuries. Seat belts will only offer the optimum level of protection when they are fastened and used properly.

- Seat belts are the most effective means of reducing the risk of severe and fatal injuries in case of accidents. For the protection of the driver and of all vehicle occupants, seat belts must always be fastened properly when the vehicle is in motion.
- Before every trip, each vehicle occupant must assume a correct sitting position, correctly fasten the seat belt belonging to their seat and keep it fastened properly throughout the trip. This applies to all passengers in any traffic condition.
- While the vehicle is in motion, secure all children travelling in the vehicle in a restraint system suitable for their age, as well as properly secured seat belts → page 39, *Transporting children in the vehicle*.
- Only start driving when all passengers have correctly fastened their seat belts.
- Only ever insert the latch plate into the buckle of the associated seat, and always ensure that it engages properly. Using a buckle that does not belong to the seat that you are occupying reduces the level of protection and can lead to severe injuries.
- Never let any foreign bodies or liquids enter the seat belt buckle slot. This could prevent belt buckles from working properly.
- Never unfasten the seat belt while the vehicle is in motion.
- Never allow more than one person to share the same seat belt.
- Never allow children or babies to be transported on someone's lap, or while being held.
- Never drive wearing loose, bulky clothing (such as an overcoat over a jacket). This could prevent the seat belts from fitting and functioning properly.

⚠ WARNING

Damaged seat belts are extremely dangerous and can cause severe or fatal injuries.

- Never damage the belt by trapping it in the door or in the seat mechanism.
- If the belt bands fabric or any other part of the seat belt becomes damaged, the seat belt may tear during an accident or sudden braking manoeuvre.
- Damaged seat belts must be replaced immediately with new seat belts at a Volkswagen Dealership. Seat belts used during an accident and subjected to stress or belt tensioner activation must be replaced by a Volkswagen Dealership. Replacement may be necessary even if there is no apparent damage. The belt anchorage should also be checked.
- Never attempt to repair, modify or remove the seat belts yourself. All repairs to seat belts, belt retractors and buckles must be carried out by a Volkswagen Dealership.

Warning lamp

☞ Please refer to **⚠** at the start of the chapter on page 27.



Fig. 21 Instrument cluster display warning lamp.

Depending on the vehicle equipment, the warning lamp and the seat belt acoustic warning may not be available.

An acoustic warning sounds for a few seconds whenever the seat belts are not fastened prior to reaching a speed of more than 25 km/h or whenever the seat belts are unfastened while driving. In addition, the warning lamp flashes **⚠**.

The warning light **⚠** is only switched off after the driver fastens the respective seat belt, while the ignition is turned on.

⚠ WARNING

Incorrectly fastened or unfastened seat belts increase the risk of severe or fatal injuries. Seat belts will only offer the optimum level of protection when they are fastened and used properly.

However, the most significant factor is the vehicle speed. For example, when the speed doubles from 25 km/h to approximately 50 km/h (15 mph to approximately 30 mph), the kinetic energy increases fourfold!

The amount of "kinetic energy" depends on the vehicle speed and weight of the vehicle and passengers. The higher the speed and the heavier the weight, the greater the amount of energy that will be released in the event of an accident.

Passengers not wearing seat belts are, therefore, not "connected" to the vehicle. In the event of a frontal collision they will continue to move forward at the same speed at which the vehicle was travelling before impact, until something stops them. Because the passengers in our example are not restrained by seat belts, the entire amount of kinetic energy will only be released at the point of impact against the wall → Fig. 23.

At a speed of approximately 50 km/h (30 mph), the forces acting on the body during an accident can easily exceed one tonne (1,000 kg). These forces are even greater at higher speeds.

This example applies not only to frontal collisions, but to all kinds of accidents and collisions. ◀



Fig. 22 Unbelted occupants in a vehicle heading for a brick wall.



Fig. 23 Unbelted occupants in a vehicle striking a brick wall

The physical principles involved in a frontal collision are relatively simple. As soon as the vehicle is in motion → Fig. 22, both the moving vehicle and its passengers gain movement energy. Such energy is known as "kinetic energy".

The higher the vehicle speed and the heavier the weight of the vehicle, the greater the amount of energy that will have to be released in the event of an accident.

What happens to passengers who have not fastened their seat belts

◀ Please refer to ⚠ at the start of the chapter on page 27.



Fig. 24 An unbelted driver is thrown forward. ▶



Fig. 25 The unbelted rear passenger is thrown forward violently, hitting the belted driver.

Many people believe that they can brace their weight with their hands in a minor collision. This is not true.

Even at low speeds, the forces acting on the body in a collision are so great that occupants cannot brace themselves with their arms and hands. In a frontal collision, unbelted passengers are thrown forward and will make unchecked contact with parts of the vehicle interior, e.g. the steering wheel, dash panel, or windscreen → Fig. 24.

The airbag system is not a substitute for the seat belts. When triggered, airbags only provide additional protection. Airbags are not triggered in all kinds of accidents. Even if the vehicle is equipped with an airbag system, all vehicle occupants, including the driver, must fasten their seat belt and wear it correctly while the vehicle is in motion. This reduces the risk of severe or fatal injuries in the event of an accident - regardless of whether an airbag is available.

An airbag can only be triggered once. To achieve best possible protection, seat belts must always be worn properly. This also ensures that protection is provided in accidents in which the airbag is not triggered. Any vehicle occupant not wearing a seat belt can be thrown out of the vehicle and sustain even more severe or even fatal injuries as a result.

It is also essential for rear passengers to wear seat belts properly, as they could otherwise be thrown forward violently in an accident. Rear passengers who are not wearing seat belts endanger not only themselves and the driver, but also other people in the vehicle → Fig. 25.

Seat belts protect

Please refer to at the start of the chapter on page 27.



Fig. 26 Driver restrained by a properly positioned seat belt during a sudden braking manoeuvre.

Correctly fastened seat belts can make a major difference. When fastened properly, seat belts hold the vehicle occupants in the correct sitting positions and considerably reduce the kinetic energy in the event of an accident. Seat belts also help to prevent uncontrolled movements that could lead to severe injuries. Additionally, wearing seat belts properly reduces the risk of being thrown from the vehicle → Fig. 26.

Passengers wearing seat belts correctly benefit greatly from the ability of the belts to reduce the kinetic energy generated. The front crumple zones and other passive safety features (such as the airbag system) are also designed to mitigate kinetic energy. The amount of energy generated will thus decrease, thereby reducing the risk of injury.

Accident statistics prove that correctly fastened seat belts considerably reduce the risk of injury in all types of accidents and increase the chance of survival in an accident. This is why seat belts must be fastened before every trip - even if your only planning on going "around the block".

Furthermore, properly worn seat belts ensure proper airbag operation in case of accidents. For this reason, the use of seat belts is mandatory under Brazilian law.

For example, the front airbags will only be triggered in certain types of frontal collision. Front airbags will not be triggered during minor frontal ►

collisions, minor side collisions, rear collisions, rolls or accidents in which the airbag trigger threshold in the control unit is not exceeded.

- Do not allow the belt bands to become jammed, damaged or to rub on any sharp edges.
- Always keep the latch plate and slot in the buckle free from foreign bodies and liquids.

Using seat belts

 Please refer to  at the start of the chapter on page 27.

Checklist

Using seat belts → 

- ✓ Check the condition of all seat belts regularly.
- ✓ Keep the seat belts clean.
- ✓ Never let any foreign bodies and liquids get on to the seat belt, the latch plate or into the slot for the seat belt buckle.
- ✓ Do not trap or damage the seat belt and latch plate (e.g. when closing the door).
- ✓ Never remove, modify or repair the seat belt or any part of the belt fixture system.
- ✓ Always fasten the seat belt correctly before driving and wear it properly while the vehicle is in motion.

Twisted seat belt

If it is difficult to remove the seat belt from the belt guide, the seat belt may have become twisted if it was returned too quickly into the side trim: In this case:

- Take hold of the latch plate then slowly and carefully pull out the seat belt.
- Untwist the seat belt and guide it back slowly by hand.

Fasten the seat belt even if you are unable to undo the twist. However, the twist should not be in an area of the seat belt that comes into direct contact with the body! The twist should be corrected immediately by a Volkswagen Dealership.

WARNING

Using seat belts incorrectly increases the risk of severe or fatal injuries.

- Regularly check to see if the seat belt and its related parts are in perfect working conditions.
- Keep the seat belts clean.

Fastening and unfastening seat belts

 Please refer to  at the start of the chapter on page 27.



Fig. 27 Inserting the seat belt latch plate into the buckle.



Fig. 28 Removing the seat belt latch plate into the buckle.

If worn properly, seat belts hold the vehicle occupants in the correct sitting position during an accident or braking manoeuvre, giving occupants maximum protection → .

Fastening the seat belts

Fasten seat belts before driving.

- Always adjust the seats and head rests properly → page 24.
- Gently pull the seat belt through the latch plate, across the chest and the pelvic area. **Do not twist the seat belt** → .

- Insert the latch plate securely into the buckle of the respective seat → **Fig. 27**.
- Pull test the seat belt to ensure that the latch plate is securely locked in the buckle.

Unfastening the seat belts

Unfasten seat belts only when the vehicle is stationary → **▲**.

- Press the red button in the belt buckle → **Fig. 28**. The latch plate is released and springs out.
- Guide the belt back so that it rolls up easily, without twisting the seat belt and without damaging the trim.

⚠ WARNING

Incorrect seat belt routing can cause severe or fatal injuries in the event of an accident.

- The seat belts only offer best protection when the backrests are in an upright position and the seat belts have been fastened properly according to the occupant's height.
- Unfastening seat belts while the vehicle is in motion can lead to severe or fatal injuries in the event of an accident or sudden braking manoeuvre.



Fig. 30 Correct seat belt routing during pregnancy.

Seat belts only provide an optimum level of protection during an accident and reduce the risk of severe or fatal injuries when they are routed correctly. Correct seat belt bands routing also holds the vehicle occupants in position so that an inflating airbag can offer the maximum level of protection. Therefore always fasten your seat belt and ensure that the seat belt routing is correct.

An incorrect sitting position can cause severe or fatal injuries → page 24, *Adjusting the seat position*.

Correct seat belt routing

Seat belt routing

⇨ Please refer to **▲** at the start of the chapter on page 27.

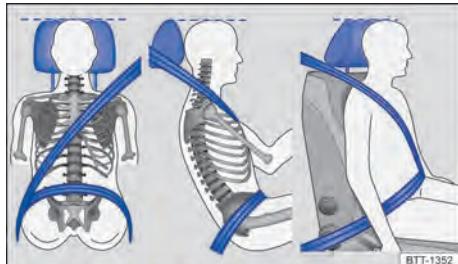


Fig. 29 Correct seat belt routing and head rest adjustment.

- The shoulder part of the seat belt must always lie on the centre of the shoulder, never across the neck, over or under the arm, or behind the back.
- The lower seat belt strap must always lie across the pelvis, never across the stomach.
- The seat belt must always lie flat and firm against the body. Slightly loosen the seat belt if necessary.

For **pregnant women**, the seat belt must be positioned over the chest and as low as possible over the pelvis, so that no pressure is exerted on the lower body → **Fig. 30**.

Correct seat belt routing according to height

The seat belt routing can be adjusted as follows:

- Belt height adjuster for the front seats → page 32.
- Seat with height adjustment → page 60.

⚠ WARNING

Incorrect seat belt routing can cause severe injuries in the event of an accident or a sudden braking / driving manoeuvre.

- The seat belts only offer best protection when the backrests are in an upright position and the seat belts have been fastened properly.
- The shoulder part of the seat belt must lie on the centre of the shoulder and never under the arm or across the neck.
- The seat belt must lie flat and firmly over the chest.
- The lower seat belt strap must always lie across the pelvis, never across the stomach. The seat belt must lie flat and firmly over the pelvis. Slightly loosen the seat belt if necessary.
- For pregnant women, the lap part of the seat belt must be as low as possible over the pelvis around the "bulge" of the belly.
- Do not twist the belt bands while securing the seat belt.
- Never hold the seat belt away from the body by hand.
- The belt bands should not lie over hard or fragile objects, such as glasses, pens or keys.
- Never use seat belt clips, retaining rings or similar items to alter the seat belt routing.

i If a person's physical build prevents them from routing the seat belt properly, contact a Volkswagen Dealership or qualified workshop to find out about any special modifications so that the seat belts and airbags can provide the optimum level of protection.

Belt height adjuster

☞ Please refer to **⚠** at the start of the chapter on page 27.

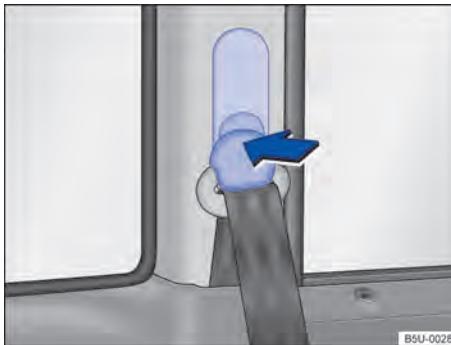


Fig. 31 Next to the seats: seat belt height adjuster.

Depending on the vehicle's version, seat belt height adjustment may not be available.

The seat belt height adjusters can be used to adjust the seat belt position on the shoulder area, so it can be fastened properly:

- Press and hold the shoulder belt guide as indicated by the arrows → Fig. 31.
- Push the shoulder belt guide up or down so that the seat belt lies over the middle of the shoulder → page 31, *Seat belt routing*.
- Let go of the shoulder belt guide.
- Pull sharply on the seat belt to check whether the shoulder belt guide is engaged securely.

For those versions that do not have this manual adjustment, the vehicle has two positions on the column for the seatbelt height adjustment to the shoulder. The seatbelts are factory installed to the first position and can be adjusted to the upper position. Volkswagen recommends using a Volkswagen Dealership for this purpose.

⚠ WARNING

Never adjust the seat belt height when the vehicle is in motion.

Automatic belt retractor, belt tensioner and belt roll-back function

 Please refer to  at the start of the chapter on page 27.

Seat belts are part of the vehicle's safety system → page 36 and are made up of the following important functions:

Automatic belt retractor

The safety belts are fitted with an automatic retriever roller, this device keeps the safety belt adjusted to the passenger's body. Full freedom of movement in the passenger's upper body area is made possible when the seat belt is pulled slowly or when the vehicle is travelling at normal speeds. However, the automatic belt retractor locks the seat belt if the belt is pulled out quickly, during sudden braking, when driving uphill or downhill or around bends, and during acceleration.

Seat belt tensioners

Front seat belts are equipped with belt tensioners and roll-back function. Rear seat belts are not equipped with these features.

Belt tensioners are activated by sensors during severe frontal and rear collisions, tightening the seat belts against the direction in which they are pulled. Safety belt clearances are eliminated when the belt tensioner is activated, reducing the forward movement of passengers towards the impact direction. Belt tensioners work together with the airbag system. Belt tensioners are not activated in minor front collisions, rolls or accidents in which the threshold in the control unit is not exceeded.

A fine dust may be generated upon activation. This is perfectly normal and does not represent fire risk.

Seat belt roll-back function

The front seat belts are equipped with roll-back function.

The seat belt roll-back function minimizes seat belt force acting over the body in case of accidents.

 All safety requirements must be observed when the vehicle or components of the system are scrapped. Volkswagen Dealerships are familiar with such requirements.

Service and disposal of belt tensioners

 Please refer to  at the start of the chapter on page 27.

Seat belts may become damaged during any work on the belt tensioners or while removing or refitting any vehicle parts in conjunction with any other repair work. Such damages will not always be noticeable. The consequence may be that the belt tensioners could function incorrectly, or not function at all, in the event of an accident.

Regulations must be observed to ensure that the effectiveness of the belt tensioner is not reduced and that removed parts do not cause any injuries or environmental pollution. Volkswagen Dealerships are familiar with such requirements.

WARNING

The risk of severe or fatal injuries may be increased if the seat belts, automatic belt retractors and belt tensioners are not used correctly, or if they are repaired by a non-professional. In this case, the belt tensioners may not be triggered when they should, or they may be triggered unexpectedly.

- Only Volkswagen → page 249, *Accessories, modifications, repairs and part replacement* may carry out repairs, adjustments or removal and refitting of parts in the belt tensioner system or seat belts.
- Belt tensioners and automatic belt retractors cannot be repaired. They must be replaced.
- Belt tensioners can only be activated once. Once the belt tensioners are activated, they must be replaced.

 Airbag modules and belt tensioners may contain toxic substances. This product cannot be disposed / discarded along with common trash. For your own safety and comfort, Volkswagen recommends replacing belt tensioners and airbag modules only at Volkswagen Dealerships.

Airbag system

Introduction

The vehicle is equipped with one front airbag for the driver and one for the passenger. Front airbags can provide the driver and front passenger with additional chest and head protection if the seat, seat belts, head rests and, in the case of the driver, steering wheel are adjusted and used correctly. Airbags are meant to provide additional protection. Airbags do not deploy in all collision situations and do not replace seat belts, which should always be used, even when the vehicle is equipped with front airbags.

WARNING

Never rely solely on the airbag system for your protection.

- Even if an airbag is triggered, it only offers additional protection.
- The airbag system only enhances protection if the seat belt is properly used, in order to mitigate injuries → page 26, *Seat belts*.
- Before every trip, each vehicle occupant must assume a correct sitting position, correctly fasten the seat belt belonging to their seat and keep it fastened properly throughout the trip.

WARNING

The risk of injury increases if there are any items located between the occupant and the deployment area of the airbag when it is triggered. This will impinge on the deployment zone of the airbag or the items will be flung against the body.

- Never hold any objects in your hand or on your lap while the vehicle is in motion.
- Never transport any objects on the passenger seat. Objects could enter the deployment zone of the airbag during sudden braking or driving manoeuvres and then be flung dangerously through the vehicle interior if the airbag is activated.
- People, animals or objects must never be in-between the vehicle's front seat occupants, the rear side seat occupants and the airbag expansion areas. Ensure this is also followed by children and passengers.

WARNING

The airbag system only supports a single airbag triggering event. If the airbags are triggered, the airbag system must be replaced.

- Airbags that have been triggered, and any affected system parts, must immediately be replaced with new parts that are approved by Volkswagen for the vehicle.
- Airbag system repairs and part replacements must only be carried out by Volkswagen Dealerships. Volkswagen Dealerships have the necessary tools, diagnostic equipment, repair information and qualified personnel for this purpose.
- Never use recycled airbag components or components that have been taken from end-of-life vehicles in your vehicle.
- Never alter any components of the airbag system.

WARNING

A fine dust (non-toxic) may be generated upon activation. This is perfectly normal and does not represent fire risk.

- The fine dust can cause irritation to the skin and eye membranes and cause breathing difficulties, particularly for people suffering from asthma or people who have or had other respiratory problems. To help reduce breathing difficulties, get out of the vehicle or open the windows or doors for more fresh air.
- If you come into contact with the dust, wash your hands and face with a mild soap and water before eating.
- Do not let the dust get into your eyes or into open wounds.
- If dust has entered your eyes, rinse them with water.

WARNING

Cleaning products case the airbag module surfaces to become porous and brittle. In case of activation, such parts could break and cause severe injuries.

- Never apply any chemical or cleaning products to the airbag module surfaces. Use only damp cloths to clean these areas.

Indicator lamp

☞ Please refer to  at the start of the chapter on page 34.



Fig. 32 Indicator lamp on the dashboard for the deactivated front passenger airbag.

Depending on the vehicle version, the front passenger airbag dashboard indicator light may not be available.



The yellow indicator lamp on the instrument cluster display lights up briefly after switching on the ignition to test for proper operation, and goes off after a few seconds.



OFF  Front passenger front airbag disabled. The yellow indicator lamp on the centre console is permanently on.

If, while the passenger front airbag is deactivated, the **OFF**  PASSENGER AIR BAG indicator lamp is **not permanently lit** or if it remains lit along with the instrument cluster indicator lamp , the airbag system may be malfunctioning → .

DANGER

If there is a fault in the airbag system, the airbag may not trigger correctly, may not trigger at all or may trigger unexpectedly. This can cause severe or fatal injuries.

- The airbag system must be checked by a Volkswagen Dealership as soon as possible.
- Never fit a child seat on the passenger seat while the airbag system is activated! The passenger front airbag may be triggered in an accident, despite damages.

NOTICE

Failure to observe the illuminated indicator lamps and its descriptions and meanings could lead to vehicle damages.

Troubleshooting

☞ Please refer to  at the start of the chapter on page 34.

Airbags system or belt tensioner damaged

The yellow indicator lamp is permanently on. A message will also be shown on the instrument cluster display.

A malfunction was identified in at least one airbag or belt tensioner.

- Contact a Volkswagen Dealership.
- Belt tensioners and the airbag system must be checked.

Front passenger front airbag disabled

The yellow indicator lamp is permanently on for the deactivated front passenger front airbag.

The front passenger front airbag is deactivated.

If, while the passenger front airbag is deactivated, the **OFF**  PASSENGER AIR BAG indicator lamp is **not permanently lit** or if it remains lit along with the instrument cluster indicator lamp , the airbag system may be malfunctioning →  in *Indicator lamp* on page 35.

- Check whether the front passenger front airbag needs to stay deactivated, for instance, while using a child seat on the front passenger seat.

Description and function of the airbags

☞ Please refer to  at the start of the chapter on page 34.

The airbags can protect vehicle occupants in case of accidents, reducing the occupant's movements in case of frontal collisions.

When an airbag is triggered, it is inflated by a gas generator. This causes the airbag covers to break, and the airbags inflate forcefully to cover their deployment zones within milliseconds. After holding vehicle occupants in place, who must always wear their respective seat belts, inflated airbags release a gas through openings located away from the vehicle occupants. This can

reduce the risk of severe and fatal injuries. A triggered airbag will not always prevent other injuries such as swelling, bruising and grazing. Heat by friction can also be generated during an airbag triggering event.

Airbags provide no protection for the arms or lower body parts.

The most important factors regarding airbag triggering are the type of accident, the vehicle impact area, the angle, the intensity of the impact, the vehicle structure, and the obstacle to which the vehicle collided. Therefore, airbags are not triggered in all collisions.

The airbag system's triggering depends on the intensity of the impact registered by an electronic control unit. If the accident's characteristics do not fall under the parameters configured in the control unit, the airbags are not triggered. Vehicle damages and cost repairs are used as indicators that the airbag system should have been triggered. Important factors in the triggering of the airbag include the nature (hard or soft) of the object that the vehicle hits, the angle and intensity of impact, and the vehicle impact area.

Airbags are merely used as additional safety features for the seat belts in some accidents in which the impact intensity is sufficient to trigger the airbags. Airbags can only be triggered once and only in certain situations. The seat belts are always there to provide protection in situations in which the airbags are not triggered or have already been triggered. For example, if the vehicle collides with a further vehicle following the initial collision, or is hit by another vehicle.

The airbag system is part of the vehicle's overall passive safety concept. The airbag system can only work effectively when the occupants are wearing their seat belts correctly and have assumed a proper sitting position  → page 24.

Components of the vehicle safety concept

The following vehicle safety equipment makes up the vehicle's safety concept to reduce the risk of severe and fatal injuries. Depending on the vehicle version, some of the equipment may not be fitted in your vehicle or may not be available at all in some countries.

- Front airbags for driver and front passenger.
- Height-adjustable head restraints optimised for rear impact.
- Seats.

- Optimised seat belts for all seats.
- Adjustable steering column.
- Brakes / parking brakes.
- Belt tension limiter for the driver and front passenger.
- Seat belt warning lamp .
- Airbag indicator lamp .
- PASSENGER AIR BAG OFF  indicator lamp.
- Belt tensioners for the driver and front passenger.
- Belt height adjuster for the front seats.
- Sensors and control units.

Situations in which front airbags are not triggered:

- If the ignition is switched off during a collision.
- If the impact intensity measured in control units is too small during frontal collisions.
- During minor side collisions.
- During rear collisions.
- If the vehicle rolls over.
- If the impact intensity measured by the control unit is insufficient to trigger the airbags.

In case of airbag triggering - Crash detection function

Whenever airbags are deployed during an accident, the crash detection functions are activated and the following actions may occur:

- Unlocking of vehicle doors (valid for vehicles equipped with electric central locking system) → page 47.
- Fuel supply cut off → page 177.
- Activation of inner vehicle lights → page 67.
- Activation of warning lamps → page 42.

Warning lamps may be switched off via the dash panel switch. 

Front airbags

Please refer to  at the start of the chapter on page 34.

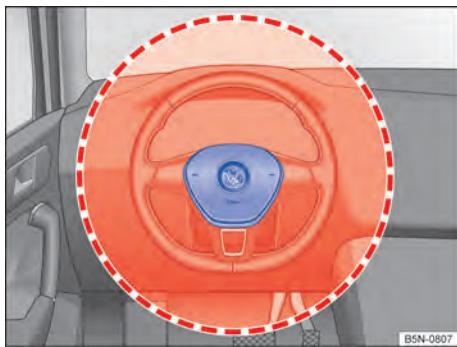


Fig. 33 Location and deployment zone of the driver front airbag.

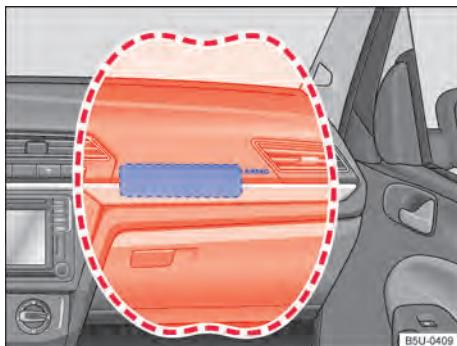


Fig. 34 Location and deployment zone of the passenger front airbag.

In conjunction with the seat belts, the front airbag system gives the front occupants additional protection for the head and chest in the event of a severe frontal collision. Farthest distance from the front airbag is recommended; at least 25 cm → page 24. This allows the front airbags to inflate fully when triggered, thus providing maximum protection.

The driver front airbag is located in the steering wheel → Fig. 33 and the passenger front airbag is located in the dash panel → Fig. 34. Airbag locations are identified by the text "AIRBAG".

The areas highlighted in red → Fig. 33 and → Fig. 34 are covered by the front airbags when triggered (deployment zone). For this reason, you must never leave or attach any items in these areas → .

The airbag covers fold out of the steering wheel → Fig. 33 and dash panel → Fig. 34 when the driver and passenger airbags are activated. The airbag covers remain connected to the steering wheel or the dashboard.

DANGER

Once triggered, the airbag inflates at high speed.

- Always leave the deployment zones of the front airbags clear.
- Never attach any items, such as drink or telephone holders, GPS, etc., to the covers of the airbags or anywhere in the airbag deployment zone.
- Front seat occupants must never carry any people, pets or objects in the deployment zone between themselves and the airbags.
- Do not attach objects, such as GPS devices, in the windscreen above the passenger front airbag.
- Do not attach, line, modify, or place any materials over the centre steering wheel surface (horn activation) and the front passenger airbag module surface, on the dash panel.

WARNING

The front airbags are triggered in front of the steering wheel → Fig. 33 and dash panel → Fig. 34.

- When driving, always hold the steering wheel with both hands on the outside of the ring: 9 o'clock and 3 o'clock positions.
- Adjust the driver seat in such a way that there is at least 25 cm between your breastbone and the hub of the steering wheel. If your physical build makes it impossible to fulfil this requirement, you must contact a Volkswagen Dealership in order to implement any necessary modifications.
- Adjust the passenger seat so that the distance between the passenger and the dashboard is as large as possible.

 Airbag system parts must never be reused in case of vehicle or component scrapping. All applicable environment disposal standards must be followed, in addition to other safety standards in effect. Volkswagen Dealerships are familiar with such requirements.

Manually turn the front passenger airbag on and off using the switch activated by the key

 Please refer to  at the start of the chapter on page 34.



Fig. 35 On the stowage compartment: switch deactivated by the key to switch the passenger front airbag on and off.

Depending on the vehicle version, the front passenger airbag on/off switch may not be available.

When fastening a rear-facing child seat on the passenger seat, the passenger front airbag must be deactivated!

Switch off the passenger front airbag

- Switch off the ignition.
- Open the storage compartment.
- Unfold the key bit out of the remote control vehicle key → page 45 or use the mechanical vehicle key.
- Using the key bit, turn the key-activated switch → **Fig. 35** into **OFF** position.
- Close the stowage compartment.
- The PASSENGER AIR BAG **OFF**  indicator lamp on the dashboard is permanently lit while the ignition is switched on → page 35.

Switch on the passenger front airbag

- Switch off the ignition.
- Open the storage compartment.
- Unfold the key bit out of the remote control vehicle key → page 45 or use the mechanical vehicle key.
- Using the key bit, turn the key-activated switch → **Fig. 35** into **ON** position.
- Close the stowage compartment.
- Check if, while the ignition is switched on, the **OFF**  PASSENGER AIR BAG indicator lamp on the dash panel is *not* lit → page 35.

Recognition feature for the deactivated passenger front airbag

A switched off passenger front airbag is **exclusively** indicated by the PASSENGER AIR BAG **OFF**  indicator lamp permanently lit in the **(OFF**  permanently lit yellow lamp) → page 35, *Indicator lamp*.

If the indicator lamp **OFF**  on the centre console is **not permanently lit** or if it is lit along with the indicator lamp  of the instrument cluster, no child seat system may be assembled over the passenger seat, for safety reasons. The passenger front airbag may be triggered in an accident.

WARNING

The passenger front airbag may only be deactivated in special cases.

- Switch the passenger front airbag on and off only while the ignition is switched off, in order to prevent damages to the airbag system.
- The driver is responsible for the correct positioning of the switch activated by the key.
- Switch off the passenger front airbag only when there is a child seat assembled on the passenger seat, under special circumstances.
- Switch the passenger front airbag back on as soon as the child seat is no longer being used on the passenger seat.

Transporting children in the vehicle

Introduction

Child seats reduce the risk of injury in an accident. Always transport children in child seats, according to applicable laws!

Note:

- Child seats are grouped according to the child's size, age and weight.
- Installing child seats in the vehicle can be executed with different retaining systems.

Before transporting babies and children in child seats on the front passenger seat, it is imperative to read all airbag system information and learn about potential injuries airbag deployment can cause children in the 0 and 0+ group.

This information is very important for the safety of the driver and all passengers, especially babies and small children.

Volkswagen recommends using child seats from the Volkswagen Original Accessories Program. These child seats were developed and approved for use in Volkswagen vehicles.

⚠ WARNING

Children who are not strapped in or who are not strapped in properly could sustain severe or fatal injuries while the vehicle is in motion.

- Never leave a child seat facing backwards on the front passenger seat without disabling the airbag for risk of possible injuries should the airbag trigger.
- Volkswagen recommends to always transport children of age under 12 years or less than 1.50 m high on the rear seat.
- Always secure children in the vehicle in an authorised restraint system suitable to their age.
- Always fasten child seat or children's seat belts correctly and ensure that children assume a correct sitting position.
- Ensure that the seat belt routing is correct for each use condition. If the seat belt must be passed over the child's body, ensure that the seat belt passes through the child's shoulder and never through the child's neck.

- Never allow children or babies to be transported on someone's lap, or while being held.
- Only ever fasten one child into each child seat.
- Read and observe the child seat's manufacturer instructions, especially regarding proper seat belt attachment.
- Replace child seats that withstand any force during an accident as they could have sustained damage that may not be visible.

⚠ WARNING

An unsecured, unoccupied child seat could be flung through the vehicle interior in the event of a sudden braking manoeuvre or accident. This could cause injuries.

- Always secure child seats safely, even if they are not being used, or stow them in the luggage compartment while the vehicle is in motion.

Child seat types

📘 Please refer to ⚠ at the start of the chapter on page 39.



Fig. 36 Figures (A), (B) and (C) illustrate the main securing points for the child restraint system for children only wearing the seat belt.

Always secure child seats properly, safely and in accordance with the installation instructions from the child seat manufacturer.

The child seat must be fastened by the vehicle's seat belts and must not allow longitudinal or transversal movement.

Legislation and legal requirements take precedence over the descriptions in this Owner's Manual. Various standards and regulations govern the use of child seats and methods for securing them (→ page 26). For example, this could mean that in some countries you are not allowed to use child seats on certain seats in the vehicle.

Country-specific standards for transporting children in vehicles

Child seats must conform to the ECE-R 44¹⁾ standard (Europe). Additional information can be obtained from your Volkswagen Dealership and online at www.volkswagen.com.

Country-specific securing systems

Child seat types → Fig. 36:

- (A) Portable crib or baby convenience seat
- (B) Child seat
- (C) Lifting seat

The systems are made up of attachments for child restraint systems for children wearing the seat belt in the rear seat.

Group classification for child seats according to ECE-R 44

Weight class	Child's weight	Age
Group 0	up to 10 kg	up to approximately 9 months
Group 0+	up to 13 kg	up to approximately 18 months
Group 1	9 kg to 18 kg	approximately 8 months to 3 ^{1/2} years
Group 2	15 kg to 25 kg	approximately 3 to 7 years
Group 3	22 kg to 36 kg	approximately 6 to 12 years

In addition to age range, other aspects must be considered for child seat adjustment purposes, such as weight, height, and physical build of the child, since the child's biotype may not correspond to the majority of the population within the same age range. In case of doubts, please contact a Volkswagen Dealership.

Child seats that have been tested and approved under the ECE R 44 standard bear the test mark firmly on the seat: a capital E in a circle, below the test number.

WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

WARNING

In the event of an accident, the rear seat is the safest place for children with properly fastened seat belts.

- A suitable child seat, correctly fitted and used on one of the rear seats, will provide the maximum level of protection for children up to 12 years old in most accident scenarios.

Installation and child seat usage in the vehicle

 Please refer to  at the start of the chapter on page 39.

The laws of physics, which come into force on a vehicle during a collision or any other kind of accident, also apply to children → page 26. In contrast to adults and teenagers, however, children's muscles and bones are not yet fully developed. Children have a higher risk for children of sustaining severe injuries in case of an accident.

Children must be transported using child restraint systems that are specifically suited to their size, weight and physical build, as children's bodies are not yet fully developed.

Not all countries allow you to transport children on the front passenger seat.

The front passenger airbag can pose severe risks for children transported in a rear-facing child seat.

¹⁾ ECE Regulation: Economic Commission for Europe-Regelung

If a rear-facing child seat is secured to the front passenger seat, an inflating passenger front airbag can strike it with such force that critical or fatal injuries may occur → . Therefore, **never** use a rear-facing child seat on the passenger seat when the front passenger airbag is activated!

Exceptions provided to transport children in the front seat → .

- When the vehicle only has front seats.
- When the number of children below the age of 10 exceeds the rear seat capacity. In this case, children with greatest stature may be transported in the front seat, using the vehicle's seat belt or the appropriate securing system according to the child's age.

Airbag sticker

In the vehicle there will be a sticker with important information on the front passenger front airbag. The content depends on the country and may vary. Check the sticker attached to the driver and/or front passenger sun visor.

- To the windscreen.

Prior installing a child seat backwards it is imperative to observe the warnings → .

What to be aware of when a child is using the front passenger seat:

- The front passenger seat backrest must be in an upright position.
- The front passenger seat must be pushed as far back as possible.
- The child must be using an appropriate child seat for his/her respective age, weight, and height.
- If seat belt height adjustment is available, it must be adjusted to the most adequate position according to the height of the child or the child seat.

DANGER

- If a child must use the front passenger seat, push the seat as far back as possible longitudinally in order to ensure greater distance from the front airbag.
- Keep the backrest in an upright position.
- Always secure children in the vehicle in an authorised restraint system suitable for their height and weight.

Using child seats on rear vehicle seats

 Please refer to  at the start of the chapter on page 39.

Rear seat only applies only to the New Extended Cab Saveiro.

Initially, it is imperative to distinguish the child restraint system principle, as per → page 39.

Before assembling the child seat, adjust or remove the head rest and adjust the front seat backrest angles, in case they somehow interfere with the child seat → page 61.

Securing child seats using the seat belt

 Please refer to  at the start of the chapter on page 39.

Universal child seats may be secured with the seat belt of seats indicated on the table with **u**. When such seats cannot be secured, an **x** is indicated.

DANGER

Never use child seats facing backwards in the front passenger seat while the front passenger airbag is activated. The child may be killed upon front airbag deployment, since the child seat is impacted with great strength and projected against the backrest.

Weight class	Front passenger seat	Rear side seats	rear central seat
Group 0 : up to 10 kg	x ^{a)}	u secured opposite to the driving di- rection	x
Group 0+ : up to 13 kg	x ^{a)}	u secured opposite to the driving di- rection	x
Group 1 : 9 to 18 kg	u secured in the driving direction	u secured in the driving direction	x
Group 2 15 to 25 kg	u secured in the driving direction	u secured in the driving direction	x
Group 3 22 to 36 kg	u secured in the driving direction	u secured in the driving direction	x

^{a)} For vehicles with single and extended cab install backwards to the driving direction with the airbag deactivated → page 38.

Securing child seats using the seat belt

- Read and follow the instructions provided by the child seat manufacturer.
- If the child seat is assembled on the front passenger seat, push the front passenger seat as far back as possible and adjust the backrest to an upright position → page 24.
- If seat belt height adjustment is available, it must be placed in the optimal position based on the height of the child or the child seat.
- Place the child seat over the seat and pass the seat belt as per the child seat manufacturer's instructions.
- Adjust or remove the headrest to prevent interference with the child seat, if necessary → page 62.
- Ensure that the seat belt is not twisted.
- Insert the seat belt latch plate into the respective buckle until a "clicking" sound is heard.

- The seat belt must lie firmly and adequately over the child seat or the child.
- Conduct seat belt traction test – ensure that the lower belt strap is locked and can no longer be pulled out.

Removing child seats

Unfasten seat belts only when the vehicle is stationary → .

- Press the red button in the buckle. The latch plate is released and springs out.
- Guide the belt back by hand so that it rolls up easily, without twisting the seat belt and without damaging the trim.
- Remove the child seat from the vehicle according to the instructions given by the child seat manufacturer.

 **WARNING**
Unfastening seat belts while the vehicle is in motion can lead to severe or fatal injuries in the event of an accident or sudden braking or driving manoeuvres.

- Unfasten seat belts only when the vehicle is stationary .



In an emergency

Making you and your vehicle safe



Fig. 37 On the upper portion of the centre console: warning lamp switch.

Observe any legislation concerning the safety of a broken down vehicle. For example, many countries stipulate that you have to switch on the hazard warning lights → page 44.



Checklist

To ensure your own safety and the safety of your passengers, observe the following points in the order given → :

1. Stop the vehicle at a safe distance away from moving traffic and on a suitable surface → .
2. Switch on the hazard warning lights with the  → [Fig. 37](#) switch.
3. Apply the handbrake → [page 95](#).
4. Move the gear shift lever into the neutral position → [page 88](#).
5. Stop the engine and remove the key from the ignition lock → [page 86](#).
6. Ensure that all occupants exit the vehicle away from moving traffic and proceed to a safe position, e.g. behind the guardrail.
7. Take all vehicle keys with you when you leave the vehicle.
8. Place the warning triangle in position to draw the attention of other road users to your vehicle.
9. Allow the engine to cool down and, if necessary, seek expert assistance.

When the hazard warning lights are switched on, all turn signals flash at the same time. The turn signals indicator lights  and an indicator light at the switch  flash at the same time. The hazard warning lights also work when the ignition is switched off.

Lit indicator lights could indicate a change in direction or lane while towing or by activating the turn signal lever. The indicator lights are temporarily interrupted.

Examples in which hazard warning lights must be switched on:

- When traffic ahead suddenly starts moving more slowly or you reach the tail end of a traffic jam. This will warn vehicles behind you.
- When there is an emergency.
- When the vehicle breaks down.
- When being towed.

Always follow local regulations for the use of the hazard warning lights.

If the hazard warning lights are not working, use an alternative method of drawing attention to the broken down vehicle (according to applicable legal provisions).

Emergency brake lights - ESS (Emergency Stop Signal)

For vehicles with ESS function and anti-lock brake system (ABS), during sudden and continuous braking at speeds greater than 80 km/h, the brake light lamp may flash to warn cars coming in from behind.

If the braking manoeuvre is further extended, maintaining the same deceleration rate, the warning lights are automatically activated and flash when the vehicle reaches a speed lower than approximately 10 km/h. Upon resuming vehicle movement, warning lights are automatically deactivated.

Warning lamps may also be switched off via the  dash panel → [Fig. 37](#) switch.

WARNING

Broken-down vehicles lacking due signalling increase the risk of accidents both for you and for other road users.

- Stop the vehicle as soon as possible in a safe location. Park the vehicle at a safe distance from moving traffic in order to lock all doors securely in an emergency. Switch on the hazard warning lights and set up the warning triangle to warn other road users.
- Never leave unattended children or people with special needs in the vehicle with the doors locked. This may mean that they are locked in the vehicle in an emergency. Persons locked in the vehicle may be exposed to extremely high or low temperatures.

WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

WARNING

The components of the exhaust system become very hot. This can cause fires and serious injuries.

- Never park the vehicle so that parts of the exhaust system can come into contact with inflammable material underneath the vehicle, e.g. dry grass, fuel, etc.

i The vehicle battery will discharge if the hazard warning lights are left on over a long period of time – even if the ignition is switched off.

i Whenever airbags are activated in accidents, warning lights may be automatically activated → page 36.

Emergency equipment

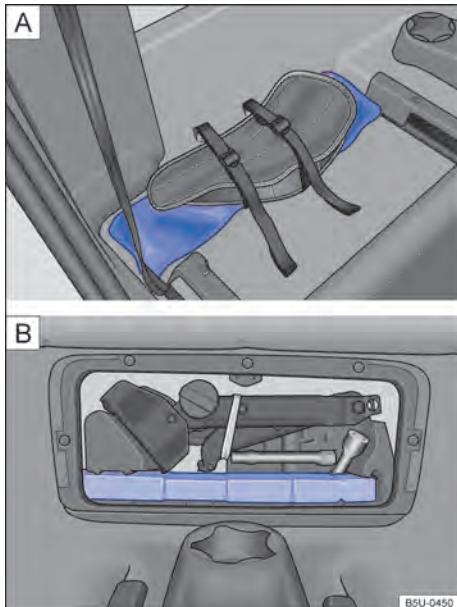


Fig. 38 **[A]** Behind the passenger seat: warning triangle. **[B]** On the rear seat floor: warning triangle - New Saveiro Extended Cab.

Warning triangle

The warning triangle's placement varies depending on the vehicle version and/or model.

The warning triangle may not be available in some export markets.

Fold the passenger seat backrest to access the warning triangle.

The warning triangle is located on the floor behind the passenger seat → **Fig. 38** fastened to the vehicle toolkit.

In the *New Saveiro Extended Cab*, the warning triangle is located on the rear seat floor, secured behind the trim.

Fire extinguisher

The fire extinguisher may not be available for some export markets.

According to the vehicle version, the fire extinguisher support may be located in the footwell underneath the driver seat.

◀ The fire extinguisher must correspond to the legal requirements, be always ready for use, and be regularly inspected (see the inspection seal on the fire extinguisher).

⚠ WARNING

Loose objects may be projected inside the vehicle in the event of a sudden driving or braking manoeuvre, as well as during accidents, and may cause severe injuries.

- Secure the warning triangle in the respective straps.

i The warning triangle must comply with applicable legal provisions in each country. □

Open and close

Vehicle key

Vehicle key functions

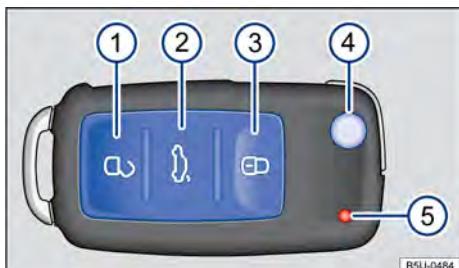


Fig. 39 Vehicle key with remote control.

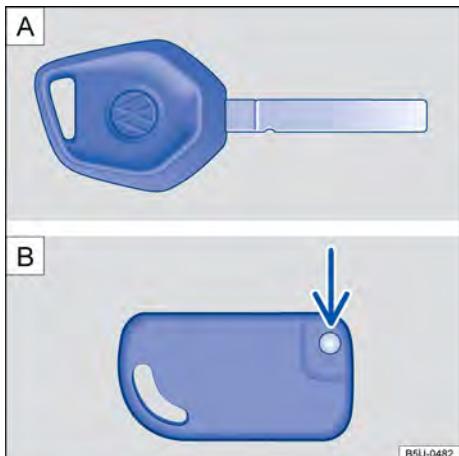


Fig. 40 A Mechanical key. B Foldable mechanical key.

Key for→ Fig. 39:

- ① Central locking button: unlock the vehicle.
- ② Unlock the boot lid: press the button . Only the boot lid is unlocked.
- ③ Central locking button: lock the vehicle.
- ④ Folding and unfolding the key bit.
- ⑤ Indicator lamp: flashes after pressing the button.

Key for→ Fig. 40:

A Mechanical key.

B Foldable mechanical key. Folding and unfolding the key blade (arrow).

Locking or unlocking the vehicle from the outside

- *Unlock*: press ④. Press and hold for convenience opening. OR: insert the vehicle key into the driver door lock cylinder and turn **counterclockwise**.
- *Lock*: press ④. OR: insert the vehicle key into the driver door lock cylinder and turn **clockwise**. Press and hold for convenience closing.
- *Unlocking the dropside with remote control*: press the button ④ or → page 53 on the vehicle key. The rear lid is unlocked.
- *Unlock the dropside with the key*: unlock the driver's door and insert the key into the door cylinder and turn **counterclockwise**. The rear lid is unlocked.

The remote control key only locks and unlocks the vehicle when the battery has enough power and if the remote control key is located a few metres away from the vehicle.

- When the vehicle is locked, all turn signals will flash *once* as confirmation.
- When the vehicle is unlocked, all turn signals will flash *twice* as confirmation.

It is possible to enable the sound signal (horn) of the alarm activation/deactivation confirmation. For vehicles with Volkswagen Information System it is possible to enable/disable it through the instrument cluster. For the remaining vehicles go to a Volkswagen dealership to enable/disable the sound signal.

If the turn signals *do not* flash as locking confirmation, at least one of the doors or the boot lid is not closed.

The vehicle cannot be locked using the vehicle key if the driver door is still open. The vehicle will be locked again automatically if you do not open one of the doors or the boot lid a few seconds after unlocking the car with the remote control key. This function prevents the vehicle from remaining unlocked if the unlocking button is pressed by mistake.

⚠ WARNING

Improper or unsupervised use of the vehicle keys can cause severe accidents or injuries.


- Always take all vehicle keys with you every time you leave the vehicle. Children or unauthorised persons could lock the doors and tailgate, start the engine, switch on the ignition and thus operate electrical equipment, such as the electric windows.
- Never leave unattended children or people with special needs in the vehicle. They could become trapped in the vehicle in an emergency and may not be able to get themselves to safety. Depending on the time of year, for example, locked vehicles can be subjected to very high or very low temperatures. This can cause serious injuries and illness or fatalities, especially for small children.
- Never remove the vehicle key from the ignition lock when the vehicle is in motion.

⚠ NOTICE

Every vehicle key contains electronic components. Protect the key from damage, moisture and excessive vibration.

 Press the buttons on the vehicle key only if the corresponding function is actually needed. Pressing a button when the function is not required could lead to the vehicle being unlocked unintentionally or the alarm going off. This also applies even when it is believed to be outside the effective range.

Replacing the battery

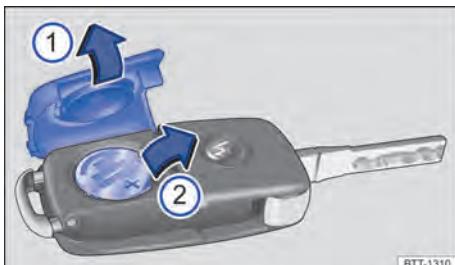

Key for → Fig. 41:

- Remove the cover.
- Remove the battery.

Volkswagen recommends having the battery replaced by a Volkswagen Dealership or qualified workshop.

- Unfold the vehicle key bit → page 45.
- Remove the cap on the rear side of the key → Fig. 41 ① as indicated by the arrow → ①.
- Position the new battery as shown ② and push it into the battery compartment in the opposite direction of the arrow → ①.
- Fit the cap as shown ① and push it onto the vehicle key housing in the opposite direction of the arrow until it engages.

⚠ DANGER

Should 20 mm diameter batteries or other lithium batteries be swallowed, severe or even fatal injuries may result within a short period of time.

- Always keep the vehicle key, key ring with batteries, spare batteries, round cells and other batteries out of the reach of children.
- Seek medical assistance immediately if you suspect someone has swallowed a battery.

⚠ NOTICE

- The vehicle key may be damaged if the battery is improperly changed.
- Unsuitable batteries may damage the vehicle key. Discharged batteries should only be replaced with new batteries of the same voltage rating, size and specification.
- Ensure that the battery is fitted the right way round.

 The batteries contain toxic substances. This product cannot be disposed / discarded along with common trash. There are specific legal requirements regarding the disposal / discarding of used batteries. For your safety and convenience, Volkswagen recommends replacing vehicle batteries at a Volkswagen Dealership or qualified workshop.

Fig. 41 Vehicle key with remote control: ① Open the battery case cover. ② Remove the battery.

Synchronize the vehicle key

When it is impossible to unlock or lock the vehicle with the vehicle key, synchronize the vehicle key or replace the battery → page 46.

- Approach the vehicle with the remote control key.
- Press the locking  or unlocking button once .
- Insert the key bit to be programmed into the driver door lock cylinder in up to 60 seconds.
- Next, turn the key towards the vehicle locking or unlocking direction.
- The system will be synchronized.

 Synchronisation is only possible if the remote control key is previously programmed for the vehicle.

Troubleshooting

Vehicle cannot be locked or unlocked

The remote control vehicle key may be temporarily disabled due to obstacles, bad weather conditions, weak battery, or excessive transmitters operating in the same frequency range near the vehicle (e.g. mobile phones or transmitters).

OR: if the buttons in the vehicle key with remote control or one of the central locking buttons are pressed repeatedly within a short period of time, the central locking system will switch off briefly to prevent overloading. The vehicle will then be unlocked. Lock the vehicle if necessary.

The indicator lamp does not flash

When the indicator lamp on the vehicle key does not flash, the vehicle key battery needs to be replaced → page 46.

Spare key

To acquire a key for the vehicle, the vehicle identification number is required.

Several vehicle keys may be valid for a vehicle.

The new vehicle keys can be obtained from your Volkswagen Dealership or from a qualified workshop.

Central locking button and doors

Introduction

The central locking system will only work correctly when all doors are properly closed. The vehicle *cannot* be locked with the vehicle key with remote control or central locking button if the driver door is open.

If the vehicle is unlocked and not used for a long time (e.g. in your own garage) the vehicle battery could discharge or the engine may not start.

WARNING

Improper use of the central locking system could cause serious injuries.

- The central locking system locks all doors. Locking the vehicle from the inside may prevent the doors from being opened unintentionally and unauthorised persons from entering the vehicle. However, locked doors can delay assistance to passengers inside the vehicle in the event of an accident or emergency.
- Never leave unattended children or people with special needs in the vehicle. All doors can be locked from the inside using the central locking button. This may mean that people lock themselves in the vehicle. Persons locked in the vehicle may be exposed to extremely high or low temperatures.
- Depending on the time of year, locked vehicles can be subjected to extremely high or low temperatures. This can cause serious injuries and illness or fatalities, particularly for small children.
- Never leave anyone inside a locked vehicle. They could become trapped in the vehicle in an emergency and may not be able to get themselves to safety.
- Open and close doors and the dropside only when there is no one near its opening/closing range.

Indicator lamp

 Please refer to  at the start of the chapter on page 47.

Only available in some versions equipped with the central locking system.

When locking the vehicle from the outside, the indicator light  will flash on the instrument cluster display.

Mechanical locking and unlocking

 Please refer to  at the start of the chapter on page 47.

Mechanical locking applies to vehicles *without* electrical locking systems.

- **Unlock the doors:** Insert the vehicle key in the driver door lock or front passenger door lock. Turn the key to the unlocking position. The locking pin moves up.
- **Lock the doors:** Insert the vehicle key into the driver door lock. Turn the key to the locking position. The locking pin moves down.

Doors may also be unlocked from inside the vehicle. The door is unlocked by pulling the door handle once.

It is possible to lock the doors from outside, without the key. For such, press the locking pin down and close the door. This locking method does not apply to the driver door, in order to prevent the key from being locked inside the vehicle.

From inside, it is possible to lock the doors through the locking pin. However, for vehicles equipped with alarm systems, the latter will not be activated.

If the driver door is open or not entirely closed (first-stage lock), the vehicle may not be locked.

WARNING

Locked doors help prevent unwanted individuals accessing the car from outside, for example, during a red light. This may also hinder the access of proper medical assistance during emergencies.

Description of the central locking system

 Please refer to  at the start of the chapter on page 47.

The central locking system (not available in some versions) allows locking and unlocking the doors:

- From outside the vehicle with the mechanical vehicle key in the driver door, for vehicles without remote control → page 48.
- Using the remote control key in the driver door, when the remote control is not functional, in case of emergency → page 51.
- Remote control → page 45.
- From inside using the central locking button → page 49.

The passenger door can be locked manually if the remote control vehicle key or central locking system fails → page 50.

The driver door may be manually unlocked using the mechanical part of the vehicle key, in case the remote control vehicle key or central locking system fails.

Automatic locking (Auto Lock)

The vehicle is automatically locked after reaching 20 km/h, in case it is still unlocked at such time.

 If the buttons on the vehicle key with remote control (→ page 45, *Vehicle key*) or one of the central locking buttons → [Fig. 42](#) are pressed repeatedly within a short period of time, the central locking system will switch off temporarily to prevent overloading. The vehicle will then be unlocked.

 In vehicles without alarm system and with central locking system, whenever the vehicle is locked from the outside, the indicator lamp  in the instrument cluster will flash, indicating that the vehicle is locked.

Central locking button

 Please refer to  at the start of the chapter on page 47.



Fig. 42 On the driver door: central locking button.

Vehicle with central locking system

Key for→ Fig. 42:

-  Unlocks the vehicle.
-  Locks the vehicle.

The central locking button functions with the ignition switched on or off.

If the vehicle is locked from outside with the remote control vehicle key or through the driver door with the mechanical key, the central locking button will not work.

Please note the following when using the central locking button to lock the vehicle:

- The anti-theft alarm system will **not** be activated.
- It is not possible to open the doors from *outside*, for example, when stopped at traffic lights.
- The doors can be unlocked and opened from inside by pulling the door release handle. Eventually, you may have to pull the door release lever more than once.
- If any of the vehicle's doors is open, the central locking system will not be activated.

The vehicle will unlock automatically once the vehicle has come to a standstill and the vehicle key has been removed, if the automatic unlocking function is active → page 48.

Vehicle without central locking system

In vehicles without central locking system, the doors are locked by pressing the locking pin → page 48.

To open a door, pull the respective door handle or lift the locking pin.

The following applies when the vehicle is locked:

- It is not possible to open the doors from *outside*, for example, when stopped at traffic lights.
- The doors can be unlocked and opened from inside by pulling the door release handle. Eventually, you may have to pull the door release lever more than once.
- If any of the vehicle's doors is open, the central locking system will not be activated.



Manually locking or unlocking the driver door

 Please refer to  at the start of the chapter on page 47.

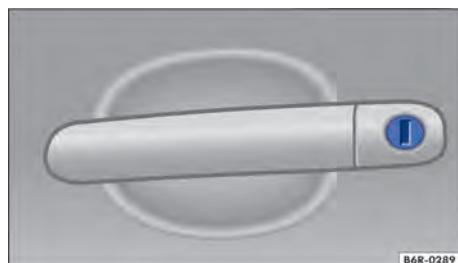


Fig. 43 Driver door handle with lock cylinder.

All doors are usually locked when manually locking the door. Only the driver door is manually unlocked.

- If necessary, unfold the vehicle key bit → page 45.
- Insert the key bit into the lock cylinder and lock/unlock the vehicle → Fig. 43.



Manually locking the passenger door

 Please refer to  at the start of the chapter on page 47.

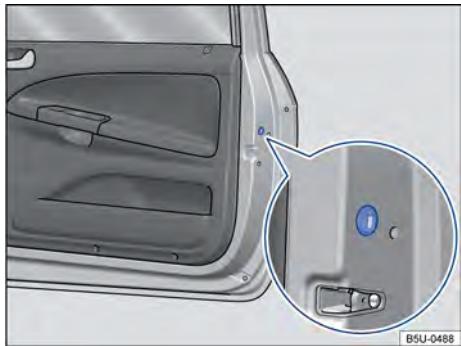


Fig. 44 Front part of the right-hand door: emergency vehicle locking, covered by a rubber seal.



Fig. 45 Emergency vehicle locking with the vehicle key.

For vehicles with electric locking system, the passenger door may be manually locked. The anti-theft alarm system will **not** be activated.

- Open the door.
- Remove the rubber seal at the side of the door. The seal may be identified via the image of a padlock  → Fig. 44.
- If necessary, fold the vehicle key bit out → page 45 or use the mechanical vehicle key.
- Insert the key bit into the slot → Fig. 45 and turn clockwise (towards vehicle) until reaching the stop.

- Secure the rubber seal and close the door completely.
- Check if the door is locked.
- The vehicle must be checked immediately by a Volkswagen Dealership or qualified workshop.

NOTICE

When carrying out an emergency locking procedure, remove and install parts carefully in order to avoid damage to the vehicle.

 The vehicle doors can be unlocked and opened from inside by pulling the door release handle. Eventually, it might be necessary to pull the door release handle twice → page 47.

 The driver door may be locked or unlocked manually through the door cylinder → page 51, *Mechanically unlocking all vehicle doors (emergency opening)*.



Troubleshooting

 Please refer to  at the start of the chapter on page 47.

Locking the vehicle after airbag deployment

The entire vehicle is unlocked when the airbags are triggered during an accident. Depending on the level of damage, the vehicle may be locked as follows after an accident:

- Switch off the ignition.
- Open and close one of the doors once.
- Remove the key from the vehicle and close → page 45.
- **OR:** press the central locking  button in the driver door → page 49.



Anti-theft alarm system

 Please refer to  at the start of the chapter on page 47.

The anti-theft alarm is activated automatically when the vehicle is locked using the remote control key or mechanical key.



When does the system trigger an alarm?

The anti-theft alarm emits audible warning signals for about 30 seconds (per event) and visual warning signals for up to 5 minutes when the following non authorized actions are executed to the locked vehicle:

- Opening of a door mechanically unlocked with the vehicle key.
- A door is opened.
- The engine compartment cover is opened.
- The ignition is switched on using an invalid key.
- One of the windows is removed, broken or opened.
- Movement in the vehicle (in vehicles with interior movement monitoring system → page 51).

Switching off the alarm

Unlocking the vehicle with the  unlocking button of the vehicle key.

OR: turning the ignition on with a valid vehicle key.

Mechanically unlocking all vehicle doors (emergency opening)

In case the remote control fails and the vehicle must be mechanically unlocked with the key bit, follow the instructions below:

- Turn the key in the driver door cylinder clockwise. All doors are unlocked (*valid for vehicles with central locking system and without alarm*).
- Open the driver door and switch on the ignition in up to 15 seconds, after which the alarm is sounded. By switching on the ignition, the immobilizer recognizes a valid key and deactivates the alarm. After this procedure, all doors and the engine compartment cover may be opened.

 The alarm is triggered once again if after the initial trigger, a new attempt to enter the vehicle or a protected area occurs. For example, if the engine compartment cover is also opened after opening a door.

 The anti-theft alarm system is **not** activated by locking the vehicle from inside with the central locking button .

 When the driver door is mechanically unlocked with the key, only the driver door is unlocked, instead of the entire vehicle. Only after turning the ignition on will the passenger door be cleared - but not unlocked - and the central locking button activated (*Valid only for vehicles with central locking system and alarm*).

 The anti-theft alarm will not function correctly if the vehicle battery is weak or discharged.

Interior monitoring system

 Please refer to  at the start of the chapter on page 47.

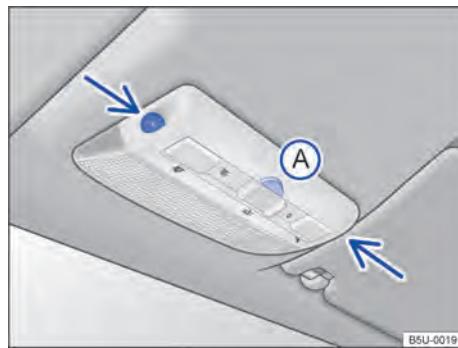


Fig. 46 On the roof console: sensors for the interior monitoring system and button **(A)** to turn off the interior monitoring system.

Depending on the vehicle version, the interior monitoring system may not be available.

The interior monitoring system triggers the alarm with the vehicle locked in case movement is identified inside the vehicle. Both the sensor and receptor are located in the scan lamp set → **Fig. 46** (arrows).

Switching on the interior monitoring system

Lock the vehicle using the remote control or mechanical vehicle key. When the anti-theft alarm is switched on, the interior monitoring system is also activated.

Switching off the interior monitoring system

- Remove the key from the ignition.
- Open the driver door.

- Press → **Fig. 46 A**. The indicator lamp  lights up on the dash panel.
- Close all doors.
- The indicator lamp  remains on for approximately 30 seconds or until the alarm system is activated. If the alarm is activated within 30 seconds, the indicator lamp will immediately start flashing.
- Lock the vehicle using the vehicle key in up to 20 seconds. The interior monitoring system is deactivated until the vehicle is locked.

For example, switching off the interior monitoring system while unsecured animals are left inside the vehicle for a short period  → page 47.

Monitoring must be deactivated each time the vehicle is unlocked, otherwise it would be activated the next time the vehicle is locked.

Risk of false alarm

Interior monitoring can only work properly if the vehicle is completely closed. Legal provisions must be followed. A false alarm can be triggered in any of the following circumstances:

- When one or more windows are completely or partially opened, since the alarm may be activated in such cases.
- If items such as loose pieces of paper and items attached to the interior mirror (e.g. air-fresheners) are left in the vehicle.
- If metallic items are left in the storage compartment (e.g. keys or coins).
- If a mobile telephone that is left in the vehicle vibrates.

NOTICE

Valid only for vehicles with the Volkswagen Information System: if the vehicle interior monitoring is switched off and the windows must be slightly opened, the following instructions must be followed:

- Deactivate the automatic window closing function through the **Convenience** submenu, in the **Auto Closing** option. The vehicle interior monitoring system must be switched off, otherwise the alarm may be activated.
- Volkswagen recommends only performing such procedure if necessary.

Bed cover

Introduction

WARNING

Incorrect and unsupervised unlocking, opening or closing of the bed cover can cause accidents and severe injuries.

- Open and close the bed cover only when there is no one near its opening range.
- After closing the bed cover, check to make sure that it is closed and locked correctly so that it does not open while the vehicle is in motion. The closed bed cover must be flush with the surrounding body panels.
- Close and lock the bed cover and doors when the vehicle is not in use. Ensure that no one remains in the vehicle.
- Never leave children playing unattended in or around the vehicle, especially when the boot lid is open. Children could climb into the luggage compartment and shut the boot lid, trapping themselves inside. Depending on the time of year, locked vehicles can be subjected to extremely high or low temperatures. This can cause serious injuries and illness or fatalities, particularly for small children.
- Never leave unattended children or people with special needs in the vehicle. All doors can be locked from the inside using the central locking button. This may mean that people lock themselves in the vehicle. Persons locked in the vehicle may be exposed to extremely high or low temperatures.

NOTICE

Before opening the bed cover, please check that there is enough space to open and close the tailgate (e.g. when towing a trailer or when parked in a garage).

Opening and closing the bed cover

📘 Please refer to  and  at the start of the chapter on page 52.

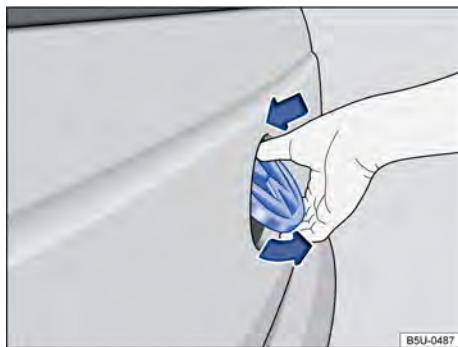


Fig. 47 Open the bed cover.

Locking and unlocking the dropside through the Volkswagen logo

- In vehicles with central locking system and remote control, press the  button or  in the vehicle key. The dropside can now be opened.
- In vehicles with a mechanical key, unlock the driver's door and insert the key into the door cylinder and turn **counterclockwise**. The rear lid is unlocked.
- Press the upper part of the Volkswagen logo with your thumb → Fig. 47 and insert your other fingers in the lower part of the logo, pulling it out. The dropside will unlock and positioned in place by the gas spring. Pull it down to open.

Close and lock the dropside

- Lift the tailgate upwards and press it until an audible clicking sound is heard on both sides → .
- In vehicles with central locking system and remote control, press the  button in the vehicle key.
- In vehicles with a mechanical key, insert the vehicle key bit into the driver's door lock cylinder and turn **clockwise**.

WARNING

In vehicles with bed canvas, do not close the bed cover while hands are touching the upper cover edge, otherwise such procedure may cause injuries.

NOTICE

The bed cover may be loaded with up to 150 kg distributed, when it is fully opened. When maximum loading is exceeded, the fastening cables may break or the bed cover may be damaged.

- Never close the bed cover by pulling the fastening cables; this may cause the cables to deform or damage the vehicle's paint work.

NOTICE

For vehicles with bed canvas, the bed cover may be opened even while the canvas is installed.

Bed canvas

Introduction

Passengers may not be transported in the luggage compartment → .

Assembling and disassembling the bed canvas

Volkswagen recommends assembling and disassembling the bed canvas at a qualified workshop. To assemble and disassemble the bed canvas, specific vehicle parts must also be disassembled. In addition, fastening screws must be tightened with a torque wrench. This requires specialized tools and technical knowledge. Volkswagen recommends using a Volkswagen Dealership for this purpose.

WARNING

Incorrect and unsupervised unlocking, opening or closing of the bed cover can cause accidents and severe injuries.

- Open and close the bed cover only when there is no one near its opening range.
- After closing the bed cover, check to make sure that it is closed and locked correctly so that it does not open while the vehicle is in motion. The closed bed cover must be flush with the surrounding body panels.
- Close and lock the bed cover and doors when the vehicle is not in use. Ensure that no one remains in the vehicle.
- Never travel in the bed.

- Never leave children playing unattended in or around the vehicle, especially when the bed cover is open. Children could climb into the bed and shut the cover, trapping themselves inside. Depending on the time of year, locked vehicles can be subjected to extremely high or low temperatures. This can cause serious injuries and illness or fatalities, particularly for small children.

NOTICE

The bed canvas may not be disassembled and assembled without due technical knowledge and special tools.

- Incorrectly assembling and disassembling the bed may damage the vehicle.

Adjust or release the bed canvas

 Please refer to  and  at the start of the chapter on page 53.

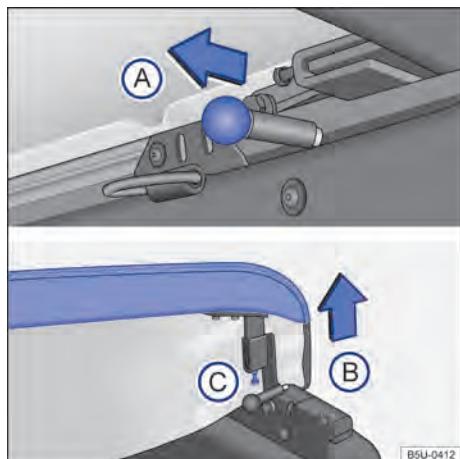


Fig. 48 Bed canvas stretching adjustment locks and bolt.

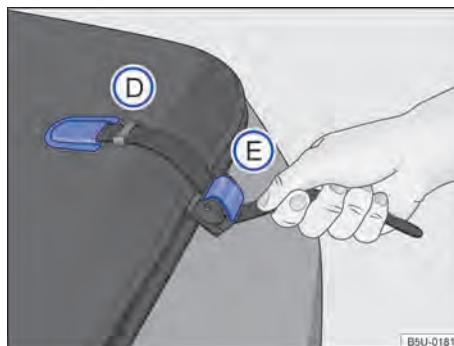


Fig. 49 Bed canvas attachment.

Depending on the vehicle version, the bed canvas may not be available.

Adjust the bed canvas stretching

- Open the tailgate to access the stretching screw and nut → page 52.
- Move the locking pin → **Fig. 48 A** in the direction of the arrow, in both sides, simultaneously.
- Lift the canvas edge in the direction of the arrow **B**.
- To adjust stretching, release the nut and tighten the bolt or release the bolt **C** until reaching the desired stretching.
- Next, tighten the nut against the locking handle.

Release the bed canvas

- Open the tailgate to access internal bed cover fastening locks → page 52.
- Move the locking pin → **Fig. 48 A** in the direction of the arrow, in both sides, simultaneously.
- Lift the canvas edge in the direction of the arrow **B**.
- Remove the belt end from the housing → **Fig. 49 D**, on the sides of the bed cover, and force the belt downwards to unlock the lock **E**.
- Pull the strap from the upper region to remove it from the lock.
- Insert the strap edges into the housing **D** to facilitate the bed cover retraction.

⚠ WARNING

- Never transport or place cargoes over the bed canvas, otherwise it may lead to accidents and vehicle damages.

- Before driving, ensure that the bed canvas is fastened in place.

💡 NOTICE

The bed cover may be open even with the bed canvas fully installed.



Retract the bed canvas (variant 1)

☛ Please refer to **⚠** and **💡** at the start of the chapter on page 53.

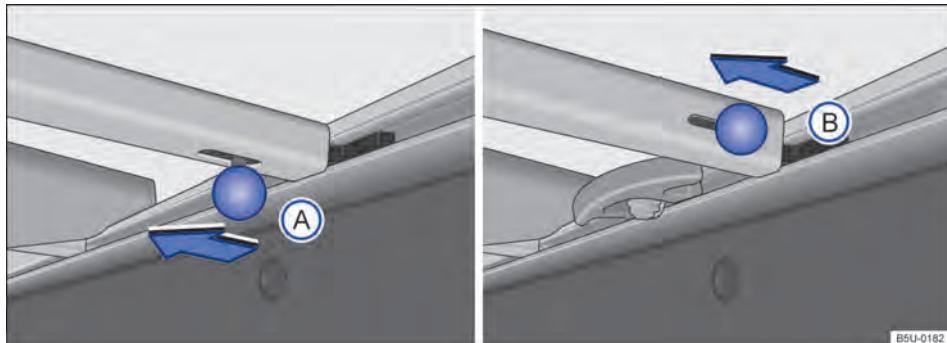


Fig. 50 Luggage compartment cross struts: **(A)** vehicles with fixed strapping supports, **(B)** vehicles with sliding strapping supports.

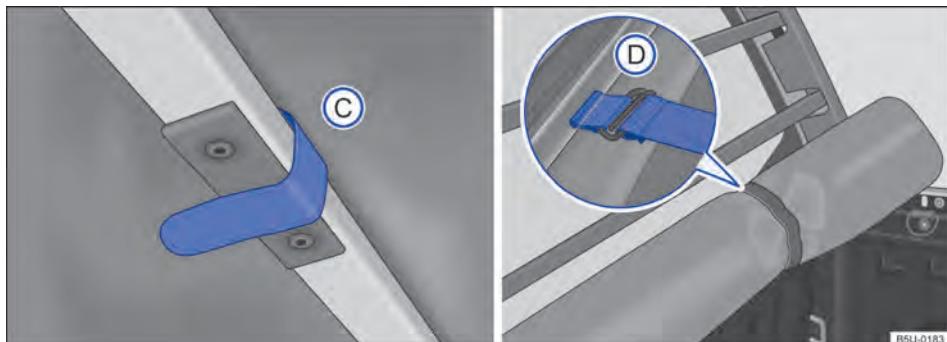


Fig. 51 On the bed: fastening strap and bed canvas properly retracted.

The bed canvas may be retracted to transport large volumes, as described below:

- Release the bed cover → page 54.
- Retract the canvas until the cross members are accessed.

- To remove the type **(A)** or **(B)**, move the locking pin in the direction of the arrow → **Fig. 50**. To remove the beam near the rear window, the fastening straps of the bed canvas → **Fig. 51** **(C)** must be released.



- Place the cross members underneath the canvas and roll them allowing the external portion (waterproof) of the canvas to be visible.
- After fully retracting the canvas, secure it with the fastening straps ④.

⚠ WARNING

- When installing cross members, ensure that the members' edges are perfectly fitted into its respective housings.
- Before driving, ensure that the bed canvas is fully retracted and properly fastened in place by the straps.



Retract the bed canvas (variant 2)

⚠ Please refer to **⚠** and **①** at the start of the chapter on page 53.

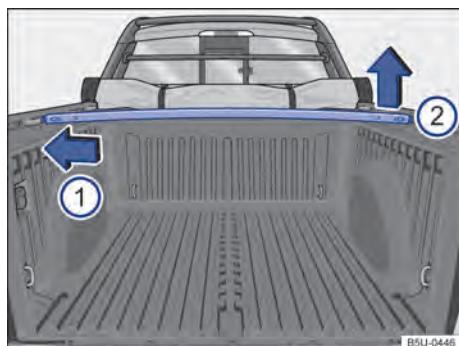


Fig. 52 Bed crossmembers - remove and install.

The bed canvas may be retracted to transport large volumes, as described below:

- Release the bed cover → page 54.
- Retract the canvas until the cross members are accessed.
- To remove, press the cross member on the left side in the direction indicated by the arrow → **Fig. 52 ①** and remove the cross member from its seat from the right **②**.
- To remove the cross member near the rear window, the fastening straps of the bed canvas → **Fig. 51 ④** must be released, and repeat the same previous procedure to remove the cross member (when more than one cross member is available).
- Place the cross members underneath the canvas and roll them allowing the external portion (waterproof) of the canvas to be visible.

- Once the cross member is fully retracted, secure it using fastening straps → **Fig. 51 ④**.
- To reinstall the bed cover crossmembers again, proceed as described earlier in reverse.

⚠ WARNING

- When installing cross members, ensure that the members' edges are perfectly fitted into its respective housings.
- Before driving, ensure that the bed canvas is fully retracted and properly fastened in place by the straps.



Windows

Opening or closing the windows

Manually opening or closing the windows

In vehicles *without electric windows*, activate the handle located in the internal door lining to open or close windows.

Electric opening or closing the windows

The buttons are located on the doors and centre console → page 9

Opening the window: press the button.
 Closing the window: pull the button. **OR**
 for the centre console buttons, press the bottom part of the button to open and the upper part of the button to close the window.

Passenger door button

The button in the passenger door is equal and has the same function as the driver door button. There is only one button in the door's lining.



One-touch opening and closing

The one-touch opening and closing function makes it possible to fully open and close the windows. Individual buttons do not have to be held down in order to do so.

For the one-touch closing function: pull the respective window's button upwards until reaching the second stage.

For the one-touch opening function: press the respective window's button briefly downwards until reaching the second stage.

Stopping the one-touch function: press or pull the button for the respective window once again.

Convenience opening and closing

Depending on the vehicle version and equipment items, the convenience opening/closing and automatic closing features may not be available, vary in functions, or only be partially available.

Depending on the vehicle version, windows can be opened and closed from the outside using the vehicle key with the ignition off:

- Press and hold unlock button  or lock button  on the vehicle key. All electric windows are opened or closed. **OR** insert the vehicle key into the driver door lock cylinder and hold turned **counter-clockwise** for all the electric windows to open or **clockwise** for all the electric windows to close.
- To interrupt the function release the locking or unlocking button **OR** release the key.

WARNING

Improper or unsupervised use of the electric windows can cause serious injuries.

- Electric windows must only be opened or closed when you are sure that nobody and nothing is in their operating area.
- Never leave children or people who require special assistance unsupervised in the vehicle when the vehicle is locked.
- Always take all vehicle keys with you every time you leave the vehicle. The windows can still be operated using the buttons for a brief period after the ignition has been switched off, provided that the driver door and passenger door are not opened.

NOTICE

Rain water can enter the vehicle interior and damage the vehicle.

 The one-touch and roll-back functions will not work if there is a fault in the electric windows. Visit a Volkswagen Dealership or qualified workshop.

Roll-back function for the electric windows

The roll-back function for the electric windows can reduce the risk of injuries when the windows are closing → . If the one-touch closing function (closing process) in a window does not work because it is stiff or obstructed, the window will automatically open again.

- Check to see why the window has not closed.
- Try to close the window again.
- After a few repeated activations of the roll-back function, the automatic window closing feature may be disabled.
- In order to re-establish the automatic window closing feature, follow the procedure → page 58.
- Please refer to a Volkswagen Dealership or qualified workshop if the window still cannot be closed.

WARNING

Closing the electric windows without the roll-back function can lead to severe injuries.

- Always pay attention when closing electric windows.
- Ensure that nobody obstructs the path of the electric windows, especially if the roll-back function is not active.
- The roll-back function does not prevent fingers or other body parts from being pressed against the window frame, resulting in injuries.

 The roll-back function also acts with the window and sunroof convenience closing with the vehicle key.

Opening or closing the rear vent window



Fig. 53 Open the rear vent window.

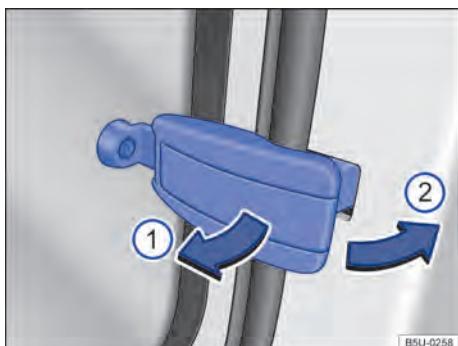


Fig. 54 Close the rear vent window.

Depending on the vehicle version, the rear vent window may not be available.

Open the rear vent window

- Pull the window detent lever in the direction of the arrow → Fig. 53.
- Press the detent lever outwards until the window is completely locked in place.

Close the rear vent window

- Pull the detent lever → Fig. 54 (1) inwards, in the direction of the arrow.
- Press the detent lever → Fig. 54 (2) backwards, in the direction of the arrow, until it is locked in place and the window is closed.

⚠ WARNING

Improper use of the rear vent window may cause severe injuries.

- The electric windows should only be opened or closed when you are sure that nobody is in their operating area.

⚠ NOTICE

Rain water can enter the vehicle interior and damage the vehicle.



Troubleshooting

Restoring one-touch opening and closing function

The one-touch opening and closing function is deactivated and must be restored if the vehicle battery has been disconnected or discharged while the windows were not fully closed:

- Close all windows.
- Pull up the button for the window up and hold it in this position for at least one second.
- Release the button, then pull it up again and hold it in this position. The one-touch function is now ready for operation.

Repeat this process for other buttons with the one-touch function deactivated.

Restoring one-touch exterior closing function

If the vehicle battery has been disconnected or discharged while the windows were not fully closed, or also if after a few activations of the roll-back function, the one-touch opening and closing function with the vehicle key or remote control, from outside the vehicle, is deactivated and must be restored:

- Close all windows.
- Pull up the button for the window up and hold it in this position for at least one second.



Steering wheel

Adjusting the steering wheel position



Fig. 55 Below and to the left of the steering wheel next to the steering column trim: steering wheel position adjustment lever.

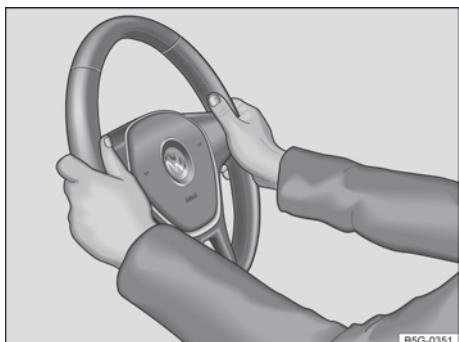


Fig. 56 On the steering wheel: 9 o'clock and 3 o'clock positions.

Adjust the steering wheel **before** setting off and only while the vehicle is stationary → **▲**.

- Adjust the proper distance between the driver and the steering wheel → page 26 using the driver seat controls → page 60.
- Push the lever → Fig. 55 ① downwards and adjust the steering wheel to the desired position.

– Adjust the steering wheel position so as to be able to hold it by the outer rim *in the 9 o'clock and 3 o'clock position* → Fig. 56 with both hands and slightly bent arms.

– Firmly press the lever upwards and place it in locking position until it is completely aligned with the steering column → **▲**.

⚠ WARNING

- After adjusting the steering column, always move lever ① up so that it engages securely. This prevents the steering column from moving while the vehicle is in motion.
- Never adjust the steering wheel when the vehicle is in motion. If, while driving you conclude that a readjustment is necessary, safely stop the vehicle and adjust the steering wheel to the correct position.
- Failure to observe the above indications may compromise the driver's wheel turning movement.
- The steering wheel must always point towards the chest and not towards the face. This ensures that the driver front airbag provides maximum protection in the event of an accident.
- While driving, always keep both hands on the rim of the steering wheel, *at the 9 o'clock and 3 o'clock position* → Fig. 56 to reduce injuries caused by a driver's frontal airbag deployment.
- Never hold the steering wheel in the 12 o'clock position or in any other way, such as in the centre of the steering wheel. If the driver airbag is triggered, you could sustain severe injuries to the arms, hands and head.
- Failure to observe the above instructions have a direct negative influence on the driver's protection in case of a frontal collision of the vehicle. These recommendations are valid for both, vehicles *with* and *without* steering wheel position adjustment.

◀

Seats and head restraints

Front seat

Introduction

⚠ WARNING

Always adjust seats, seat belts and head restraints to their correct position before any journey and ensure that all passengers have fastened their seat belt.

- Push the front passenger seat as far back as possible.
- Adjust the driver seat in such a way that there is at least 25 cm between your breastbone and the hub of the steering wheel. Adjust the driver seat longitudinally in order for pedals to be fully pressed with slightly bent legs, and ensuring a minimum distance between the driver's knees and the dash panel of 10 cm. If your physical build makes it impossible to fulfil this requirement, you must contact a Volkswagen Dealership in order to implement any necessary modifications.
- Never travel with the backrest tilted far back. The further back the backrest is tilted, the greater the risk of injury caused by incorrect seat belt routing or an incorrect sitting position.
- Never travel with the backrest tilted forwards. When an airbag is triggered it could force the seat backrest backwards and injure vehicle occupants on the back seats.
- Adopt and maintain the greatest possible distance to the steering wheel and dash panel.
- You should always sit upright with your back against the seat backrest with the front seats properly adjusted. Do not position any body part too close where the airbags are fitted.
- The risk of serious injury is increased for passengers on the rear seat if they are not sitting upright because the seat belts are incorrectly positioned.

- The seats may only be adjusted when the vehicle is stationary, since the seat could otherwise change position unexpectedly while the vehicle is in motion, leading to a loss of vehicle control. Additionally, an incorrect seating position is adopted while adjusting the seat.
- Only adjust the height and tilt of the front seats when the area around the seat is clear.
- The area for adjustment of the front seats may not be restricted by any items.

Manual front seat adjustment

📘 Please refer to **⚠** at the start of the chapter on page 60.



Fig. 57 On the front seat: controls.

All the possible controls are described below. According to the seat version the quantity of controls may vary.

Adjusting the seat position

Key for→ Fig. 57:

- ① Pull the lever to move the front seat front or backward. The front seat must be locked in place after releasing the lever.
- ② Release the seat backrest and turn the handwheel to adjust the backrest.

⚠ WARNING

Incorrect seat adjustment may cause accidents and severe injuries.

③ On the driver's seat only, to adjust the seat height, move lever ③ in the direction of the arrow to adjust the height and release the lever. If necessary, repeat the procedure for correct adjustment.

④ Folding the backrest:
 – According to the version of the vehicle, the seat backrest folding lever may not be available. Versions that come with the seat backrest folding lever: move the lever and fold the seat's backrest. Lift the lever as indicated by arrow A and double the backrest forward in the direction of arrow B. When returning the backrest to its normal position ensure it is correctly locked in this position.

Rear seat

Rear seat bench

Depending on the vehicle version, the rear seat may not be available.

The rear seat bench has clamping sleeves that secure the seat in place. The clamping sleeves may be damaged if the seat is disassembled, in which case they must be replaced.

Volkswagen does not recommend disassembling the seat bench or replacing the clamping sleeves without assistance. Contact a Volkswagen Dealership for more information.

⚠ WARNING

Improperly secured rear seat benches may cause severe injuries.

- Ensure the seat belt is not caught or damaged in the rear seat bench.
- No passengers must be transported in the rear seat bench if it is not secured in place.

Head restraints

Introduction

The headrest adjustment and extension possibilities are described below. Ensure correct posture is adjusted → page 24.

All seats are equipped with head rests.

Correct head rest setting

Adjust the head rest so that its top edge is at the same height as the top of the head – but not lower than eye level.

Head restraint setting for shorter people

Push the head restraint all the way down, even if the head is then located underneath the top edge of the head rest. There may be a small gap between the head rest and backrest in the lowest position.

Head restraint setting for taller people

Push the head restraint up as far as possible.

⚠ WARNING

Driving without head restraints or with incorrectly adjusted head restraints increases the risk of severe or fatal injuries in the event of an accident or sudden driving or braking manoeuvre.

- If a seat is occupied, the head restraint for that seat must be fitted and adjusted properly.
- Each vehicle occupant must adjust the head restraint to suit their body size, to help reduce the risk of neck injuries in case of accidents. At the same time, the top edge of the head restraint must be level with the top of the head, but no lower than eye level. Position the back of your head as close to the head restraint as possible.
- Never adjust the head restraint when the vehicle is in motion.

⚠ NOTICE

When removing or fitting head restraints, make sure that they do not hit the roof or front seat backrest. Otherwise, the roof and other vehicle parts could otherwise be damaged.

Adjusting, uninstalling and installing the headrest

Please refer to **⚠** and **ⓘ** at the start of the chapter on page 61.

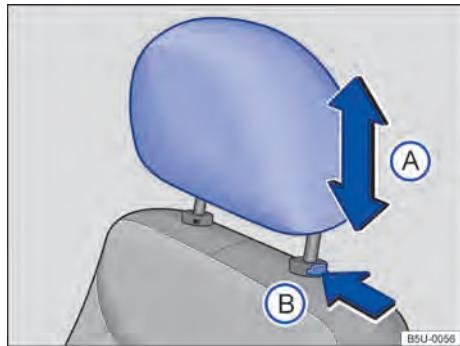


Fig. 58 Front head restraint: adjust, remove and install.

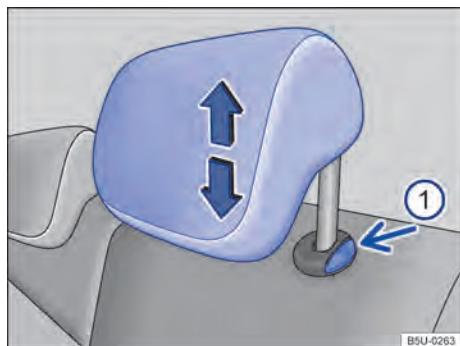


Fig. 59 Rear head restraint: adjust, remove and install.

Depending on the vehicle version, the rear seats head restraint may not be available.

Adjusting the front head rest height

- Push the head rest up or down in the direction of the arrow → **Fig. 58 A** → **⚠** in *Introduction* on page 61.
- The head restraint must click securely into position.

Adjusting the rear head rest height

- Move the headrest up or down in the direction of the arrow with the button → **Fig. 59 1** held down → **⚠** in *Introduction* on page 61.
- The head restraint must click securely into position.

Removing the head rest

- Push the head rest all the way up → **⚠** in *Introduction* on page 61.
- Press the button → **Fig. 58 A** or → **Fig. 59 1** in the direction of the arrow. Remove the head rest while pressing the button.

Fitting the front head rest

- Position the head rest correctly over the head rest guides and then insert into the guides of the corresponding seat backrest.
- Push the head restraint all the way down with button → **Fig. 58 A** pressed.
- Adjust the head rest so that a correct sitting position can be assumed → page 62.

Fitting the rear head rest

- Position the head rest correctly over the head rest guides and then insert into the guides of the corresponding seat backrest.
- Press and hold → **Fig. 59 1** to push the head rest downwards.
- Adjust the head rest so that a correct sitting position can be assumed → page 62.



Lights

Turn signals

Switching the turn signals on and off

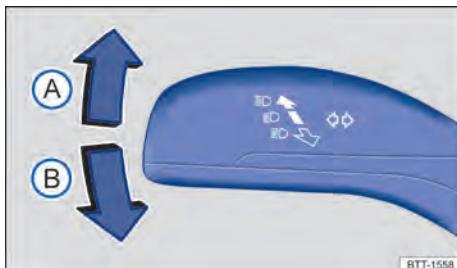


Fig. 60 On the left on the steering column: turn signal and main beam lever.

- Switch on the ignition.
- Move the turn signal and main beam lever from the centre position to the following position:
 - (A) Right turn signal. ➡
 - (B) Left turn signal. ⬅
- Place the turn signal and main beam lever into its basic position to switch the turn indicators off.

When the steering wheel returns to its normal position, after a curve, turn signals will be automatically switched off and the lever will return to the central position.

If the sound signal does not sound with the turn indicator turned on, visit your Volkswagen dealership or specialized workshop to have the vehicle checked.

Lane change flash

Briefly push the turn signal lever up or down until the pressure point is reached and then release it. The turn signal automatically flashes three times.

⚠ WARNING

Misuse or lack of use of turn signals, as well as forgetting to switch them on when appropriate, may confuse other road users. This could lead to accidents and severe injuries.

- Changing lanes, overtaking and conversion manoeuvres must always be indicated appropriately by using the turn signals.
- Turn off turn signals after changing lanes or completing overtaking and conversion manoeuvres.

i The turn signal will only work when the ignition is switched on. The hazard warning lights also work when the ignition is switched off → page 42.

i If one turn signal fails on the vehicle or on the trailer, the indicator lamp will start flashing approximately twice as fast.

Driving lights

Lights, switching on and off

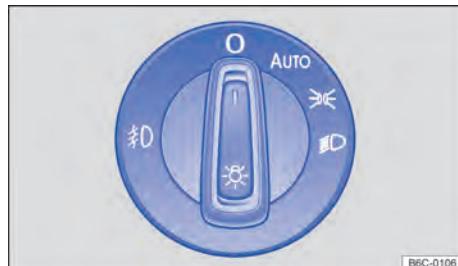


Fig. 61 Next to the steering wheel: light switch.

Observe any country-specific regulations when using vehicle lighting.

Depending on the vehicle version, the foglight may not be available.

Depending on the vehicle version, the **AUTO** function may not be available.

The long-range headlights is only valid for specific versions.

Turning the lights on

- Switch on the ignition.
- Turn the light switch to the corresponding position:

AUTO Automatic activation of the driving lights: the driving lights are automatically turned on and off according to the brightness and weather condition → .

 Side lights switched on. The icon on the light switch shines in green colour.

 Dipped beam headlights switched off.

Turning the lights off

- Switch off the ignition.
- Turn the light switch to the corresponding position:

0 The lights are off.

 Side lights switched on. The icon on the light switch shines in green colour.

 Dipped beam off – the indicator light remains on while the vehicle key is in the ignition.

WARNING

The side lights are not powerful enough to illuminate the street and make your vehicle seen by other road users.

- Always switch dipped beam headlights on with low light, fog or poor visibility.
- A vehicle without rear lights on may not be seen by other drivers in darkness, during rainstorms or other poor visibility conditions.

 Comply with all applicable legal provisions when handling the aforementioned lighting devices.

Fog lights on/off

The indicator lamp  in the light switch → Fig. 61 indicates that the fog light is switched on.

For vehicles equipped with fog light:

- Turn on the fog light : pull the light switch → Fig. 61 from position  or  until reaching the first position.
- To switch the fog lights off, press the light switch or move it into position **0**.

Functions of the lights

Depending on the vehicle version, the automatic driving light control (**AUTO**) may not be available.

Automatic driving light control **AUTO**

The automatic driving light control is simply an ancillary system, which may not sufficiently recognize all driving conditions.

While the automatic driving light control is activated, low beams and lamps are automatically switched if the twilight sensor detects low lighting on the exterior environment, such as when crossing a tunnel during the day, or during night time. Whenever the vehicle is in an environment with intense solar lighting, with the light switch in position **AUTO**, low beams and lamps will be automatically switched off by the electric central system.

If the rotating light switch is in position **AUTO**, the lamp, instrument lights, and license plate lights will be switched on and off automatically under the following scenarios → .

The twilight sensor is located next to the rain sensor → page 69.

If the automatic driving light control switches on headlights or fog lights, the low beam will also be switched on regardless of the ambient lighting.

Altered twilight sensor activation behaviour

 The possible causes for damages and misinterpretations in the sensitive surface area (arrow) of the twilight sensor are, among others, are the following:

- Damaged windscreen wiper blades: water films or cleaning stripes due to damaged wiper blades can affect the exterior lighting sensor.
- Insects: the presence of insects could affect exterior lighting sensors.
- Salt grooves: salt grooves during the winter can affect exterior lighting sensors.
- Dust: dry dust, wax, glass lining (lotus effect), and detergent residues (car wash) may reduce the twilight sensor's sensitivity or even its effectiveness.
- Stickers and labels: the sensor region cannot be externally or internally covered; otherwise, the twilight sensor will not operate properly.

Acoustic warnings if lights are not switched off

If the key is removed from the ignition cylinder and the driver door is opened, an acoustic alarm will sound if the light switch is in position  or . This will remind you to switch off the lights as necessary.

Cornering light

Depending on the vehicle version, the cornering light may not be available.

In slow conversions or sharp curves, the cornering light is automatically switched on. The cornering light is integrated to the fog lights and is only switched on when driving below approximately 40 km/h.

Upon selecting the reverse gear, the cornering light may be switched on in both vehicle sides during a manoeuvre.

WARNING

Severe accidents may occur if the road is not adequately illuminated and if the vehicle or pedestrians are not visible.

- The automatic driving light control (**AUTO**) only switches on low beams upon lighting variations, and not under foggy conditions, for example.

 In case of cold or damp weather, the lamp, as well as the rear lights and turn signals, may be temporarily fogged. This event is normal and does not affect the service life of the vehicle's lighting system.

Turn on the main beam/long-range beam

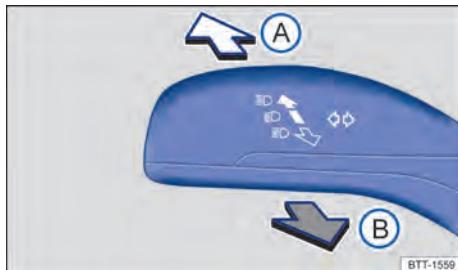


Fig. 62 On the left on the steering column: turn signal and main beam lever.

– Turn ignition and dipped beam on.

– Move the turn signal and main beam lever from the centre position to the following position:

 Main beam on / long-range beam.

 Operate the headlight flasher or turn the main beam off. The *headlight flasher* remains lit for as long as the lever is pulled.

With the main beams on or when flashing the headlights the blue indicator lamp lights up  on the dash panel insert.

WARNING

Setting headlights too high, and the incorrect use of the main beam, could distract and dazzle other road users. This could lead to accidents and severe injuries.

- Always ensure that the headlights are adjusted correctly.
- Never use the main beam or the headlight flasher if other road users could be dazzled.

 The long-range beam works simultaneously with the main beam. The *main beam / long-range beam* can only be switched on if the dipped beam headlights are already on.

 Due to the complexity of the long-range beam lamp replacement process, Volkswagen recommends using a Volkswagen Dealership or qualified workshop for such purpose.

Masking or switching over headlights

When driving in countries with opposite driving directions, the asymmetric dipped beam headlights may dazzle oncoming traffic. Therefore, the headlights must be masked or switched over if you are driving abroad.

If applicable, mask certain areas of the headlight with thin layers or switch over the position in a specialized company. Additional information can be obtained from specialized companies. Volkswagen recommends using a Volkswagen Dealership for this purpose.

 The use of thin layers over the headlights is only allowed for short periods of time. Please contact a qualified workshop for a permanent alteration Volkswagen recommends using a Volkswagen Dealership for this purpose.

In manual mode, the "Leaving Home" function only occurs if the "Coming Home" function has been previously activated.

Turning the "Leaving Home" function on:

- Unlock the vehicle with the remote control key.

Turning the "Leaving Home" function off:

- Occurs automatically after the set switch-off delay.
- **OR:** turning the ignition on.

Vehicles equipped with twilight and rain sensor

Turning the "Coming Home" function on:

- Switch off the ignition.
- Flash the main beam / long-range beam for approximately one second.
- The orientation lights are switched on after opening the driver door.

Turning the "Coming Home" function off:

- Occurs automatically after the set switch-off delay.
- **OR:** when turning the light switch to position 0.
- **OR:** turning the ignition on.

Turning the "Leaving Home" function on:

- Unlock the vehicle using the key with remote control, if the light switch is in position and the twilight sensor detects the **AUTO** and the twilight sensor detects the **darkness**.

Turning the "Leaving Home" function off:

- Occurs automatically after the set switch-off delay.
- **OR:** when turning the light switch to position 0.
- **OR:** turning the ignition on.

 For vehicles with the Volkswagen Information System (I-System), in the **Settings** menu, it is possible to set the duration of the orientation lights, as well as switching the function on or off.

 The orientation lights time can be programmed in a Volkswagen Dealership or through the **Settings** menu in vehicles with the Volkswagen Information System.

Troubleshooting

Turn signals

 Left or right turn signals. The indicator lamp flashes twice as fast from normal when one of the vehicle's turn lights has burned out. Check vehicle lighting.

Parking light

"Coming Home" and "Leaving Home" functions (orientation lighting)

With the orientation lighting, the area next to the vehicle is illuminated when leaving ("Coming Home") and when arriving at the vehicle ("Leaving Home"). For vehicles with light and rain sensors, the "Leaving Home" function is automatically controlled.

By activating the "Coming Home" or "Leaving Home" function, the dipped beam headlight and side lights are lit up as orientation lighting.

For vehicles *without* the Volkswagen Information System (I-System) and *with* the "Coming Home" and "Leaving Home" function, the latter is activated manually.

Vehicles not equipped with twilight and rain sensor - Manual mode

Turning the "Coming Home" function on:

- Switch off the ignition.
- Flash the main beam / long-range beam for approximately one second.
- The orientation lights are switched on after opening the driver door.

Turning the "Coming Home" function off:

- Automatically after the set lighting delay time has run out.
- **OR:** turning the ignition on.

Head light range control

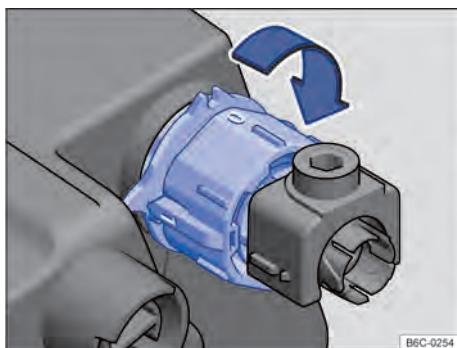


Fig. 63 In the engine compartment: headlight range adjustment switch.

Depending on the vehicle version, headlight range adjustment may not be available or may vary.

With the headlight range control, the low beam light can be adjusted based on vehicle occupation and luggage compartment load conditions. Thereby the driver has the best possible visibility conditions without dazzling the opposite drivers.

Headlight range adjustment with switch in engine compartment:

The headlight range can be adjusted with the → Fig. 63 switch. Turn the switch in the direction of (arrow):

- 0** Occupied front seats and empty luggage compartment.
- 1** All seats occupied and empty luggage compartment.
- 2** All seats occupied and loaded luggage compartment. **OR**
Only the driver seat occupied and fully loaded luggage compartment.

⚠ WARNING

Heavy objects in the vehicle may affect headlight visibility and distract other road users. This could lead to accidents and severe injuries.

- Always adjust the light beam to current vehicle occupation and luggage compartment load conditions, in order to avoid dazzling other road users.

Interior lighting

Instrument and switch lighting



Fig. 64 On the instrument cluster: headlight range control, instrument and switch lighting button.

With the ignition switched on, the instrument and switch lighting range can be regulated, in three different levels, by pressing the → Fig. 64 button.

The switch is always in **ascending order**, returning to the first level after reaching the greatest intensity.

Dash panel lighting sensor

Depending on the vehicle's version, the dash panel lighting sensor may not be available.

The dash panel lighting sensor is located on the dash panel and is activated automatically.

The dash panel lights are activated automatically whenever the external light intensity increases (e.g. on sunny days). To avoid external light reflection on the dash panel.

The dash panel lights are switched off whenever the exterior light intensity decreases, and the low beam is turned off (e.g. when passing through tunnels). This will remind the driver to manually turn on the low beam.

Interior and reading lights

Press the respective button:

- 0** Switch off internal lights.

- 💡** Switch on internal lights.

- 💡** Turn on the door contact switch (central position). Interior lights are switched on automatically by unlocking the vehicle, opening a door, or removing the key from the ignition cylinder. The lights are

switched off a few seconds after closing all doors, locking the vehicle, or switching the ignition on.

 /  Switches the respective reading light on or off.

 If the vehicle doors are not closed and the switch is in position , the front interior lights are switched off after a few minutes. This prevents the battery from discharging.

 The interior and reading lights are switched off after locking the vehicle or a few minutes after the key is removed from the ignition. This prevents the battery from discharging.

 When airbags are triggered during an accident, interior lights may be automatically activated → page 36.

Bed lighting



Fig. 65 On the centre console: bed lighting button.

Depending on the vehicle version, the bed lights may not be available.

Bed lights are switched on with the side light **with the side light  switched on** and **the ignition switched off**.

With the bed lights switched on, the bed light is illuminated.

- To **switch on**: press the button → Fig. 65 on the dash panel.
- To **switch off**: press the button → Fig. 65 in the dash panel again, switch the side light off or switch the vehicle ignition on.

 Upon switching the luggage compartment light on, a symbol will appear in the respective button.

Visibility

Windscreen wiper and washer

Windscreen wiper lever

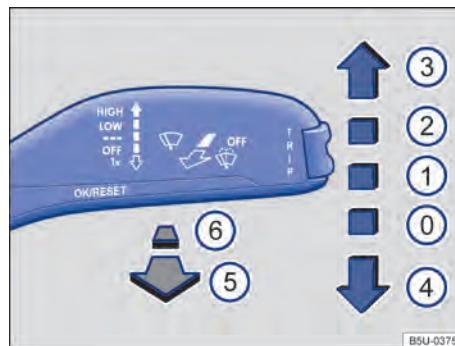


Fig. 66 Windscreen wiper / washer controls.

move the windscreen wipers lever to the desired position → ①:

- ① **OFF** Windscreen / rear window wipers switched off.
- ② ... Interval wipe for the windscreen.
- ③ **LOW** Slow wipe.
- ④ **HIGH** Fast wipe.
- ⑤  The windscreen washer system is active while the lever is pulled.
- ⑥ **OFF** Washer system switched off.

⚠ WARNING

In winter temperatures, the windscreen washer system without sufficient antifreeze could freeze the windscreen and compromise driver visibility.

- In winter temperatures, only use windscreen wipers with sufficient antifreeze.
- Never use the windscreen washer system at winter temperatures before the windscreen has been heated by the ventilation system. The antifreeze mixture may otherwise freeze on the windscreen and restrict vision.

⚠ WARNING

Worn or dirty windscreen wiper blades reduce visibility and increase the risk of accidents and severe injuries.

- Windscreen wiper blades should therefore always be changed if they are damaged or worn.

❗ NOTICE

If the ignition is switched off while the windscreen wipers are switched on, the windscreen wipers will resume operation from the same position after the ignition is switched back on; however, in this condition (ignition switched off while windscreen wipers were switched on), the windscreen wipers return to the default position. Ice, snow, and other obstacles on the window could damage the windscreen wipers and the windscreen wiper motor.

- Remove snow and ice from the windscreen wipers before driving.
- Carefully release the frozen windscreen wiper blades from the windscreen. Volkswagen recommends using an antifreeze spray for such activity.

❗ NOTICE

Do not switch the windscreen wipers on if the window is dry. Otherwise the window may be damaged.

❗ NOTICE

In icy conditions, always check if the windscreen wiper blades are not frozen to the glass before using the windscreen wipers!

 The windscreen wipers will only work when the ignition is switched on.

 The windscreen wiper interval wipe operates according to the vehicle's speed. The faster the vehicle, the faster the windscreen wiper interval wipe.

Rain sensor

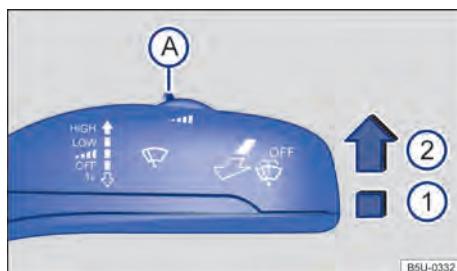


Fig. 67 Windscreen wiper lever: adjust rain sensor sensitivity **(A)**.

Depending on the vehicle version, the rain sensor may not be available.

The activated rain sensor automatically controls windscreen wiper intervals according to rain intensity → **⚠**. The rain sensor sensitivity may be manually adjusted. Manual wiping → page 68.

Move the lever into the desired position → **Fig. 67**:

- ① Deactivated rain sensor.
- ② Active rain sensor – automatic wiping, if necessary.

(A) Adjust the rain sensor sensitivity:

- Turn the switch to the right – high sensitivity.
- Turn the switch to the left – low sensitivity.

After switching the ignition off and on, the rain sensor will resume operation if the windscreen wiper lever is in position **(2)**.

Altered rain sensor activation behaviour

The possible causes for damages and misinterpretations *in the sensitivity surface area*

→ **Fig. 69** of the rain sensor are among others the following:

- Damaged windscreen wiper blades: water film or wiping stripes due to damaged wiper blades may extend the activation period, reduce wiping intervals, or affecting quick continuous wiping.
- Insects: the presence of insects may activate automatic wiping.
- Salt: during winter time, salt grooves on the window may cause extremely long wiping patterns until the window is nearly dry.

- Dust: dust, wax, glass lining (lotus effect), and detergent residues (car wash) may reduce the rain sensor's sensitivity, eventually reducing its speed or effectiveness.
- Cracks on the windscreen: a rock impact over the windscreen will activate a wiping cycle if the rain sensor is activated. After that, the sensor detects the reduced sensitivity surface and adjusts. According to the rock's impact area, rain sensor activation behaviour may be affected.
- Stickers and labels: the sensor region cannot be externally or internally covered; otherwise, the automatic lighting functions and twilight sensor will not operate properly.

⚠ WARNING

The rain sensor may not sufficiently detect rain and fail to activate the windscreen wipers.

- If necessary, manually activate the window wipers whenever the rain affects visibility.

i Regularly clean the sensitive surface of the rain sensor and check the windscreen wiper blades for damages.

i A glass-cleaning product, such as alcohol, is recommended to remove wax and polishing residues from the windows.

Mirrors

📘 Introduction

In order to ensure safety, the driver must properly adjust exterior and interior mirrors before driving → **⚠**.

Drivers are able to notice traffic movements behind them and adjust driving behaviours accordingly using the exterior and interior mirrors. There are some areas to the side and behind the vehicle that cannot be seen through the exterior and interior mirrors. Such areas are called blind spots. There may be other vehicles, pedestrians and objects in blind spots.

⚠ WARNING

Adjusting exterior and interior mirrors while driving may distract the driver. This could lead to accidents and severe injuries.

- Only adjust exterior and interior mirrors while the vehicle is stationary.
- When parking, changing lanes and during overtaking or conversion manoeuvres, always observe the vehicle's surroundings, since other vehicles or objects may be located in blind spots.
- Always ensure that the mirrors are properly adjusted and that rear visibility is not limited by misting or other objects.

Interior mirror

📘 Please refer to **⚠** at the start of the chapter on page 70.

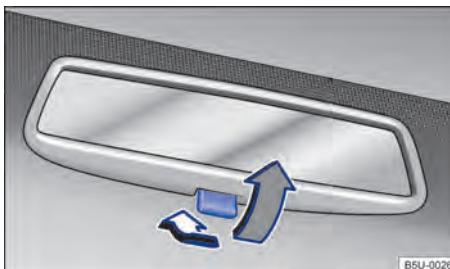


Fig. 68 On the windscreen: manual anti-dazzle interior mirror.

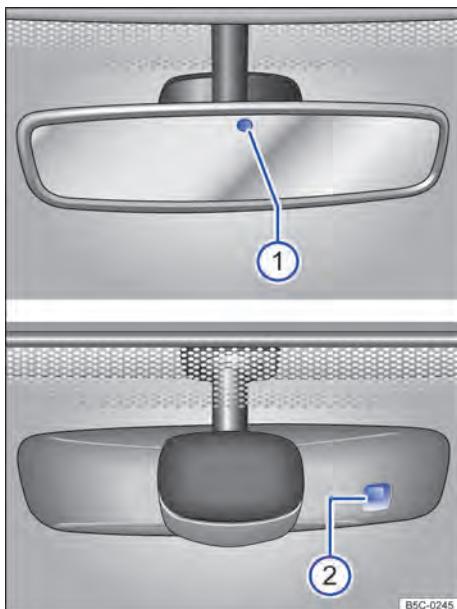


Fig. 69 On the windscreen: automatic anti-dazzle interior mirror.

The driver must adjust the interior mirror so that he/she can see clearly through the rear window.

Manual anti-dazzle interior mirror

- Day position: the lower mirror edge lever points towards the windscreen.
- Night position: pull the lever → **Fig. 68** (grey arrow) to avoid glare from the headlights of vehicles travelling behind.

Automatic anti-dazzle interior mirror

Depending on the vehicle version, the automatic anti-dazzle interior mirror may not be available.

When the ignition is turned on the sensors measure the light incidence. There are 2 sensors in the interior mirror, one that measures the incidence of light from the front → **Fig. 69** ① and the other the light incidence from behind ②. According to the measured results the internal mirror is automatically darkened.

When the light incidence detected by the sensors is compromised or interrupted, the interior mirror with automatic anti-dazzle function may malfunction.

The automatic anti-dazzling is deactivated when engaging the reverse gear.

Do not place external navigation devices on the windscreen or next to the interior mirror with automatic anti-dazzle function → **▲**.

⚠ WARNING

- Interior mirrors should only be adjusted when the vehicle is stationary, in order to prevent the driver from being distracted.
- Rear visibility is reduced when using mirrors in the anti-dazzle position.
- The navigation device display's light may compromise proper operation of the interior mirror with automatic anti-dazzle function, potentially leading to severe injuries and accidents.

i Visibility is hindered by using interior mirrors in the night position.

Exterior mirrors

📘 Please refer to **▲** at the start of the chapter on page 70.



Fig. 70 On the front doors: setting knob for the mechanical exterior mirrors.

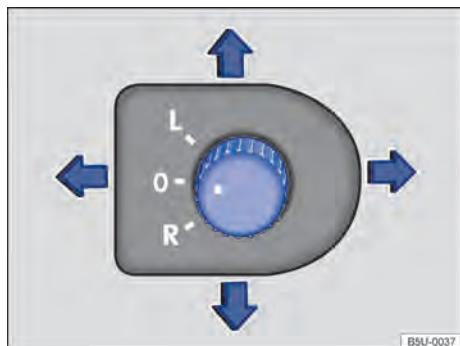


Fig. 71 On the driver door: setting knob for the electric exterior mirrors.

Exterior mirrors

- Operate the adjustment knob on the trims of the front doors → **Fig. 71**.

Electric exterior mirrors

- Switch on the ignition.
- Rotate the rotary knob in the driver door until reaching the desired icon → **Fig. 71**.
- Move the rotating knob forward, backward, to the right or to the left, as indicated by the arrows, to adjust the exterior mirror.

L Adjusting the left exterior mirror.

R Adjusting the right exterior mirror.

0 Neutral position. The exterior mirrors cannot be adjusted and all functions are disabled.

Store right-hand exterior mirror adjustments for reverse gear (tilt down)

- Switch on the ignition.
- Turn the rotary knob to position **R**.
- Selecting reverse gear.
- Adjust the right exterior mirror in order to allow proper visibility of kerb edge, for example.
- The adjusted mirror position is automatically stored.

When the reverse gear is disengaged, the right-hand mirror returns to front driving conditions.

To switch off the tilt down function when selecting reverse gear, the rotary control must be moved to **L** or **0**.

Exterior mirrors can be manually folded (rotated) inwards and outwards. The use position is defined by a clear locking position in both sides (left and right).

⚠ WARNING

Exterior mirrors should only be adjusted when the vehicle is stationary, in order to prevent the driver from being distracted.

⚠ WARNING

Careless folding of exterior mirrors may cause injuries.

- Fold exterior mirrors inwards or outwards only when no one is in its operation range.
- Handle with care in order to prevent fingers from getting stuck between the exterior mirror and the mirror frame, while the mirror is moving.

⚠ WARNING

Inaccurate assessment of the distance of vehicles coming from behind may cause severe accidents and injuries.

- The domed surfaces of exterior mirrors (convex) increase visibility and make objects appear smaller and more distant.
- Using the left and right-hand exterior mirrors to assess the distance of vehicles coming from behind when changing lanes is inaccurate and may cause severe accidents and injuries.
- Whenever possible, use the internal mirror to ascertain the distance of vehicles coming from behind or the distance to other objects.
- Ensure that rear visibility is always unobstructed.

💡 NOTICE

Always fold in exterior mirrors in automatic washing systems.

i In case of failure, electric exterior mirrors may be manually adjusted by pressing the edge of the mirror surface.

Sliding headliner

Sun visors



Fig. 72 Sun visor.

Depending on the vehicle version, the sun visor may contain different combinations, containing or not: lighting, mirror cover and vanity mirror.

Possible positions for the driver and passenger sun visors:

- Folded down over the windscreen.
- Remove from the bracket and turn over towards the door → Fig. 72 ①.
- Pulled towards the door in a posterior longitudinal direction.

Vanity mirrors

A vanity mirror may be located behind a cover on the folded down sun visor. When you open the cover → Fig. 72 ② a lamp lights up.

The lamp will go out when the vanity mirror cover is pushed back or the sun visor is folded back up.

⚠ WARNING

Sun visors folded downwards may reduce the field of vision and decrease safety.

- Sun visors and sunblind should always be replaced in their holder if they are not being used.

❗ NOTICE

Handle sun visors and vanity mirror covers carefully in order to avoid damages.

Windscreen

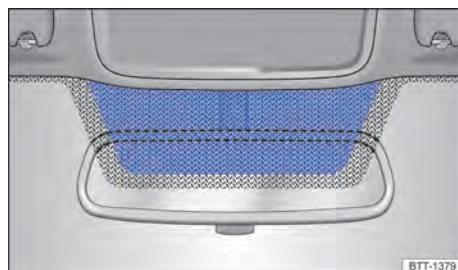


Fig. 73 Cross-linked windscreens with communication window (blue surface).

Windscreens feature a cross-linked screen to protect the eyes against sun rays when using the interior mirror. There is a non-coated area above the interior mirror (communication window) above the interior mirror → Fig. 73 which ensures that electronic accessories, for example remote controls, can function properly.

The area must not be covered either from the outside or the inside, nor should any stickers be applied to this area as this could cause a fault in the electronic components.



Heating and air conditioning

Heating, ventilating, cooling

Introduction

The following equipment may be installed in the vehicle:

The **ventilation and heating system** heats and ventilates the vehicle interior. The ventilation and heating system does not cool.

The **air conditioner** cools and dehumidifies the air. They work best when all windows are closed. In case of accumulated heat in the vehicle interior, ventilation may speed the cooling process.

⚠ WARNING

Poor visibility through all windows increases the risk of collisions and accidents, which can lead to severe injuries.

- Always ensure that all windows are free of ice, snow and mist in order to have good visibility.
- Maximum heat output, which is needed to defrost the windows as quickly as possible, is only available when the engine has reached its operating temperature. Do not start your journey until you have good visibility.
- Always ensure that the heating and fresh air system or air conditioning and rear window heating system are used properly in order to guarantee proper exterior visibility.
- Never use the air recirculation mode for extended periods. If the cooling system is switched off, the windows can mist up very quickly in air recirculation mode and reduce visibility considerably.

- Always switch off the air recirculation mode if it is not required.

⚠ WARNING

Stale air can quickly cause tiredness and lack of concentration in the driver, which in turn can cause collisions, accidents and severe injuries.

- Never leave the blower off for extended periods and never use the recirculation mode for extended periods, since this prevent fresh air from entering the vehicle.

⚠ NOTICE

- Switch off the air conditioning system if you suspect that it has been damaged. This can help to prevent further damage. The air conditioning system must be checked by a Volkswagen Dealership or qualified workshop.
- Repairs to the air conditioning system require specific knowledge and tools. Volkswagen recommends using a Volkswagen Dealership for this purpose.

 If the cooling system is switched off, the outside air that is drawn into the vehicle is not dehumidified. To prevent the windows from misting over, Volkswagen recommends leaving the air conditioning (supercharger) switched on. For such, press the button **A/C**. The indicator lamp in the button must light up.

 Maximum heat output, which is needed to defrost the windows as quickly as possible, is only available when the engine has reached its operating temperature.

 Keep the air intake slots in front of the windscreen free of snow, ice and leaves to ensure heating and cooling is not impaired, and to prevent the windows from misting over.

Air conditioning controls

□ Please refer to  and  at the start of the chapter on page 74.

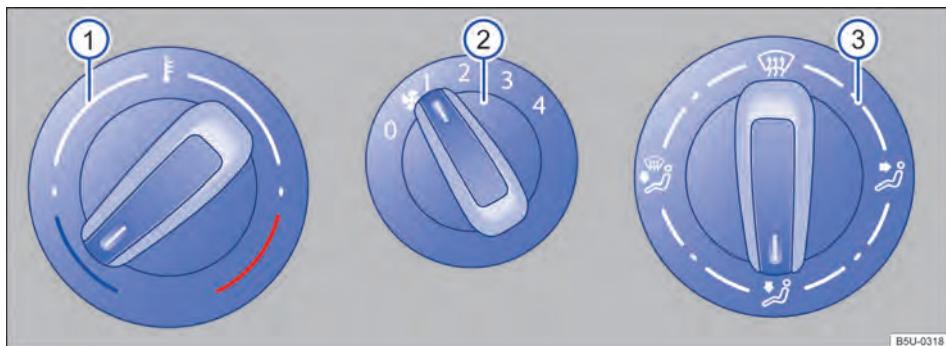


Fig. 74 Ventilation and heating system controls.

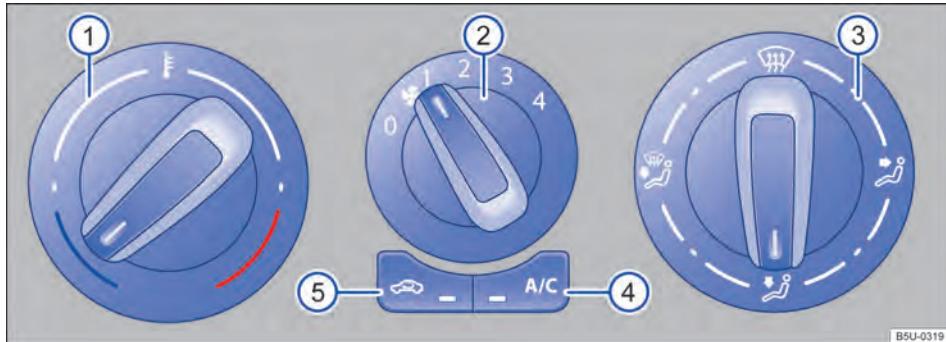


Fig. 75 Air conditioning controls.

Some functions and buttons are version dependent and depend on the type of system fitted.

Turning off

- *Heating and ventilation system*: turn the blower knob to level 0 → Fig. 74 ②.
- *Air conditioner*: rotate the blower regulator to level 0 → Fig. 75 ②.

A/C – Cooling mode

- Press the  button to turn the cooling on and off.

In cooling mode the air is dehumidified.

■ / ■ – Temperature

- *Heating and ventilation system*: turn the left knob → Fig. 74 ① to adjust the temperature.
- *Air conditioning*: turn the left knob → Fig. 75 ① to adjust the temperature.

– Blower

- *Heating and ventilation system*: turn the blower knob → Fig. 74 ②.
- *Air-conditioning*: rotate the blower regulator → Fig. 75 ②.

– Air recirculation mode

In air recirculation mode, no fresh air enters the interior of the vehicle → Fig. 75.

- Press .

Air distribution

- *Heating and ventilation system*: rotate the right regulator → Fig. 74 ③ to the desired position.
- *Air-conditioning*: rotate the right regulator → Fig. 75 ③ to the desired position.

 – Air distribution to the upper body area.

 – Air distribution to the footwell area.

 – Air distribution to the windscreens and footwell area.

 – Air distribution to the windscreens.

– Defrost function

The defrosting function eliminates the frost from the windscreens.

- *Heating and ventilation system*: defogger. Air distribution to the windscreens and side windows in the exterior mirror area
- *Air conditioning*: defogger. Air distribution to the windscreens and side windows in the exterior mirror area. Press  and increase the strength of the blower in order to defrost the windscreens as fast as possible.

– Rear window defrost function

- Press the  button to turn the rear window heating on and off with running engine.
- The indicator lamp  lights up on the button while the heating is on.
- Press the button again to switch off the rear window heating manually.

The rear window defroster is turned off automatically after about 10 minutes.

Fast cooling inside the vehicle

In order to obtain fast cooling inside the vehicle, follow the instructions below:

- Set the temperature knob ① completely to the left.
- Set the air recirculation controller ③ into position .
- Turn the blower knob ② to the maximum level 4.
- Press the button  to switch the cooling system on.
- If the vehicle is exposed to the sun for extended periods, open the front door windows partially or completely for a brief amount of time (1 to 3 minutes), in order to remove the hot air mass inside the vehicle.
- Close the windows and press  to switch the air recirculation mode on.

NOTICE

To prevent damages to the rear window defroster, no sticker should be stuck on the inside on the filaments.

 After the window is cleared, the function must be switched off. Lower current consumption also decreases fuel consumption.

 If the air conditioner and air recirculation mode are turned off manually, the system will not automatically turn them on next time the blower is switched off and on again. The system will only start working automatically again after the temperature switch is removed from the full left position and placed back into this position.

 In vehicles without heating, the blower button is located on the left-hand side, in the temperature button position. 

Ventilation and heating system operating instructions

 Please refer to  and  at the start of the chapter on page 74.

Temperature

For vehicles equipped with heating and ventilation system, the internal vehicle temperature must not be lower than the exterior air temperature, since the heating and ventilation system is unable to cool air.

Settings for optimal road visibility

- In vehicles with heating system, turn the temperature knob → **Fig. 74** ① completely to the right, to the maximum heating setting.
- Set the air recirculation controller ③ into position .
- Turn the blower knob ② to level 3 or 4.

Keeping the windscreen and side windows defrosted

- In vehicles with heating system, set the temperature control ① into the required heating position to ensure proper defrosting.
- Set the air recirculation controller ③ into position .
- Set blower ② to one of the 4 stages.

 In vehicles without heating, the blower button is located on the left-hand side, in the temperature button position.

Air recirculation mode

 Please refer to  and  at the start of the chapter on page 74.

General notes

The air recirculation mode prevents outside air from entering the vehicle.

If the outside temperature is very high, the air recirculation mode must be selected for a short period of time to help cool off the vehicle interior faster.

The air recirculation mode must be activated if the air conditioning system is switched on. Windows may quickly fog if the air conditioning system is switched off.

- The air recirculation mode is automatically switched off if the air distribution knob is set to position .

Switching air recirculation mode on and off

Switch on: press ; the indicator light will light up.

Switch off: press ; the indicator light will go out.

NOTICE

In vehicles with an air conditioning system, do not smoke when the air recirculation mode is switched on. The smoke drawn into the cooling system can leave a residue on the evaporator and the dust and pollen filter, producing a permanent unpleasant odour.

Vents

 Please refer to  and  at the start of the chapter on page 74.

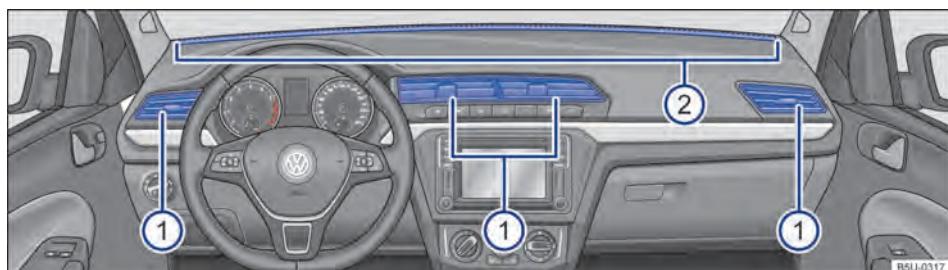


Fig. 76 On the dashboard: vents.

Air vents

The vents should be left open to ensure that the vehicle interior is sufficiently heated, ventilated and cooled.

- Press the upper part to open the vents ①.
- Adjust the direction of the air flow by moving the grille.
- Press the lower part to close the vents.

Other non adjustable vents can be found on the dash panel → Fig. 76 ② and in the footwell areas.

Troubleshooting

 Please refer to  and ① at the start of the chapter on page 74.

The following hints and operational instructions help with the correct use of the system.

The cooling system for the vehicle interior only works when the engine is running and the blower is switched on.

The air conditioning system operates most effectively with the windows closed. However, if the vehicle has heated up after standing in the sun for some time, the air inside can be cooled more quickly by opening the windows for a short time.

Why does the cooling system turn off automatically or cannot be turned on?

- The engine is not running.
- The blower is switched off.
- The air conditioning system fuse has blown.
- Room temperature is below approximately +2 °C.
- The supercharger has been temporarily switched off because the coolant temperature is too high.
- There is a fault on the vehicle. The air conditioning system must be checked by a Volkswagen Dealership or qualified workshop.

Settings for optimal road visibility

Switching the cooling system on not only reduces the temperature of the vehicle interior, but also the humidity, thus preventing windows from misting.

NOTICE

Do not place any food, medicine or any other heat-sensitive items in front of the vents. Heat-sensitive food, medicine and other items could be either damaged or rendered useless.

 The air from vents runs through the vehicle interior and leaves through the exhaust valves located on the rear wings, underneath the bumper.

- Move the air recirculation switch → Fig. 75 ③ into position , in this position, the air recirculation is automatically switched off.
- Turn the blower knob ② to level 3 or 4.
- Press the button  to switch the cooling system on. The indicator lamp lights up.
- Set the temperature knob ① into the required position.

Dust and pollen filter

The dust and pollen filter with activated charcoal reduces the level of particles in the outside air entering the vehicle.

The pollen and dust filter needs to be regularly replaced to keep the air conditioner's efficiency unimpaired. Case the vehicle is frequently used in heavily polluted environments, the filter should be replaced between servicing events
→ page 238.

Water vapour underneath the vehicle

If the outside humidity and temperature are high, **condensed water** may drip off the cooling system's evaporator and form a pool of water underneath the vehicle. This is normal and does not indicate a leak!

 The air conditioning supercharger consumes engine power during cooling, thus contributing to increased fuel consumption. To reduce cooling time to a minimum, observe the following instructions:

- If a vehicle stationary under the sun is too hot, open the doors and windows for a few seconds in order to let the hot air out.
- Ensure that external hot air does not enter the vehicle, for example, through an open window, while the air conditioning is switched on.

- If it is possible to reach the desired temperature without switching the air conditioning on, only use the ventilation system.

i The windscreen might condense after the engine is started due to the residual humidity in the air conditioning system. Turn on the defrost function to clear the windscreen as fast as possible.

i In some versions, for greater overtaking safety, the air conditioning system is switched off for a few seconds while the gas pedal is fully depressed. This feature allows the engine to reach maximum performance during such period.

i When arriving at destination (about 2 minutes before), turn the air conditioner off leaving only the ventilation operating. This helps reducing the humidity in the evaporator, reducing the appearance of unpleasant odours in the interior of the vehicle.

Driving

Driving guidelines

Pedals

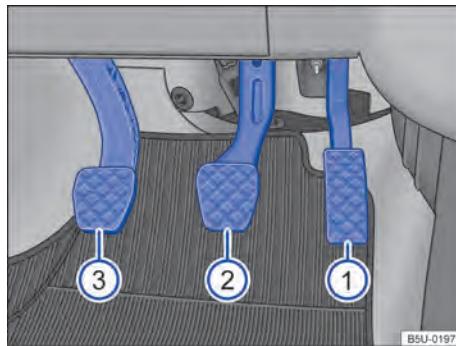


Fig. 77 In the footwell area: pedals.

Key for→ Fig. 77:

- ① Gas pedal
- ② Brake pedal
- ③ Clutch pedal

The operation and freedom of movement of all pedals must never be impaired by objects or floor mats.

Only use floor mats that leave the pedal area free and can be securely fastened in the footwell.

If a brake circuit fails, you will have to depress the brake pedal further than normal in order to bring the vehicle to a stop.

⚠ WARNING

Items in the driver footwell can hinder pedal operation. This can lead to loss of control of the vehicle and increase the risk of serious injury.

- Ensure that all pedals can always be operated without any hindrance.
- Always safely secure foot mats.
- Additional foot mats or other floor coverings should never be placed over the fitted foot mat.
- Ensure that no objects can enter the driver footwell while the vehicle is in motion.

NOTICE

Ensure that you are able to operate the pedals freely at all times. For example, the braking distance to fully stop the vehicle will be longer if a braking circuit is faulty. The brake pedal will have to be depressed further and harder than normal.

↓ 2 The selected gear is higher than the recommended gear. A downwards arrow is displayed next to the selected gear indication.

● 2 The selected gear matches the recommended gear. A dot is displayed next to the selected gear indication.

↑ 2 The selected gear is lower than the recommended gear. An upwards arrow is displayed next to the selected gear indication.

The gearshift indicator numbers may vary according to the selected gear.

Gear change recommendation



Fig. 78 On the instrument cluster: gearshift indicator (variable 1).



Fig. 79 On the instrument cluster: gearshift indicator (variable 2).

Depending on the vehicle version, the gearshift indicator may not be available.

The gearshift indicator reduces fuel consumption by recommending gears on the display.

The gear recommendation process is illustrated on the following table:

Features with engaged reverse gear

The following will occur if reverse gear is selected and the ignition is switched on:

- The reverse light comes on.
- In vehicles with parking distance control system, the sensor is activated.
- In vehicles with rear view camera the rear view is displayed to assist the driver when parking or driving in reverse gear.

WARNING

The gear-change indicator is merely a supporting system and must not distract the driver from traffic.

- The gearshift indicator merely assists the driver in increasing fuel savings. The driver is exclusively responsible for assessing whether current vehicle, road, and traffic conditions allow safely following the gearshift indicator (e.g. when overtaking or driving with fully-loaded vehicles).

Enhanced gear selection decreases fuel consumption.

Warning texts may vary according to the instrument cluster version.

The gearshift indicator is switched off by pressing the clutch pedal while the ignition is switched on or when no gear is selected.

Economical driving style

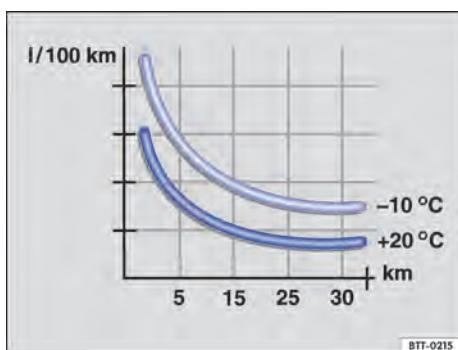


Fig. 80 Fuel consumption in litres per 100 km at two distinct ambient temperatures.

Driving correctly it is possible to reduce fuel consumption, harming the environment and engine, brake and tyre wear. Below are some tips on minimizing the environmental impact and save.

Fuel consumption, environmental impact and wear on the engine, brakes and tyres depend largely on 3 factors:

- Personal driving style.
- Conditions of use (such as weather and road surface characteristics).
- Technical conditions.

By adopting an economical driving style and anticipating the traffic situation ahead, you can easily reduce fuel consumption by 10 to 15%.

A car uses most fuel when accelerating. If you think ahead when driving, you will need to brake less and thus accelerate less. Wherever possible, let the car roll slowly to a stop, for instance when you can see that the next traffic lights are red.

Changing gear earlier

Basically: the highest gear is always the most economical gear. As a rule of thumb, the following applies to most vehicles: at a speed of 30 km/h (19 mph) drive in 3rd gear, at 40 km/h (25 mph) in 4th gear and at 50 km/h (31 mph) in 5th gear.

If traffic and driving scenarios are suitable, "skipping" gears when changing up a gear will also save fuel.

Do not drive gears to their upper limit. Use 1st gear only for pulling away then quickly change up to 2nd gear.

Vehicles with gearshift indicator help reduce fuel consumption by recommending ideal gears for each specific situation.

Rolling to a stop

Taking your foot off the accelerator will interrupt the supply of fuel to the engine and decrease fuel consumption.

Therefore, in situations such as approaching a red traffic light, let the vehicle roll without applying the accelerator. Only press on the clutch pedal to disengage if the vehicle becomes too slow or if the stopping distance is longer. The engine will then run at idling speed.

Switch off the engine in situations in which the vehicle might be stationary for a long time, e.g. at a level crossing.

Thinking ahead when driving, and driving with the "flow" of traffic

Frequently applying the brake and accelerator will increase fuel consumption. By thinking ahead when driving and by maintaining a sufficient distance to the vehicle in front, simply keeping your foot off the accelerator will stop the speed from fluctuating. This means that active braking and accelerating is not always necessary.

Driving smoothly and evenly

Smoothness is even more important than speed. The more evenly you drive, the lower your fuel consumption will be.

When driving on a motorway, it is much more effective to drive at a constant moderate speed than to drive with constant acceleration and braking. As a rule, driving with a constant style will get you to your destination just as quickly.

Using additional equipment in moderation

It is always important to be comfortable in your vehicle, but it is also important to consider the environment.

Some equipment will increase fuel consumption when switched on (examples):

- Air conditioning cooling system: if the air conditioning system is set to a very high or low temperature it will require a lot of energy, which is generated by the engine. Therefore the temperature setting in the vehicle should not vary too much from the outside temperature. It may be a good idea to air the vehicle before setting off and then to travel a short distance with the windows open. The air conditioning system should then be switched on once the windows have been closed.
- Keep the windows closed when driving at high speeds. Open windows increase fuel consumption.
- Switch off the rear window defrost function (not available in some versions) when the window is clear.

Other factors which increase fuel consumption (examples):

- Fault in engine management system.
- Driving in hilly regions.
- Driving with a trailer.

Avoid short journeys

Directly after a cold start, the engine has a very high fuel consumption. The engine reaches its working temperature after a few kilometres, when fuel consumption will return to a normal level.

The engine and catalytic converter need to reach their proper **working temperature** in order to minimise fuel consumption and pollutant emissions. The **outside temperature** also has a decisive influence.

The → Fig. 80 shows the variation in fuel consumption for the same journey at +20 °C and -10 °C.

Therefore, avoid making too many short journeys and car share whenever possible.

Under the same conditions, the vehicle will use more fuel in the winter than in the summer.

Not only is it illegal in some countries to "warm up" cold engines, it is also technically unnecessary and a waste of fuel.

Adjust tyre pressure

The correct tyre pressure reduces rolling resistance and therefore also fuel consumption.

When purchasing new tyres, always make sure that the tyres have optimum rolling resistance.

Using low friction engine oil

Fully synthetic low-viscosity engine oils, known as low-friction engine oils, reduce fuel consumption. Low viscosity engine oils decrease frictional resistance in the engine and spread better and more quickly, especially for cold starts. They are especially effective in vehicles which make a lot of short journeys.

Always make sure that the engine oil level is correct and that you keep to the service intervals (oil change intervals).

When purchasing engine oil, always make sure it complies with engine oil standards and has been approved by Volkswagen.

Avoid unnecessary loads

The lighter the vehicle, the more economical and environmentally-friendly it is. An extra weight of 100 kg increases fuel consumption, for example, by up to 0.3 l/100km.

Remove all unnecessary items and loads from the vehicle.

Remove any unnecessary special equipment and accessories

The more aerodynamic a vehicle, the lower its fuel consumption. Special equipment and accessories, such as roof carriers or bicycle carriers, make the vehicle less aerodynamic.

You should therefore remove any special equipment and luggage carriers that are not being used, especially if you are going to be driving at high speeds.

WARNING

Adapt your speed and distance from the vehicles ahead to suit visibility, weather, road and traffic conditions.

Information on the brakes

New brake pads cannot generate the full braking effect during the first 300 km and must first be "run in" → . However, you can compensate for the slightly reduced braking force by applying more pressure to the brake pedal. **During the run-in period, the braking distance is longer when the brakes are depressed fully or during emergency braking** than with brakes that have been fully run in. In the run-in period, the brakes

should not be depressed fully and situations should be avoided that create a heavy load on the brakes. For example, when driving too close to other vehicles.

The **rate of wear** of the brake pads depends to a great extent on use conditions and driving style. When frequently driving in city traffic and short distances or in sporty manner, the brake pad thicknesses needs to be periodically checked by a Volkswagen dealership or a specialized workshop.

When driving with **wet brakes**, for example after driving through water, after heavy rainfall or after washing the vehicle, the braking effect may be delayed as the brake discs will be wet, or possibly iced up (during the winter). Brakes must be "dried" as soon as possible by carefully braking at higher speed. Ensure that no following vehicle and no other road user is put at risk as a result of this action → .

A **layer of salt that accumulates on the discs and pads** will delay the braking effect and increase the braking distance. If the brakes on the vehicle have not been applied for a long time on roads that have been gritted with salt, the layer of salt must be reduced through careful braking → .

Corrosion on the brake discs and **dirt** in the brake pads are facilitated through long periods of inactivity, low mileage and low load levels. If there has been little or no use of the brake pads, or if there is corrosion, Volkswagen recommends that the brake discs and brake pads be cleaned by carefully braking several times at higher speed, always in compliance with speed limits and current driving conditions (e.g. wet or dry roads, night or day driving). Ensure that no following vehicle and no other road user is put at risk as a result of this action → .

Brake servo

The brake servo will only function when the engine is running and reinforces the pressure applied by the driver on the brake pedal.

If the brake servo is not functioning or the vehicle is being towed, the brake pedal will have to be depressed more forcefully, since the braking distance will be increased due to the lack of assistance for the brake system → .

WARNING

New brake pads will not have the optimal braking effect when first fitted.

- New brake pads cannot generate the full braking effect during the first 300 km and must first be "run in". A reduced braking effect can be increased by applying more pressure to the brake pedal.
- You must drive particularly carefully when driving with new brake pads in order to reduce the risk of accidents, severe injuries and loss of vehicle control.
- Never drive too close to other vehicles when running in new brake pads, and never create a driving situation that will place a heavy load on the brakes.

WARNING

Overheated brakes reduce the braking effect and considerably increase the braking distance.

- When driving downhill the brakes are placed under particular strain and become hot very quickly.
- Before driving down a long, steep gradient, reduce speed and change to a lower gear or move the selector lever to a lower gear. This will make use of the engine braking effect and relieve the load on the brakes.
- Non-standard or damaged front spoilers could restrict the airflow to the brakes and cause them to overheat.

WARNING

Wet brakes or brakes coated with ice or road salt react more slowly and require longer braking distances.

- Carefully apply the brakes to test them.
- Always dry brakes and clean off any coating of ice and salt with a few cautious applications of the brake when visibility, weather, road and traffic conditions permit.

WARNING

Driving without the brake servo can considerably increase the braking distance and thus cause accidents and serious injuries.

- Never allow the vehicle to roll if the engine is switched off.
- If the brake servo is not functioning or the vehicle is being towed, the brake pedal will have to be depressed more forcefully, since the braking distance will be increased due to the lack of assistance for the brake system.

NOTICE

- Never let the brakes "rub" by applying light pressure to the brake when it is not necessary to brake. Continual pressure on the brake pedal will overheat the brakes. This can considerably reduce the brake effect, increase the braking distance and, in certain circumstances, cause the brake system to fail completely.
- Before driving down a long, steep gradient, reduce speed and change to a lower gear or move the selector lever to a lower gear. This will make use of the engine braking effect and relieve the load on the brakes. The brake system could otherwise overheat and fail. Only use the brakes to slow down or stop the vehicle.

 If the front brake pads are tested, the rear brake pads should be tested at the same time. Visual check of the thickness of all brake pads should be carried out regularly by checking the brake pads through the openings in the wheels or from the underside of the vehicle. If necessary, remove the wheels to carry out a comprehensive check. Volkswagen recommends using a Volkswagen Dealership for this purpose.



Driving a loaded vehicle

For good vehicle handling when driving a loaded vehicle, please observe the following:

- Stow all items of luggage securely → page 166.
- Accelerate carefully and gently.
- Avoid sudden braking and driving manoeuvres.
- Brake earlier than in normal driving.
- If applicable, observe the information concerning driving with towing mode → page 172.
- If applicable, observe the information concerning driving with a roof carrier → page 170.

WARNING

Moving loads can severely impair the vehicle's stability and driving safety, which can cause accidents and severe injuries.

- Secure objects properly to prevent them from sliding.
- Use suitable straps when securing heavy objects.

Driving with the bed cover open

Driving with the bed cover open is particularly dangerous. Properly fasten all objects and the open bed cover.

WARNING

Driving with an unlocked or open bed cover can cause serious injuries.

- Volkswagen recommends not driving with an open bed cover. However, if such scenario is absolutely indispensable, observe the following guidelines:
 - Always stow all objects in the bed securely. Loose objects can fall out of the bed and injure other road users.
 - Always drive carefully and defensively.
 - Avoid any abrupt or sudden driving and braking manoeuvres as this can cause the open bed cover to move unpredictably.
 - Any objects protruding from the bed must be marked to ensure that they are visible to other road users. Legal provisions must be followed.
 - In case of objects protruding from the load bed, the bed cover must never be used to "secure" or "hold" objects.

NOTICE

The vehicle's width changes when the bed cover is open.



Driving through water on roads

Avoid driving through water on roads. Driving under such conditions hinders the driveability, and may cause severe damages to the vehicle, compromising the safety of the driver and other passengers. If absolutely necessary to cross the flooded area, observe the following in order to prevent damages to the vehicle, driver, and passengers:

- Check the water depth before driving through water on roads. The water level must be **no higher** than the lower edge of the vehicle body (underneath the doors) → ①.
- Do not drive faster than walking speed.



- Never stop the vehicle, reverse or switch off the engine while in water.
- Oncoming vehicles create waves that could increase the water level for your vehicle to such an extent that it is not safe to drive through the water.

WARNING

After driving through water, mud and dirt roads the brakes may be hindered due to the humidity or freezing of brake pads or disks, increasing the braking distance.

- “Dry the brakes and eliminate ice” through careful braking manoeuvres. Proceed without putting other drivers at risk or failing to abide by legal requirements.
- Avoid sudden braking manoeuvres after crossing through water in roads.

- Do not fully depress the accelerator.
- Do not drive the vehicle at more than 2/3 of the top engine speed.
- Do not drive with a trailer attached.

From 1,000 to 1,500 kilometres, gradually increase driving performance to top speed and highest engine speed.



If the engine is run in gently, the life of the engine will be increased and its oil consumption reduced.

NOTICE

- When driving through water in roads, some vehicle components such as the engine, transmission, chassis or electrical system, may be severely damaged.
- Never drive through salt water, since salt can cause corrosion. Rinse all components that have been exposed to salt water immediately with fresh water.

Using the vehicle in other countries and continents

The vehicle is produced specifically for a certain country and complies with this country's registration regulations valid at the time of vehicle production.

If the vehicle is going to be sold in another country or used in another country for an extended period, the legal requirements applicable in that country must be observed.

In some cases, certain equipment will have to be fitted or removed and functions deactivated. The scope and type of service available may also be affected. This is particularly important if the vehicle is driven in another climate region for a long period of time.

Because different frequency bands are used in different countries, the radio unit may not work in other countries.

Running-in

Please follow the regulations concerning running-in of new parts.

Running-in the engine

A new engine needs to be run in during the first 1,500 kilometres. During its first few hours of running, the internal friction in the engine is greater than later on when all the moving parts have bedded down.

The style of driving during the first 1,500 kilometres will also affect the engine quality. Even after this time – and especially with a cold engine – drive the vehicle at moderate speeds in order to reduce engine wear and to increase the mileage that the engine can cover. Do not drive at engine speeds which are too low. Always shift down gear if the engine is not running “smoothly”.

Up to 1,000 kilometres, the following applies:

NOTICE

- Volkswagen may not be held liable for damages caused to the vehicle due to low-quality fuel, inadequate servicing work, and use of non-genuine parts.
- Volkswagen may not be held liable in case the vehicle does not comply or only partially complies with legal requirements from other countries and continents.

Troubleshooting

Brake system malfunction

A brake circuit may have failed if you have to reduce speed and the vehicle does not brake as normal (sudden increase in braking distance). This will be indicated by the warning lamp ① and in some cases a text message. Go to a Volkswagen Dealership or qualified workshop as soon as possible. Drive at low speed when doing this and anticipate much longer braking distances and an increase in the pressure required on the pedal.

Whenever it is necessary to restart the engine, return the key into position ①. The **restart blocker** in the ignition cylinder prevents the starter engine from working while the engine is switched on, preventing damages.

⚠ WARNING

Improper vehicle key use may cause severe injuries.

- Always take all vehicle keys with you when you leave the vehicle. The engine can be started and electrical equipment such as the window controls can be operated, which may lead to severe injuries.
- Never leave unattended children or people with special needs in the vehicle. They could become trapped in the vehicle in an emergency and may not be able to get themselves to safety. Depending on the time of year, for example, locked vehicles can be subjected to very high or very low temperatures. This can cause serious injuries and illness or fatalities, especially for small children.
- Never remove the vehicle key from the ignition cylinder while the vehicle is in motion.

⚠ NOTICE

The starter engine can only be activated while the engine is switched off. If the starter engine is restarted immediately after switching the engine off, both the starter engine and the engine may be damaged.

 If the vehicle key is left in the ignition for a long period with the engine switched off, the vehicle battery could discharge.

Starting and stopping the engine

Ignition cylinder

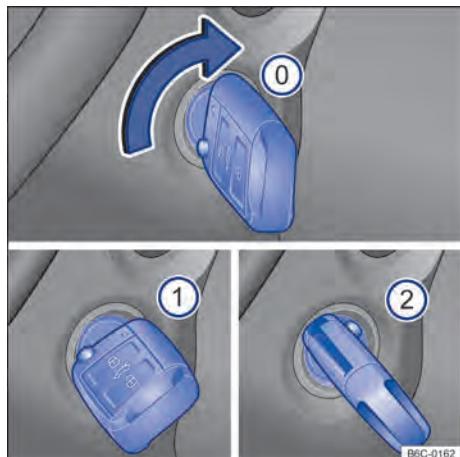


Fig. 81 Next to the steering wheel, to the right: vehicle key positions on the ignition cylinder.

Positions of the key in the vehicle → Fig. 81

- ① Ignition switched off. The vehicle key may be removed.
- ② Ignition switched on.
- ② Start the engine. When the engine starts running, release the key from the ignition. Upon releasing the vehicle key, it will return to position ①.

Start the engine

- *Vehicles with heated start:* turn the vehicle key to position → Fig. 81 ①. Ignition switched on. The warm starting system's indicator lamp  will then light up on the instrument cluster. Wait until the indicator lamp  is disabled, indicating the end of the fuel warming process (this action may be required when starting cold engines).
- *Vehicles with manual gearbox:* step on the clutch pedal and hold it firmly pressed until the engine is running. Position the gear selector lever into the neutral position.

- Turn the vehicle key in the ignition lock to position → **Fig. 81 ②** – do not accelerate. When the engine catches, release the ignition key.
- *Vehicles with heated start:* turn the vehicle key in the ignition lock to position → **Fig. 81 ②** to start the engine – do not accelerate. If step 5 is not followed, the indicator lamp  will flash, indicating the need to stop the starting procedure and repeat it after returning the key to position → **Fig. 81 ①** and waiting approximately 10 seconds.
- If the engine does not start, stop the procedure and repeat it after approximately one minute.
- Release the handbrake if you wish to pull away → page 95.

WARNING

Never leave the vehicle while the engine is running. The vehicle may move unexpectedly and cause severe accidents and injuries, especially with the selected gear or respective gear position.

WARNING

A start booster can explode and cause the engine to suddenly run at high revs.

- Never use a start booster.

NOTICE

- The starter engine or engine may be damaged when attempting to start the engine while driving or when the engine is started immediately after being switched off.
- While the engine is cool, avoid high rotations, total acceleration and increased engine load.
- Do not push or jump start the engine. Unburnt fuel may damage the catalytic converter.

 Do not leave the engine running when the vehicle is stationary. Immediately resume driving when there is good visibility in the windows; be careful not to force the engine while cold. This allows the engine to reach its operation temperature faster and reduces emissions.

 When starting the engine, major electrical consumers are switched off temporarily.

 When starting from cold, the engine may be a little noisy for a short period of time. This is quite normal, and no cause for concern.

Stopping the engine

- The vehicle must be completely stationary → .
- Apply the handbrake firmly → page 95.
- Turn the vehicle key into position → page 86 ①.

WARNING

The components of the exhaust system become very hot. This can cause fires and serious injuries.

- Never park the vehicle so that parts of the exhaust system can come into contact with inflammable material underneath the vehicle, e.g. leaves, dry grass, spilt fuel, etc.
- Never apply underseal or anti-corrosion coatings to the exhaust pipes, catalytic converter, diesel particulate filter or the heat shields on the exhaust system.

WARNING

Never switch off the engine while the vehicle is in motion. This can lead to loss of control of the vehicle and cause severe accidents and injuries.

- The airbags and belt tensioners will not work if the ignition is switched off.
- The brake servo will not work when the engine is switched off. When the engine is switched off, greater force is required on the brake pedal to stop the vehicle.
- The power steering does not work while the engine is switched off and requires more power to drive the vehicle.

NOTICE

If the vehicle has been driven at high load for a long period, the engine could overheat when it is switched off. In order to avoid damage to the engine, allow the engine to run in neutral for approximately 2 minutes before switching it off.

 After the engine is switched off, the radiator fan in the engine compartment may run on for some minutes, even if the ignition is switched off or the vehicle key has been removed. The radiator fan will switch itself off automatically.

Electronic immobilizer

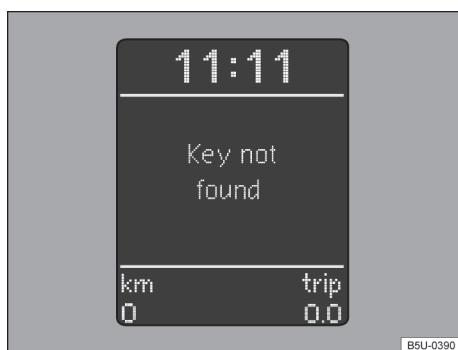


Fig. 82 On the instrument cluster: display indicating the activated immobilizer - vehicles with Volkswagen Information System.

The immobilizer helps prevent the engine from being started and driven with an unauthorised vehicle key.

There is a chip in the key. It automatically deactivates the immobilizer when the vehicle key is inserted into the ignition cylinder.

The electronic immobilizer is automatically activated when the vehicle key is removed from the ignition cylinder.

Coded vehicle keys are available in an authorised Volkswagen repairer → page 45.

Troubleshooting

Immobiliser malfunction

When an invalid vehicle key is used or when the system is damaged, a corresponding indication is shown **SAFE** on the instrument cluster display. The engine will not be able to be switched on. Use a valid vehicle key or visit a Volkswagen dealership.

Manual gearbox

Manual gearbox: engaging the gear

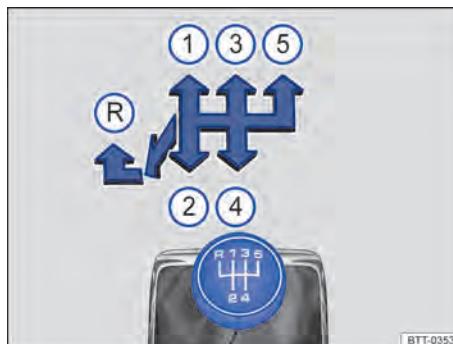


Fig. 83 Gear shift pattern of a 5-speed manual gearbox.

Engaging a forward gear

Each gear's positions are illustrated in the gear lever → Fig. 83.

- Fully depress and hold the clutch pedal.
- Position the gear selection lever into the neutral position → **▲**.
- Gently release the clutch pedal to start moving.

Selecting reverse gear

- Reverse gear should only be selected when the vehicle is stationary.
- Fully depress and hold the clutch pedal → **▲**.
- Move the gear lever to the neutral position and push down.
- Push the gear lever fully to the left and then to the front in the reverse gear position → Fig. 83 **(R)**.
- Gently release the clutch pedal to start moving.

Shifting down gears

You should always select the next immediate gear when shifting down a gear whilst the vehicle is in motion. Engine revs should not be too high when doing so → **▲**. The clutch, gearbox and engine may be damaged if one or more gears are skipped when shifting down a gear at high speeds or high engine revs, even if the clutch is not released in the process → **①**.

WARNING

When the engine is running, the vehicle will start to move as soon as a gear is engaged and the clutch released.

- Never switch off the engine while the vehicle is in motion.
- Never select reverse gear while the vehicle is in motion.

- Do not hold the vehicle by "riding" the clutch on a hill with the engine running.

WARNING

Shifting gears incorrectly to a lower gear can lead to a loss of control of the vehicle, which can cause accidents and serious injuries.

NOTICE

The clutch, gearbox and engine may be severely damaged if the gear stick of the manual gearbox is shifted to a gear which is too low when travelling at high speeds or at high revs. This also applies if the clutch remains depressed and the gears do not engage.

NOTICE

Please note the following points in order to avoid damage and premature wear:

- Do not rest your hand on the gear lever when driving. The pressure from your hand is passed onto the selector forks in the transmission.
- Ensure that the vehicle has come to a full stop before engaging reverse gear.
- Always fully depress the clutch pedal when changing gear.

Steering assistance

Introduction

The power steering only functions when the engine is running.

The power steering assistance function is a system that supplements driver efforts when steering. This system has a steering mechanism based on a hydraulic valve/piston system, controlled by a hydraulic pump, lines, hydraulic fluid, and reservoir with built-in filter.

WARNING

The steering wheel is very difficult to turn if the steering assistance is not working. This can have a serious impact on your driving safety.

- The steering assistance only functions when the engine is running.
- Never allow the vehicle to roll if the engine is switched off.
- Never remove the vehicle key from the ignition while the vehicle is in motion.
- Align the wheels before switching off the vehicle. This will reduce vehicle power consumption during start-up.

Checking the power steering fluid level

Please refer to  at the start of the chapter on page 89.

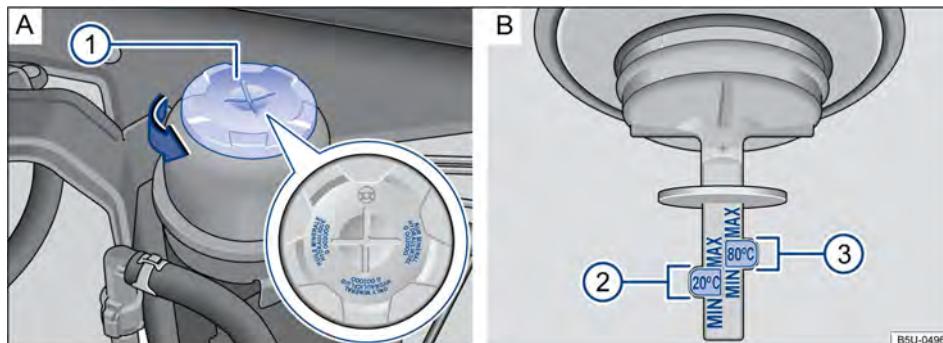


Fig. 84 On the engine compartment: **A** Power steering fluid reservoir. **B** Power steering fluid level control marks.

In case of damages to the power steering assistance system or if the engine is not running, the steering assistance function will not work. In this case, the steering effort required will be greater, but steering will still be possible.

Preparations

- Park the vehicle in a flat and steady surface.
- Align the front wheels.
- With the engine switched off, let the engine cool down → .
- Open the bonnet  → page 200.

Check fluid level with cool engine

- Turn the reservoir cap → **Fig. 84 A** (1) in the direction of the arrow.
- Remove the reservoir cap and clean the measuring rod over the cap using a clean cloth → .
- Screw the cap and wait a few seconds.
- Remove the cap again and check the fluid level by the "MIN" and "MAX" markings with the 20 °C indication on the measuring rod **D** (6).

Check fluid level with hot engine

- Turn the reservoir cap → **Fig. 84 A** (1) in the direction of the arrow.
- Remove the reservoir cap and clean the measuring rod over the cap using a clean cloth → .

- Screw the cap and wait a few seconds.
- Remove the cap again and check the fluid level by the "MIN" and "MAX" markings with the 80 °C indication on the measuring rod **D** (7).

WARNING

Always let the engine cool down completely before carefully opening the bonnet. Hot parts may cause burns when touched.

- Go to a Volkswagen Dealership in case of any difficulties when checking the fluid level.
- If necessary to refill the power steering fluid level, go to a Volkswagen Dealership, which has the approved fluid for your vehicle.

CAUTION

The steering wheel must not be fully turned for over 15 seconds while the engine is running. This may damage the power steering system.

- When the steering wheel is turned completely, the hydraulic fluid is quickly heated by the power steering pump. When the steering wheel is kept completely turned, while the vehicle is stationary, noises will be heard due to the substantial load to which the pump is submitted. Additionally, the engine's slow gear rate is also temporarily reduced.

⚠ CAUTION

- If the vehicle is running with fluid levels outside the ② region (cool engine) or ③ region (hot engine), the power steering system may be damaged.

- Use only strong cloths in order to prevent them from shredding while cleaning the measuring rod, thus avoiding any residues in the rod from entering the hydraulic system and damaging the power steering system.

◀

Driver assist systems

Starter assist system

Introduction

⚠ WARNING

The smart starter assist system technology cannot exceed specific physical limitations. The greater convenience offered by starter assist systems must not encourage drivers to assume unnecessary safety risks.

- Unexpected vehicle movements may cause severe injuries.
- The starter assist systems cannot be used as a replacement for the driver's full attention.
- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions.
- Starter assist systems are unable to hold vehicles in place in uphill slopes or provide sufficient braking power in downhill slopes (e.g. slippery or frozen surfaces), under any conditions.

Off-road mode

 Please refer to **⚠** at the start of the chapter on page 92.

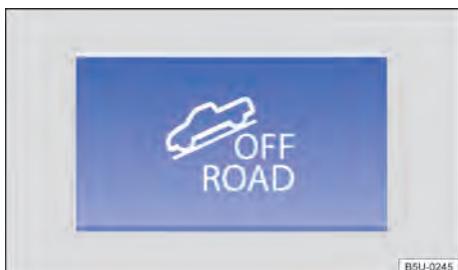


Fig. 85 On the centre console: manual off-road mode on/off button.

Depending on the vehicle version, the off-road mode may not be available.

- Off-road mode disabled.
- Off-road mode enabled.

The off-road mode provides convenience features when driving in irregular surfaces, in addition to adjusting the accelerator pedal.

The off-road button  also enables the following feature:

- Off-road ABS → page 101.

Enabling and disabling the off-road feature

To enable and/or disable the off-road mode, briefly press the button  → **Fig. 85** on the centre console.

After enabling the off-road mode, the button's indicator lamp is lit. The off-road mode must be re-enabled each time the engine is started.

Adjustment of the accelerator pedal

The accelerator pedal adjustment feature is enabled in order to enhance accuracy at low speed.

By pressing the accelerator pedal, the engine torque is controlled to facilitate starting and driving over slippery or unstable surfaces.

⚠ WARNING

Only use the off-road mode in unpaved roads or irregular/unstable surfaces.

- The wheels may skid if this mode is used improperly, potentially resulting in accidents and vehicle damages.

 The same tyre models must be installed in all 4 wheels in order to ensure proper operation of the off-road mode. Different tyre tread diameters could cause unexpected changes in engine torque.

Uphill assist system

 Please refer to **⚠** at the start of the chapter on page 92.

The uphill assist system supports starting procedures in vehicles with ESC, actively holding the vehicle in place.

The uphill assist system is automatically enabled under the following circumstances

Points 1 to 3 must be satisfied **simultaneously**:

- ① Hold the brake pedal to keep the vehicle **stopped** in place on an uphill of approximately 5%.
- ② The engine runs "smoothly".
- ③ All doors must be closed. **Upon releasing the brake pedal, the vehicle is held in place for approximately 2 seconds. The brake is slowly released upon starting. If starting does not occur within two seconds, the brake is released and the vehicle will move backwards.**

The uphill assist system is immediately disabled:

- ① If any of the aforementioned conditions are no longer available → page 93.
- ② If the engine is switched off or flooded.

Adverse conditions:

The Electronic Stability Control (ESC) may not identify very steep slopes or gradients (greater than 30%), which could affect the proper functioning of the Electronic Stability Control (ESC) and, consequently, the Hill Start Assist (HHC - Hill Hold Control) and the parking sensor.

To restore the aforementioned systems, it is sufficient that the vehicle is turned off and on again and that the driver starts the car and drives it at a speed greater than 25 km/h for a few seconds.

The hill descent control system's availability is shown via the indicator lamp  on the instrument cluster display. The indicator lamp *flashes* while the hill descent control system is operating.

 The green indicator light remains lit while the descent system is switched on. The indicator light flashes while the hill descent control system is operating.

The hill descent control system is automatically enabled under the following circumstances

Points 1 to 3 must be satisfied **simultaneously**:

- ① Off-road mode on and indicator lamp  lit.
- ② Speed below 30 km/h.
- ③ Minimum downhill angle of 10%.

While the hill descent control system is operating, the speed can be adjusted by braking or accelerating the vehicle (under the 30 km/h limit).

The hill descent control system works with or without selected gears.

The hill descent control system is immediately disabled:

- If the ESC is enabled.
- After leaving the downhill area.
- If the vehicle speed exceeds 30 km/h or if the vehicle comes to a complete stop.
- If the off-road mode is disabled.

WARNING

Always be ready to apply the brakes, in order to prevent accidents and injuries.

- The hill descent control system is merely a supporting system and may not be able to brake the vehicle in some situations.
- The hill descent control system may not prevent the vehicle from gaining speed.

 The hill descent control system also works with the reverse gear selected.

 The same tyre models must be installed in all 4 wheels in order to ensure proper operation of the off-road mode. Different tyre tread diameters could cause unexpected changes in engine torque.

Cruise control system (GRA)

Introduction

The speed regulator system (GRA) assists the driver keeping constant a set speed.

Depending on the vehicle version, the cruise control (GRA) may not be available.

Speed range

The GRA is available for forward driving from 20 km/h onwards.

Changing gear

As soon as the clutch pedal is stepped on, the cruise control is interrupted and automatically taken up again after the gear change.

Driving downhill

When driving downhill the set speed may be exceeded due to the slope gradient.

Use the brake to reduce the speed of the vehicle accordingly and shift to a lower gear if necessary.

How do I control the GRA?

According to its version the GRA can be controlled by means of a lever on the steering column or through the multifunction steering wheel
→ page 94.

WARNING

When it is not possible to drive safely over a sufficient length and constant speed, the cruise control system may cause severe accidents and injuries.

- Never use the cruise control system (GRA) under intense traffic, short distances, steep, sinuous, and slippery circuits, such as ice, snow, humidity, or gravel, in addition to wet roads.
- Never use the GRA in free terrain or unpaved roads.
- Adjust the speed and safety distance from vehicles ahead based on weather, road, and traffic conditions.
- In order to prevent unexpected speed adjustments, always switch off the GRA after using.

- It is dangerous to resume stored speeds if the speed is too high for current road, traffic, or weather conditions.
- In descending slopes, the GRA may not maintain constant vehicle speed. The vehicle's weight increases speed by itself. Reduce the gear or apply the brakes.

Cruise control system commands

Please refer to **⚠** at the start of the chapter on page 94.

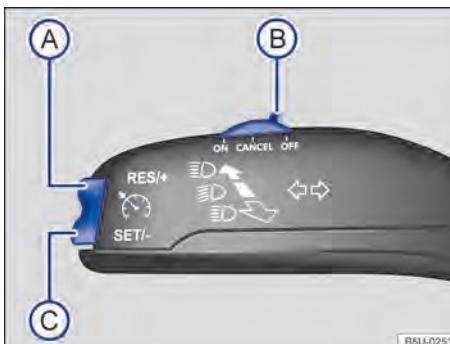


Fig. 86 To the left on the steering column: lever with switch and GRA operating buttons.

Switch on

- Place switch **(B)** into position **ON**.

No speed is saved and no control is yet active.

Starting the cruise controlling

- While driving, press **(C)** in the area **SET/-**.

Above 20 km/h, the current speed is stored and set. In addition, the green indicator lamp lights up .

Set speed

The saved speed can be adjusted via the button **(A)** while the GRA is controlling:

- Press **(A)** in area **RES/+** (briefly): + 1 km/h
- Press **(C)** in area **SET/-** (briefly): - 1 km/h

To alter the set speed continuously keep buttons **(A)** or **(C)** pressed. The system adjusts the current speed accelerating or slowing down the vehicle, respectively. The vehicle does not actively brake. ▶

Interrupting the control

- Press the switch **(B)** into position **CANCEL** or press the brake or clutch pedal.

The speed will remain stored.

Resume operation

- Press **(A)** in area **RES/+**.

The current speed is resumed and adjusted.

Switch off

- Set the switch **(B)** to position **OFF**.

The system is switched off. The stored memory is deleted.

Troubleshooting

 Please refer to **▲** at the start of the chapter on page 94.

The cruise control is automatically interrupted.

Several causes are possible:

- In case of a system failure that could restrict the GRA function.
- When driving for extended periods of time faster than the stored speed.
- When the brake or clutch pedals are activated.
- If the gear is shifted via the manual transmission.
- When the airbag is activated.

Parking and manoeuvring

Parking

Please adhere to relevant legislation when stopping and parking your vehicle.

Parking the vehicle

The actions should only be carried out in the specified order.

- Park the vehicle on a levelled and stable surface → **▲**.
- Depress and hold the brake pedal until the engine has stopped.
- Lift the handbrake lever up → page 95.
- Switch off the engine and take your foot off the brake pedal.
- Remove the key from the ignition.
- Select 1st gear for flat ground or uphill inclines, or reverse gear for downhill inclines, and then release the clutch.
- Ensure that all occupants, particularly children, have left the vehicle.
- Take all vehicle keys with you when you leave the vehicle.
- Lock the vehicle.

Parking on uphill and downhill slopes

Before switching off the engine, turn the steering wheel so that the front wheels will roll against the kerb if the parked vehicle starts to move.

- When facing downhill, turn the wheels so that they face the kerb.
- When facing uphill, turn the wheels so that they face the centre of the road.

WARNING

The components of the exhaust system become very hot. This can cause fires and serious injuries.

- Never park the vehicle so that parts of the exhaust system can come into contact with inflammable material underneath the vehicle, e.g. leaves, dry grass, spilt fuel, etc.

⚠ WARNING

Leaving and parking the vehicle incorrectly may cause the vehicle to move. This could lead to accidents and severe injuries.

- Ensure that the handbrake is correctly engaged.
- Never remove the vehicle key from the ignition cylinder while the vehicle is in motion.
- Always take all vehicle keys with you when you leave the vehicle. The engine can be started and electrical equipment such as the window controls can be operated, which may lead to severe injuries.
- Never leave unattended children or people with special needs in the vehicle. They could become trapped in the vehicle in an emergency and may not be able to get themselves to safety. Depending on the time of year, for example, locked vehicles can be subjected to very high or very low temperatures. This can cause serious injuries and illness or fatalities, especially to small children.

⚠ NOTICE

- Only release the brake pedal after pulling the handbrake, in order to prevent sudden vehicle movement after parking.
- Drive carefully in parking lots with long kerbs or fixed posts. Objects higher than the ground level may damage the bumper and other vehicle parts when parking. On order to avoid any damage, stop the vehicle before the wheels touch the bollards or kerbs.
- Carefully drive through entrances and slumps in terrains, ramps, kerbs, and other objects. Lowered vehicle parts, such as the bumper, spoiler and chassis, engine or exhaust parts may be damaged in these situations.

Handbrake

Engaging the handbrake

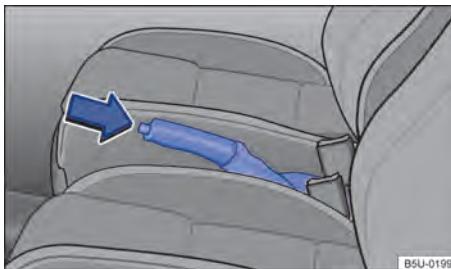


Fig. 87 Between front seats: handbrake lever.

Always pull the handbrake lever when leaving or parking the vehicle.

Applying the handbrake

- Press the interlock button and pull the handbrake lever upwards → Fig. 87 (arrow).
- The handbrake is pulled when the indicator lamp (O) lights up in the instrument cluster, while the ignition is switched on.

Releasing the handbrake

- Pull the handbrake lever slightly upwards and press the lock button → Fig. 87 (arrow).
- Guide the handbrake lever down while pressing down the interlock button.

⚠ WARNING

Incorrect use of the handbrake can cause severe accidents and injuries.

- The handbrake should never be used to brake the vehicle, except in emergencies. The braking distance is considerably longer as only the rear wheels are braked. Always use the foot brakes.
- Never drive with the handbrake lever slightly pulled. This could overheat the brake and compromise the braking system. In addition, this causes premature wearing of rear brake pads.
- Never drive the vehicle with the handbrake lightly applied. The vehicle can move even while the handbrake is applied.

NOTICE

Only release the brake pedal after pulling the handbrake, in order to prevent sudden vehicle movement after parking.

- Always monitor the area around the vehicle as the ultrasound sensors will not always detect small children, animals and objects.
- Certain object and clothing surfaces may not reflect ultrasound sensor signals. These objects and people with such clothes may not be detected by the system, or be incorrectly detected.
- External sound sources may affect ultrasound sensor signals. Therefore, in certain circumstances the system may not detect persons and objects.
- Certain pavement surfaces may cause non homogeneous readings, such as for example, rugged asphalt or cobblestones.

Park distance control (Park Pilot)

Introduction

The park distance control system assists the driver with parking and manoeuvring.

The rear Park Distance Control (Park Pilot) may not be available, depending on the vehicle equipment.

The parking aid (Park Pilot) helps drivers steer and park vehicles. If the rear part of the vehicle approaches an obstacle, an intermittent alarm is sounded. The smaller the distance, the shorter are the intervals between acoustic alarms. When the obstacle is very close, a continuous alarm sounds, in which case it is recommended to stop the vehicle to avoid a collision.

When the vehicle continues to approach an obstacle while the continuous alarm is sounded, the system is no longer able to calculate the distance and the alarm may stop.

Depending on the vehicle equipment, the rear bumper sensors transmit and receive ultrasound waves. Using such ultrasound waves (transmission, reflection off of obstacles and reception), the system continuously calculates the distance between the bumper and the obstacle.

WARNING

The parking distance control (Park Pilot) cannot replace the full concentration of the driver.

- Manoeuvring vehicles without due attention may cause severe injuries.
- Always adjust your speed and driving style to suit visibility, weather, road and traffic conditions.
- Ultrasound sensors have blind spots in which obstacles and people may not be detected.

NOTICE

- The ultrasound sensors may not always be able to recognize objects such as trailer drawbars, thin rails, fences, posts, trees and open or opening dropsides and may result in damage to the vehicle.
- If the parking distance control has detected an obstacle and issued a warning, the obstacle may move out of the detection range of the sensors as the vehicle approaches it, particularly if the object is very high or very low. In this case, these objects are no longer registered.
- The vehicle can sustain considerable damage if the warning given by the parking distance control is ignored.
- Impacts or collisions may damage or deregulate ultrasound sensors installed in the bumper.
- The system ultrasound sensors in the bumper must be kept clean and free of mud, dirt, ice and snow and not be covered up by stickers or other items as otherwise the system will not work properly.
- The ultrasound sensors should only be sprayed briefly when cleaning with pressure hoses and steam cleaners. A distance of more than 10 cm between the ultrasound sensors and the steam/hose nozzle must be ensured.
- Sources of noise can lead to errors in the parking distance control system, such as rough asphalt, cobblestones, induction coils, construction machines, or noises from other vehicles.

- Special accessories eventually assembled in the vehicle, such as bicycle supports and/or towing devices, may limit the parking distance control operation.

i In case of system failure, seek assistance at a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose.

i Volkswagen recommends that drivers practise using the parking distance control in a low-traffic area or parking lot to familiarise themselves with the system.

Enabling and disabling

► Please refer to **⚠** and **ⓘ** at the start of the chapter on page 97.



Fig. 88 On the upper part of the centre console: parking distance control on/off button (Park Pilot).

Depending on the vehicle version, the parking distance control may not be available.

Enabling the park distance control

- Selecting reverse gear.
- OR:** press the **Pd** button.

The park distance control is automatically enabled when the vehicle moves in reverse gear.

According to the vehicle version, the park distance control system may also be enabled automatically.

Disabling the Park Distance Control

- Press **Pd**.
- OR:** accelerate the vehicle forward at a speed higher than approximately 0 to -15 km/h.

Special features of the parking distance control

- The parking distance control only functions at a speed of up to 15 km/h.
- In some cases, the parking distance control registers water as an obstacle in the ultrasound sensors.
- If the distance remains the same, the acoustic warning volume reduces after a few seconds. If the continuous warning sounds, the volume will remain the same.
- As soon as the vehicle clears away from the obstacle, the intermittent alarm is automatically switched off. In case a new object approaches, the intermittent alarm is automatically switched on.

The volume of the acoustic warning can be set in the **Settings** menu of vehicles with the Volkswagen Information System (I-System). Alternatively, a Volkswagen Dealership is qualified to set the sound volume.

i The indicator lamp of the button **Pd** remains lit (yellow) while the parking distance control function is enabled.

Representation on the display

► Please refer to **⚠** and **ⓘ** at the start of the chapter on page 97.

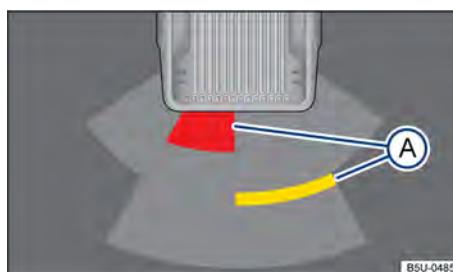


Fig. 89 Parking distance control display (coloured display): **(A)** obstacle identified in the segment.

Depending on the vehicle version, the radio display (not available in some versions) → **Fig. 89** will show the area scanned by the vehicle's rear ultrasound sensors **(A)**. Possible obstacles are displayed using the vehicle as a reference point → **⚠**. Simultaneously acoustic alarms are sounded.

- Ⓐ Rear vehicle area scanned.
Obstacle in the way of the vehicle's course.
An intermittent acoustic sound is sounded.
The shorter the distance, the shorter the intervals between acoustic alarms.
- Ⓑ Nearby obstacle. A continuous acoustic sound is sounded. **Stop driving!**
- Ⓒ Obstacle out of the vehicle's course.

The rear vehicle area scanned by the ultrasounds sensors are shown on the factory-fitted radio or navigation system display. Possible obstacles are displayed using the vehicle as a reference point → 

WARNING

Be careful not to become distracted from traffic due to display images.

 In some versions, when the parking distance control is activated, the radio volume may be partially or entirely muted in order to allow the driver to hear the intermittent alarm. For additional information, refer to → page 112.

 Acoustic warnings (and visual, if applicable) might take a few seconds to be played.

WARNING

The use of the rear view camera to assess the distance to obstacles (people, vehicles, etc.) is imprecise and may cause serious accidents and injuries.

- The camera lens amplifies and distorts the field of vision making the displayed objects seem altered or imprecise.
- Certain objects, due to the display resolution and insufficient lighting, may not be displayed at all or only partially so, such as thin posts or fences. Therefore extra caution is required from the driver with the use of the camera to prevent accidents.
- The rear view camera has dead viewing angles where people and objects cannot be detected by it.
- Keep the camera lens clean, free of snow and ice and uncovered.

WARNING

The intelligent technology shipped with the rear view camera cannot go beyond the limits imposed by physics and will only operate within the limitations of the system. Inattentive use or without supervision of the reverse gear driving assistant may cause serious accidents and injuries. The system cannot substitute the driver's attention.

- Adapt your speed and driving style to according to the visibility, weather, road and traffic conditions.
- Always keep in mind the parking direction and the relevant areas around the vehicle.
- Be careful not to become distracted from traffic due to display images.
- Always watch the area around the vehicle as small children, animals and objects are not always detected by the rear view camera.
- It is possible that the rear view camera is not able to display all the areas sharply.
- Use the rear view camera only with the drop-side completely closed.

NOTICE

The rear view camera only shows two-dimensional images on the display. Due to the absence of image depth, protruding objects or recesses on the road may be difficult to identify or not be identifiable at all.

Enabling and disabling

Please refer to  and  at the start of the chapter on page 99.

Enabling the rear view camera system

- Selecting reverse gear.

Disabling the rear view camera system

- Drive forward at least 15 km/h.
- **OR:** as soon as the reverse gear is disengaged or the selector lever moved from R position.

Assumptions

Please refer to  and  at the start of the chapter on page 99.

The following prerequisites must be met:

- The dropside must be closed.
- A reliable and clear image, for example, good visibility conditions and a clean lens.
- The space behind the vehicle must be clearly and completely recognized.
- The vehicle may not be damaged. The system must be checked by a Volkswagen Dealer if the position or the installation angle of the rear view camera is altered, such as after an impact to the rear.

Representation on the display

Please refer to  and  at the start of the chapter on page 99.

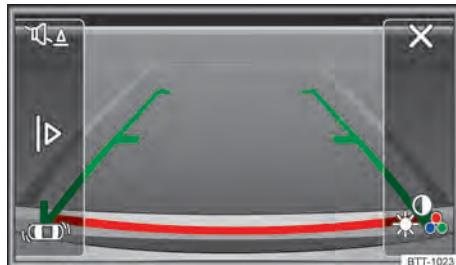


Fig. 90 Display of the radio or navigation system: reverse camera turned on (schematic).

Settings

When the rear view camera system is on, settings can be made via the function buttons on the display → Fig. 90. Some settings depend on the version.

Function touch pad surfaces and rear view camera system icons:

-  Exit current display.
-  Adjust the display: brightness, contrast, colour.
-  Switch to Park Distance Control → page 97.
-  Displays the Park Distance Control indicator,
-  Hides the Park Distance Control indicator,
-  Turning the Park Distance Control sound on and off.

Rear view camera settings

Some settings such as *brightness, contrast and colour* can be set touching the respective function surfaces  or , or sliding the respective adjustment slide.

- Stop the vehicle in a safe place and secure against rolling away.
- Turn the ignition and the radio or the navigation system on.
- Touch the function button .
- Perform the desired settings with the menu.

Orientation lines

Red line: safe distance backwards

Green side-lines: vehicle extensions.

Parking

□ Please refer to  and  at the start of the chapter on page 99.

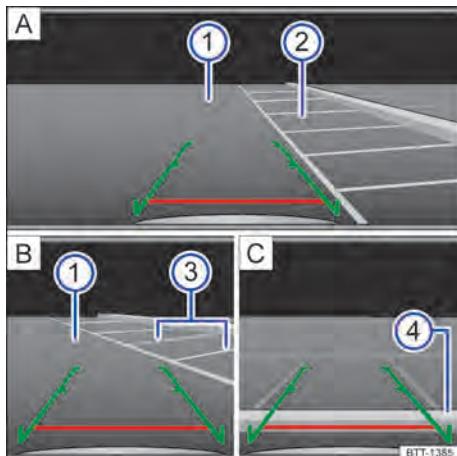


Fig. 91 Display of the radio or navigation system: enter the parking spot with the rear view camera (schematic display).

Key for→ Fig. 91:

- A** Select parking spot.
- B** Parking in the selected parking spot.
- C** Line up vehicle to parking spot.

- 1** Lane.
- 2** Parking space.
- 3** Side limits of the parking space.
- 4** Rear limit of the parking space.

All length indications of the assistance guides refer to a vehicle on a flat surface.

Entering the parking space

- Position the vehicle in front of the parking spot → Fig. 91  .
- Selecting reverse gear.
- Drive slowly in reverse and manoeuvre so that the green side guides lead in between the de-limiting lines of the selected parking space  .
- Align the vehicle in the selected parking spot so that the green side guidelines are superimposed on the lateral limitation lines  .
- Stop the vehicle when the red line hits the rear limit  .

! NOTICE

Small objects are not recognized by the rear view camera until 40 cm behind the vehicle and may cause damages to the vehicle.

! NOTICE

Simulation images of the rear view camera are merely illustrative.

Brake support systems

Information to the brake support systems

Depending on the vehicle version, some functions may not be available.

The **braking support systems** are the electronic brake variator (EBV), anti-lock brake system (ABS), brake assist (BAS), electronic differential lock (EDS), traction control system (ASR), and the electronic stability control (ESC).

Two different brake assist systems are used:

- Base system: the ABS and EBV brake assist systems only function when the engine is running. They make a considerable contribution to active driving safety.
- ESC system: the ESC, ABS, off-road ABS, BAS, ASR, EDS, and EBV brake assist systems only function when the engine is running. They make a considerable contribution to active driving safety.

Traction control (TCS)

The ASR reduces the engine drive in case of wheel skidding and adjusts the drive to road surface conditions. The TCS facilitates the starter, acceleration, and uphill effort, even under adverse road surface conditions.

To manually switch the ASR on or off, briefly press the button  on the centre console → page 104.

Electronic stability control (ESC)

ESC helps mitigate skidding risks and enhances rolling stability by braking individual wheels in certain driving scenarios. The ESC recognizes rolling dynamics limit scenarios, such as vehicle

oversteering or understeering, or wheel skidding. Specific braking interventions or reduced engine torque help the system stabilize the vehicle.

The ESC has limits. It is important to note that the ESC cannot defy the laws of physics. The ESC cannot assist in all scenarios faced by the driver. For instance, the ESC cannot assist whenever there is a sudden change of road conditions. If a length of a dry road is covered in water, mud, or snow, the ESC cannot provide the same assistance as an entirely dry road. If the vehicle "aquaplanes" (runs over a film of water instead of asphalt), the ESC will not be able to assist the driver, since there will be no asphalt contact and the vehicle can no longer be braked or steered. During quick curves, especially in areas with multiple curves, the ESC may not be as efficient in handling adverse scenarios, such as during courses of lower speed. When towing a trailer, the ESC will not be able to assist the driver in regaining vehicle control, unlike when the vehicle is not towing a trailer.

Adapt your speed and driving style to suit visibility, weather, road and traffic conditions. The ESC cannot defy the laws of physics, improve torque transmission available or keep the vehicle on the road when the driver is responsible for steering the vehicle away from the road. Instead, the ESC enhances the possibility of regaining vehicle control and assists under extreme road driving conditions based on the shift in direction caused by the driver, maintaining the vehicle in the desired direction. When driving at speeds that move the vehicle away from the road before the ESC can provide any assistance, the ESC will not be of any use.

The ABS and off-road ABS systems, set stability assist functions, and the uphill assist system are integrated to the ESC.

The ESC and integrated systems may be partially enabled/disabled manually → page 104.

Anti-lock brake system (ABS)

The ABS prevents the wheels from locking when the brakes are applied up until the point where the vehicle is nearly stationary and assists the driver in steering the vehicle and keeping it under control. This means that the vehicle is also less likely to spin, even when the brakes are depressed fully:

- Strongly press and hold the brake pedal. Do not take your foot off the brake pedal or reduce the force on the brake pedal!
- Do not "pump" the brake pedal or reduce the pressure on the brake pedal!
- Steer the vehicle while the brake pedal is fully depressed.
- The ABS will switch off when the brake pedal is released or if the pressure on the brake pedal is reduced.

If the ABS is taking corrective action, you will be aware of a **pulsing movement in the brake pedal** and some noise. However, ABS will not necessarily guarantee shorter braking distances in *all* conditions. The braking distance could even be longer when braking on gravel or on fresh snow covering an icy or slippery surface.

Anti-lock brake system for off-road driving (off-road ABS)

The off-road ABS system enhances vehicle braking in unstable surfaces. The off-road ABS system is part of the off-road feature → page 92.

Enable off-road ABS

- Briefly press the  → Fig. 85 button on the centre console.

Manually disable off-road ABS

- Briefly press the  → Fig. 85 button on the centre console.

Automatically disable off-road ABS

- The ABS or ESC (only for vehicles with ESC) detects critical driving scenarios.

Electronic brake variator (EBV)

In all vehicles, upon activating the brakes, the vehicle's centre of gravity shifts forward. This generates the risk of blocking rear wheels due to low traction. The electronic brake variator distributes brake force to all rear wheels, ensuring an adequate brake force distribution between the front and rear axles. Under normal conditions, the variator prevents damages to the rear section of the vehicle due to brake force applied over rear wheels. The electronic brake variator is part of the ABS functions.

Brake assist (BAS)

The brake assist system can help reduce the braking distance. The brake assist system enhances braking power if the driver quickly steps on

the brake pedal during emergency braking scenarios. As a result, the total brake pressure is quickly reached, the braking power is enhanced, and the braking distance is reduced. This enhances the speed and efficiency of the ABS system.

Do not relieve pressure applied to the brake pedal! By releasing the brake pedal or reducing the pressure applied to the pedal, the brake assist system automatically disables braking power enhancement.

Electronic differential lock (EDS)

The EDS brakes skidding wheels and transfers traction force to other traction wheels. In order to prevent the braked wheel disc from overheating, the EDS operates simultaneously with ASR and is automatically disabled in case of unusually high demand. As soon as the brake is cooled, the EDS is automatically enabled.

⚠ WARNING

Driving fast on icy, slippery or wet roads can lead to a loss of control of the vehicle and could cause serious injury to the driver and passengers.

- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions. Do not let the extra safety afforded by the brake assist system tempt you into taking any risks when driving.
- The brake assist system cannot defy the laws of physics. Slippery and wet roads will remain extremely dangerous.
- Driving too fast on wet roads can cause the wheels to lose contact with the road surface and "aquaplane". A vehicle cannot be braked, steered or controlled once it has lost contact with the road surface.
- The brake assist system cannot prevent an accident if, for example, you are driving too close to the vehicle in front or are driving too fast for the individual situation.
- Although the brake assist systems are very effective and can help to control the vehicle in difficult driving situations, please always remember that the driving stability of the vehicle depends on tyre grip.
- When accelerating on a slippery surface, for example on ice and snow, press the accelerator carefully. The wheels can spin even with active brake assist system, which may lead to a loss of vehicle control.

⚠ WARNING

The effectiveness of the brake assist systems can be considerably reduced if other components and systems that affect driving dynamics are not serviced correctly or are not functioning properly. This also applies, but not exclusively, to the brakes, tyres and other systems that have already been named.

- Always remember that modifications and changes to the vehicle may affect the brake assist systems.
- Alterations to the damping system or the use of non-approved wheel and tyre combinations can affect the function of the ABS and EBV and reduce its efficiency.
- The proper effectiveness of the brake assist systems is also conditioned to the use of suitable tyres → page 217, *Wheels and tyres*.

⚠ WARNING

Driving with worn brake pads or with a faulty brake system can cause severe accidents and injuries.

- If there is any suspicion that the brake pads might be worn or the brake system might be damaged, immediately seek assistance at a Volkswagen Dealership to check the brake system and replace worn brake pads.

⚠ WARNING

Incorrectly parking the vehicle could cause severe injuries.

- Never remove the vehicle key from the ignition cylinder while the vehicle is in motion.
- Never park the vehicle so that parts of the exhaust system can come into contact with inflammable material underneath the vehicle, e.g. leaves, dry grass, spilt fuel, etc.
- Always apply the handbrake fully when the vehicle is parked.
- Never leave unattended children or people with special needs in the vehicle. They could release the handbrake, move the selector lever or gearshift lever, and thus set the vehicle in motion. This could lead to accidents and severe injuries.

- Always take the vehicle keys with you when you leave the vehicle. The engine can be started and electrical equipment such as the window controls can be operated, which may lead to severe injuries.
- Never leave unattended children or people with special needs in the vehicle. They could become trapped in the vehicle in an emergency and may not be able to get themselves to safety. Depending on the season of the year, the interior of closed / locked vehicles, for example, can get extremely hot or cold. This can cause serious injuries and illness or fatalities, especially to small children.

! NOTICE

- Only release the brake pedal after pulling the handbrake, in order to prevent sudden vehicle movement after parking.
- Drive carefully in parking lots with long kerbs or fixed posts. Objects higher than the ground level may damage the bumper and other vehicle parts when parking. On order to avoid any damage, stop the vehicle before the wheels touch the bollards or kerbs.
- Carefully drive through entrances and slumps in terrains, ramps, kerbs, and other objects. Lowered vehicle parts, such as the bumper, spoiler and chassis, engine or exhaust parts may be damaged in these situations.

i The ESC and ASR can only operate properly if all 4 wheels share the same tyre type. Different tyre tread diameters could cause unexpected changes in engine torque.

i In case of damages in the ABS system, the ESC, TCS, and EDS will also be disabled.

i Operating noises may be heard during regulating procedures of the described systems. 

ESC system (Electronic stability control)



Fig. 92 On the centre console: manual ASR on/off button.

Depending on the vehicle version, the ESC function may not be available.

The electronic stability control system (ESC) only works while the engine is switched on and includes ABS, EDS, and ASR.

The ASR may only be disabled by pressing the  → **Fig. 92** button while the engine is running. Only disable the ASR system under sufficient propulsion scenarios (among others):

- When driving in deep snow or over loose ground.
- During “free tyre spinning” while stuck in mud or other areas.
- When sufficient propulsion is no longer reached.

Next, enable the ASR by pressing the button .

With the ASR disabled, the set stability and stabilizing brake interventions remain active. 

Troubleshooting

Failure warning and indicator lamps

(!)  **Stop driving!** Damaged brake system. Go immediately to a Volkswagen dealership or a specialized company → .

ABS  **Lit:** ABS out of action or malfunctioning. Go to a Volkswagen Dealership or qualified workshop. The vehicle can be braked without ABS.

ESC  **Lit:** ESC disabled for system-related reasons. Switch the ignition off and on again. As the case may be, drive on for a short .

distance at about 15-20 km/h. Case  is still be on, seek a Volkswagen dealership or a specialized company.

Guidelines for the braking support systems

When there is a suspicion that there may be a faulty function, read and observe the following instructions:

- The ESC and TSC can only function properly when all four wheels are equipped with the same tyre type and model. Different diameters among the wheels/tyres may cause an unexpected reduction in engine power.
- In case of damages in the ABS system, the ESC, TCS, and EDS will also be disabled.
- Operating noises may result from adjustments to the described systems.

Adverse conditions:

The Electronic Stability Control (ESC) may not identify very steep slopes or gradients (greater than 30%), which could affect the proper functioning of the Electronic Stability Control (ESC) and, consequently, the Hill Start Assist (HHC - Hill Hold Control) and the parking sensor.

To restore the aforementioned systems, it is sufficient that the vehicle is turned off and on again and that the driver starts the car and drives it at a speed greater than 25 km/h for a few seconds.

WARNING

Failure to observe the warning lamps and text messages could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore any warning lamps or text messages that appear.
- Stop the vehicle as soon as possible and when safe to do so.

WARNING

Driving with faulty brakes may cause severe accidents and injuries.

- If the braking system warning lamp  lights up or remains lit while driving, the brake fluid level is too low or the braking system is faulty. Stop immediately and seek expert technical assistance → page 211, *Brake fluid*.
- If the braking system warning lamp  lights up along with the ABS control lamp , the ABS regulation function may be faulty. This

indicates that the rear wheels may skid relatively fast when breaking. Locked rear wheels may cause the driver to lose control of the vehicle! Whenever possible, reduce speed and drive carefully at minimum speed to the nearest Volkswagen Dealership to check the braking system. Avoid sudden braking and driving manoeuvres while driving.

- If the ABS control lamp  lights up or remains lit while driving, the ABS is not functioning properly. The vehicle can only be braked with regular brakes (without ABS). The protection provided by the ABS is not available in this scenario. Go to a Volkswagen Dealership as soon as possible.

NOTICE

Failure to observe the illuminated indicator lamps could lead to vehicle damages.



Practical equipment

Stowage compartment

Introduction

Only use stowage compartments to stow light or small objects.

⚠ WARNING

Loose objects may be flung through the vehicle interior in the event of a sudden driving or braking manoeuvre. This can cause serious injury and can also lead to loss of control of the vehicle.

- Do not stow any pets or any hard, heavy or sharp objects in the vehicle's open stowage compartments, on the dash panel, items of clothing or bags in the vehicle interior.
- Always keep stowage compartments closed while driving.

⚠ WARNING

Items in the driver footwell can hinder pedal operation. This can lead to loss of control of the vehicle and increase the risk of serious injury.

- Ensure that all pedals can always be operated without any hindrance.
- Foot mats must always be properly secured in the footwell.
- Additional foot mats or other floor coverings should never be placed over the fitted foot mat.
- Ensure that no objects can enter the driver footwell while the vehicle is in motion.

⚠ NOTICE

- Do not store any temperature-sensitive objects, food or medicines inside the vehicle. Hot and cold temperatures could damage them or render them unusable.
- Items stored in the vehicle made from transparent materials, e.g. glasses, magnifying glasses or transparent suction cups on the windows, can concentrate the sun's rays and thus cause damage to the vehicle.

Stowage compartment in the driver side

☞ Please refer to **⚠** and **➁** at the start of the chapter on page 106.



Fig. 93 On the left-hand side, in the lower section of the console: stowage compartment.

A stowage compartment may be available on the driver side to store small objects → Fig. 93.

⚠ WARNING

Loose objects may be projected inside the vehicle in the event of a sudden driving or braking manoeuvre, as well as during accidents, and may cause severe injuries.

- Do not stow any hard, heavy or sharp objects loose in the open stowage compartment.

Front stowage compartment

☞ Please refer to **⚠** and **➁** at the start of the chapter on page 106.

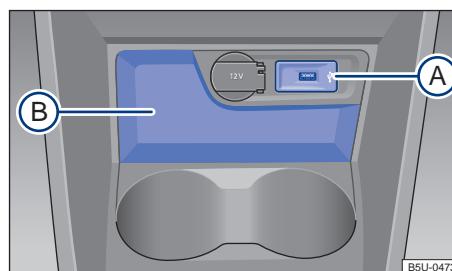


Fig. 94 In the front centre console: stowage compartment.

Open stowage compartment in the front centre console → Fig. 94 B).

Depending on the vehicle version, stowage compartment A may contain a factory-fitted USB interface → page 112.

 There may be a 12 V socket in the stowage compartment. → page 109

There may be an open stowage compartment in the side of the passenger seat → Fig. 95.

Opening and closing the stowage compartment

To open, pull the opening lever → Fig. 96.

To close, press the cover upwards until it fits into place.

The *vehicle wallet* may be kept in the stowage compartment.

WARNING

Open stowage compartments may increase the risk of severe injuries in case of accidents or sudden driving or braking manoeuvre.

- Always keep glove box closed while driving.

Stowage compartment on the passenger side

 Please refer to  and  at the start of the chapter on page 106.

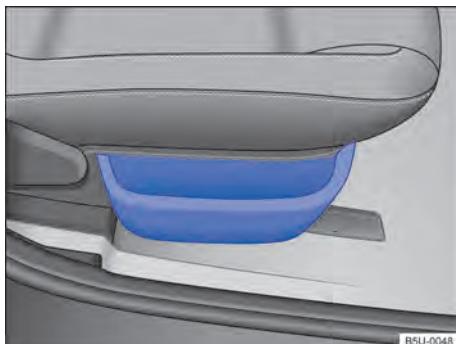


Fig. 95 In the side of the passenger seat: stowage compartment.

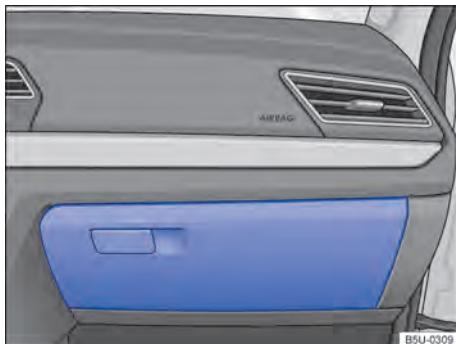


Fig. 96 On the passenger side: stowage compartment.

Stowage compartment on the side of the seat

Depending on the vehicle version the seat side stowage area may not be available.

Rear stowage compartments

 Please refer to  and  at the start of the chapter on page 106.



Fig. 97 On the passenger seat: stowage bag.



Fig. 98 In the rear centre console: stowage compartment.

Stowage compartment.

Depending on the vehicle version, the storage bag on the passenger seat may not be available.

On the rear part of the passenger's seat there's a storage bag → Fig. 97.

Stowage compartment in the rear centre console

There may be a stowage compartment in the rear centre console → Fig. 98.

⚠ WARNING

Closed drink bottles can explode in the vehicle in extreme heat or crack in extremely cold temperatures.

- Never leave closed drink bottles in an extremely hot or extremely cold vehicle for extended periods.

⚠ NOTICE

Do not leave any open drinks in the cup holder while the vehicle is in motion. Drinks that are spilled, for example during braking, can damage the vehicle and the vehicle electric system.



Cup holders in the centre console

📘 Please refer to ⚠ and ⚡ at the start of the chapter on page 108.



Fig. 99 In the front centre console: cup holder.

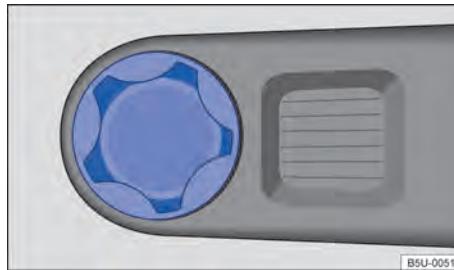


Fig. 100 In the rear centre console: cup holder.

There are two cup holders in the front centre console → Fig. 99 and one cup holder in the rear centre console → Fig. 100.



Drink holder on the side of the rear seat - New Saveiro with Extended Cab

 Please refer to  and  at the start of the chapter on page 108.

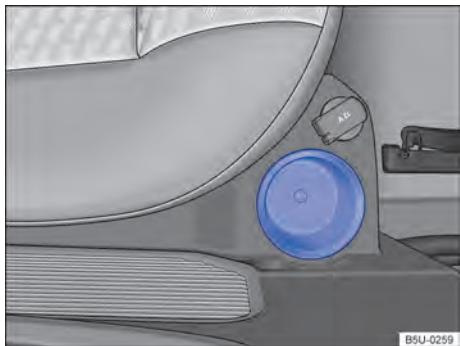


Fig. 101 On the side of the rear seat: cup holder.

In vehicles with extended cab, there is a drink holder on the sides of the rear seat → Fig. 101.

Open the tailgate to use the bottle holder → Fig. 102 ① and drink holders ②.

There are two bottle holders ① and two cup holders ② in the tailgate lining; one of each in each side of the tailgate lining.



Socket

Introduction

Electrical equipment can be connected to the socket in the vehicle.

Electrical equipment connected must be in perfect conditions and must not have any defects.

WARNING

Improper use of the socket and electrical accessories can cause fires and other severe injuries.

- Never leave children in the vehicle unattended. The socket and the devices connected to it can be used when the ignition is switched on.
- If the electrical device gets too hot, switch off the device immediately and disconnect it from the socket.

NOTICE

In order to prevent damage to the electrical system, never connect equipment which generates electricity, such as solar panels or battery charging units for charging the vehicle battery, to the 12-volt socket.

 Do not leave the engine running when the vehicle is stationary.

 Using electrical appliances with the engine switched off and the ignition switched on will drain the battery.

 Unshielded devices can cause interference with radio reception and vehicle electronics.

 Interference of AM radio reception could occur if electric devices are used in the vicinity of the rear window aerial.



Cup holders and bottle holders in the tailgate lining

 Please refer to  and  at the start of the chapter on page 108.

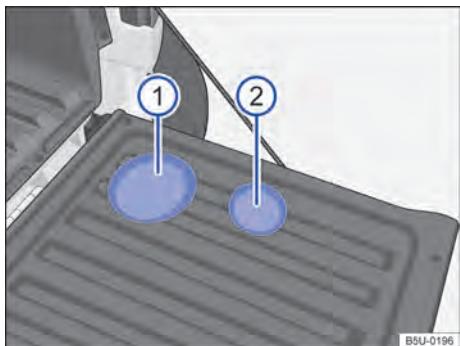


Fig. 102 In the tailgate lining: ① bottle holder and ② drink holders.

The bottle holder and cup holders may only be used while the tailgate is opened and the vehicle is stationary.

Vehicle sockets

Please refer to **⚠** and **①** at the start of the chapter on page 109.



Fig. 103 In the front centre console: 12 V socket.

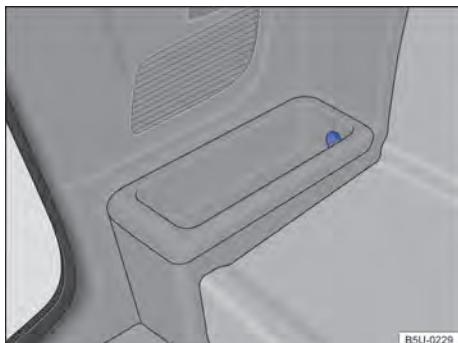


Fig. 104 In the side panel of the internal luggage compartment: 12 V socket.

Maximum power rating

12 V socket 120 W

The maximum power rating of the sockets may not be exceeded. The maximum power rating of each device is stated on its type plate.

12 V socket

The 12-volt socket only works while the ignition is switched on.

Using electrical appliances with the engine switched off and the ignition switched on will drain the battery. Therefore only plug electrical consumers into the sockets when the engine is running.

To prevent damage due to voltage fluctuation, switch off any connected devices before switching the ignition or engine on or off.

The following 12-volt sockets are available in the vehicle:

- In the front centre console → [Fig. 103](#).
- In the stowage compartment on the right hand side of the internal luggage compartment → [Fig. 104](#) (may not be available depending on the vehicle version).
- On the internal luggage compartment (not available in some vehicle versions).

NOTICE

- Refer to the owner's manuals of connected devices!
- Never exceed the maximum power rating as this could damage the entire vehicle electrical system.
- **12 V socket:**
 - Only use accessories that have been approved in accordance with current guidelines concerning electromagnetic compatibility.
 - Never feed electricity into the socket.

Vehicle sockets - New Saveiro with extended cab

Please refer to **⚠** and **①** at the start of the chapter on page 109.



Fig. 105 In the front centre console: 12 V socket.

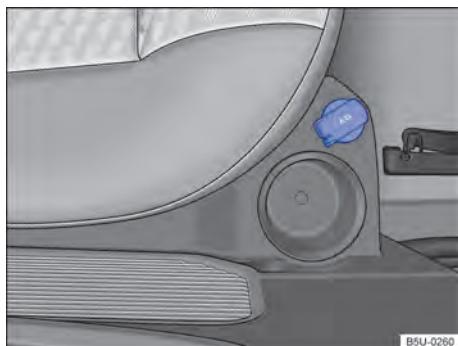


Fig. 106 On the side of the rear seat: 12-volt socket
- New Saveiro with extended cab.

Maximum power rating

12 V socket 120 W

The maximum power rating of the sockets may not be exceeded. The maximum power rating of each device is stated on its type plate.

12 V socket

The 12-volt socket only works while the ignition is switched on.

Using electrical appliances with the engine switched off and the ignition switched on will drain the battery. Therefore only plug electrical consumers into the sockets when the engine is running.

To prevent damage due to voltage fluctuation, switch off any connected devices before switching the ignition or engine on or off.

The following 12-volt sockets are available in the vehicle:

- In the front centre console → [Fig. 105](#).
- On the stowage compartment on the right-hand side of the rear seat → [Fig. 106](#).
- On the internal luggage compartment (not available in some vehicle versions).

! NOTICE

- Refer to the owner's manuals of connected devices!
- Never exceed the maximum power rating as this could damage the entire vehicle electrical system.
- **12 V socket:**

- Only use accessories that have been approved in accordance with current guidelines concerning electromagnetic compatibility.
- Never feed electricity into the socket.

Luggage compartment socket

Please refer to and at the start of the chapter on [page 109](#).

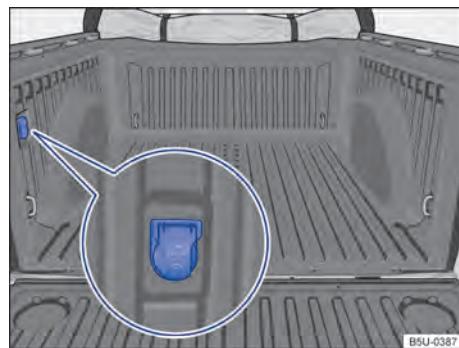


Fig. 107 Luggage compartment: 12-volt socket.

Depending on the vehicle version, the luggage compartment 12-volt socket may not be available.

Maximum power rating

12 V socket 120 W

The maximum power rating of the sockets may not be exceeded. The maximum power rating of each device is stated on its type plate.

12 V socket

The 12-volt socket only works while the ignition is switched on.

Using electrical appliances with the engine switched off and the ignition switched on will drain the battery. Therefore only plug electrical consumers into the sockets when the engine is running.

To prevent damage due to voltage fluctuation, switch off any connected devices before switching the ignition or engine on or off.

- The 12-volt socket is located on the internal luggage compartment → [Fig. 107](#) (not available in some vehicle versions).

NOTICE

- Refer to the owner's manuals of connected devices!
- Never exceed the maximum power rating as this could damage the entire vehicle electrical system.
- **12 V socket:**
 - Only use accessories that have been approved in accordance with current guidelines concerning electromagnetic compatibility.
 - Never feed electricity into the socket.

Radio

Before using the unit for the first time

Depending on the vehicle version, the radio may not be available.

Before using the unit for the first time, follow the steps below in order to safely operate the unit and make full use of its functionalities:

- ◀ ✓ Follow the basic safety notes  → page 113.
- ✓ Get familiar with the operation of the radio.
- ✓ In system and function settings, reset the radio to its factory settings.
- ✓ Only use appropriate data storage units for media operation.

◀

Overview of the convenience consumers

The radio may be factory equipped with the following components¹⁾, in part as optional equipment:

- ¹⁾ the type and quantity of the cited components are country and device specific and may vary in a model series and, in addition, be different in a special model.
- Loudspeakers, installed in different fitting locations and output levels (Watt).
- Multifunction steering wheel with its controls
- Media units.
- Cable connections to the external multimedia units.
- Wireless connection for external multimedia devices.
- Mobile phone interface.
- Sound system, in part, subwoofer.

◀

Aerial and radio feed

A radio feed aerial is installed on the roof of vehicles with factory-fitted radio units.

▶

 Interference of AM radio reception could occur if electric devices are used in the vicinity of the roof aerial (e.g. mobile phones).

the accuracy, actualization or integrity for third-party information and does not infringe third party rights.

- The radio stations or the owners of data sources are responsible for the broadcast content.
- Covered parking places, tunnels, tall buildings, mountains or additionally operated electric equipment, such as battery chargers, may also interfere with the radio reception.
- Metal-coated stickers or films may hinder reception in vehicles with window aerials.

Special precaution areas

Switch off mobile phones in areas with risk of explosions. Such areas are very common, although not often identified as such → . Some of these areas are:

- Areas with pipes and tanks containing chemicals.
- Lower decks in ships and ferries.
- Areas nearby vehicles powered by liquid gas (e.g. propane or butane).
- Areas with chemicals or other particles such as flours, dust, or metallic dust in the atmosphere.
- Any other area where the vehicle engine must be switched off.

WARNING

Switch off mobile phones in areas with risk of explosion.

NOTICE

Mobile phones must always be turned off in locations in which their use is prohibited. The radiation generated by mobile phones may cause interference with delicate medical and technical equipment, which may hinder or damage such devices.

WARNING

Accidents and injuries can occur if the driver is distracted. Using radio systems or mobile phones while driving could potentially distract the driver.

- Always drive carefully and responsibly.
- Only connect, insert, or remove data storage units while the vehicle is safely parked away from traffic.
- Adjust unit volume in order for the driver to hear external warnings and sounds (e.g. emergency service sirens) Legal provisions must be followed.
- Excessively high volumes may damage hearing, particularly above 85 decibels, even when exposed to such high volumes for a short period of time.

WARNING

Sudden volume variations may occur when switching or connecting an audio source.

- Reduce the master volume before connecting or switching audio sources.

Safety recommendations

Prior to first use of the device, read and follow the safety instructions listed below to detect and prevent possible hazards to yourself and others:

- Carefully read the following instructions.
- Some function buttons may contain links to third-party web pages. Volkswagen does not take ownership of third-party web pages accessible through links and is not responsible for their content.
- Some function buttons may contain third-party information, originated by other suppliers. Volkswagen does not take responsibility for

WARNING

Driving recommendations and traffic symbols displayed by the navigation system may differ from the actual traffic situation.

- Traffic signs and instructions must be prioritized over driving recommendations and instructions provided by the navigation system.
- Always adapt your speed and driving style to suit visibility, weather, road and traffic conditions.

WARNING

External device connection cables could hinder the driver's movement.

- Arrange connection cables so that they do not obstruct the driver.

WARNING

Loose or unsecured external devices may be flung through the vehicle interior and cause injuries in case of sudden evasive or breaking manoeuvres or in the event of accidents.

- Never place or attach external devices on doors, windscreen, on or near areas marked with "AIRBAG" on the steering wheel, dashboard, seat backrests, or between these areas and vehicle occupant himself. External devices may cause severe injuries in the event of accidents, especially if the airbags are triggered.

WARNING

In explosion prone places, turn mobile telephones off!

WARNING

Unfavourable light conditions and a damaged or dirty display may cause information and indications not able to be read or be correctly read on the display.

- Indications or information on the display must never be a reason to run a safety risk. The display is not in condition to replace the drivers attention.

WARNING

Radio stations may broadcast danger and catastrophe warnings. The following conditions prevent radio stations from being received:

- If your current location is in a region of poor or no reception. Such region includes tunnels, urban canyons, parking garages, underground passageways, mountains, and valleys.
- If, in areas with the bandwidths of the radio stations present interferences or are unavailable.
- When the necessary vehicle components required for radio signal reception are damaged, inoperative or without sufficient electric power.

WARNING

Opening a CD player's tray may lead to injuries caused by invisible laser radiation.

- Only repair CD player units at Volkswagen Dealerships or qualified workshops.

NOTICE

Mobile phones must always be turned off in locations in which their use is prohibited. The radiation generated by mobile phones may cause interference with sensitive medical devices and technical equipment, which may hinder or damage such devices.

NOTICE

The vehicle's loudspeakers may be damaged if the volume is too high or the sound is distorted.

NOTICE

Introduction of objects, incorrect placing and introduction of data storage units of different shapes and sizes may damage the media readers and the radio.

- Ensure correct insertion position when inserting a data storage unit .
- Insert only adequate data storage units into the respective media reading units.
- Excessive pressure could break the SD card slot lock.

NOTICE

Foreign matter and liquids adhering to a data storage device may damage the media reading unit and the radio.

- Do not attach stickers or similar materials to data storage units. Stickers may peel off and damage the media reading unit.
- Do not use data storage units with printable data. Residues and stickers may peel off and damage the media reading unit.
- Use only dry, clean, adequate and non-damaged SD cards.

NOTICE

Incorrect insertion of data carriers or of incompatible data carriers will possibly damage the radio.

- Follow the correct insertion position.

- Excessive pressure could break the SD card slot lock.
- Only use suitable SD cards.
- Insert or remove CDs always at a straight angle to the front panel of the unit without damaging their surface doing so.
- Trying to insert another CD while a CD is still inside the unit or being ejected may damage the CD driver of the unit. Always wait until the CD/DVD has been fully ejected!

NOTICE

The CD unit may be damaged by foreign objects attached to data media, as well as oval-shaped data media.

- Only clean 12 cm standard CDs may be used.
 - Do not attach stickers or similar materials to data storage units. Stickers may peel off and damage the unit.
 - Do not use data storage units with printable data. Residues and adhesives may peel off and damage the CD driver.
 - Do not insert single 8 cm or Shape CDs into the unit.
 - Do not insert DVD-Plus, Dual Disc or Flip Disc CDs, since these are thicker than regular CDs.

- Some of the function buttons and modes detailed herein may not be available due to varying market-specific unit software available. The absence of a button or function button is not a defect of the radio.
- Depending on the country, some functions of the radio are no longer selectable on the display as of a certain speed threshold. This is not a functional fault, but rather a legal obligation.
- In certain countries there may be restrictions regarding the use of Bluetooth[®]¹⁾ devices. Additional information may be obtained from local authorities.
- The display of all indications and the execution of the functions are only available after the complete start up of the radio. The start up time of the system depends on the scope of the radio function and can last more than usual especially at low and high temperatures.
- Upon changing the settings, displays may vary and the unit may behave in a partially different way from the described in this manual.
- The radio is connected to the vehicle. The system cannot be operated through a different vehicle.
- High speeds, poor weather and road conditions, as well as a high noise level (also outside the vehicle) and the network quality may impair a phone call in the vehicle.

- In some vehicles equipped with Park Pilot, the current audio source volume is automatically reduced when the reverse gear is selected. Volume reduction can be adjusted in the vehicle → page 97.
- Information on the radio's software and license conditions are stored in the radio:


Instructions for use

- The radio is supplied in different versions of the device which are distinguished from each other by its group of functionalities, inscriptions and button functions as well as by the layout of the controls.
- When using the radio, follow the specific national recommendations and legal determinations.
- To operate the radio a light touch on the button or screen suffices.
- To make the best of the radio's features and optimal operation it is important that the date and time be correctly set.

Power management

When, with the ignition turned off and the device on, the battery power falls below the minimum voltage of the electrical network, an acoustic signal sounds and the message **LOW BATTERY** is displayed. In this case, the unit must be switched off.

¹⁾ Bluetooth[®] is a registered trademark of Bluetooth[®] SIG, Inc.

Anti-theft coding

The unit is protected against theft and unauthorized use by a security code (anti-theft coding). .

After its first being entered, the anti theft code is saved to the memory of the vehicle (convenience coding of the radio) If the anti-theft coding has

to be manually deactivated, e.g. when installing the unit in another vehicle, please contact a Volkswagen Dealership.

If the vehicle battery has been disconnected, switch the ignition on before switching the unit on.

Device overview

Composition Touch (R 340G)



Fig. 108 Control overview.

Depending on the vehicle version, the radio may not be available.

The unit is provided in different variations, distinguished by the unit's button functions and lettering.

- ① **Rotary/push knob** Q
- ② **Microphone:** do not obstruct the microphone and keep it always clean.
- ③ **Function buttons:** press to access a function pad.

④ **Display:** touchscreen.

⑤ **Settings button:** the function is conditioned to the respective operating condition.

⑥ **USB port:** to connect external data storage units.

⑦ **AUX-IN multimedia port:** to connect external audio sources.

OR SD memory card slot: to insert SD cards.

⑧ **SD memory card slot:** to insert SD cards.

Media Plus (RCD 320G 2DIN)



Fig. 109 Control overview.

Depending on the vehicle version, the radio may not be available.

The unit is provided in different variations, distinguished by the unit's button functions and lettering.

- ① **Rotary/push knob** :
- ② **Function buttons**: the function is conditioned to the respective operating condition. Press to execute the respective function.
- ③ **CD Slot**: insert and eject CDs.
- ④ **Display**: adjustable brightness.
- ⑤ **EJECT** Press to eject the CD.
- ⑥ **Setting knob**: the function is conditioned to the respective operating condition.
 - In **all radio models**, turn to manually set stations or channels.
 - In **media mode**, turn to manually change tracks.

- ⑦ **USB port**: to connect external audio sources.
- ⑧ **AUX-IN multimedia port**: to connect external audio sources.
- ⑨ **SD memory card slot**: to insert SD cards. Carefully insert the SD card into the slot, with the printed side facing up.
- ⑩ **Radio buttons**: press to access an operation area. The lettering and function are conditioned to the unit variation.

Display

Clean the display

To clean, turn the radio off.

To clean the display, use a clean soft cloth, slightly damp with clean water or a cleaning cloth available at Volkswagen Dealerships → ①.

Soften resistant dirt with a humidified cloth, taking care not to damage the radio.

NOTICE

Do not dry clean the display. Doing so may cause scratches that cannot be removed.

- Do not use aggressive or solvent-based cleaning products. Such cleaning products may damage the radio and leave the display "mis-ty".
- Exert only a light pressure when cleaning the display.

Approach sensors

Depending on the radio version, the device is equipped with a built-in proximity sensor.

The screen display switches automatically from display to operation mode when approached by the hand. In operation mode, the function buttons are automatically highlighted for ease of operation.

Depending on the vehicle, the proximity sensors may be activated or deactivated via the **Screen settings** menu.

Rotary and push knob

Rotary/push knobs

The rotary/push knob  is referred to as volume control or on/off button.

The right-hand rotary/push knob is referred to as selector.

Turning the radio manually on or off

Press the on / off button briefly .

Turn the radio on or off automatically

According to its version, the unit is automatically turned off when the engine is turned off or the ignition key is removed from the ignition lock. If the radio is manually switched on again, it will be automatically switched off after approximately 30 minutes (timeout).

Volume increase or decrease

Once on, the radio starts to operate at the last adjusted volume level, as long as the maximum pre defined turn on volume is not surpassed.

- Turn the volume control  (right or clockwise to turn up and left or counter clockwise to turn down)

Some volume adjustments can be preset.

Mute

When in mute mode, the active audio source is interrupted or muted. The indication can be seen on the display screen .

- Turn the volume control button  counter clockwise until audio can no longer be heard.

Selector button

The selector button can be turned or pushed. When turned, lists are searched or radio station lists or of media titles are opened. When pressed marked records are accessed, configurations are set and functions started or interrupted.

Radio buttons

Depending on the type and version of the vehicle, the function buttons may not be available.

To operate the radio buttons, press them briefly.

APP: access the interface with App-Connect.

EJECT: eject CD.

FM/AM: switch to radio mode and switch between frequency bands.

MEDIA: change to media mode and from there select the media source.

MENU: press to show additional functions related to the current mode (radio, media, etc.).

MUTE: mute the audio source.

PHONE: access the telephone interface. If there is no telephone interface installed, the current audio source is muted.

RADIO: turn on in radio mode and then change the frequency range.

SETUP: press to show additional functions related to the current mode (radio, media, etc.).

SOUND: access to the **Sound settings** menu.

VOICE: activates the voice command mode.

△: eject CD.

Basic operating information

Operating the function buttons on the display screen

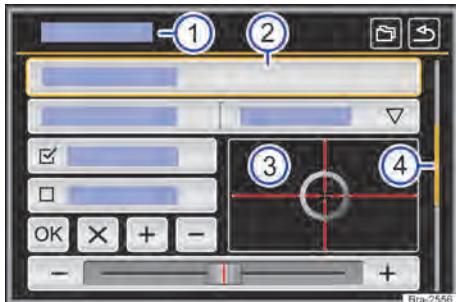


Fig. 110 Schematic representation: overview of possible function buttons on the display.

The device is equipped with a touchscreen → Fig. 110 ③.

Active display areas with recorded functions are referred to as "function buttons" and operated by brief *touches* or extended *touches* on the display. Function buttons are described herein by the word "function button" and the button symbol ①.

Function buttons start specific functions or open other submenus. The currently selected menu is indicated on the title line of submenus → Fig. 110 ①.

Inactive function buttons (grey) cannot be currently selected.

Extending or shortening the display exhibition time

Photos can be zoomed in or out in image viewing. To do so stretch or compress the respective picture or image with the thumb and forefinger on the display surface.

Overview of possible function buttons and displays

- 1 The title line indicates the currently selected menu and, eventually, other function buttons.
- 2 Touch to open a different menu.
- 3 **Moving target:** move the target over the display without removing the finger, slightly pressing or touching the desired

position in the display to move the target to the respective position. **Fixed target:** move the indicated area below the target over the display without removing the finger, slightly pressing or touching the desired position in the display to centralize into the target.

- 4 The scroll bar is displayed when on a displayed list more than a single shown record may be selected → page 119, *Access and search lists*.
 - Touch to gradually close some lists one level above.
 - Touch to gradually close submenus until returning to the main menu or to undo the previous entries.
 - Touch to open a pop-up window containing additional settings.
 - / Some functions or displays are selected through a checkbox and activated or deactivated by a touch.
 - Touch to confirm an entry or selection.
 - Touch to close a pop-up window or an entry template.
 - + / - Touch to gradually change the settings.
 - Gently move the scroll bar pointer along the bar with a finger move applying a light uninterrupted pressure on the display surface.



Access and search lists

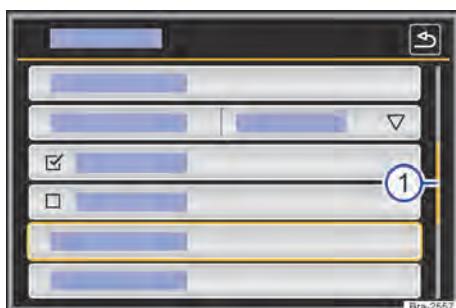


Fig. 111 Schematic representation: list entries in the settings menu.

List entries can be accessed by directly touching the screen or with the selector button → Fig. 111 ④.



If the available entries on a list do not fit the display, function buttons or a scrollbar are shown on the right-hand side to scroll through entries → Fig. 111 ①.

Selecting and accessing list entries with the control button

Turn the control button to sequentially select list entries through a checkbox and search the list.

Press the control button to access the selected list entry.

Search lists (scroll)

Search by list line: Briefly touch the function button  or .

Search by list page: Briefly touch the top or bottom of the scroll bar.

Quick search by list page: Touch and hold the top or bottom of the scroll bar.

Quick search in long lists: Place finger over the scroll bar indicator and move it up or down in a single move. Remove the finger from the screen after reaching the desired position.

The entry line with symbol entry mask (cursor) is located on the upper left display line. All entries are displayed in this area.

Entry masks to "enter text"

Letters, characters and special symbols can be selected in any combination to enter free texts in entry masks.

The currently displayed sequence of symbols is applied by touching the function button .

Entry masks to select stored entries

Only combinations of letters, characters and special symbols corresponding to a stored entry can be selected for the introduction mask.

With each icon entry an objective is suggested on the entry line corresponding to the prescriptions. With composite terms, a space must be inserted.

If less than 99 entries can be selected, the number of remaining entries is shown through the entry line → Fig. 112 ③. Touching this function button will display all remaining entries in a list.

If less than 6 entries can be selected, the list is automatically opened.

Overview of function buttons

- ①  **[123]**: touch to open the entry mask for special symbols and numbers. **OR:** : touch to switch to the letter entry mask.
- ② Touch to switch to a different keypad language. The keypad language can be selected through the **System settings** menu.
- ③ Shows the quantity and opens the list of entries corresponding to selectable presets.

Letters and numbers Touch to apply the entry line.

Letters and  Press and hold to open a pop-up window with special symbols based on the letters. Select the desired characters via touch. Some special signs can also be transcribed (e.g. "AE" to "Ä").

-  Touch to switch between upper case and lower case, as well as numbers and special characters.
-  Touch to insert a blank space.
-  Touch to apply the introduction line suggestion and close the entry mask.
-  Touch to delete symbols on the entry line, from right to left. Press and hold to delete multiple symbols.
-  Touch to close the entry mask.

Entry templates with the display's virtual keyboard



Fig. 112 Representation: entry mask with display keypad.

Entry templates with display keypads are used to enter storage names, the selection of an address or entry of a search query to look up in longer lists among other.

The function buttons listed herein are not available in all countries or topic areas.

The following chapters detail only the functions not covered in this representation.

Additional displays and display options

Display indications may vary from those described herein, depending on the settings.

The time can be shown on the display status line.

All displays can only be shown after a complete start-up process of the radio.

Connectivity

App-Connect

Introduction

Depending on the type and version of the radio, the App-Connect functions may not be available.

The following interfaces are available in the App-Connect menu:

- Apple CarPlay™¹⁾
- Android Auto™²⁾

To prevent the driver from distraction only special applications may be used while driving → .

According to the mobile device used, a connection is established through the respective interface.

Thereby it is possible that the functions and the contents displayed on the mobile devices are displayed and controlled on the radio display.

WARNING

The use of applications while driving may distract from the surrounding traffic. Accidents and injuries can occur if the driver is distracted.

- Always drive carefully and responsibly.

WARNING

Loose or unsecured mobile phones may be flung through the interior and cause injuries in case of sudden evasive or breaking manoeuvres or in the event of accidents.

- While the vehicle is in motion, always secure mobile devices properly outside the airbag deployment zones or stow them away safely.

WARNING

Inadequately or inappropriately designed applications may cause damages to the vehicle, accidents and serious injuries.

- Volkswagen recommends to use only applications offered by Volkswagen for the specific vehicle.

¹⁾ Apple CarPlay™ is an Apple Inc. trademark.

²⁾ Android Auto™ is a Google Inc. trademark

- Protect the mobile device with its applications from misuse.
- Never alter the applications.
- Follow the owner's manual of the mobile device.

! NOTICE

Mobile devices must always be turned off in locations where their use is not allowed. The radiation generated by mobile devices may cause interference with delicate medical and technical equipment, which may impair or damage such devices.

! NOTICE

Volkswagen does not take responsibility for damages caused to the vehicle due to the use of low quality or defective applications, insufficient programming of the applications, insufficient network, for loss of data during transmission or misuse of mobile devices.

 For more information, refer to the mobile device's owner's manual.

App-Connect main menu

 Please refer to  and  at the start of the chapter on page 121.

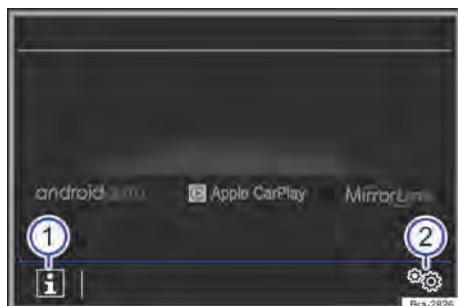


Fig. 113 App-Connect main menu.

- ①  [Info]: display of further information.
- ②  **Config.**: App-Connect Settings (may not be available, depending on the radio version and model).

Open the App-Connect settings menu

In the App-Connect main menu, touch the  function button.

Enable data transmission for VW Apps Data transmission for Volkswagen applications is enabled.

Display alignment Select the display alignment

180-degree rotation Touch to rotate the screen display by 180 degrees.

Prefer Infotainment system keypad Depending on the vehicle version, key entries will effected over the display keypad display and not over the mobile device keys.

 For more information, refer to the mobile device's owner's manual.



Apple CarPlay™

Apple CarPlay™ Menu



Fig. 114 Selection of the mobile device.



Fig. 115 Apple CarPlay™ Menu.

The Apple CarPlay Menu screen may vary depending on the mobile phone version and current release.

Apple CarPlay™ Requirements

The following conditions are required to use Apple CarPlay™:

- ✓ The mobile device **must** support Apple CarPlay™.
- ✓ The mobile device **must** be connected by a USB cable to the radio.
- ✓ The USB cable to be used **must** be an original cable from the mobile phone manufacturer.

Establish connection

When a mobile device is connected for the first time follow the instructions on the radio display and on the display of the mobile device.

- All requirements to use Apple CarPlay™ must be met.
- Press the **APP** button.
- OR press **MENU** and touch the surface function App-Connect.
- Select your connected mobile device pressing on the corresponding icon.

Disconnect

- While using Apple CarPlay™, touch the surface function → Fig. 115 ① to access App-Connect in the main menu.
- Touch the function button → Fig. 114 ① to end the active connection.

Particularities

During an active Apple CarPlay™ connection, the following features are enabled:

- Bluetooth connection among mobile devices and the radio are **not** possible.
- An active Bluetooth connection is automatically finalized.
- Telephone functions are only possible via Apple CarPlay™. The radio functions described in this manual are **not** available.
- The connected device **cannot** be used as a media device on the Media menu.
- On the instrument cluster's display no call lists are displayed for detour routes and media operation.

Voice command

Depending on the type and version of the vehicle, the voice command feature may not be available.

- On the multifunction steering wheel or on the mobile phone, press **VOICE** or **DISC** briefly to start the device's voice command feature.
- On the multifunction steering wheel or on the mobile phone, press **VOICE** or **DISC** for a few seconds to start the connected device's voice command feature.

 For more information, refer to the mobile device's owner's manual.

Android Auto™

Android Auto™ Menu



Fig. 116 Selection of the mobile device.



Fig. 117 Android Auto™ Menu

Android Auto™ Requirements

The following conditions must be met to use Android Auto™:

- ✓ The mobile device **must** support Android Auto™.
- ✓ The mobile device **must** be connected by a USB cable to the radio.
- ✓ The USB cable to be used **must** be an original cable from the mobile phone manufacturer.
- ✓ Depending on the mobile device used, an adequate application must be installed to use Android Auto™ on the device.

Connect

When a mobile device is connected for the first time follow the instructions on the radio display and on the display of the mobile device.

- All requirements to use Android Auto™ must be met.
- Press the **[APP]** button.
- **OR** press **[MENU]** and touch the surface function **App-Connect**.
- Select your connected mobile device pressing on the corresponding icon.

Disconnect

- While using Android Auto™, touch the function button **Q**, → **Fig. 117 ①**.
- Select the **Return to Volkswagen** function to access the App-Connect main menu.
- Touch the function button to end the active connection.

Particularities

During an active Android Auto™ connection, the following features are enabled:

- An active Android Auto™ device may be simultaneously connected to the radio via Bluetooth.
- Bluetooth connection between other mobile devices and the radio are **not** possible.
- Telephone functions are possible via Android Auto™. When the Android Auto™ device is simultaneously connected via Bluetooth to the radio, the phone function can also be used.
- Simultaneous phone calls via Android Auto™ and via the radio are **not** possible.

- An active Android Auto™ device **cannot** be used as a media device on the Media menu.
- On the instrument cluster's display no call lists are displayed for detour routes and media operation.

Voice commands

Depending on the type and version of the vehicle, the voice command feature may not be available.

- On the multifunction steering wheel or on the mobile phone, press **[VOICE]** or **[]** **briefly** to start the radio's voice command feature.
- On the multifunction steering wheel or on the mobile phone, press **[VOICE]** or **[]** **for a few seconds** to start the connected device's voice command feature.

 For more information, refer to the mobile device's owner's manual.



Composition Touch (R 340G)

Radio

Introduction

Depending on the vehicle version, the radio may not be available.

Follow the national rules and legal provisions when using the radio.

Other additional electric devices connected to the vehicle may interfere with the receipt of the broadcast radio signal and cause noises in the speakers.

 Parking lots, tunnels, tall buildings or  mountains may interfere with unit signal reception.

 Metal-coated stickers or films may hinder reception in vehicles with windscreen arials.

Radio main menu



Fig. 118 The radio main menu.

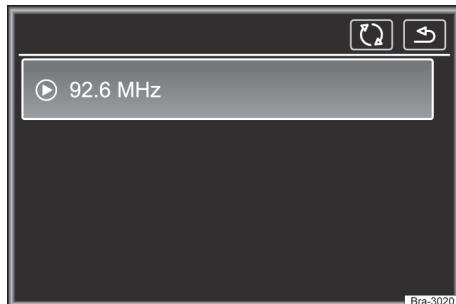


Fig. 119 Radio operation: station list.

With the radio turned on, press the **RADIO** button. Radio mode turns on.

The following options are available:

- return to the memorized radio station.
- Seek next station.
- Memorize the tuned broadcasting stations.

The currently tuned in radio station is displayed in the centre of the display. For stations with RDS the station's name can be displayed instead of its frequency, such as RADIO 21, in case of good reception.

Function buttons on the radio's main menu

Function button: effect

 A	Radio frequency range indication.
 FM/AM	Select the desired frequency range.
 ...	Opens the list of radio stations currently available → page 126.
 ...	Opens the adjusted frequency scale (frequency range).
 ...	Opens the current frequency range settings menu → page 128, <i>Radio Settings</i> .
 < / >	Change between stored or available stations.
 1 to 15	Arrow button settings in menu → page 128, <i>Radio Settings</i> .
 ...	Updating the frequency range's stations list.
 SCAN	Function button that only becomes visible with the SCAN function is selected → page 128.
	Press the control button to start the SCAN function.

Function button: effect

Cancel Cancelling a function.
Disable Deactivation of a function.

Radio Data System RDS

RDS (Radio Data System) is a radio data system via the additional FM services whereby it is possible to display the station's names and radio texts.

RDS is not supported by all devices and may not be available everywhere and for all FM radio stations.

Without RDS basically no **additional services** are possible.

Radio text (RDS)

Some RDS enabled stations also broadcast additional text information – known as radio text.

Radio text is displayed on the upper half of the screen above the station buttons → Fig. 118 

 The radio stations are responsible for the broadcast information content.

Station buttons



Fig. 120 The radio main menu.

In the main menu: **RADIO**, the currently selected frequency band stations can be stored in 15 numbered frequency tracks. These function buttons are referred to as "Station buttons".

Station button functions → Fig. 120

Touch the station button corresponding to the desired station.

Access stations through station buttons
Stored stations can only be touched after accessing through station buttons and when available in the current location.

Change the station button group
Swipe the display in the station button area → Fig. 120, from right to left or from left to right.

The station buttons are displayed in groups of 5 function button pads ([1] to [5], [6] to [10], and [11] to [15]).

Store stations in station buttons
See: storing stations → page 127.

Specific radio indications, menus and symbols



Fig. 121 The radio main menu.

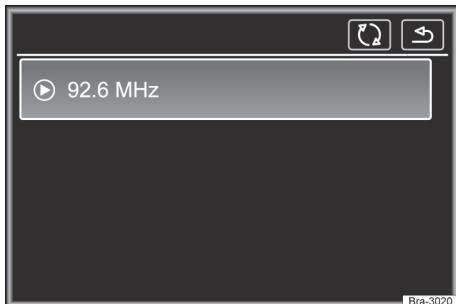


Fig. 122 Radio operation: updatable radio station list (AM).

Function button pads and their respective meaning on the radio → Fig. 121 and → Fig. 122:

Select the station using the arrow buttons /	Touch the function button or → Fig. 121.
Select a station from the radio station list.	Depending on the arrow button settings, the function switches between stored and available stations. Arrow button settings in the Radio settings → page 128 menu.
Update the radio station list	Touch the function button → Fig. 121 to open the list of stations. Search list and touch to select the desired station. Touch the function button → Fig. 122 to close the list of stations. If no action is made, the radio station list automatically closes after a while.
	The radio station list can be manually updated with the → Fig. 122 function button.

Manually set the station frequency

Introduce the frequency range	Touch the function button → Fig. 121.
Step-by-step instructions to change the frequency	Turn the settings knob. OR: touch the right or left frequency range arrow buttons.
Quick scan through the frequency range	Touch one of the arrow buttons in the upper part of the display area → Fig. 121. The next available station is automatically selected.

Manually set the station frequency

OR: press and hold one of the arrow buttons → Fig. 121 on the top of the display. After releasing, the next radio station available will be automatically selected.

OR: press and hold the frequency range and slide to move it.

Briefly press the settings knob.

When a station is selected through the station button, the manual frequency selection is also closed. If no action is made, the frequency range automatically closes after a while.

Store stations

Press and hold the desired station button → Fig. 121 until an audible warning is heard.
Store the current station into a station button

The currently played station will be stored in this station button.

Touch the function button → Fig. 121 or turn the settings knob to open the list of stations.

Stations already stored to station buttons are identified in the station list by the symbol.

Press and hold the display to select the desired station.

Touch the desired station button in which the station must be stored.

An audible warning is heard and the station is stored in the station button. Repeat this procedure to store other stations from the station list.

All stations stored in the **Radio Settings** menu can be deleted individually or all at once → page 128.

SCAN



Fig. 123 Radio mode: ongoing SCAN.

By selecting the SCAN function, all stations available in the current frequency range are played for approximately 5 seconds. **SCAN** will be displayed on the screen.

Starting and stopping the scan function

Starting the scan function Briefly press the settings knob.
OR: touch the surface function  and select **SCAN**.

Touch the **SCAN** function button to stop the scanning.

The automatic scan function is also interrupted whenever a station is manually selected by the station buttons.

Radio Settings

- Select the desired frequency range.
- Touch on **RADIO**, to toggle frequency ranges.
- Touch  to open the desired settings.

Function button: effect

Scan: automatic SCAN. By selecting the SCAN function, all stations available in the current frequency range are played for approximately 5 seconds → page 128.

Sound: sound settings.

Arrow buttons: select settings for the arrow buttons  and . Settings are applied to all frequency ranges (FM).

Memory: the arrow buttons are used to change **all stations stored** in the selected frequency range.

Function button: effect

Search station: the arrow buttons are used to change **all tuneable stations** in the selected frequency range.

Delete memory: deletes all or some stations stored.

 **All:** all stored stations are deleted.



Media

Introduction

“Media sources” are referred to as audio sources that contain audio data in different data storage units, such as external MP3 Players or audio files. These audio files may only be played by the respective units or audio inputs of the radio system (USB port, Bluetooth® interface, SD card or AUX-IN multimedia port).

Copyrights

Audio and video files stored in data media are generally subject to copyright laws, as per applicable national and international standards. All applicable legal provisions must be followed.

 This product is protected by copyrights of Microsoft Corporation. This technology may not be reproduced or marketed without prior authorization from Microsoft or one of its authorized affiliates.

 Volkswagen takes no responsibility for damaged or lost files.



Limitations and recommendations regarding data carriers

Dirt, high temperatures and mechanical damage may render a data carrier useless. Pay attention to the data carrier manufacturers instructions.

The difference in data carrier quality from different manufacturers may cause playback interferences.

The configuration of a data carrier or the devices and programs used to record the data may result in some titles or data carriers being unreadable.



Information on the best ways to create audio files and data carriers (rate of compression, ID3-tag etc.) can be found, for example, on the Internet.

Due to the size, use (number of copies and deletions), of the structure of the folders and file type of the used data carrier the reading time may vary substantially.

A **playlist** only defines a certain playback sequence. Files are **not** memorized on the playlists. The playlists are **not** played back when the files on the data carrier are **not** saved where the playlist is looking for them (path related data).

Media source	Playing requirements
⑧ Audio file reproduction via Bluetooth®.	- External Media Player must support Bluetooth® A2DP profile.
External audio source playback through the AUX-IN port.	- 3.5 mm jack plug for audio output.
a) iPod™, iPad™ and iPhone™ are trademarks of Apple Inc.	
①	Do not use any SD card adapter.
②	No liability will be accepted for damaged or lost files in data storage units.

Data base and file prerequisites

Only 32 mm x 24 mm x 2,1 mm (1,26 x 0,94 x 0,083 inch) or 1,4 mm (0,055 inch) SD cards can be used on the radio.

Media source	Playing requirements
SD and MMC cards of up to a max. of 2 GB (Gigabytes) with FAT16, FAT32 and ex-FAT file systems.	- MP3 files (.mp3) with 32 to 320 kbit/s or variable bit rates. - WMA files (.wma) up to 9.2 mono/stereo without copy protection. - M3U, PLS, ASX and WPL format playlists. - Playlists with no more than 20 kB and 1000 records. - File names and paths of up to a max. of 256 characters.
SDHC cards of up to a max. of 64 GB with FAT16, FAT32 and ex-FAT file systems.	
SDHC cards of up to a max. of 256 GB with FAT16, FAT32 and ex-FAT file systems.	
USB data storage unit according to USB 1.X, 2.0, 3.0 specification and FAT16, FAT32 and exFAT file systems.	
iPods™, iPads™ and iPhones™ of different generations ^{a)} (Only with Apple Dock or Lightning connector).	
External audio source playback via the USB port.	- External data media in the USB ↲.

Audio data storage unit playback sequence

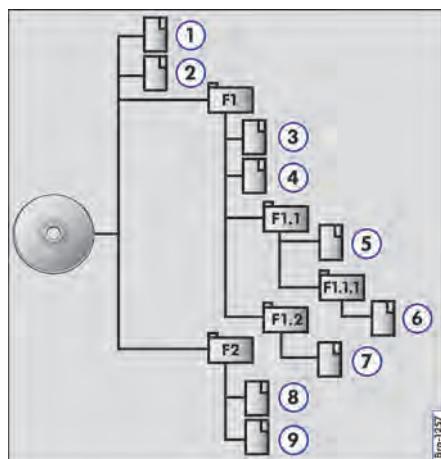


Fig. 124 Possible structure of a data storage unit.

In data storage units, audio files are often □ or organized into data folders □ and playlists □ in order to define a certain playback sequence.

Tracks, folders, and playlists are classified numerically and alphabetically according to the name of the data storage unit.

The figure → Fig. 124 shows a typical data storage unit containing tracks □, folders □ and sub-folders.

Thus, the tracks and folders of this data storage unit are played and displayed in the following order¹⁾:

1. Tracks ① and ② in the Root directory of the CD
2. Tracks ③ and ④ in the **first** folder **F1** of the root directory (display: □01).
3. Track ⑤ in the **first** subfolder **F1.1** of folder **F1** (display: □02).
4. Track ⑥ in the **first** subfolder **F1.1.1** of subfolder **F1.1** (display: □03).
5. Track ⑦ in the **second** subfolder **F1.2** of folder **F1** (display: □04).
6. Tracks ⑧ and ⑨ in the **second** folder **F2** (display: □05).

i The playback sequence can be modified by selecting different playback modes → page 130.

i Playlists are **not** played automatically, but must rather be individually selected in the track selection menu → page 131.

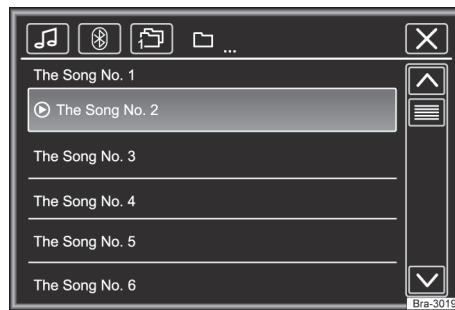


Fig. 126 Radio operation: station list.

In the main menu: Different media sources can be selected and played through **MEDIA**.

- Press the **[MEDIA]** button to open the **MEDIA** main menu → **Fig. 125**.

The last media source played is resumed.

Currently played media source is shown in the lower left function button pad → **Fig. 125**.

◀ The **MEDIA** main menu shows a message if no media source can be selected.

Media main menu function button pads

Caption for → Fig. 125 and → Fig. 126:

Songs, files and playlists can also be ticked off turning the menu button and accessed or opened pressing the button.

Shows the currently selected media source. Touch to select a different media source → page 131.

[SD Card]: memory card.

[USB]: external data storage unit in the USB port.

[BT Audio]: Bluetooth® audio.

[AUX]: external audio source connected to the AUX-IN multimedia port, depends on the vehicle's version.

[] Shows the playback list → page 131.

[< / >] Changes tracks in media mode → page 131.

[II] Playback is interrupted. The function button **[II]** changes to **[>]** → page 131.

[>] Playback is resumed. The function button **[>]** changes to **[II]** → page 131.

[Open the **Media settings** menu → page 132. ▶

Media main menu

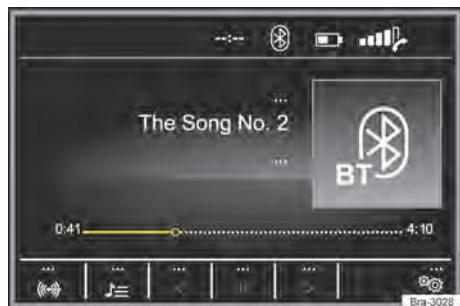


Fig. 125 Media main menu.

¹⁾ In the **Media settings** menu, the function **[Mix/Repeat, including subfolder]** must be enabled → page 132.

Caption for → Fig. 125 and → Fig. 126:

Songs, files and playlists can also be ticked off turning the menu button and accessed or opened pressing the button.

- Touch to switch between available modes.
 - repeat current tracks.
 - repeat all tracks.
- All tracks in the same memory level as the current track will be repeated. In the **Media settings** menu, **Mix/Repeat including subfolder** enabled, subfolders are also included → page 132.
- Mix function. The function button changes to .
- All tracks in the same memory level as the current track will be included. In the **Media settings** menu, **Mix/Repeat including subfolder** enabled, subfolders are also included → page 132.

Change media source

- On the **MEDIA** main menu, press the radio's button again, to go over all the available media sources.

In the pop-up window there are currently no selectable media sources shown as inactive (grey a).

The media source currently in use is displayed on the screen.

If no media source can be selected, such is indicated on the **MEDIA** main menu.

If a media source previously played back is selected again, the playback starts at the point where it was last interrupted.

- The track information display can be disabled in the *Playlist* → page 131.

Change the track on the media main menu

The tracks of the media sources being played back can be successively run through with the arrow buttons → page 131, *Track selection from the track list*.

It is **not** possible with the arrow buttons to switch to playback from a playlist. Playback from a playlist needs to be manually started from the track selection menu → page 131, *Track selection from the track list*.

Operation through the media main menu

Action	Effect
Briefly touch the function button once.	Within less than 3 seconds of the track's length, switches the beginning of the previous track.
Briefly touch the function button once.	Within more than 3 seconds of the track's length, switches to the beginning of the current track.
Briefly touch the function button once.	To the next track. After the last track, it returns to the first track of the current data storage unit.
<i>Press and hold</i> the function button .	Fast rewind.
<i>Press and hold</i> the function button .	Fast forward.
Touch the function button once, briefly.	Playback is interrupted. The function button changes to .
Touch the function button once, briefly.	Playback is resumed. The function button changes to .

Track selection from the track list

To open the track list in the **MEDIA** main menu, press OR turn the knob. The track about to be played back is highlighted.

Search the track list and touch on the desired track. When track information is available, the track number and name or the names of the files (MP3) are displayed instead of the Title + no. ¹⁾. The track title list may not be supported by the source.

 Tracks, folders and playlists can also be marked, by turning the settings knob, and accessed/opened by pressing the knob.

Specific media settings

Opening the Media settings menu

In the *MEDIA* main menu, touch the  function button.

Function button: effect

Sound: opens the Sound settings menu.

Mix/Repeat, including subfolders: subfolders are included in the selected playback mode
→ page 130.

Bluetooth: opens the Bluetooth settings menu.

Remove: remove the data unit (USB data storage unit or SD card) from the system. The respective function button is disabled after the data storage unit is successfully removed.

Playback of an SD card

- Insert the SD card carefully into the SD card slot with the chamfered edge up and the inscriptions to the left of the SD card slot or.
- To remove the SD card, first see the system settings and execute the **Safely remove source** action. Briefly touch the SD card so it "springs" out to removal position.
- Press the radio  button.

Playback is taken up from the last used media source. To playback the SD card, press .

When navigating the folders, use the  function button and the knob or. Press  to go to the higher level of the folders and rotate the selector button to select the desired folder.

To change to the next or previous track, press one of the function buttons.

Keep one of the arrow buttons pressed for a few seconds to move the playback forward or backward.

During playback of the SD card, some function keys are available at the bottom of the display. The active buttons are highlighted.

Wired or wireless connections

Introduction

Some external devices can be connected to the radio with or without wires (if existing) in the vehicle.

The type and number of connections with or without wires depend on the country and the vehicle. Within a range of different models and in special models the connections may reveal differences.

For the wired connections use only original cables from the device or - if available - the factory supplied cables for the respective vehicle.

USB Connection

The USB port is located on the front of the unit or .

Audio files on an external data storage unit connected to the USB port  can be played back and controlled by device.

USB data manual are referred to in this manual as external data media, which contain playable files (e.g. MP3 player, iPods™ and pen drives).

Only supported audio files are shown. Other file types are ignored.

Playback begins automatically if there are stored and readable audio files in the data storage units.

The additional external data storage unit controls (access track changes, track selection, and playback modes) are detailed in the respective chapters.

¹⁾ Depending on the source.

Instructions and restrictions

The number of USB ports  and compatibility with Apple™ devices, among other Media Players, may vary depending on the equipment.

The typical USB voltage of 5 V is supplied through the USB  port.

External hard drives with capacity for over 32 GB must be reformatted into the FAT32 file system, depending on the conditions. Programs and instructions to perform such formatting process are available on the Internet, for example.

Considering the wide range of different data storage units and various iPod™, iPad™ and iPhone™ generations, it is impossible to ensure that all functions will be available.

iPod™, iPad™ and iPhone™

Depending on the country and equipment version, iPods™, iPads™ or iPhones™ may be connected to the vehicle's USB port , through a suitable USB cable, and used as audio sources.

Disconnect

Connected data storage units **must** be prepared for removal before being disconnected.

- In the MEDIA main menu, touch the  function button to open the **Media settings** menu.
- **OR:** press the  radio button.
- Touch the  and then select . The function button is disabled after the data storage unit is successfully removed.
- The data storage unit may be disconnected.

Unreadable data storage unit

If a connected data storage unit contains unreadable data, a corresponding message is shown on the device display.

 If an external Media Player is connected **simultaneously** via Bluetooth® and the USB port  to the device, the Bluetooth® audio connection is automatically disconnected after switching to the USB port.

 If a connected device cannot be recognized, remove all connections and reconnect the devices. Check whether the connection cable is working, if necessary.

 In case of operating faults in connected devices, restart the respective device. This usually solves the issue.

 Do not use any memory card adapter, USB extension cord, or USB-Hubs (USB distributors)!

 Refer to the external data storage unit manufacturer's operating manual.

Connecting an external audio source to the multimedia AUX-IN port

Depending on the type and version of the vehicle, the voice command feature may not be available.

The AUX-IN multimedia port only supports 3.5 mm jack plugs.

The external audio source connected is played back through the vehicle's loudspeakers and **cannot** be controlled by the device.

Connected external audio sources are indicated by **AUX** on the display.

Connecting an external audio source to the AUX-IN multimedia port

- Reduce the volume on the radio.
- Connecting an external audio source to the AUX-IN multimedia port.
- Start playback on the external audio source.
- Press the radio button  to display the available media sources selection menu.
- Press the function button .

The **playback volume** of external audio sources must be adjusted to the volume of remaining audio sources.

Specificities regarding the use of external audio sources in the AUX-IN multimedia port

Action	Effect
Selection of another audio source on the device.	The external audio source continues to play in the background.
Stop playback on the external audio source.	The unit stays in the AUX menu.
Remove the plug from the AUX-IN multimedia port.	The unit stays in the AUX menu.

 When the playback of the external audio source is finished or is disconnected from the multimedia AUX-IN port, the radio stays on the AUX menu.

 There may be noise interferences if the external audio source is used on the vehicle's 12 V power outlet.

 Read and follow the external audio source manufacturers operating instructions.

Connecting external audio sources via Bluetooth®

Connecting an audio source via Bluetooth®

The Bluetooth® audio mode can be displayed by the  icon in the upper row.

In Bluetooth® audio mode audio files from a Bluetooth® audio source connected via Bluetooth® can be played back (for example a mobile phone), using the vehicle's loudspeakers (audio Bluetooth® playback).

Requisites

- The Bluetooth® audio source must support the Bluetooth® A2DP profile.
- In the **Bluetooth settings** menu, the **BT Audio (A2DP/AVRCP)** function must be enabled.

Start audio playback in Bluetooth®

- Lower the base volume on the radio.
- Enable Bluetooth® visibility in the external Bluetooth® audio source (e.g. mobile phone).
- Press the radio **(MEDIA)** button.
- Touch the function surface and select **BT audio**.
- Touch the **Search device** function button to pair an external Bluetooth® audio source for the first time.
- **OR:** select from the list of external Bluetooth® audio sources.
- **OR:** pair through the **Bluetooth Settings** menu.
- Follow the instructions for other procedures on the radio display and the Bluetooth® audio source display.

Playback of the Bluetooth® audio source must be initiated manually, if necessary.

Whenever the Bluetooth® audio source playback ends, the device remains in the Bluetooth® audio mode.

Playback control

Control of the Bluetooth® audio source through the device depends on the connected Bluetooth® audio source.

 In media readers that support the Bluetooth® AVRCP profile, playback may be automatically initiated or interrupted from the Bluetooth® audio source, if it is switched to Bluetooth® audio playback or other audio sources. In addition a display of the track or a track change is possible through via the device.

 Due to the wide variety of Bluetooth® audio sources, some of the functions described herein may not operate properly.

 To operate the multimedia mode with the Bluetooth® device connected, read and follow the manufacturers use instructions.

 Use only with devices that support Bluetooth® technology. For further information on Bluetooth® products compatibility contact a Volkswagen dealership or look up on the Internet.

Telephone

Introduction

The phone functions detailed below can be accessed through the device when there is an active paired and connected mobile phone.

The mobile phone must support the **Bluetooth®** function in order to establish a connection between the mobile phone and the device.

If no mobile phone is connected to the device, phone control will not be available.

Instructions to use mobile phones in vehicles without external aerial connection → page 112.

Phone menu displays vary depending on the functions available on the mobile phone model. There may be differences depending on the model used.

Use only with units that support Bluetooth® technology. Additional information about products that support Bluetooth® technology may be obtained at Volkswagen Dealerships or via the Internet.

Refer to the mobile phone and accessory supplier's operating manual.

Call interruption and reception flaws may occur in certain "transmission blackout areas".

Most electronic devices are shielded from HF signals (high frequency). In some rare cases, however, electronic devices may not be shielded against the HF signals of phone controls. This may result in damages.

WARNING

Using mobile phones while driving may distract drivers and cause accidents.

- Always drive carefully and responsibly.
- Adjust sound volume settings to allow the driver to hear external warnings and sounds (e.g. emergency service sirens)
- In locations with partial or lack of mobile coverage, and depending on the circumstances (tunnels, garages and underground passages) telephone call may be hindered, preventing the use of mobile devices (including emergency calls).

WARNING

If a mobile phone is not secured or not properly secured in the vehicle, it could be flung through the interior during a sudden driving or braking manoeuvre, or in the event of an accident. This can cause injuries.

- Always attach mobile phones properly and out of airbag triggering areas while driving.

WARNING

Mobile phones can cause interference when positioned nearby heart pacemakers.

- Keep a minimum distance of 20 centimetres between the mobile phone's antenna and the heart pacemaker, since the former may interfere with the latter.
- Do not carry activated mobile phones in chest pockets directly over heart pacemakers.

- Turn off mobile phones immediately whenever there is suspicion of interference with pacemakers.

NOTICE

High speed, unfavourable weather and road conditions, as well as poor network connection may hinder or interrupt mobile phone calls inside the vehicle.

Bluetooth®

 Please refer to  and  at the start of the chapter on page 135.

Bluetooth®

Bluetooth® technology connects mobile phones to the vehicle's phone controls. A single pairing process is required in order to use the phone controls with mobile phones equipped with Bluetooth®.

Some Bluetooth® mobile phones are recognized and connected immediately upon switching on the ignition, if such phones have been previously connected. At the same time, the mobile phone and its embedded Bluetooth® feature must be activated, and all active Bluetooth® connections with other devices must be disconnected.

Bluetooth® radio communication is free of charge.

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

Bluetooth® Profiles

Whenever mobile phones are connected to the phone controls, data will be exchanged through one of the Bluetooth® profiles.

Phone use via Bluetooth® Hands-Free-Profile (HFP):

- If mobile phones are connected via HFP with phone controls, wireless calls can be made via the hands-free device. In this case, the external aerial *cannot* be used. Instructions to use mobile phones in vehicles without external aerial connection.

Music playback via Bluetooth® Advanced Audio Distribution Profile (A2DP):

- Bluetooth® profile to transfer audio signals with stereo quality.

Playback control via Bluetooth® Audio Video Remote Control Profile (AVRCP):

- Bluetooth® profile to display track information and playback controls in mobile devices.

OR:

- Compare the PIN code shown on the radio display with the PIN code shown on the mobile phone. If the PIN code matches, it must be confirmed in **both** devices.

After successfully completing the pairing process, the main menu *PHONE* is shown and the contact list and list of calls stored in the mobile phone are automatically loaded. Confirm on the mobile phone, if necessary.

The duration of the loading process varies depending on the amount of data stored in the mobile phone. After completing the loading process, the data of the device will be available.

Pair up and connect the mobile phone to the radio

 Please refer to  and  at the start of the chapter on page 135.

In order to operate a mobile phone via the radio unit, both devices must be paired **once**.

Pairing must be performed while the vehicle is stationary.

Requisites

- Ignition switched on.
- Remove the headset connection to the mobile phone if necessary.
- The **Bluetooth®** function must be enabled and visible on the phone and radio.
- The **key blocking** feature must be unlocked on the mobile phone.

Follow the owner's manual of the respective mobile phone.

During the pairing process, the mobile phone's keypad must be used. The mobile phone must be prepared for such process.

Initiate mobile phone pairing

- Press the  button.
- Touch the  function button.

After the process is completed, all names of **Bluetooth®** devices found are displayed.

- Select the mobile phone from the list of **Bluetooth®** devices found.

Then the device and the mobile phone will be connected. Additional mobile phone or radio entries may be required to conclude their connection.

- Confirm successful pairing in the mobile phone, if necessary.

Depends on the mobile phone:

- Insert the PIN code displayed on the radio screen into the mobile phone and confirm.

Pairing and connecting mobile phones

Multiple mobile phones can be paired to the device. However, only **one** mobile phone can be connected to one device at any given time.

When turning the radio on, the unit automatically connects to the last mobile phone connected. If it is not possible to connect to the last mobile phone used, the phone control automatically attempts to connect to the next mobile phone in the list of paired phones.

The **maximum** range of a **Bluetooth®** connection is approximately **10 metres**. Active **Bluetooth®** connections are interrupted if such range is exceeded. The connection will be **automatically** restored as soon as the device is in reach of the **Bluetooth®** range.

 Refer to a Volkswagen Dealership for more information on mobile phone connections and pairing.

Switching off phone controls

 Please refer to  and  at the start of the chapter on page 135.

- End active calls.
- Switch off the ignition.
- Remove the key from the ignition.
- Switch off the mobile phone.

If the vehicle key remains in the ignition cylinder after switching off the ignition, phone controls **will not** be switched off. Phone controls are only switched off a few minutes later (factory settings: approximately 15 minutes).

i If mobile phones were connected with phone controls, the mobile phone transmission unit remains active after switching off phone controls. Switching off the mobile phone may be required.

Phone control description

► Please refer to **▲** and **●** at the start of the chapter on page 135.

Some features and settings are only available while the vehicle is stationary and are not supported by all mobile phone brands.

The range of possible settings depends on the country, unit, and the vehicle's equipment specifications.

Phone controls can recognize up to 20 devices.

Respectively, devices can be connected via the Hands-Free-Profile (HFP) and the Advanced Audio Distribution Profile (A2DP).

User profile assignment

Connected mobile phones are stored in the phone controls under a user profile.

Up to 4 user profiles can be assigned in phone controls. If another mobile phone is paired, the profile with longest idle time is automatically deleted.

Contact list, favourite numbers (speed dial buttons) and **User profile settings** menu settings are stored in the user profile.

If a mobile phone is reconnected to the phone controls, the respective settings and data will be available once again.

If a mobile phone's contact list entries are changed while connected, contact list data can be manually updated via the **User profile settings** menu. The contact list will be automatically updated upon the next mobile phone connection (e.g. during the following vehicle use).

⚠ WARNING

Loose or unsecured mobile phones may be flung through the interior and cause injuries in case of sudden evasive or breaking manoeuvres or in the event of accidents.

- While the vehicle is in motion, always secure mobile devices properly outside the airbag deployment zones or stow them away safely.

i Using mobile phones in the vehicle may cause loudspeaker noises.

PHONE main menu

► Please refer to **▲** and **●** at the start of the chapter on page 135.



Fig. 127 The telephone main menu.



Fig. 128 Call details.

Opening the Phone main menu

Press the **PHONE** button.

Telephone main menu function buttons

Function button: effect

- ① Name of the paired mobile phone or selected user profile. Touch to connect or pair to another mobile phone.
- ② Favourites (speed dial buttons) to which contact list numbers can be assigned → page 141.
- ③ Open a numeric keypad to enter a phone number → page 139.
- ④ Open the contact list of the paired mobile phone → page 139.
- ⑤ Open call lists of the mobile phone paired → page 140.
- ⑥ a) Open the message list (SMS) of the mobile phone paired.
b) Touch the function button to enter a phone number through voice command.
- ⑦ Open the Phone settings menu → page 141.
- ⑧ Touch to **answer** a call.
- ⑨ Touch to **end** a call.
OR: touch to **reject** calls received.
- ⑩ Touch to mute sound during a call. Touch the function button ④ to unmute the sound.

a) Depends on the mobile phone.

Phone control symbols and displays

Display: meaning

- ① Name of the mobile network carrier in which the SIM card of the paired mobile phone is registered.
- ② Stored name or phone number display.
- ③ Battery charge status of the connected mobile phone.
- ④ Intensity of the mobile communication transmission signal currently available.
- ⑤ Displays an active Bluetooth® connection.

During a phone call

 Please refer to  and  at the start of the chapter on page 135.



Fig. 129 During a phone call.

When a connection with the dialled phone number has been established, the *PHONE* main menu display switches to *Phone call* → Fig. 129.

Function buttons and displays: action and effect

- ① Touch to switch off the mobile phone microphone during a call (the function button  changes to ).
- ② (A) Touch to switch on the mobile phone microphone during a call (the function button  changes to ).
- ③ (B) Display of the call duration and call number or stored name.
- ④ Touch to end a call.
- ⑤ Battery charge status of the connected mobile phone.

Functions available during a phone call

Possible functions

⑥ Mute mobile phone microphone	Touch the function button  . The mobile phone microphone is muted (the function button  changes to ).
⑦ Unmute mobile phone microphone	Touch the function button  . The mobile phone microphone is unmuted (the function button  changes to ).
⑧ Starting phone calls via mobile phone	Touch the  function button and select <input checked="" type="checkbox"/> Hands-free .

Possible functions

The hands-free function is disabled and the call is directed to the mobile phone
Starting phone calls via the mobile phone controls Touch the  function button and select  Hands-free. The hands-free function is enabled and the call is directed to the mobile phone controls.

Possible functions

Touch the  Voicemail function button to establish a connection. If a voice mailbox number has not been stored, enter the calling number and confirm by pressing  .
Call voice mailbox Previously saved call numbers can be edited in the User profile settings menu → page 142.
Enter phone number via the keypad. Touch the function button  to establish a connection.
Select contact from the list Enter the first letter of the contact name via the keypad. Possible entries are shown in the contact list. Search the contact list and touch the desired contact to call.
Enter country code When entering country codes, instead of entering the two first digits (e.g. "00"), it is possible to enter the symbol "+". Touch and hold the function button  for approximately 2 seconds to enter the + character.

Enter phone number menu

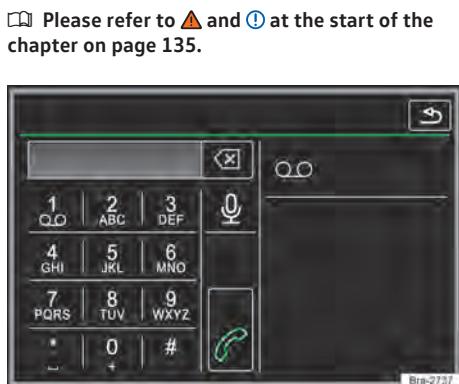


Fig. 130 Enter phone number menu.



Fig. 131 Enter phone number menu (select contact from the list).

Enter phone number menu functions.

Touch the  function button to access the *Enter phone number* menu.

Phone contacts list menu

Please refer to  and  at the start of the chapter on page 135.



Fig. 132 Contact Menu (contact list).



Fig. 133 Search mask.

After the first pairing process, it may take a few minutes until the paired mobile phone's contacts¹⁾ become available on the device. This process can take up to approximately one hour, depending on the volume of data to be transferred. Confirm the transmission process on the mobile phone, if necessary.

Contacts can also be accessed during calls.

Opening the Contacts menu

Touch the function button  to access the *Contact list (contacts)* menu.

Possible functions

Select contact from the list	Search the list and touch the desired contact to call. OR: if multiple phone numbers are stored for the same contact, touch the contact and then the desired phone number to call.
Search contacts through the search mask.	Touch the contact surface  → Fig. 132 to open the search mask. Enter the desired name into the search mask → Fig. 133. The appropriate number of events is shown to the right of the search field. Touch the function button to switch to list view. Search the list and touch the desired contact to call.

 Phone menu availability varies depending on the mobile phone used.

Call list menu

 Please refer to  and  at the start of the chapter on page 135.



Fig. 134 Call Menu (call lists).

Whenever a phone number is stored as a contact, the stored name will be displayed instead of the call list number.

Opening the Calls menu

Touch the function button  to access the *Calls* menu.

Touch the function button  → Fig. 134 ①.

Select the desired call list:    or .

Dis Definition

pla

y

 **Missed:** displays the numbers of missed and unanswered calls.

 **Dialed:** displays phone numbers selected via the mobile phone and the device's telephone control.

 **Received:** displays numbers of calls taken via the mobile phone and the device's telephone control.

 Call list availability varies depending on the mobile phone used.

¹⁾ Depending on the unit model, only contacts stored in the phone memory are loaded.

Favourites (speed dial buttons)

□ Please refer to  and  at the start of the chapter on page 135.



Fig. 135 The telephone main menu.

A total of **4** phone numbers from the contact list can be stored as favourites.

All favourite numbers must be assigned manually and then attributed to a user profile.

Favourite functions

Possible functions

In the *PHONE* main menu, touch one of the **free** function buttons.

Assign favourite Select the desired contact from the contact list. If more than one phone number is stored for the desired contact, select the desired number.

In the *PHONE* main menu, *press and hold the favourite entry* until the *Contacts* menu opens.

Edit favourite Select the desired contact from the contact list. If more than one phone number is stored for the desired contact, select the desired number.

To close the *Contacts* menu without applying changes, touch the function button .

Possible functions

Delete favourite Favourite entries can be deleted in the *User profile settings* menu, under the *Manage favourites* option → page 142.

Call favourite In the *PHONE* main menu, **briefly touch** the function button of the respective favourite contact *assigned* to call the stored phone number.

 Contacts stored as favourites are not automatically updated. If a contact stored as favourite in the mobile phone is changed, the function button must be reassigned.

Phone settings

□ Please refer to  and  at the start of the chapter on page 135.

Open the Phone settings menu

- In the *PHONE* main menu, touch the  function button.
- Touch the function button in which settings must be made.
- Changes are automatically applied upon closing a menu.

Function button: effect

Select phone: select device[®] from the list to connect it.

Search phone: touch to connect a new Bluetooth[®] device.

Bluetooth: opens the *Bluetooth settings* menu → page 142.

User profile: opens the *User profile settings* menu → page 142.

Mobile phone reminder: if a Bluetooth[®] connection with the mobile phone is established, the message "Don't forget your phone" appears after switching off the ignition.

Bluetooth® settings

>Please refer to  and  at the start of the chapter on page 135.

Open the Bluetooth settings menu

In the **PHONE** main menu, touch the  function button.

OR: press the **SETUP** button.

Then, touch the **Bluetooth** function button.

Touch the function button in which settings must be made. Changes are automatically applied after closing a menu.

Function button: effect

Bluetooth: touch to switch off Bluetooth®. All current connections will be interrupted.

Visibility: switch Bluetooth® visibility on or off.

Visible: Bluetooth® visibility enabled.

Invisible: Bluetooth® visibility disabled. Bluetooth® visibility must be switched on to pair external Bluetooth® devices to the radio.

Name: shows or changes the device name. This name is shown in other Bluetooth® devices under the Bluetooth® settings.

Paired devices: shows the paired device. Disconnect and connect individual Bluetooth® devices and Bluetooth® profiles.

Search devices: search active and visible Bluetooth® devices in range of the device. The **maximum range is approximately 10 metres**.

BT Audio (A2DP/AVRCP): if an external audio source is to be connected to the device via Bluetooth®, this function must be enabled.

User profile settings

Please refer to  and  at the start of the chapter on page 135.

Function button: effect

Manage favourites: edit favourites → page 141.

 **All**: all favourites are deleted.

avourite: touch to delete the stored number.

Free function button: touch to store a contact list number as favourite.

Function button: effect

VoiceMail No.: enter or edit the voice mailbox number.

Sort by: set the contact list sorting sequence (Last name or Given name).

Import contacts: import the contact list of the paired phone or update imported contact lists.

Select a ringtone: select a ringtone from a list of ringtone presets. The ringtone is played and stored after exiting the submenu.

Delete other profiles: delete some or all inactive user profiles.



Settings

Menu and system settings

According to the vehicle version or type the menu and system functions and setting options may vary.

Open the System settings menu

- Press the radio **SETUP** button → .
- Press the function button area of the mode to which the introduction of settings is intended.
- Changes are automatically applied upon closing a menu.

Function button: effect

Sound: adjust sound and volume settings → page 143.

Display: display settings.

 **Turn display off (in 10 s)**: if the function is enabled and the device remains idle, the display is automatically shut down after 10 seconds. The display is switched back on by touching the display or pressing a button.

Brightness level: select the display brightness level.

Touchscreen sound: confirmation sound when touching a function button enabled.

Display time in Standby mode: the current time is shown on the display while in Standby mode.

Date/time: to enter date/time settings

Time: manual current time setting.



Function button: effect

Time format: to define the preferred time display format (12 or 24 hours).

Daylight saving time: sets the daylight saving time automatically.

Date: to set the current date.

Date format: to define the preferred date display format (dd-mm-yyyy, yy-mm-dd or mm-dd-yy).

Additional keypad languages^{a)}: select additional keypad languages.

Units: define the units display in the vehicle.

Bluetooth^{a)}: make Bluetooth® adjustments.

Safe removal: remove the desired data storage unit safely from the system. The function button is disabled after the data storage unit is successfully removed.

Default settings: the return to default settings is disabled as selected in the **Entries and settings applied**.

System data: display of system data (unit number, hardware/software versions.)

Update software: update the software version.

Copyright: copyright information.

^{a)} Depending on the unit and the country.

WARNING

Accidents and injuries can occur if the driver is distracted.

- Never proceed with settings while driving.

 To make the best of the radio's features and optimal operation it is important that the date and time be correctly set.

Sound and volume settings

According to the vehicle version or type the sound and volume function and setting options may vary.

Press the **SETUP** button and then select **Sound**.

Function button: effect

Volume: volume settings.

Max. start volume: set the maximum switch-on volume.

Function button: effect

Speed-dependent volume control: set volume adjustments based on the vehicle's speed.

The audio volume is increased automatically as the speed increases.

Entertainment dimmer: set warning volumes.

AUX volume: set the playback volume of audio sources connected to the AUX-IN multimedia port (Low, Medium or High). Also see → page 143, *Adjust playback volume of external audio sources*.

Bluetooth Audio^{a)}: establish the playback volume of audio sources connected via Bluetooth® (Low, Medium or High). Also see → page 143, *Adjust playback volume of external audio sources*.

Balance - Fader: set sound equalization.

The grid shows sound equalization inside the vehicle. To edit sound equalization, touch the desired position in the vehicle interior display or use the arrow buttons to sequentially change settings. To centre sound equalization in the vehicle interior display, touch the function button between the arrows.

Bass - mid - treble: set sound characteristics (bass - mid - treble).

Touchscreen sound: confirmation sound when touching a function button enabled.

^{a)} Depending on the country and the device.

Operation mode of the volume increase as a function of speed

The speed-dependant volume increase automatically adjusts the volume based on the vehicle's speed.

The volume increase is set in levels from 1 to 7.

If a low value is set, the volume is slightly adjusted at higher speeds, if the set value is high, the volume increases sharply. At level 0 the volume increase as a function of the vehicle's speed is disabled.

Adjust playback volume of external audio sources

Whenever the playback volume of an external audio source must be raised, first lower the default volume of the device.

If the connected audio source has **very low volume**, increase the **output volume** in the external audio source. If this procedure is not sufficient, set the **on volume** to Medium or High.

If the external audio source connected has **distorted or very high volume**, lower the **output volume** in the external audio source. If this procedure is not sufficient, set the **on volume** to **Medium** or **Low**.

 **WARNING**

Accidents and injuries can occur if the driver is distracted.

- Never proceed with settings while driving.



Media Plus (RCD 320G 2 DIN)

Radio

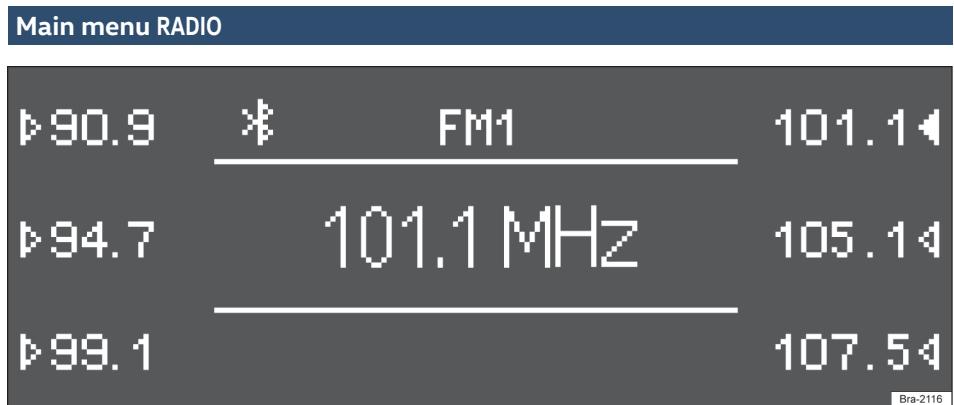


Fig. 136 RADIO main menu.

Depending on the vehicle version, the radio may not be available.

The radio system is provided based on the respective country and unit variations. All possible unit variations are listed in the unit overview.

Radio access and controls are conditioned to the unit variation.

Press the unit buttons **FM** or **AM** to select the radio mode in the respective frequency band.

The current radio station is displayed in the centre of the screen → Fig. 136.

Whenever RDS is available, the station name may also be displayed, in addition to the respective station frequency.

The side areas of the screen display the station frequencies memorized in the respective station buttons → Fig. 136. Multiple station frequencies can be memorized in station buttons → page 149. ▲

Changing the frequency band



Fig. 137 RADIO main menu: displays frequency bands and memory levels.

The currently selected frequency band is displayed over the station description → [Fig. 137 ①](#).

A frequency band can be selected by pressing the respective **FM** and **AM** unit button.

Press the **FM** or **AM** unit buttons repeatedly to switch between frequency band levels.

- FM range: FM 1 - FM 2 - FM AS - FM 1
- AM range: AM - AM AS - AM



Changing the station



Fig. 138 Changing stations with function or unit buttons.

Select the desired radio frequency range → [page 145](#).

Function	Action
Switch to the next station memorized.	Briefly press the function button → Fig. 138 ① → page 149 .
Change to the next station available in the current frequency band. Adjacent sta-	Briefly press the unit button or → Fig. 138 ② .

Function	Action
tions are displayed when switching stations.	Manually adjust the station frequency.

Quick scan through the frequency band

If the unit button or is pressed and held, the unit will quickly scan through the frequency band.

If the respective unit button is released, the scan will stop at the next station available in the current frequency band.



SCAN

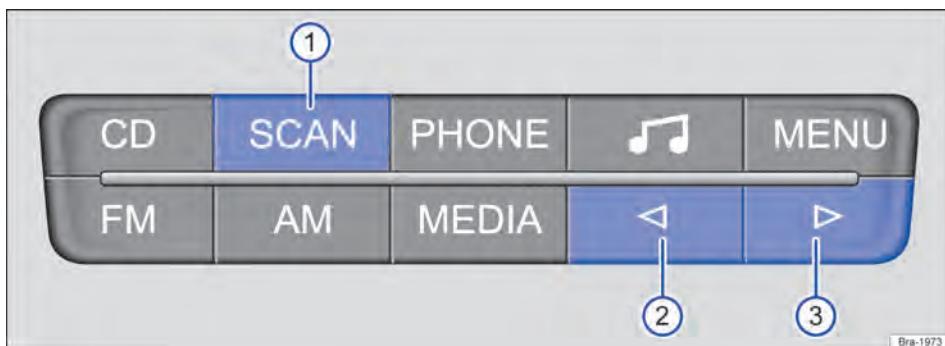


Fig. 139 Starting and stopping the SCAN function.

After activating the SCAN function, the radio plays **all stations available** in the current frequency band for approximately 5 seconds each. In radio operation, select the desired frequency band → page 145.

Function	Action
Initiate the automatic scan function.	Briefly press the unit button SCAN → Fig. 139.
Stopping the automatic scan in the current station.	Briefly press the unit button SCAN → Fig. 139 while the automatic SCAN function is active.

Function	Action
Stopping the automatic SCAN function and returning to the last station available.	Briefly press the unit button SCAN or ◀ → Fig. 139 while the automatic SCAN function is active.
Stopping the automatic SCAN function and seeking the next station available.	Briefly press the unit button ▶ → Fig. 139.

The scan function starts with the first available radio station. When the automatic scan function is initiated, the word **SCAN** flashes on the display. **◀**

Select the memory level

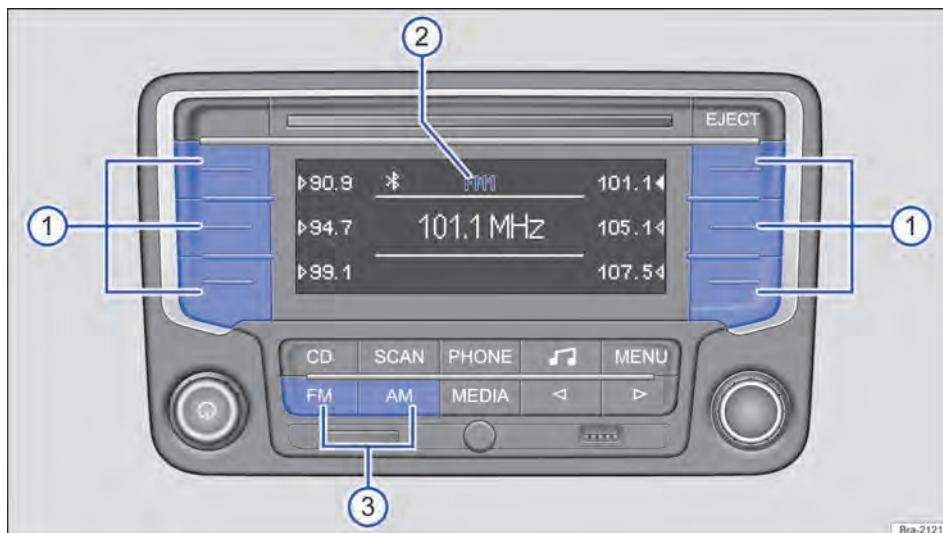


Fig. 140 Select the frequency band and memory level.

Different memory levels are available for each frequency band available (e.g. FM or AM).

Six function buttons are indicated in each memory level to store and access radio stations. These function buttons are referred to as "station buttons".

Switch the memory level in radio operation

Press the unit button **FM** or **AM** → Fig. 140 ③ until the desired memory level is displayed → Fig. 140 ②.

When switching memory levels, memorized radio station frequencies are displayed next to the station buttons Fig. 140 ①.

If no radio stations are memorized for a station button, the display reads **---** next to such station button.

The frequency band will also be switched when switching memory levels, if necessary → page 145.

Station buttons within a memory level may be manually or automatically assigned → page 149. 

Memorizing and selecting stations

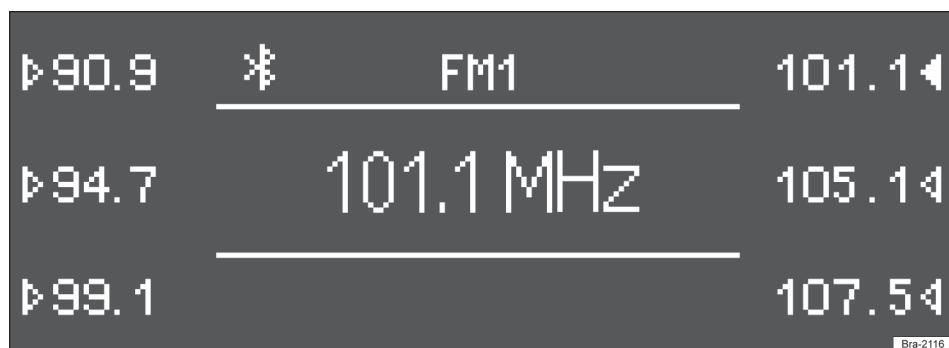


Fig. 141 Stations memorized in FM1 memory level station buttons.

Manually and individually assign station buttons

- Select the frequency band and memory level
→ page 145.
- Select the stations.
- **Press and hold** the desired station button until an audible warning is heard.
- The station currently selected (at→ Fig. 141: 101.1 MHz) is stored in this station button.

The station button in which the current station is memorized is marked on the radio display with a filled arrow ▶ or ▲.

Automatically store the station (AUTOSTORE)

With the Autostore function, the stations with strongest reception are stored in the 6 station buttons of the FM AS or AM AS memory level.

- Select the frequency band and memory level
→ page 145.
- Press and hold the unit button **FM** or **AM** for over 2 seconds. An audible warning is heard and the station seeking and storing process is initiated.

- During the storing process, **STORING** is displayed on the centre of the screen. This process may take a few seconds.
- When the storing process is completed, the **STORING** display is removed from the centre of the screen.

If no station is available, **NO STATION** is displayed on the centre of the screen.

If less than 6 stations were found, **---** is displayed next to the undesignated station buttons.

Selecting stored stations

- Select the frequency band and memory level in which the desired station is stored
→ page 145.
- **Briefly press** the desired station button.

Stored stations may only be selected if available, depending on the vehicle's current location.

 If a radio station is stored in a previously designated station button, the previous station stored will be deleted. ◀

Media

Introduction

“Media sources” are referred to as audio sources that contain audio data in different data storage units, such as CD or external MP3 Player. These audio files may only be played by the respective units or audio inputs of the radio system (internal CD drive, USB port, Bluetooth interface, or AUX-IN multimedia port).

 This product is protected by copyrights of Microsoft Corporation. This technology may not be reproduced or marketed without prior authorization from Microsoft or one of its authorized affiliates.

Media source and audio file requirements

Factory-fitted CD Players conform to safety class 1 according to the DIN IEC 76 (CO) 6/ VDE 0837 standard.

The unit supports only standard 12 cm CDs.

Supported listed file formats are simply referred to as “audio files”. Audio data CDs are referred to as “audio file CDs”.

Media source	Playing requirements
② Audio CDs (up to 80 min.).	<ul style="list-style-type: none">– CD digital audio specification .
② CD-ROM-, CD-R-, CD-RW and CD totalling up to 700 MB (megabyte) as per ISO 9660 or in the Joliet file system.	<ul style="list-style-type: none">– MP3 files (.mp3) with 48 to 320 kbit/s or variable bitrates.– WMA files (.wma) up to 9.2 mono/stereo without copy protection.– PLS and M3U playlists.– Playlists with up to 20 KB and 250 integrations.– Maximum of 32 playlists in data storage units.– File names smaller than 64 characters.– Folder structures with up to ten levels.– Up to 120 folders and 500 files in data storage units.

Media source	Playing requirements
② Audio file reproduction via Bluetooth® ^{a)} .	<ul style="list-style-type: none">– The external audio source must support the Bluetooth® A2DP or AVRCP profile and must be paired to the radio.
External audio source playback via the AUX-IN multimedia port.	<ul style="list-style-type: none">– 3.5 mm jack plug for audio output.
External audio source playback via the USB port.	<ul style="list-style-type: none">– USB media sources that can be connected to play-back audio files.

a) Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

Restrictions and recommendations

 Contamination, exposure to high temperatures and mechanical damage may render a data storage unit unusable. Follow the data storage unit manufacturer's instructions.

Variations in the quality of data storage units produced by different manufacturers may cause interferences during playback.

Please observe copyright laws.

CDs recorded in UDF or Direct CD format are not supported. Observe the format in Windows®.

The configuration of data storage units or recording devices and programs may prevent the playback of isolated tracks or operation of the data storage unit. Information regarding appropriate methods to create audio files and data storage units (compression rate, ID3 tag, etc.) can be found on the Internet, for example.

Data storage units with compacted files (MP3, WMA, etc.) take longer to read compared to “regular” audio CDs due to the greater amount of data. Complex folder structures can also slow down the reading of a data medium.

Playlists merely define a certain playback sequence. **No** files are saved in playlists. Playlists **are not** played when the data storage unit files are **not** saved in the directory indicated in the respective playlist (data shortcuts).

Audio data storage unit playback sequence

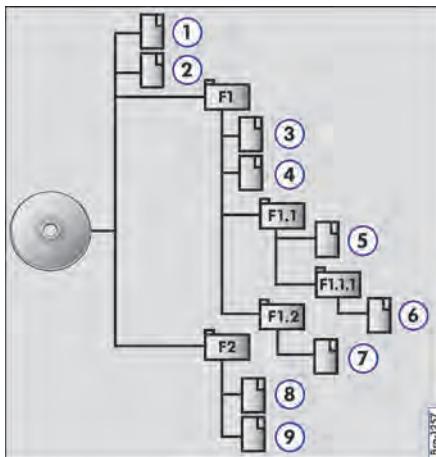


Fig. 142 Possible structure of an MP3 CD.

In data storage units, audio files are often divided into data folders and playlists in order to define a certain playback sequence.

Tracks, folders, and playlists are classified numerically and alphabetically according to the name of the data storage unit.

Therefore, subfolders are treated as folders and numbered based on the data storage unit's sequence.

The illustration → Fig. 142 shows a typical MP3 CD that contains tracks, folders and subfolders, for example.

The tracks and folders of such CD are, therefore, played and shown in the following sequence:

1. Tracks ① and ② in the **root directory** (ROOT) of the CD.
2. Tracks ③ and ④ in the **first folder F1** in the root CD directory (display: ①01).
3. Track ⑤ in the **first subfolder F1.1** of folder F1 (display: ①02).
4. Track ⑥ in the **first subfolder F1.1.1** of subfolder F1.1 (display: ①03).
5. Track ⑦ in the **second subfolder F1.2** of folder F1 (display: ①04).
6. Tracks ⑧ and ⑨ in the **second folder F2** (display: ①05).

Information The playback sequence can be modified by selecting different playback modes (REPEAT, MIX) → page 156.

Insert or eject CD

Either audio or data CDs can be played on the internal CD unit.

Audio CDs are displayed as **CD** and audio data CDs are displayed as **MP3** → page 155.

Insert CD

- Insert the CD into the tray with the printed side up ④ only until it is automatically retrieved by the unit.
- After inserting the CD, playback will start automatically. **READING** will be displayed.

If a CD is inserted in the internal CD unit, **CD** will be displayed on the upper central area of the screen.

Eject CD

In convertible vehicles, depending on the country, the vehicle key must be inserted into the ignition lock in order to eject CDs (anti-theft protection).

- Press the unit button **EJECT**.
- The inserted CD will be ejected and must be removed within approximately 10 seconds.

If the CD is not removed within approximately 10 seconds, it will be retracted back into the drive for safety purposes.

Error messages on the screen

In case of errors, text messages indicating the causes will be displayed on the centre of the screen, if necessary.

NO CD: no readable data storage unit in the CD drive. It is not possible to switch to media mode.

ERROR: the CD inserted cannot be read. The CD will be ejected. Check the CD for damages.

OVER HEAT: CD unit overheating. CD playback is disabled. Another audio source will be selected.

NO FILE: no file available in the data storage unit.

NO SUPPORT: no readable file available in the data storage unit.

The text message is displayed for approximately 2 seconds. Then, the device returns to the last playback mode.

 The audio playback may skip when driving in streets with improper conditions and intense vibrations.

Main menu MEDIA

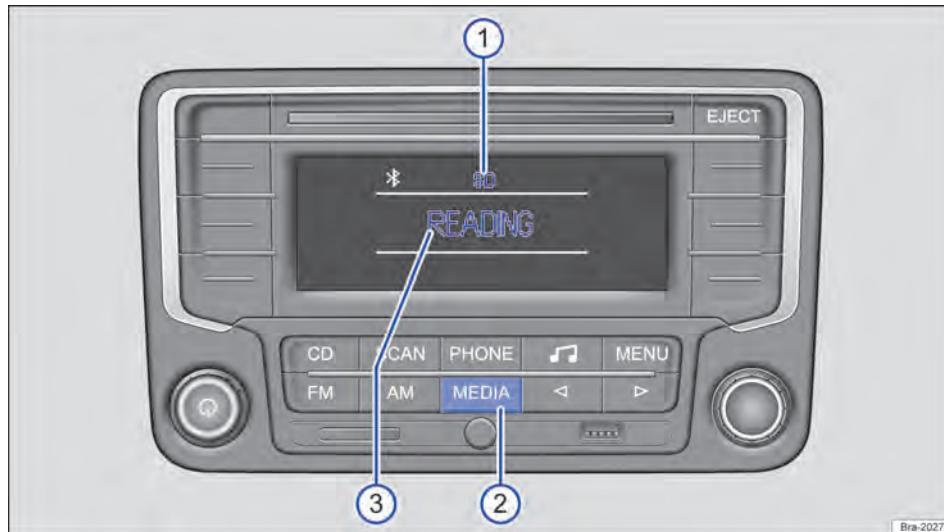


Fig. 143 Example of media playback display: the radio reads files in an SD card.

Several media sources may be selected and controlled in media mode. To switch to media playback, briefly press the unit button **MEDIA** → Fig. 143 ②.

If the last media source played is still connected, this media source will be automatically played, and it will be briefly displayed on the centre of the screen when switching to media playback → Fig. 144 ②.

During media playback, the selected media source will always be displayed on the upper central area of the screen → Fig. 143 ①.

All available media sources → page 153, *Selecting media sources* are displayed on the side of the screen → Fig. 144. In some playback situations, for example, when the radio reads a media source, no media source can be selected → Fig. 143.

Error messages on the screen

The current media source's status is displayed on the centre of the screen (e.g. READING, while the radio reads a media source → Fig. 143 ③, track information → page 155 or error messages:

ERROR: media source inserted cannot be read or an error has occurred.

NO FILE: no file available in the data storage unit.

NO SUPPORT: no readable file available in the data storage unit.

NO SD: no SD card inserted on the memory card slot.

NO USB: no USB or iPod® storage unit connected to the internal USB port.

NO AUX: no external audio source connected to the AUX-IN multimedia port.

NO BT: no Bluetooth® audio source available.

NO MEDIA: no media source available.

Error messages are displayed for approximately 2 seconds. Then, the device returns to the last playback mode.

 If no media sources are available, the radio **cannot** be switched to media playback. In this case, **NO MEDIA** will be displayed on the screen. The unit will automatically switch back to the previous playback mode.

Selecting media sources

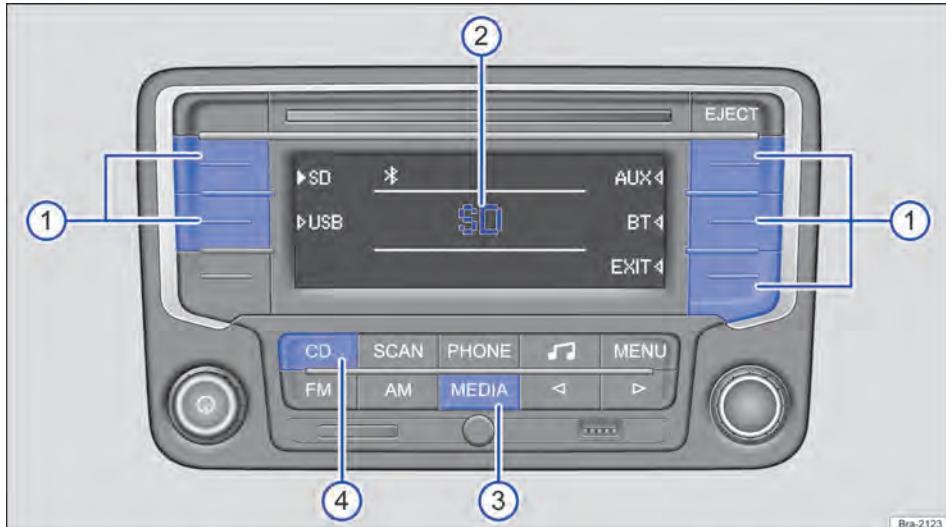


Fig. 144 Media playback display example: playback of the last media source is resumed; other media sources cannot be selected.

Start media mode → page 152, *Main menu MEDIA*. If the last media source played is still connected, this media source will be automatically played, and it will be briefly displayed on the centre of the screen when switching to media playback → **Fig. 144 ②**.

All media sources available are displayed on the side of the screen → **Fig. 144**. Select the desired media source as follows:

- Briefly press the function button programmed with the desired media source → **Fig. 144 ①**.

Function button	Media source
SD	SD card on the internal memory card slot.
USB	USB or iPod® storage unit in the internal USB port.

Function button	Media source
AUX	External audio source in the AUX-IN multimedia port
BT	Bluetooth® audio source connected
EXIT	Return to the last playback mode.
– OR: press the unit button MEDIA as many times as necessary until the media source is displayed (except CD) → Fig. 144 ③ .	
– OR: press the unit button CD to play a CD in the internal CD drive → Fig. 144 ④ .	

Whenever a previously played media source is selected once again, the media source is played from the previous playback point (Exception: external audio sources).

Changing tracks manually



Fig. 145 Media playback display example: MP3 storage location displayed when changing tracks.

The media source tracks can be changed sequentially.

Follow the data storage units' playback sequence → page 151.

Changing tracks in sequence

- Press the unit button or → Fig. 145 ②.
- OR: turn setting knob → Fig. 145 ③.

Action	Effect
Briefly press the unit button .	Next: next track.
Briefly press the unit button .	Previous If the current track is played for less than approximately 3 seconds: previous track. If the current track is played for more than approximately 3 seconds: beginning of the current track.
Press and hold the unit button .	Fast forward while the unit button is pressed.
Press and hold the unit button .	Fast rewind while the unit button is pressed.
Turn the setting knob once to the right.	Next: next track.

Action	Effect
Turn the setting knob once to the left.	Previous If the current track is played for less than approximately 3 seconds: previous track. If the current track is played for more than approximately 3 seconds: beginning of the current track.
Turn the setting knob to the right.	Fast forward.
Turn the setting knob to the left.	Fast rewind.

Changing folders in the data storage unit playback

- Briefly press the function button or to switch to the first track of the next folder or previous folder.

When changing folders, the folder name is displayed for a few seconds.

Changing playlist or folder

Access the list of tracks and folders in order to view all available tracks and folders.

- Briefly press the setting knob → Fig. 145 ③.
- **OR:** briefly press the function button [BRW] → Fig. 145 ①.
- Turn the setting to browse through the lists. A filled triangle is displayed in front of the track or folder and the name is highlighted.
- Briefly press the unit button [▷] or setting knob to open a folder or play a track.
- Briefly press the unit button [◁] to move to an upper level.

If more than 4 tracks or folders are available, a scroll bar will become available.

A triangle displayed to the left of the data folder tree indicates that an upper level is available.

The list of tracks and folders will close if
– no selection is made for more than approximately 1 minute.

- **OR:** if the unit button is briefly pressed [◁] → Fig. 145 ②.
- **OR:** if the setting knob is pressed for approximately over 2 seconds → Fig. 145 ③.

 If the settings menu is opened, the volume can be changed using the right-hand rotary/push button [Q]. This maintains the display and no volume bar is displayed on the lower part of the screen.

Track information display

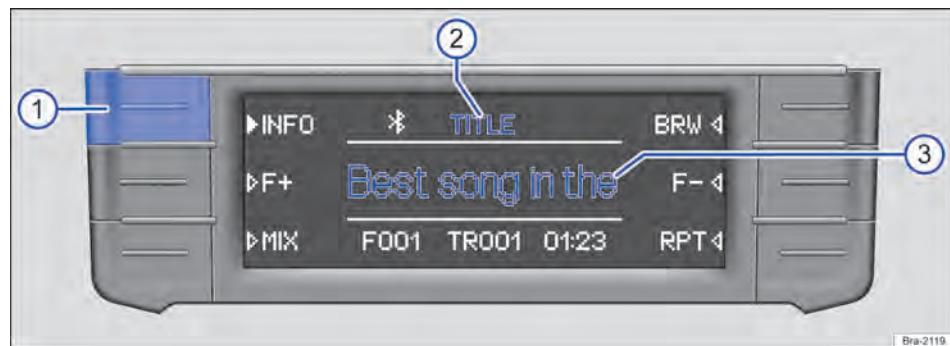


Fig. 146 Example of media playback display: track information on an MP3 CD played.

When audio CDs without CD text are playing, the central line of the screen → Fig. 146 ③ displays only TRACK and the track number corresponding to the playing order on the data storage unit.

When playing audio files containing additional track information (CD text [■], ID3-Tag in MP3 files), various types of track information can be displayed.

Changing track information display

The type of information regarding the selected track is displayed on the upper line centre (e.g. TITLE → Fig. 146 ②).

- Briefly press the function button [INFO] → Fig. 146 ① to change the type of track information displayed on screen.

Display → Fig. 146 ②

Track information → Fig. 146 ③

FILE	File name (except for audio CDs).
FOLDER	File folder (except for audio CDs).
TITLE	Track name.
ARTIST	Track artist.
ALBUM	Album name.

No display: storage location based on playback sequence → page 151.

If the selected track information is too extensive to be displayed on the centre line of the screen, the track information will be automatically scrolled.

Changing the playback mode (SCAN, MIX, REPEAT)



Fig. 147 Media playback display example: select playback modes.

Refer to the information on the playing order of files and folders → page 151.

Selecting playback modes

Playback modes available for the current data storage unit are displayed as function buttons on the side of the screen → Fig. 147 ①.

- Press a function button to start the corresponding playback mode. A filled triangle is displayed next to the activated function.

If a media source contains only tracks, only the **[MIX]** and **[RPT]** functions will be available.

If a media source contains folders with tracks, it is possible to switch between multiple functions by repeatedly pressing the respective function button.

Action	Effect
Briefly press the [MIX] function button once.	Random playback: display ► MIX . All tracks in the current folder are played once in random sequence. When all tracks are played, the function must be selected once again.
Briefly press the [MIX] function button twice.	Random playback: display ► MIX F . All tracks in the current folder are played in random sequence.
Briefly press the [MIX] function button three times.	Random playback: display ► MIX A . All tracks in the all folders are played in random sequence.
Briefly press the unit button [>] .	During random playback : the next track is played.

Action	Effect	Action	Effect
Briefly press the unit button  .	During random playback : the previous random playback track is played. If the unit button  is held, the previous data storage unit track will be played.	Briefly press the unit button  .	During the automatic scan : the automatic scan will be interrupted and the next track is played.
Briefly press the  function button once.	Repeat function : display  . the selected track will be repeated after it is played once.	Briefly press the unit button  .	During the automatic scan : if the current track is played for less than approximately 3 seconds: the automatic scan will be interrupted and the previous track will be played. If the current track is played for more than approximately 3 seconds, the automatic scan will be interrupted and the current track will be played.
Briefly press the  function button twice.	Repeat function : display  . The selected folder will be repeated after it is played once. Data storage units with compressed audio files (MP3, WMA) can only be repeated in an organized manner, but not completely .		
Briefly press the unit button  once.	Automatic scan : display  flashes. All tracks are played for approximately 10 seconds. The automatic scan begins with the next track and is automatically completed when all tracks are played once.		The random playback (Mix) or repeat function (Repeat) remain active for the respective media source until they are completed.

External audio source in the AUX-IN multimedia or USB port

Connecting an external audio source to the AUX-IN multimedia port

The AUX-IN multimedia port is located on the front part of the device.

The AUX-IN multimedia port only supports 3.5 mm jack plugs.

Connected external audio sources are indicated by **AUX** on the display.

Wired and wireless connections

Introduction

External audio sources connected to the radio through the AUX-IN port **cannot** be controlled through the radio system.

 Refer to the external audio source manufacturer's manual.

- Connecting an external audio source to the AUX-IN multimedia port. The radio device switches to AUX-IN (display on the centre of the screen: AUX).
- Lower the base volume on the radio.
- Start playback on the external audio source.

The **output volume** of an external audio source connected must be adjusted to that of the remaining audio sources.

During external audio source playback, the volume can only be adjusted on the device.

If the external audio source playback is interrupted or if the connector is removed from the AUX-IN multimedia port, the device will resume the last playback mode.

Connecting an iPod™ to the USB port

The USB port is located on the front of the unit.

Whenever an iPod™ is connected, specific iPod playlists can be selected in the upper selection area (**Playlists, Artists, Albums** etc.).

The iPod selection menu is controlled as usual.

Track control is restricted to the connected iPod™.

- Connect the iPod™ to the USB port. The radio device switches to iPOD mode (display on the centre of the screen: iPOD).
- Lower the base volume on the radio.
- Start playback on the device.

The **output volume** of an iPod™ connected must be adjusted to that of the remaining audio sources.

 There may be noise interferences if the external audio source is used on the vehicle's 12 V power outlet.

Connecting an external Media Player via Bluetooth®

The external Media Player, for example, a mobile phone, must support the Bluetooth A2DP or AVRCP® profile.

During Bluetooth audio playback, audio files played by a Media Player connected via Bluetooth® can be played on the vehicle's loudspeakers.

Bluetooth Audio playback is indicated by **BT-AUDIO** on the screen.

Start audio playback in Bluetooth®

- Pair and connect the external Media Player to the radio via the Bluetooth interface.
- Lower the base volume on the radio.
- Start external Media Player playback.

 When the external media source playback is interrupted, the radio system will remain in the **BT-AUDIO** menu.

 To prevent interference noises and faults, always switch off alert and service sounds in Bluetooth audio sources connected (e.g. keypad button sounds on a mobile phone).



Telephone

Introduction

The phone functions described below can be accessed through the radio if the mobile phone is paired and connected to the unit.

If no mobile phone is connected, phone functions cannot be accessed through the radio unit.

Instructions to use mobile phones in vehicles without external aerial connection → page 112.

WARNING

Using radio systems or mobile phones while driving could potentially distract the driver.

- Legal provisions must be followed.
- Always drive carefully and responsibly.
- Adjust unit volume in order for the driver to hear external warnings and sounds (e.g. emergency service sirens)
- In locations with partial or lack of mobile coverage, and depending on the circumstances (tunnels, garages and underground passages) telephone call may be hindered, preventing the use of mobile devices (including emergency calls).

WARNING

If a mobile phone is not secured or not properly secured in the vehicle, it could be flung through the interior during a sudden driving or braking manoeuvre, or in the event of an accident. This can cause severe injuries.

- Never place or attach mobile phones on doors, windscreen, above or near areas marked with "AIRBAG" on the steering wheel, dashboard, seat backrests, or between these areas and vehicle occupants. Mobile phones may cause severe injuries in case of accidents, especially if the airbags are triggered.

WARNING

Always switch mobile phones off when filling the gas tank in areas subject to explosions. Electromagnetic radiation can generate sparks which can in turn start a fire.

- Mobile phones may automatically connect to the mobile communication network when the Bluetooth radio is disconnected.

WARNING

If you use mobile phones in the car without an external aerial, electromagnetic radiation in the vehicle could exceed limit values. This also applies to external aerials which have not been correctly installed.

- Maintain a minimum distance of approximately 20 centimetres between the mobile phone's antenna and the heart pacemaker, since the former may interfere with the latter.
- Do not carry activated mobile phones in chest pockets directly over heart pacemakers.

- Turn off mobile phones immediately whenever there is suspicion of interference with pacemakers.

WARNING

Sudden volume variations may occur when switching audio sources.

- Lower the base volume before switching audio sources.

NOTICE

• Mobile phones must always be turned off in locations in which their use is prohibited. The radiation generated by mobile phones may cause interference with delicate medical and technical equipment, which may hinder or damage such devices.

- High speed, unfavourable weather, and poor network connection may hinder mobile phone calls inside the vehicle.

 Follow the mobile phone preparation instruction manual applicable to the vehicle to learn more about controls and operation.

 Follow the owner's manual of the mobile phone and accessory supplier, as well as potential prescriptions regarding the use of headsets.

 Call interruption and reception flaws may occur in certain transmission blackout areas.

 Most electronic devices are shielded from RF signals (high frequency). In some rare cases, however, electronic devices may not be shielded against the radio's RF signals. This may result in damages.

◀

Main menu PHONE

☞ Please refer to **⚠** and **①** at the start of the chapter on page 158.

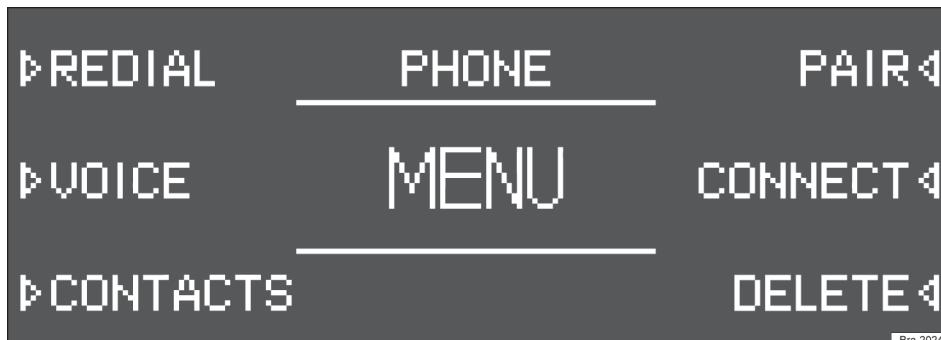


Fig. 148 PHONE main menu.



Fig. 149 PHONE main menu: connection established.

After the first pairing process, it will take a few minutes until the paired mobile's phone contact list becomes available on the radio display.

- Press the **PHONE** device button to access the **PHONE** main menu → Fig. 148. Current audio playback is maintained.

Main menu displays PHONE

The name of the **PHONE** menu is displayed on the upper line of the screen.

Functions, actions, names, and phone numbers or the name of the paired phone may be displayed on the centre of the screen → Fig. 148¹⁾.

During an active call, **TALKING** is displayed on the centre of the screen.

The **⑧** symbol indicates an existing Bluetooth® connection.

Function button on the PHONE main menu

Action	Function
Briefly press the function button REDIAL .	Redial and recent call lists: the last 15 calls are displayed.
Briefly press the function button VOICE .	The conversation selection mode is accessed.
Briefly press the function button CONTACTS .	The contact list is accessed.

¹⁾ Depending on the mobile phone brand, this function is not available in HFP connections.

Action	Function
Briefly press the function button [PAIR] .	The mobile phone is paired to the radio via Bluetooth → page 161.
Briefly press the function button [CONNECT] .	The mobile phone paired to the radio is connected → page 162.
Briefly press the function button [DELETE] .	Deletes the paired mobile phone from the radio memory → page 163.



Pairing mobile phones to the radio

Please refer to **▲** and **❶** at the start of the chapter on page 158.

All mobile phones must be paired once with the radio via the Bluetooth Hands Free profile.¹⁾

The pairing process may take a few minutes.

Valid for vehicles with chargers: mobile phone connection to the charger (phone support) is not required to perform the pairing process.

Refer to the mobile phone manufacturer's instructions and prepare the mobile phone for pairing.

Keep the mobile phone at hand, since during the first pairing process between the radio and the mobile phone additional entries to the mobile phone are required.

Step 1: enable Bluetooth connection visibility

Before pairing the mobile phone, ensure there are no other nearby devices that could connect to the radio via Bluetooth. If necessary, disable Bluetooth in such devices during the pairing process.

To switch the radio into "visible mode", proceed as follows:

- Switch the radio on.
- Open the **PHONE** main menu
- On the radio, briefly press the function button **[PAIR]**.

The radio will now be visible to other devices with Bluetooth for approximately 60 seconds. The mobile phone must be paired to the radio within these 60 seconds, since the radio's Bluetooth visibility is automatically interrupted after such period.

Step 2: pair the mobile phone

- Activate the Bluetooth feature in the mobile phone.
- Start searching for Bluetooth devices in the mobile phone. A list of devices found is displayed.
- Select **VW RADIO**.
- The 4-to-6-digit PIN code displayed on the radio screen must match the 4-to-6-digit PIN code displayed on the mobile phone. Entering an incorrect PIN code interrupts the pairing process. In this case, repeat the pairing process.
- If the PIN code matches, press the **[YES]** function button on the radio and confirm the Bluetooth connection in the mobile phone.
- Confirm any mobile phone inquiries regarding whether subsequent Bluetooth connections can be performed without reinserting the PIN code. This will allow the Bluetooth connection to be automatically performed the next time the radio is switched on → page 162.

The pairing process is now complete. Contact information in the mobile contact list will be transferred to the vehicle.²⁾



¹⁾ If the mobile phone is used as a media source and not to make phone calls, the mobile phone can also be connected via the A2DP or AVRC Bluetooth® profile.

²⁾ Depends on the mobile phone.

User profiles

The radio supports up to 5 user profiles. If another mobile phone must be paired to the radio, at least one user profile must be deleted
→ page 163.

Contact lists and call lists are assigned to a specific user profile and memorized in the radio. When the respective mobile phone is reconnected, this data will become available. Contact list entries that have been altered will be automatically updated in the radio upon each new connection.

Only 1 active user profile can be connected to the radio at any given time. If another mobile phone must be connected, the active user profile must be first disconnected from the radio
→ page 163. **Exception:** a mobile phone may be connected via the Hands Free profile, while another mobile is connected via A2DP as an external audio source.

Connecting mobile phones paired to the radio

 Please refer to  and  at the start of the chapter on page 158.

In order to use mobile phone features, the phone must be paired → page 161 and connected to the radio.

Certain settings can only be accessed through the mobile phone if, for example, button blocking, button sounds, or warning sounds are deactivated or if the mobile phone display light is active.

Automatic connection

After switching on the radio, it automatically scans for mobile phones paired in sequence, starting from the last device connected. For such, proceed as follows:

- Turn on the mobile phone and Bluetooth.
- Switch the radio on.

Some settings in the mobile phone may be required in order for the radio system to automatically connect to the phone (authorization)
→ page 161.

Manual connection

If the mobile phone is connected after the radio has been switched on, and if the automatic connection is not working or if another paired mobile phone must be connected to the radio, the connection must be established manually.

- On the radio, briefly press the function button . A list containing all paired mobile phones is displayed.
- Turn the setting knob to scroll the list down or up. An entry will always be marked.
- Turn the right-hand setting knob until the desired entry is marked.
- Press the right-hand setting knob or unit button  briefly to select the desired entry.

 If a mobile phone is already connected to the radio, deactivate the Bluetooth in all other mobile phones in range in order to prevent connection errors. The Bluetooth connection range is approximately 10 metres.

Functions with connected mobile phones

 Please refer to  and  at the start of the chapter on page 158.

The following applies to paired mobile phones:

- The mobile phone is connected to a built-in microphone in the radio.
- Call audio is played on the vehicle's loudspeakers. In this case, radio, CD, and other playback modes are interrupted (muted).
- Phone calls can be accepted, rejected, or ended through the radio.
- The Bluetooth connection remains active until the radio or mobile phone is switched off or until the active Bluetooth connection is interrupted.
- Phone calls are transferred to the mobile phone if the radio is switched off.
- When performing phone calls with the radio unit switched off and the vehicle ignition switched on, the unit is automatically activated and the call is transferred to the vehicle's speakers. To perform a phone call solely via the mobile phone set, disconnect the phone

from the radio unit → page 163, *Disconnecting the active Bluetooth connection* or activate private mode.

- In case of mobile phones that support "Advanced Audio Distribution Profile" (A2DP), songs recorded on the mobile phone may be played via an appropriate radio.

Disconnecting the active Bluetooth connection

- On the radio, briefly press the function button **[PAIR]**.
- **OR:** perform the corresponding function on the mobile phone.

Deletes the paired mobile phone from the radio memory

- On the radio, briefly press the function button **[PAIR]**. If 5 mobile phones are already paired to the radio, the radio display will read **BT FULL** for approximately 2 seconds and a tone will be heard. If a new mobile phone is paired to the radio, the pairing with the mobile phone that has been most idle will be automatically deleted.
- **OR:** briefly press the **[DELETE]** function button. A list containing all paired mobile phones is displayed.

- Turn the setting knob to scroll the list down or up. An entry will always be marked.
- Turn the right-hand setting knob until the desired entry is marked.
- Press the right-hand setting knob or unit button **[>]** briefly to select the desired entry.
- If requested, confirm the removal process by pressing the function button **Yes** or cancel the process by pressing **No**.



Settings

Change settings

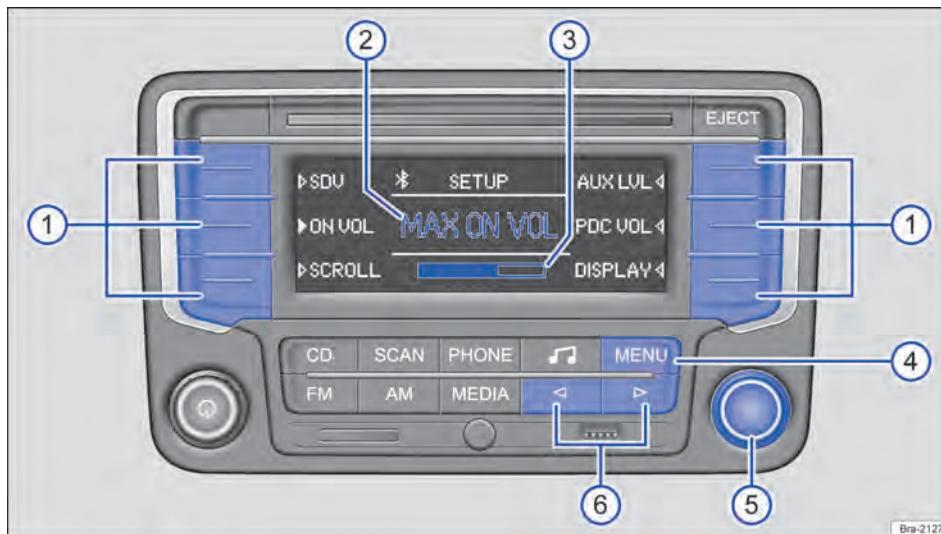


Fig. 150 SETUP menu: set the on volume.

- Press the unit button **[MENU]** from any menu → Fig. 150 ④.
- Press the function buttons to open the respective settings menu → Fig. 150 ①.
- Turn the setting knob to change current settings → Fig. 150 ⑤.
- **OR:** briefly press the unit button **[◀]** or **[▶]** to change the current settings → Fig. 150 ⑥.

Tip: If the list of tracks or folders is displayed, the volume can be adjusted using the right-hand rotary/push button ⑤. This maintains the display and no volume bar is displayed on the lower part of the screen.

Close the setup menu

The settings menu will be closed if

- no selection is made for more than approximately 5 seconds.
- **OR:** if the unit button **[MENU]** → Fig. 150 ④ is briefly pressed.

General system and function settings

SETUP is displayed on the upper line of the screen.

Settings menus overview

The range of possible settings depends on the country, unit, and the vehicle's version.

Function button	Settings
SDV	Set volume increase based on speed → page 165.
ON VOL	Set the maximum on volume → page 165.
AUX LVL	Set the playback volume from other audio sources → page 165.
PDC VOL	Set the current audio source volume upon activation of the parking distance warning system → page 165.
SCROLL	Activate or deactivate the function that displays the full track title. While this function is activated, whenever a specific track's information is too extensive to be displayed on the centre of the screen, such information is scrolled on the screen. The display of data issued via RDS by radio stations cannot be altered.
DISPLAY	Adjust display brightness intensity in 5 different levels.

GALA: Set volume increase based on speed

SDV will be displayed on the centre of the screen.

The speed-dependant volume increase automatically adjusts the volume based on the vehicle's speed.

The volume increase degree is set in levels between **SDV 1** and **SDV 7**.

If a higher value is set, the radio increases the volume at low speeds. If a lower value is set, the radio increases the volume at high speeds.

On volume

MAX ON VOL → **Fig. 150 ②** is displayed on the centre of the screen, and the volume bar is displayed directly underneath → **Fig. 150 ③**.

When turning the device on, if the volume is higher than the on volume, the latter is applied.

When turning the device on, if the volume is lower than the on volume, the former is applied.

If the device is muted when turned off, it will remain muted when turned back on.

Adjust the playback volume

AUX LEVEL is displayed on the centre of the screen.

The **on volume** for some external audio sources (AUX) may be adjusted to the **playback volume** of other audio sources.

If the playback volume of an audio source needs to be increased, first lower the base volume in the radio system.

If the connected audio source has **very low volume**, increase the **output volume** in the external audio source, if possible. If this procedure is not sufficient, define the **on volume** in the system settings as **AUX LEVEL 2** or **AUX LEVEL 3**.

If the connected audio source has **distorted or very high volume**, reduce the **output volume** in the external audio source, if possible. If this procedure is not sufficient, define as **AUX LEVEL 2** or **AUX LEVEL 1**.

Playback volume with parking distance warning system activated

The volume of the current audio source will be reduced to this preset level when the parking distance warning system is active.

ATTENUA. 0: no volume reduction.

ATTENUA. 1: low volume reduction (audio source volume 13)

ATTENUA. 2: medium volume reduction (audio source volume 7)

ATTENUA. 3: high volume reduction (audio source volume 0)

This function only applies to vehicles equipped with parking distance warning system.

 Due to legal requirements from specific countries, some functions can no longer be selected when driving over certain speed limits. 

Transporting

Stowing cargo

Always safely store heavy loads on the bed and ensure even weight distribution. Always use suitable securing straps with the fastening rings to secure heavy objects. Never overload the vehicle. Both the payload and the distribution of the load in the vehicle affect driving response and braking distance → .

Stow all items of luggage in the vehicle securely

- The vehicle or bed floors must be free from oil and dust, properly swept and dried in order to prevent cargoes from sliding.
- Check permitted axle cargoes and total permitted vehicle weight.
- Distribute cargoes on the vehicle over the roof and bed as evenly as possible.
- Heavy objects must be stowed between the rear axle and the front area of the bed.
- Avoid heavy single-point loads over the vehicle floor.
- Always distribute any loads in the vehicle as evenly as possible.
- Fasten objects in the luggage compartment to strapping eyelets with appropriate straps → page 166.
- Adjust tyre pressure according to the vehicle load. Refer to the tyre pressure sticker → page 223.
- In vehicles with tyre pressure control system, set the new load conditions when necessary → page 217.

WARNING

Objects that are not secured, or are secured incorrectly, can cause serious injuries in the event of a sudden driving or braking manoeuvre or accident. This applies particularly if objects are struck by the airbag when activated and then flung through the vehicle interior. Please apply the following rules to reduce the risk of accidents:

- Always stow all objects in the vehicle securely. Always stow luggage and heavy objects in the luggage compartment.

- Always use suitable straps to prevent luggage from entering the deployment zones of the side airbag or the front airbag in the event of a sudden driving or braking manoeuvre or an accident.
- Objects should be stowed in the vehicle interior in such a way that they can never enter the airbag deployment zones while the vehicle is in motion.
- Always keep stowage compartments closed while driving.
- Stowed objects must never cause passengers to assume an incorrect sitting position.
- Any seat blocked by stowed objects must not be used by any passengers.

WARNING

The vehicle handling and braking effect may alter significantly if large or heavy objects are being transported.

- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions.
- Accelerate carefully and gently.
- Avoid sudden braking and driving manoeuvres.
- Brake earlier than in normal driving.

 Observe information regarding towing and → page 172, *Towing a trailer* luggage carriers → page 170, *Roof rack*.



Luggage compartment

Introduction

Always stow heavy objects on the front area of the bed instead of inside the vehicle.

WARNING

When the vehicle is not in use, always lock the doors and dropside to reduce the risk of severe or fatal injuries.

- Never leave children playing unattended in or around the vehicle, especially when the bed cover is open. Children could climb into the bed and shut the bed cover. In these



situations, children would not be able to leave the bed by themselves. This could lead to severe or fatal injuries.

- Never let children play in or around the vehicle.
- Never travel in the bed.

⚠ WARNING

Objects that are not secured, or are secured incorrectly, can cause serious injuries in the event of a sudden driving or braking manoeuvre or accident. This applies particularly if objects are struck by the airbag when activated and then flung through the vehicle interior. Please apply the following rules to reduce the risk of accidents:

- Always stow all objects in the vehicle securely. Always stow luggage and heavy objects in the luggage compartment.
- Always fasten objects with appropriate strapping tapes or tension belts.
- Always keep stowage compartments closed while driving.
- Do not stow any hard, heavy or sharp objects in any of the vehicle's open stowage areas, on the luggage compartment cover or on the dashboard without proper securing.
- Remove any hard, heavy or sharp objects from items of clothing and bags inside the vehicle and stow them securely.

⚠ WARNING

Transporting heavy objects changes the vehicle's handling and increases the braking distance. Heavy loads that are not properly stowed or secured in the vehicle can lead to a loss of vehicle control and can cause serious injuries.

- Transporting heavy objects changes the vehicle's handling and the centre of gravity.
- The payload should be distributed as evenly as possible in the vehicle.
- Always secure heavy objects as far back into the luggage compartment as possible.

! NOTICE

Hard objects could chafe against the wires of the heating element in the rear window and cause damage.

Cargo or luggage stowage

 Please refer to  and  at the start of the chapter on page 166.

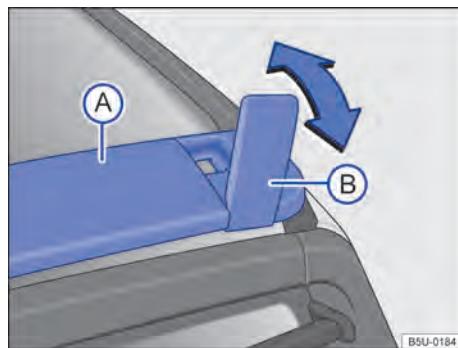


Fig. 151 On the roof: cross member and pivot support.

Depending on the vehicle version, the cross member and pivot support may not be available.

Use only the roof cross strut → **Fig. 151**  and articulated supports  to support larger objects that do not fit the luggage compartment → .

⚠ WARNING

Use pivot supports to fasten light objects (e.g. surfboards) that cannot be adequately stowed on the bed floor.

 The maximum load supported by the roof cross member is 45 kg.

 All cargo and luggage must be safely stowed, using strapping supports, roof cross member, and pivot supports when available.



Strapping eyelets

Please refer to **⚠** and **①** at the start of the chapter on page 166.

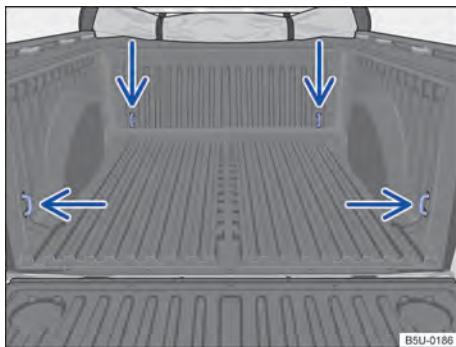


Fig. 152 Bed: strapping eyelets.

There are strapping eyelets on the luggage compartment to fasten objects → Fig. 152 (arrows).

The maximum strapping eyelets' traction load is 300 kgf (approximately 3,000 N).

Check the luggage compartment capacity in → page 266.

⚠ WARNING

Improper or damaged strapping tapes or tension belts may break during braking manoeuvres or in case of accidents. In this case, objects may be projected towards the vehicle, causing severe or fatal injuries.

- Always secure loads properly using suitable and undamaged securing straps or tension belts.
- Safely attach strapping tapes or tension belts on strapping eyelets.
- Loose objects on the bed may suddenly slide and change the vehicle's direction.
- Also attach light and small objects.
- Never exceed the maximum strapping eyelet traction capacity.

i Appropriate cargo protection systems and tension belts may be acquired from qualified workshops. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Fixed strapping supports

Please refer to **⚠** and **①** at the start of the chapter on page 166.

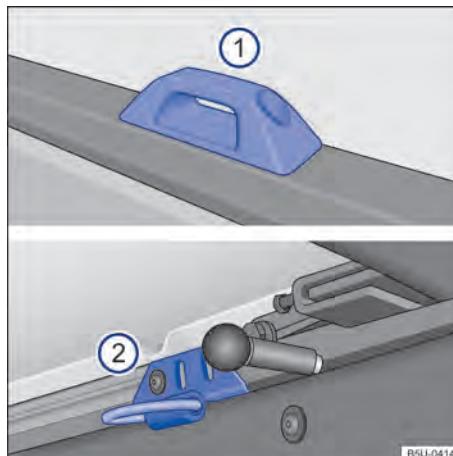


Fig. 153 On the bed: fixed supports ① for vehicles without bed canvas and ② for vehicles with bed canvas.

Depending on the vehicle version, fixed strapping supports may not be available.

Fixed strapping supports → Fig. 153 assist in load or luggage distribution on the luggage compartment.

Sliding strapping supports

📘 Please refer to  and  at the start of the chapter on page 166.

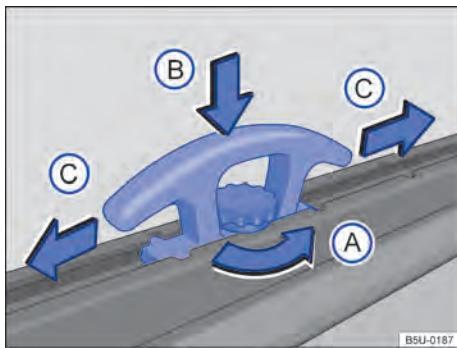


Fig. 154 On the bed: sliding support for vehicles without bed canvas.

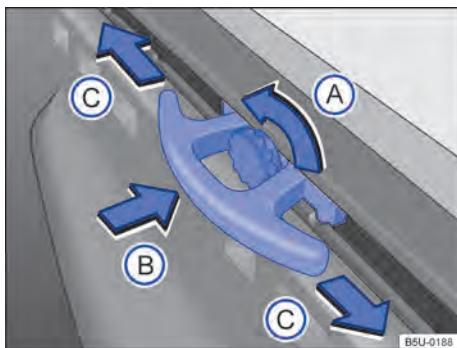


Fig. 155 On the bed: sliding support for vehicles with bed canvas.

Depending on the vehicle version, sliding strapping supports may not be available.

Sliding strapping supports → Fig. 154 or → Fig. 155 assist in load or luggage distribution on the luggage compartment.

Adjusting sliding support positions

In both versions → Fig. 154 or → Fig. 155, adjusting sliding support positions is based on the following concept:

- To release the support, turn the handle in the direction of the arrow .
- Firmly press the support in the direction of the arrow  and, simultaneously, slide through the track in the direction of the arrows , until

the appropriate locking position. Locking positions are determined by locks throughout the track.

- To fasten the support → , turn the handle in the opposite direction indicated by the arrow .

⚠ WARNING

Ensure that sliding supports are properly fastened in locking positions throughout the track before driving. Otherwise, loads or luggage may become loose.

Luggage compartment access step

📘 Please refer to  and  at the start of the chapter on page 166.

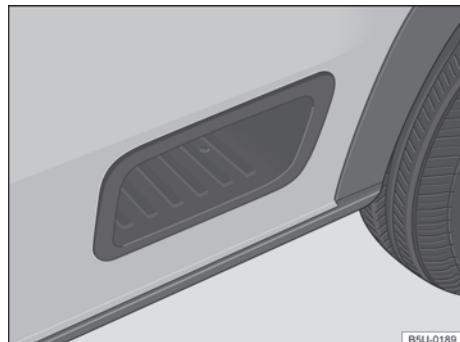


Fig. 156 On the vehicle's side: bed access step.

Depending on the vehicle version, luggage compartment climbing step may not be available.

The foot step support → Fig. 156 is provided in each side of the vehicle, facilitating access to the luggage compartment.

⚠ WARNING

Only use the lateral steps to access the cargo compartment, for example, when loading or unloading the vehicle.

❗ NOTICE

- When accessing the luggage compartment, be careful not to damage the vehicle paint.
- The maximum admissible load over each step is 120 kg.

Roof rack

Introduction

The roof rack only applies to some New Saveiro versions.

The vehicle is provided with two vertical ribs, and cross struts may be acquired at Volkswagen Dealerships.

The vehicle's roof was designed to optimize aerodynamics.

Only additional roof rack supports cleared by Volkswagen may be used.

When should the roof rack cross members be removed:

- When they're no longer necessary, thus sparing fuel, the wind noise is reduced and theft of the roof rack is avoided.
- When the vehicle passes through an auto-wash system.
- When the vehicle level exceeds the maximum passage height in a garage, for example.

⚠ WARNING

When transporting heavy or large objects in the roof carrier, vehicle driving conditions are altered due to the shift of the gravity centre and increased wind resistance surface.

- Always secure loads properly using suitable and undamaged securing straps or tension belts.
- Heavy, large, long or flat loads negatively affect the vehicle's aerodynamics, centre of gravity and driving behaviour.
- Avoid abrupt and sudden braking and driving manoeuvres.
- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions.

💡 NOTICE

- Remove the roof carrier before submitting the vehicle into an auto-wash system.
- The vehicle level is altered after assembling a roof carrier and stowing loads. Compare the vehicle level with available passage heights, for example, in road bridges and garage doors.

- The roof antenna must not be impaired by the roof carrier and the carried load.

 Remove roof rack cross beams when not in use, preventing unnecessary fuel consumption due to greater aerodynamic resistance. 

Using the roof rack

 Please refer to  and  at the start of the chapter on page 170.



Fig. 157 Roof rack longitudinal supports (both sides).

The longitudinal supports are but the base for a complete load transport system and are supplied with the vehicle. For luggage transport, **additional cross beams** are necessary for safety reasons. For safety reasons, exclusive additional supports are required when transporting luggage, bicycles, surf boards, skiing equipment, and boats. Additional accessories can be acquired at Volkswagen Dealerships.

Conventional roof carriers must not be installed in vertical ribs. We recommend that only roof rack cross beams homologated by Volkswagen are used.

⚠ WARNING

Improperly fastening base supports and roof carriers, as well as its incorrect use, may cause the entire system to detach from the roof, resulting in injuries and accidents.

- If additional cross members homologated by Volkswagen are not used or are improperly fixed, the transported load or the roof rack itself may fall off the vehicle roof.

- Always follow the instructions provided in the owner's manual.
- Only use roof carriers when base supports are properly fastened and the roof carrier presents proper use conditions.
- Correctly mount the roof rack cross members.
- Check fastening points before driving and retighten them after short drives if necessary. In case of long hauls, check the bolt and fastening spots upon each stop.
- Always assemble special roof carriers for bicycles, skiing equipment, surf boards, etc. correctly.
- Do not modify or repair roof carriers and base supports.

NOTICE

Always observe roof carrier cross beam manufacturer's installation instructions.

- Keep roof carrier manufacturer's installation and use instructions along with the vehicle's documents.

NOTICE

Damages caused by improper roof carrier fastening are not covered by the warranty.

- The vehicle level is altered after assembling a roof carrier and stowing loads. Compare the vehicle level with available passage heights, for example, in road bridges and garage doors.

 Read and follow installation instructions provided along with the roof carrier, always keeping such instructions in the vehicle.

 It is paramount to know applicable laws regarding the sizes of volumes transported over vehicle roofs.

Loading the roof carrier

 Please refer to  and  at the start of the chapter on page 170.

The load may be safely fastened when a roof rack system homologated by Volkswagen is used and is properly mounted .

Maximum roof weight permitted

The maximum roof weight permitted is **45 kg**. The roof load encompasses the weight of the roof carrier and the load to be transported over the roof .

Always mind the weight of the roof carrier and load to be transported. Never exceed the maximum roof load permitted.

When using roof carriers with lower load capacities, the maximum roof load permitted may not be used. In this case, the roof carrier may only be loaded until the weight limit indicated in its installation instructions.

Distributing load

Evenly distribute the load between the members and along their full length .

Controlling fastening points

After the roof rack members were fastened, check them after a short drive and subsequently at regular intervals.

WARNING

Accidents and severe injuries can occur if the maximum permitted roof weight is exceeded.

- Never exceed the maximum roof weight permitted, maximum axle weight permitted and the total vehicle weight permitted.
- Never exceed the roof carrier load capacity, even if under the maximum roof load capacity. In this case load the roof rack beams only to the weight limit indicated by the manufacturer's instructions.
- Fasten heavy objects as far ahead as possible and uniformly distribute the load.

WARNING

Loose or incorrectly fastened loads may fall from the roof carrier and cause accidents and injuries.

- Always secure loads properly using suitable and undamaged securing straps or tension belts.
- Properly fasten loads.

 Sometimes the roof rack beams remain mounted even if they're not longer necessary. Due to the greater aerodynamic resistance, 

the vehicle will unnecessarily consume more fuel. Therefore remove the roof rack beams when no longer in use.

 The load transported on the roof must be properly fastened. Transporting loads on the roof changes the vehicle's behaviour.

Towing a trailer

Introduction

Observe any country-specific regulations when towing a trailer and using a towing bracket.

Your car is intended mainly for transporting passengers and luggage. However, it can also be used to tow a trailer or caravan, provided that it is fitted with the appropriate technical equipment. This additional maximum trailer weight will affect the durability, fuel consumption and performance of the vehicle and, in certain circumstances, can shorten the service intervals.

Driving with a trailer not only places an extra load on the vehicle, but also requires increased concentration on the part of the driver.

In low temperatures, fit winter tyres to both the vehicle and the trailer.

WARNING

It is dangerous to transport people in a trailer and it may also be illegal.

WARNING

Improper use of the towing bracket can cause injury and accidents.

- Only use the towing bracket if it is fitted properly and is not damaged.
- Do not perform any modifications or repairs to the towing bracket.

WARNING

Towing a trailer and transporting heavy or bulky items can change the way the vehicle's handling and cause accidents.

- Therefore, observing the instructions below is essential to ensure the safety of the driver, passengers, and other road users.

- Always secure loads properly using suitable and undamaged securing straps.
- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions.
- Trailers with a high centre of gravity are more likely to tip over than trailers with a low centre of gravity.
- Avoid abrupt and sudden braking and driving manoeuvres.
- Take special care when overtaking.
- Reduce your speed immediately if the trailer shows even the slightest sign of snaking.
- When towing a trailer do not drive faster than 80 km/h (50 mph). This also applies to countries where higher speeds are permitted. Always obey speed limits. In some areas speed limits for vehicles towing trailers are lower than for vehicles without trailers.
- Never try to "stop" a trailer from snaking by increasing your speed.

 In new vehicles, do not tow a trailer during the first 1,000 km → page 85, *Running-in*.

Technical requirements

 Please refer to  at the start of the chapter on page 172.

Only use a towing bracket which is approved for the gross weight of the trailer you wish to tow. The towing bracket must be suitable for your vehicle and trailer and must be securely bolted to the vehicle's chassis. Always check and follow the data provided by the towing bracket manufacturer.

Towing brackets fitted to the rear bumper

Never fit a towing bracket to the rear bumper or to its fastening. A towing bracket must not prevent the rear bumper from functioning correctly. Do not carry out any alterations to the exhaust or brake systems. Check regularly to see if the towing bracket is fitted securely.

Engine cooling system

There is an increased load on the engine and the cooling system when towing a trailer. The cooling system must contain sufficient coolant and be able to cope with the extra load added by the trailer.

Trailer brake

If the trailer is equipped with its own brake system, observe any legal requirements. The trailer's brake system must never be connected to the vehicle brake system.

Emergency breakaway cable

Always use the emergency breakaway cable between your vehicle and the trailer → page 173.

Rear trailer lights

The rear lights on the trailer must meet legal requirements → page 173.

Never connect the trailer lights directly to the electrical system of your vehicle. If you are uncertain whether the trailer has been connected correctly, please contact a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Exterior mirrors

you are unable to see the traffic behind the trailer in the vehicle's standard exterior mirrors, additional exterior mirrors should be fitted in accordance with any country-specific regulations. Before setting off, adjust the mirrors so that you have a sufficient view of the rear.

⚠ WARNING

If the towing bracket is unsuitable or incorrectly fitted, the trailer can become detached from the vehicle and cause severe injuries.

⚠ NOTICE

- The vehicle electronics may be damaged if the trailer lights are not connected properly.
- The vehicle electronics may be damaged if the trailer uses too much electricity.
- Never connect the trailer's electrical system directly to the electrical connections of the tail lights or to other sources of electricity. Use only suitable connectors to supply power to the trailer.

 Volkswagen recommends additional services between the normal inspection intervals if the vehicle is used frequently for towing a trailer.

Engaging and connecting the trailer

 Please refer to  at the start of the chapter on page 172.

Emergency breakaway cable

Always fasten the emergency breakaway cable properly in the towing vehicle. In this case, leave some slack for the breakaway cable to allow curves. However, the breakaway cable must not drag on the ground while driving.

Rear trailer lights

Ensure that the rear trailer lights are functioning properly and are in compliance with legal requirements.

⚠ WARNING

Unsuitable or incorrectly connected electrical cables may power the trailer, cause malfunctions in the vehicle electronics and cause severe injuries.

- All activities regarding the electrical system can only be conducted by a Volkswagen Dealership or qualified workshop.
- Never connect the trailer's electrical system directly to the electrical connections of the tail lights or to other sources of electricity.

⚠ NOTICE

A trailer parked over the support wheel or over the trailer supports must not be connected to the vehicle. For example, the vehicle is lifted or lowered due to load changes or tyre damages. In this case, major forces act over the trailer bracket and over the trailer, which may damage the vehicle and the trailer.

 If the engine is not running and electrical equipment is switched on in the trailer via the trailer socket, the vehicle battery will discharge.

Loading the trailer

► Please refer to  at the start of the chapter on page 172.

Maximum trailer weight and drawbar load

The maximum trailer weight is the weight that the vehicle can pull → . The drawbar load is the weight that the towing bracket exerts on the ball coupling vertically from above → page 258.

The figures for maximum trailer weight and drawbar weights that are given on the data plate of the towing bracket are for certification purposes only. The correct values for your specific model, which may be *lower* than these figures, are provided in the vehicle registration documents. All data in the official vehicle documents take precedence over this data.

In the interest of road safety, Volkswagen recommends that you always transport the maximum **drawbar load**. The response of the trailer on the road will be poor if the drawbar load is too small.

The drawbar load increases the weight on the rear axle and reduces the maximum load level as a result.

Gross combination weight

The gross combination weight is comprised of actual loaded vehicle and loaded trailer weights.

Loading the trailer

The weight of the load should be distributed evenly. The maximum permitted drawbar load should be utilised. Do not place the load only at the front or the rear of the trailer:

- Distribute loads in the trailer so that heavy objects are either over or as near to the axle as possible.
- Secure all loads on the trailer properly.

Tyre pressure

Follow the trailer manufacturer's recommendations concerning the tyre pressure for the trailer tyres.

When towing a trailer, inflate the wheels on the towing vehicle with the maximum permitted tyre pressure → page 217.

WARNING

Accidents and serious injuries can occur if you exceed the vehicle's maximum permitted gross axle weight rating, drawbar load, gross vehicle weight rating or gross combination weight rating.

- Never exceed the specified values.
- Never let the actual weights at the front and rear axles exceed the gross axle weight ratings. Never exceed the permissible gross vehicle weight for the vehicle with weight at the front and rear of the vehicle.

WARNING

Moving loads can severely impair the vehicle's stability and driving safety, which can cause accidents and severe injuries.

- Always load trailers correctly.
- Always secure loads properly using suitable and undamaged securing straps.

Towing a trailer

► Please refer to  at the start of the chapter on page 172.

Headlight adjustment

Towing a trailer can raise the front end of the vehicle enough for the dipped beam to blind other road users. The headlights must be adjusted in a Volkswagen Dealership or qualified workshop.

Things to note when driving with a trailer

- If the trailer has an **overrun brake**, apply the brakes *gently at first*, and then firmly. This will prevent the jerking that can be caused by the trailer wheels locking.
- The gross combination weight causes the braking distance to increase.
- Select a low gear before driving down a hill. This enables you to use the engine braking effect to slow down the vehicle. The brake system could otherwise overheat and fail.

- The vehicle's centre of gravity and the vehicle's handling will change because of the maximum trailer weight and the increased combined towing weight of the vehicle and trailer.
- The weight distribution of a loaded trailer with an unladen towing vehicle is very unfavourable. When driving in this situation, drive particularly carefully and slowly.

Pulling off on hills when towing a trailer

Depending on the steepness of the slope and the total weight of the trailer and vehicle, a parked vehicle towing a trailer could roll back a short distance when moving off on a hill.

When towing a trailer, pull off on hills as follows:

- Pull the handbrake.
- Press and hold the brake pedal.
- Press the clutch fully.
- Engage the 1st gear.
- Release the brake pedal.
- Slowly release the clutch.
- Only let go of the handbrake lever when the engine has sufficient power to move off.

⚠ WARNING

Incorrect trailer towing can cause loss of vehicle control and severe personal injuries.

- Towing a trailer and transporting heavy or bulky items can change the way the vehicle's handling and increase the braking distance.
- Always drive carefully and defensively. Brake earlier than in normal driving.
- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions. Reduce your speed, especially when going downhill.
- Accelerate carefully and gently. Avoid abrupt and sudden braking and driving manoeuvres.
- Take special care when overtaking. Reduce your speed immediately if the trailer shows even the slightest sign of snaking.
- Never try to "stop" a trailer from snaking by increasing your speed.
- In some areas speed limits for vehicles towing trailers are lower than for vehicles without trailers.

Retrofitting a towing bracket

☞ Please refer to **⚠** at the start of the chapter on page 172.

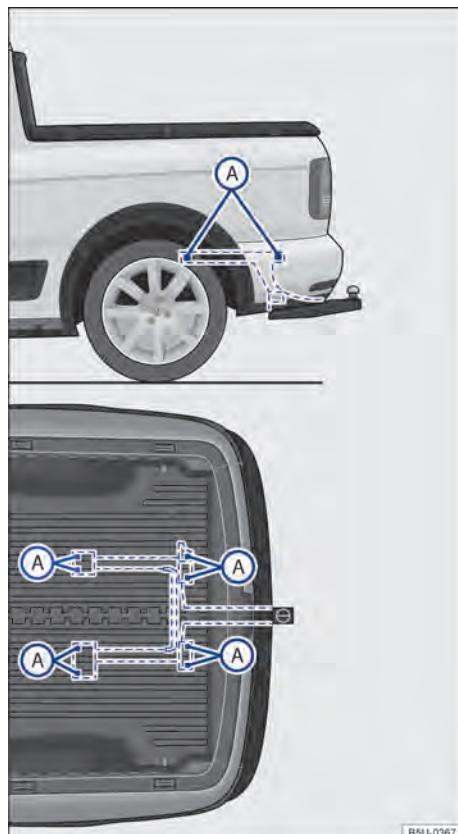


Fig. 158 Attachment points for retrofitting a towing bracket.

Figure → Fig. 158 illustrates, as an example, the fastening point to retrofit a towing bracket in the New Saveiro model.

Towing bracket retrofitting must be executed in accordance with the instructions provided by the bracket's manufacturer, always considering the attachment points indicated in → Fig. 158 A.

The towing bracket securing points can be seen from the lower part of the vehicle. The towing bracket must be secured to such points. ▶

Retrofitting a towing bracket

- Observe applicable laws in the country in which the vehicle will run.
- It might be necessary to disassemble and reassemble the rear bumper. Additionally, it is also necessary to tighten the towing bracket screws with a torque meter and connect a socket to the vehicle's electrical system. For such, special tools and expertise are required.
- The figure indicates securing points that must be observed when installing towing brackets.

WARNING

Unsuitable or incorrectly connected electrical conductors may cause operating faults in all of the vehicle's electronic components, which may cause severe accidents and injuries.

- Never connect the trailer's electrical system directly to the electrical connections of the tail lights or to other improper sources of electricity. Use only suitable connectors for trailer connection.
- Trailer bracket retrofitting activities must be conducted by a qualified workshop.

WARNING

If the towing bracket is unsuitable or incorrectly fitted, the trailer can become detached from the vehicle. This could lead to severe accidents and fatal injuries.

NOTICE

Towing a trailer represents a greater stress for the vehicle. Before deciding to **retrofit**, contact a Volkswagen Dealership to know if it is necessary to perform any modifications in the cooling system or if thermal shielding plates must be installed.

Fuel

Fuel handling safety guidelines

WARNING

Filling the tank incorrectly and improper handling of fuel can cause explosions, fire and serious burns and injuries.

- Always ensure that the tank cap is closed properly to prevent the evaporation and spillage of fuel.
- Fuel is highly explosive and inflammable and can cause serious burns and other injuries.
- Fuel can spill out if the engine is not switched off or the filler nozzle is not fully inserted into the fuel filler neck when filling the tank. This may cause fires, explosions and serious burns and injuries.
- When filling the tank with fuel, the engine and the ignition must be switched off for safety reasons.
- When filling the tank, always switch off your mobile telephone and two-way radio or any other radio equipment. Electromagnetic radiation can generate sparks which can in turn start a fire.
- When filling the tank, never get into the vehicle. If in exceptional cases you have to enter the vehicle, close the door and touch a metal object before touching the filler nozzle again. This will remove any spark-generating electrostatic charges from you. Sparks can cause a fire when filling the tank.
- Never fill the tank or fill up a spare canister near open flames, sparks or glowing items (e.g. cigarettes).
- Electrostatic discharge and electromagnetic radiation must be avoided when filling the tank.
- Follow all applicable safety information provided by the filling station when filling the tank.
- Never spill fuel in the vehicle or in the luggage compartment.

WARNING

For safety reasons, Volkswagen does not recommend carrying a spare fuel canister in the vehicle. Fuel can spill out of the full or empty canister and catch fire, especially in the event of an accident. This could cause explosions, fire and injuries.

- If, in exceptional circumstances, you have to transport a spare fuel canister, please note the following:
 - When refilling, never place the canister in or on top of the vehicle (e.g. in the luggage compartment). There may be an electrostatic charge during refilling causing the fuel fumes to ignite.
 - Always place the spare fuel canister on the ground.
 - When filling a spare fuel canister, place the filler nozzle as far as possible into the filler opening.
 - If the spare fuel canister is made of metal, the filler nozzle must have constant contact with the canister in order to avoid static charging.
 - Please follow all legislation concerning the use, stowage and transportation of spare fuel canisters.

NOTICE

- Remove spilt fuel from the vehicle paint as quickly as possible in order to avoid damage to the wheel housing, tyres and vehicle paint.
- Do not run the tank empty. Irregular filling periods can cause backfiring and allow unburnt fuel to enter the exhaust system. This could damage the catalytic converter.



After the fuel filler nozzle is automatically switched off for the first time, the tank will have reached its capacity. Do not force fuel filling, since fuel may overflow.

- When filling, fuel may be spilt on the ground, polluting the environment. Always fill the at authorized filling stations with proper fluid collection and disposal systems.

Fuelling and fuel types

Introduction

The fuel cap is located at the rear right-hand side of the vehicle.

The factory-fitted sticker on the inside of the tank flap indicates the fuel type that is required for the vehicle.

WARNING

Incorrect handling of fuel may cause explosions, fire and severe burns and injuries.

- Fuel is highly explosive and inflammable.
- For safety reasons, Volkswagen does not recommend carrying a spare fuel canister in the vehicle. Fuel can spill out of the full or empty canister and catch fire, especially in the event of an accident. This could cause explosions, fires and severe injuries.
- In exceptional cases, when it is necessary to transport spare fuel canisters, the instructions in → page 177, *Fuelling and fuel types* must be followed.
- Never handle fuel near open flames, sparks or glowing items (e.g. lighters).
- Switch off your mobile telephone or two-way radio when dealing with fuel. Electromagnetic radiation can generate sparks which can in turn start a fire.
- Electrostatic discharge and electromagnetic radiation must not be generated near fuels.
- Never spill fuel in the vehicle or in the luggage compartment.
- Observe any valid safety information and legislation concerning the handling of fuels.

NOTICE

- If the TOTALFLEX vehicle is immobilized by "lack of fuel", the vehicle must be refilled with the last type of fuel used - petrol or ethanol.
- If it is necessary to fill the tank with a different type of fuel, the following may occur:
 - Cold starting difficulties.
 - Considerable decrease in engine performance.

- The vehicle must run for approximately 5 kilometres to recognize the new fuel type, in order to prevent any of the scenarios above.

-  After the fuel filler nozzle is automatically switched off for the first time, the tank will have reached its capacity. Do not force fuel filling, since fuel may overflow.
- When filling, fuel may be spilt on the ground, polluting the environment. Always fill at authorized filling stations with proper fluid collection and disposal systems.

 When the airbags are triggered during an accident, the fuel supply is interrupted → page 36, *In case of airbag triggering - Crash detection function.*

 Just one tank full of leaded fuel, or fuel containing other metallic additives (such as manganese), can seriously impair the efficiency and cause damages to the catalytic converter.



TOTALFLEX engine

-  Please refer to  and  at the start of the chapter on page 177.

Petrol

Vehicles must be driven using **unleaded petrol free from any metallic additives (such as manganese)**, with RON 95/E24 (blue) ethanol percentage.



Petrol additives

The quality of petrol influences the running properties, performance and service life of the engine. Therefore, fuel up with quality fuel and, when necessary, use the adequate additives.

The use of unsuitable petrol additives can cause considerable damage to the engine and catalytic converter. Metallic petrol additives should be avoided at all times.

Ethanol

The vehicle must be fuelled exclusively with **hydrated ethanol**, in accordance with applicable country laws.

NOTICE

- The use of unsuitable petrol additives can cause considerable damage to the engine and catalytic converter.
- If, in an emergency, you have to use petrol with higher or lower anhydrous ethanol proportions, drive at medium engine speeds and avoid high engine loading. Avoid high engine speeds and heavy engine loads. Failure to do so can result in engine damage! Fill the tank with the recommended petrol as soon as possible.
- Just one tank full of leaded fuel, or fuel containing other metallic additives (such as manganese), can seriously impair the efficiency and cause considerable damages to the catalytic converter.



Petrol engine

-  Please refer to  and  at the start of the chapter on page 177.

Petrol

Vehicles with a petrol engine must be driven using **unleaded petrol free from any metallic additives (such as manganese)**, in accordance with applicable country laws.

Petrol additives

The quality of petrol influences the running properties, performance and service life of the engine. Therefore, fuel up with quality fuel and, when necessary, use the adequate additives.

The use of unsuitable petrol additives can cause considerable damage to the engine and catalytic converter. Metallic petrol additives should be avoided at all times.

NOTICE

- The use of unsuitable petrol additives can cause considerable damage to the engine and catalytic converter.
- If, in an emergency, you have to use petrol with higher or lower anhydrous ethanol proportions, drive at medium engine speeds and avoid high engine loading. Avoid high engine speeds and heavy engine loads. Failure to do so can result in engine damage! Fill the tank with the recommended petrol as soon as possible.

Filling the tank with petrol or ethanol

 Please refer to **▲** and **①** at the start of the chapter on page 177.

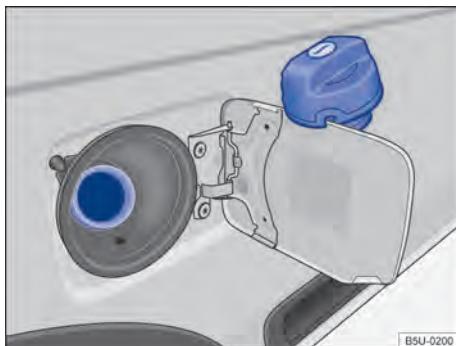


Fig. 159 Open tank flap with tank cap attached to the holder.

Switch off the engine, ignition and the mobile telephones **before** filling the tank and leave them switched off during the process.

Vehicles with TOTALFLEX engine were designed to use **both petrol and ethanol in any amount**.

Check the fuel tank capacity in → page 266.

Opening the tank flap

- The tank flap is located at the rear of the vehicle on the right.
- Open the tank flap by pulling it from the crease in the vehicle body work.
- Unfold the vehicle key bit, if necessary → page 45.
- Insert the key in the tank flap lock cylinder and turn anticlockwise.
- Screw the cap anticlockwise and hang it over the tank flap → **Fig. 159**.

Filling the tank

The correct fuel grade for your vehicle is shown on a sticker on the inside of the tank flap → page 177.

- The fuel tank is *full* when the filler nozzle clicks off for the first time → **▲**.
- Do not continue filling the tank after it switches off! The expansion space in the fuel tank will otherwise fill up and the fuel could spill out. This could also happen when the fuel warms up and expands.

Closing the tank cap

- Turn the tank cap clockwise into the fuel filler neck until you hear it engage.
- Turn the vehicle key in the tank flap lock cylinder clockwise and remove it.
- Close the tank flap. The tank flap must be flush with the vehicle bodywork.

WARNING

Do not continue filling the tank once the filler nozzle stops automatically. The fuel tank cannot be overfilled. This can cause fuel to splash out and overflow. This could cause explosions, fires and severe injuries.

NOTICE

- If the TOTALFLEX vehicle is immobilized by “**lack of fuel**”, the vehicle must be refilled with the last type of fuel used - petrol or ethanol.
- If it is necessary to fill the tank with a different type of fuel, the following may occur:
 - Cold starting difficulties.
 - Considerable decrease in engine performance.
- The vehicle must run for approximately 5 kilometres to recognize the new fuel type, in order to prevent any of the scenarios above.

NOTICE

Remove spilt fuel from the vehicle paint as quickly as possible in order to avoid damage to the wheel housing, tyres and vehicle paint.

 After the fuel filler nozzle is automatically switched off for the first time, the tank will have reached its capacity. Do not force fuel filling, since fuel may overflow.

- When filling, fuel may be spilt on the ground, polluting the environment. Always fill at authorized filling stations with proper fluid collection and disposal systems.



Engine control unit and exhaust gas emission control system

Introduction

⚠ WARNING

The exhaust system components become very hot. This may cause fires.

- Park the vehicle so that no part of the exhaust system can come into contact with any inflammable material underneath the vehicle, e.g. dry grass.
- Never apply underseal or anti-corrosion coatings to the exhaust pipes, catalytic converter, diesel particulate filter or the heat shields on the exhaust system.

Electronic engine power control (EPC)

Please refer to  at the start of the chapter on page 180.

The electronic engine power control (EPC) is a system designed to determine the throttle valve position based on the torque required by the driver through the electronic pedal (e-gas system); the indicator lamp **EPC** lights up in the event of system malfunctions.

Under normal operating conditions, when the driver activates the accelerator pedal, the system transforms such request into a need for speed and power.

By controlling engine components (sensors and actuators), the best performance possible is calculated, based on the driver's request.

Catalytic converter

Please refer to  at the start of the chapter on page 180.

The catalytic converter is used for exhaust gas post-treatment and helps mitigate the emission of pollutants into the atmosphere. Observe the

following points to ensure that the exhaust system and catalytic converter in the engine function properly for extended periods of time:

- Fill the tank only with unleaded petrol free from other metallic additives (such as manganese)
- Never allow the fuel tank to run completely dry.
- Never overfill engine oil → page 205.
- Never push and/or pull the vehicle to start the engine ("push starting"), but rather use the jump starting system → page 197.

If you notice misfiring, uneven running or loss of power when the vehicle is moving, reduce speed immediately. The vehicle should be inspected at the nearest Volkswagen Dealership or qualified workshop. If this happens, unburnt fuel can enter the exhaust system and escape into the atmosphere. The catalytic converter can also be damaged by overheating!

⚠ NOTICE

Just one tank full of leaded fuel, or fuel containing other metallic additives (such as manganese), can seriously impair the efficiency and cause damages to the catalytic converter.

 Even when the exhaust purification system is working perfectly, there may be a smell of sulphur from the exhaust in some conditions. This depends on the sulphur content of the fuel being used. Often, it is simply a case of using a different fuel brand.

Lambda probe

Please refer to  at the start of the chapter on page 180.

The purpose of the lambda probe is to monitor exhaust gases through a sensor hit by lead or other metallic additives (e.g. manganese) contained in the fuel, and gradually reduced. The lambda probe completely loses its efficiency after 10,000 km. The resulting lack of monitoring could cause engine malfunctions, such as:

- changes in driving conditions;
- hot engine starting problems;
- increased fuel consumption.

Activated charcoal filter - supply system

 Please refer to  at the start of the chapter on page 180.

The supply system has an activated charcoal system that accumulates hydrocarbons (steam) generated in the fuel tank (evaporative emission control), preventing such hydrocarbons from being released into the atmosphere. While the engine is running, these accumulated hydrocarbons are used in the normal engine combustion process.

 The activated charcoal filter prevents fuel tank gas hydrocarbons from being released into the atmosphere.

Troubleshooting

 Please refer to  at the start of the chapter on page 180.

If the engine operates irregularly or in case of engine jolts while driving, this could be related to insufficient fuel or low-quality fuel (e.g. water mixed in the fuel). When these signs appear, reduce speed immediately and go to the nearest authorised Volkswagen repairer, driving only at medium speed and with low engine demand. If these events occur immediately after filling the tank, switch off the engine immediately – also to avoid secondary damages – and seek assistance at an authorised Volkswagen repairer.

Indicator lamps

 **EPC** Engine management system fault (Electronic Power Control). **On:** the engine must immediately be checked at an authorised Volkswagen repairer

 **Faulty emissions in the exhaust system (OBD).** **On:** slow down. Drive carefully to an authorised Volkswagen repairer. The engine must be checked.

 **Flashing:** faulty catalytic converter. Reduce your speed. Carefully drive to the nearest Volkswagen Dealership or qualified workshop. The engine must be checked.

When switching the ignition on, certain warning and indicator lamps flash to check functions. Such lamps go out after a few seconds.

WARNING

Failure to observe the warning lamps and text messages could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore any warning lamps or text messages that appear.
- Stop the vehicle as soon as possible and when safe to do so.

NOTICE

Failure to observe the illuminated indicator lamps and its descriptions and meanings could lead to vehicle damages.

 If the indicator lamps  or  are lit up, fuel consumption may be higher and engine performance reduced.

Fuel quality

 Please refer to  at the start of the chapter on page 180.

Considering the impracticality of supervising all filling stations, Volkswagen recommends filling the tank in stations included in the Distributor Network, which have clear programs, in order to ensure product quality.

Volkswagen Dealerships are prepared to handle engine sediments.

Fuel injection system

The vehicle is equipped with a fuel injection system that, under normal circumstances, waives the need for any periodical cleaning process, either with fuel additives or disassembling the injection valves to clean ultrasound systems.

Cleaning is required whenever damages or improper engine function occur due to use of low-quality fuel. In this case, Volkswagen recommends visiting a Volkswagen Dealership, which has suitable additives and equipment.

NOTICE

Damages caused on the engine due to the use of improper or insufficient fuel are not covered by the warranty.

If and when

Vehicle toolkit

Introduction

Observe any country-specific legislation when securing your vehicle in the event of a breakdown.

WARNING

In the event of a sudden driving or braking manoeuvre or accident, a loose vehicle toolkit and spare wheel could be flung through the vehicle and cause severe injuries.

- Always ensure that the vehicle toolkit or spare wheel are secured in its respective housings.

WARNING

Unsuitable or damaged tools in the vehicle toolkit can lead to accidents and injuries.

- Never work with unsuitable or damaged tools from the vehicle toolkit.

Vehicle toolkit stowage and access - Single cab Saveiro

 Please refer to  at the start of the chapter on page 182.

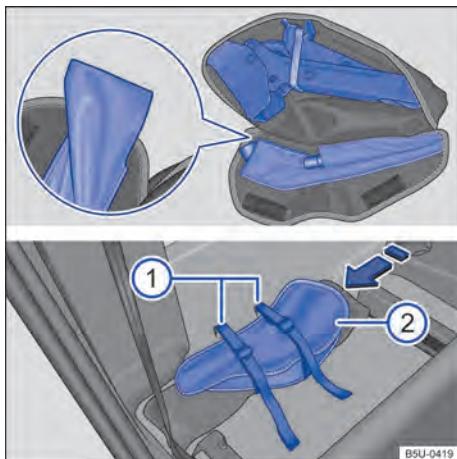


Fig. 160 Behind the passenger seat backrest: (1) vehicle toolkit securing straps and (2) vehicle toolkit bag.

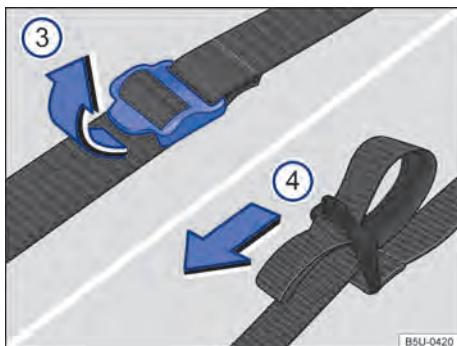


Fig. 161 Vehicle toolkit fastening straps.

The vehicle toolkit's placement varies depending on the vehicle version and/or model.

The passenger seat must be folded to access the vehicle toolkit → page 60.

Retrieving the vehicle toolkit

- To access the tool bag of vehicles **with** the front seat backrest folding lever: fold down the passenger seat.
- To access the tool bag of vehicles **without** the front seat backrest folding lever: push the seat to the front.
- Pull the fastening strap buckles in the direction of the arrow → [Fig. 161 \(3\)](#).
- Retrieve the vehicle toolkit.

Placement of the tools in the bag

- After use of the vehicle tools, ensure they are correctly positioned in the vehicle tool bag.
- Fit the jack in the bag and fully close it → [Fig. 160](#), with the jack base in the wider part of the bag.
- Insert the wheel wrench into the extractor hook to store in the tool bag.
- Fit the wheel wrench into its proper housing and ensure that the pawl → [Fig. 160](#) (magnifying glass) is placed underneath the wheel wrench to prevent rattling when driving.
- Fit the emergency wheel adapter in its proper housing.

Returning the vehicle toolkit

- Place the vehicle toolkit bag behind the passenger seat, on top of the warning triangle and through the fastening straps, as per → [Fig. 160](#) in the direction of the arrow.
- For correct securing of the toolkit, position same with the velcro straps of the bag turned forward → [Fig. 160 \(2\)](#).
- Firmly pull the straps (1) in the direction of the arrow → [Fig. 161 \(4\)](#) to secure the toolkit.

 Always ensure that the vehicle toolkit is properly fastened to the floor behind the passenger seat.



Vehicle toolkit stowage and access - Double cab Saveiro

 Please refer to  at the start of the chapter on page 182.



Fig. 162 On the rear seat floor: access to the vehicle toolkit housing.



Fig. 163 Vehicle toolkit fastening handle.

The vehicle toolkit's placement varies depending on the vehicle version and/or model.

The passenger seat must be folded to access the vehicle toolkit → page 60.

Remove the vehicle toolkit

- Turn the knob in the direction of the arrow → Fig. 162 and remove the lining completely to access the vehicle toolkit.
- Turn the knob anticlockwise → Fig. 163 to unlock the jack and access the vehicle toolkit.

Returning the vehicle toolkit

- Place the jack in the vehicle toolkit under the rear seat and turn the handle clockwise to lock it in place, secure the other tools in the vehicle toolkit.
- Position the vehicle toolkit lining and turn the knob counterclockwise to secure it in place → Fig. 162.

 Always make sure that the vehicle toolkit is correctly secured in the toolkit under the rear seat.



Contents of the vehicle tool kit

 Please refer to  at the start of the chapter on page 182.

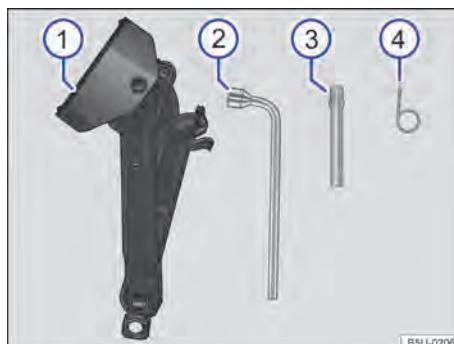


Fig. 164 Contents of the vehicle toolkit.

The content of the vehicle toolkit depends on the vehicle equipment level. The following describes the maximum scope.

Components of the vehicle toolkit. → Fig. 164

- Jack. Before reinserting the jack back into the toolkit, close the jack with the box spanner until reaching the stop, in order to prevent noises while driving.
- Lug wrench. Also used as a jack lever to lift the vehicle → page 232.
- Adapter to remove or fasten the spare wheel.
- Wire hook for pulling off the centre cover, wheel covers and the wheel bolt caps.

 Turn the jack back to its original position after use so it may be securely stored.



Wiper blades

Cleaning and replacing wiper blades - standard

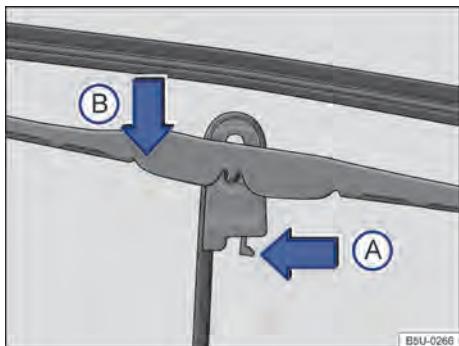


Fig. 165 Replacing windscreen wiper blades.

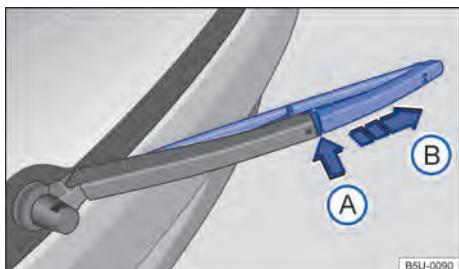


Fig. 166 Replacing the rear window wiper blades.

Standard window wiper blades may not be available, depending on the vehicle version.

The factory-fitted window wiper blades are coated with graphite. The graphite coating allows the window wiper blades to silently slide over the window and ensures optimal cleaning performance → ①.

Check the condition of the window wiper blades on a regular basis. Replace the **window wiper blades** whenever they are dirty or are not performing properly → ①.

Damaged window wiper blades must be replaced immediately. Window wiper blades can be bought at Volkswagen Dealerships or qualified workshops.

Lift and fold out the window wiper arms.

To lift or fold out window wiper arms, hold them **only** by the blade attachment area.

Cleaning window wiper blades

- Lift and fold out the window wiper arms.
- Clean the window wiper blades carefully using a soft cloth → ①.
- Lower the window wiper arms back onto the window.

Replacing windscreen wiper blades

- Lift and fold the windscreen wiper arms.
- Position the wiper in a perpendicular position to the wiper arm → Fig. 165.
- Push the release lever as directed by the arrow ①.
- Disengage the wiper as indicated by arrow ②, move the wiper in the wiper arm's opposite direction and remove the wiper in the opposite direction to the indicated by arrow ②.
- Insert a new wiper blade of the **same length and design** onto the wiper arm repeating the removal procedure in reverse until the wiper engages audibly.
- Ensure the new blade is correctly installed.
- Fold the windscreen wiper arms back onto the windscreen.

Replacing the rear window wiper blades

- Lift and fold the rear window wiper arm.
- Press and hold the release button → Fig. 166 ① at the same time pull off the windscreen wiper blade in the direction of the arrow.
- Remove the rear window wiper blade in the direction of the arrow ②.
- Insert a new rear window wiper blade of the **same length and design** into the rear window wiper arms until it is properly fitted.
- Fold the rear window wiper arm back towards the rear window.

WARNING

Worn or dirty window wiper blades reduce visibility and increase the risk of accidents and severe injuries.

- Replace window wiper blades whenever they are damaged or worn, and no longer appropriately perform their function.

! NOTICE

Do not attempt to recover or reapply the graphite layer of the window wiper blades. If this layer is damaged, replace the wiper blades.

! NOTICE

- Damaged or dirty window wiper blades may scratch the window.
- Detergents containing solvents, hard sponges and other sharp objects can damage the graphite coating during cleaning.
- Do not use fuel, nail varnish remover, paint thinner or similar products to clean the windows.

Cleaning and replacing window wiper blades - Aerowischer

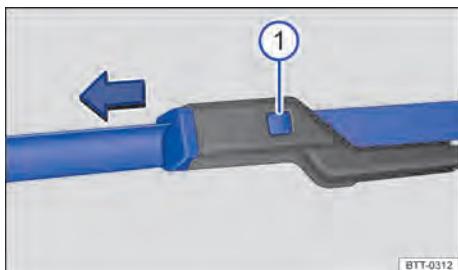


Fig. 167 Replacing windscreen wiper blades.

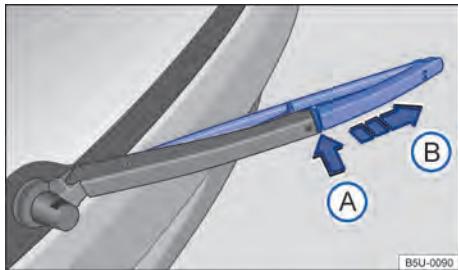


Fig. 168 Replacing the rear window wiper blades.

Aerowischer window wiper blades may not be available, depending on the vehicle version.

The factory-fitted window wiper blades are coated with graphite. The graphite coating allows the windscreens wiper blades to silently slide over the window and ensures optimal cleaning performance → ①.

Check the condition of the window wiper blades on a regular basis. Replace the **window wiper blades** whenever they are dirty or are not performing properly → ①.

Damaged windscreen wiper blades must immediately be replaced. Wiper blades can be bought at an authorised Volkswagen repairer or qualified workshops.

Lift and fold out the window wiper arms.

To lift or fold out window wiper arms, hold them **only** by the blade attachment area.

Cleaning window wiper blades

- Lift and fold out the window wiper arms.
- Clean the window wiper blades carefully using a soft cloth → ①.
- Lower the window wiper arms back onto the window.

Replacing windscreen wiper blades

- Lift and fold the windscreen wiper arms.
- Press and hold the release button → Fig. 167 ① and pull off the windscreen wiper blade in the direction of the arrow
- Insert the new wiper blade of the **same length and design** into the wiper arms until it is properly fitted.
- Fold the windscreen wiper arms back onto the windscreens.

⚠ WARNING

Worn or dirty window wiper blades reduce visibility and increase the risk of accidents and severe injuries.

- Replace window wiper blades whenever they are damaged or worn, and no longer appropriately perform their function.

! NOTICE

Do not attempt to recover or reapply the graphite layer of the window wiper blades. If this layer is damaged, replace the windscreens wiper blades.

! NOTICE

- Damaged or dirty window wiper blades may scratch the window.
- Detergents containing solvents, hard sponges and other sharp objects can damage the graphite coating during cleaning.

- Do not use fuel, nail varnish remover, paint thinner or similar products to clean the windows.

Exterior lighting

Introduction

Before repairing the product, check which technology is used, bulb or LED. As rule of thumb, light bulbs can be replaced by yourself. When, according to the vehicle version, the exterior lighting is of LED technology, the replacement of the LED light unit or of the individual LEDs by yourself is not possible. The burning out of individual LEDs may be an indication of possible burn outs of other LEDs. In such case, the lights must be checked, and if necessary, replaced by a specialized workshop.

Changing the vehicle bulbs requires considerable technical skill. If you do not feel confident with the procedure, Volkswagen recommends that you have the bulbs changed by a Volkswagen Dealership or that you seek other expert assistance. Contact a qualified workshop if other vehicle parts around the lights need to be removed.

A box containing spare light bulbs for lights that are required to ensure that the vehicle is road-worthy should be stored in the vehicle at all times. Spare bulbs are available from Volkswagen Dealerships.

Driving with burned out exterior lighting devices may be illegal.

Additional bulb specifications

Some bulbs in headlights or in tail light clusters might have factory specifications that are different than standard bulbs. The designation is inscribed on the bulb, either on the glass part or on the base.

LED technology in vehicles

Components that use LEDs in vehicles have a long service life and do not require frequent replacement.

Volkswagen recommends that the replacement of components that use LED be done at a Volkswagen dealership.

Vehicle components that use LEDs are listed below:

- ◀ – **Side turn signal lamp:** located in exterior mirrors.
- **Brake light bulb:** located above the rear window, outside the vehicle.

WARNING

Despite being illegal, driving with burnt bulbs may cause accidents. Burnt bulbs must be replaced as soon as possible.

- Insufficient lighting of roads, such as streets, avenues and squares, results in low visibility and increases the risk of accidents, since other road users might be unable to see vehicles running with burnt bulbs.

WARNING

Changing the bulb incorrectly can cause accidents and serious injuries.

- Before initiating any work in the engine compartment, always read and observe the warnings → page 200, *Safety guidelines for work in the engine compartment*. The engine compartment of any motor vehicle is a dangerous area and may cause severe injuries.
- Only change the defective bulb once it has had time to cool down completely.
- Never change a bulb unless you are familiar with the procedure. If you are uncertain of what to do, the work should be carried out by a Volkswagen Dealership or qualified workshop.
- Do not touch the glass part of the bulb with unprotected fingers. When the light is switched on, heat will cause fingerprints to evaporate on the bulb which will cause the reflector to "dim".
- There are sharp-edged parts in the headlight housing in the engine compartment and on the tail light cluster housing. Protect your hands when changing a bulb.

NOTICE

Damage to the electrical system can be caused if the rubber covers of the headlight housing are not properly mounted – especially due to water entering the system.

NOTICE

Volkswagen recommends special attention to some plastic parts with clamps, which might break when removing or fitting bulbs.

 Depending on the vehicle version, there may be two lighting reflectors in the rear bumper that are not equipped with bulbs. However, if these elements break and need to be replaced, visit a Volkswagen Dealership or qualified workshop.

 On cold and humid days the headlight lenses may become temporarily fogged because of the difference of temperature between the outside and the inside.

- With the headlight turned on, the outgoing light surface defogs in a short time, eventually leaving some residues at the borders.
- The tail lights and the turn signals may also be affected.
- The fogging phenomenon does not interfere with the life cycle of the lighting system of the vehicle.

Information on changing bulbs

 Please refer to  and  at the start of the chapter on page 187.

Checklist

Always carry out the following actions for changing a bulb in the given order → :

- Park the vehicle on a flat and solid surface at a safe distance from the flow of traffic.
- Apply the handbrake → page 95.
- Turn the light switch to position **0** → page 63.
- Shift the turn signal lever to the neutral position → page 63.
- Stop the engine and remove the key from the ignition cylinder → page 86.
- Select a gear → page 88.
- Switch off the orientation lighting → page 63.
- Let the defective bulb cool down.
- Check to see if a fuse has blown → page 193.

10. Change the faulty bulb as instructed → ; use a flashlight if necessary. Always use identical bulbs with the same designation. The designation is inscribed on the bulb, either on the glass part or on the base.

11. Do not touch the glass part of the bulb with unprotected fingers. The heat of the bulb would cause the fingerprint to evaporate and condense on the reflector, compromising the brightness of the headlight.

12. After changing the bulb, check to make sure that the bulb is working properly. If the bulb is not working properly, the bulb may not have been inserted properly or may have failed again, or the connector may have been inserted incorrectly.

13. Each time you change a bulb in the front of the vehicle, the headlight settings should be checked by a Volkswagen Dealership or qualified workshop.

WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

NOTICE

Always take care when removing or fitting lights to prevent damage to the paintwork or to other vehicle parts.

 Burnt bulbs must not be disposed of as common trash, since they contain residues that are potentially harmful to the environment.

 In order to help preserve the environment, Volkswagen recommends returning burnt bulbs to a Volkswagen Dealership or qualified workshop, in order for them to be properly disposed of based on specific legal requirements regarding handling, storage and disposal.

Changing headlight bulbs - standard headlights

 Please refer to  and  at the start of the chapter on page 187.

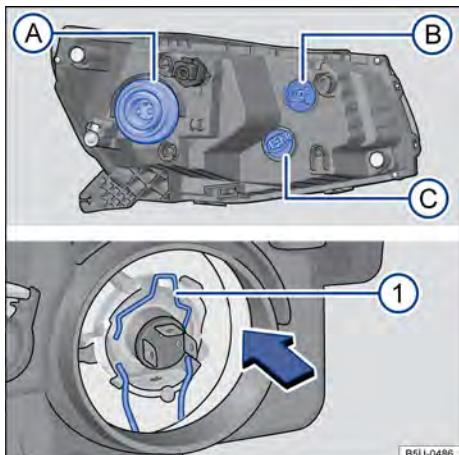


Fig. 169 In the engine compartment: rear view of the headlight with rubber cover (left side of illustration) - (A) dipped beam / main beam, (B) daytime running light / side light and (C) turn signals. Rear view of the front headlight without the rubber cover (right-hand side of the illustration): (1) locking spring of the dipped beam / main beam headlight bulb.

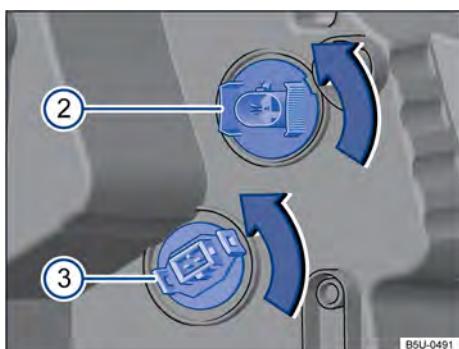


Fig. 170 In the engine compartment: rear view of the front headlight (2) daytime running light / side light and (3) turn signals.

In the engine compartment, the headlights are partially covered by other vehicle parts. Volkswagen recommends changing bulbs at a Volkswagen Dealership in case of doubt.

The actions should only be carried out in the specified order:

- ① Observe and follow the instructions on the checklist → page 188.
- ② Open the bonnet  → page 200.
- ③ Disengage the bulb connector.
- ④ **Main beam / dipped beam** **A**, remove the rubber cover on the rear part of the headlight **A**.

Running light and side light **B**, turn the bulb holder **2** in the direction of the arrow and remove it from the socket.

Turn signals **C**, turn the bulb socket **3**, in the direction of the arrow, and remove it.

- ⑤ **Dipped beam / main beam** **A**, press the locking spring in the direction of the arrow **1** and move it to release the bulb.

Running light and side light **B**, pull the defective bulb from its holder to remove it.

Turn signals **B**, press on the defective bulb and turn it to remove it.

- ⑥ **Dipped beam / main beam** **A**, move the spring to remove the defective bulb from its housing.

- ⑦ Replace the defective bulb with a new bulb of the same type.

- ⑧ **Dipped beam / main beam** **A**, insert the new bulb into the housing with the largest socket reference flap facing up.

Running light and side light **B**, insert the new bulb into the holder.

Turn signals **C**, insert the new bulb into the holder, press on the bulb and turn it as far as possible.

- ⑨ **Dipped beam / main beam** **A**, press the locking spring and secure it in the holder to secure the bulb.

Running light and side light **B** and **turn signals** **C**, make sure that the holder is correctly attached to the assembly.

- ⑩ **Dipped beam / main beam** **A**, remove the rubber cover on the rear part of the headlight **A**.

Running light and side light **B**, turn the bulb holder **2** in the direction of the arrow and remove it from the socket.

Turn signals **C**, turn the bulb holder **3** in the direction of the arrow and remove it from the socket.

- ⑪ **Dipped beam / main beam** **A**, reinsert the rubber cover securely in place. Ensure that the connection terminals do not damage the rubber cover.
- Running light and side light** **B** and **turn signals** **C**, make sure that the holder is correctly attached to the assembly.
- ⑫ Fit the bulb connector, pressing it as far down as possible.
- ⑬ Close the bonnet → page 200.
- ⑭ **Dipped beam / main beam** **A**, after installing the new bulb, adjust the beam.

i The illustrations show the left-hand headlight from the rear. The right-hand headlight is a mirror image of the one shown.

Changing bulbs in the front bumper - fog light

! Please refer to **▲** and **①** at the start of the chapter on page 187.

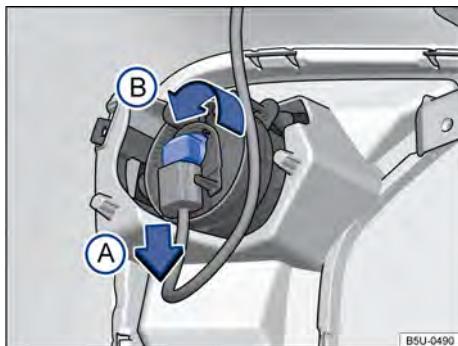


Fig. 171 Behind the front bumper: access to the fog light bulb.

To access and change the fog light bulb the vehicle must be lifted → **▲**. Also see → page 253.

Volkswagen recommends changing fog light bulbs at a Volkswagen Dealership in case of doubt.

The actions should only be carried out in the specified order:

- ① Observe and follow the instructions on the checklist → page 188.
- ② Disconnect the bulb connector → **Fig. 171** in the direction of the arrow **A** and press the connector securing lock simultaneously.
- ③ Turn the bulb socket → **Fig. 171**, in the direction of the arrow **B**, and remove it
- ④ The fog light bulb is secured in the holder; the entire bulb/holder assembly must be replaced
- ⑤ Replace the defective bulb with a new bulb of the same type.
- ⑥ Insert the new bulb/socket set into the housing.
- ⑦ Press the socket down as far as possible and turn clockwise.
- ⑧ Ensure that the socket is properly secured.
- ⑨ Fit the bulb connector.

⚠ WARNING

Never lift the vehicle using the vehicle jack to change fog light bulbs.

i The illustration shows the left-hand side fog light. The right-hand fog light is a mirror image of the one shown.

Changing bulbs in the rear bodywork lights

Please refer to **⚠** and **①** at the start of the chapter on page 187.



Fig. 172 Tail light: **C** remove the bulb support and **①**, **②**, **③**, **④** e **⑤** remove the bulbs.

Access to the rear lamp to change bulbs is made through the luggage compartment. The rear fog light is located only on the left side.

Volkswagen recommends changing bulbs at a Volkswagen Dealership in case of doubt.

The actions should only be carried out in the specified order.

Removing the tail light

- ① Observe and follow the instructions on the checklist → page 188.
- ② Open the tailgate → page 52.
- ③ Carefully remove the cover **A** by pulling it out.
- ④ Remove the two fastening bolts **B**.
- ⑤ Carefully pull the tail light out to remove it from the bodywork → **①**.
- ⑥ Disconnect the light bulb connector to completely remove the bulb.
- ⑦ Place the rear light in a smooth and even surface.
- ⑧ To unlock the bulb support, press each locking pin **C** in the direction of the arrow.
- ⑨ Carefully remove the bulb holder.

Changing bulbs

- ① To remove the defective bulbs **①**, **②** and **③**, press the bulb against the support and turn it anticlockwise.
- ② Replace the defective bulb with a new bulb of the same type.
- ③ To insert new bulbs **①**, **②** and **③**, insert the new bulb into the respective socket. Press the bulb and turn clockwise until reaching the stop.
- ④ Ensure that the bulbs are properly secured in the bulb holder.
- ⑤ Insert the rear light bulb support. The locking pawls **C** must audibly fit into place.

Installing the tail light

- ① Fit the bulb connector.
- ② Carefully fit the rear light in the bodywork housing.
- ③ Reinsert the two fastening bolts **B** and tighten them.
- ④ Reinsert the dropside **A**. The cover must be properly secured.
- ⑤ Close the tailgate → page 52.

The location and identification of bulbs → Fig. 172 are provided below:

- ① Side light bulb.
- ② Side light and brake light bulb.
- ③ Reverse gear light bulb.

- ④ Fog light bulb - only on the left side, when available in the vehicle.
- ⑤ Turn signal light bulb.

The rear fog light is located only on the left side, beneath other lamps.

NOTICE

- Always take care when removing or fitting rear lights into the bodywork, in order to prevent damage to the paintwork or to other vehicle parts.
- Volkswagen recommends special attention to some plastic parts with clamps, which might break when removing or fitting bulbs.



Changing bulbs in the number plate light

 Please refer to  and ① at the start of the chapter on page 187.



Fig. 173 On the rear bumper: remove the number plate light.



Fig. 174 Number plate light: remove the bulb socket.

A screwdriver may be used to remove the number plate light → ①.

The actions should only be carried out in the specified order:

- ① Observe and follow the instructions on the checklist → page 188.
- ② Using a screwdriver, press the lock → Fig. 173 to remove the assembly.
- ③ Turn the bulb socket in the direction of the arrow → Fig. 174 and remove it from the housing.
- ④ Pull the defective bulb from the socket to remove it.
- ⑤ Replace the defective bulb with a new bulb of the same type.
- ⑥ Carefully insert the new bulb into the socket.
- ⑦ Press down the socket and turn in the opposite direction of the arrow → Fig. 174.
- ⑧ Ensure that the socket is properly secured.
- ⑨ Insert the bulb set into the bumper housing, initially fitting the right side and then the left side.
- ⑩ Press the number plate light in the bumper until it is audibly secured in place.
- ⑪ Ensure that the number plate light set is properly secured.

NOTICE

Always take care when removing or fitting the number plate bulb in the rear bumper, in order to prevent damage to the paintwork or to other vehicle parts.



Changing bulbs in the luggage compartment

 Please refer to  and  at the start of the chapter on page 187.



Fig. 175 On the bed: remove the elevated brake light.



Fig. 176 Elevated brake light: remove the bulb from the bed light.

The luggage compartment bulb is located next to the high-mounted brake light, above the rear window, outside the vehicle.

The actions should only be carried out in the specified order:

- ① Observe and follow the instructions on the checklist → page 188.
- ② Remove the fastening bolts → Fig. 175.
- ③ Carefully pull the high-mounted brake light outwards in order to remove it.
- ④ Using a screwdriver, press one of the sides of the light → Fig. 176 to remove it from the set.

- ⑤ Replace the defective bulb with a new bulb of the same type.
- ⑥ Carefully insert the new bulb into the socket.
- ⑦ Carefully fit the high-mounted brake light in its housing.
- ⑧ Reinsert and tighten the fastening bolts → Fig. 175.
- ⑨ Ensure that the high-mounted brake light is properly secured in its housing.

NOTICE

Volkswagen recommends changing luggage compartment light bulbs at a Volkswagen Dealership or qualified workshop in order to prevent vehicle damages.

Fuses

Introduction

Several electrical consumers could share a single fuse. Conversely, a single consumer could have more than one fuse.

Therefore, fuses should only be replaced when the cause of a fault has been rectified. If a newly inserted fuse blows after a short time, the electrical system must be checked by a Volkswagen Dealership or qualified workshop.

WARNING

High voltages in the electrical system can cause electric shocks, severe burns and death!

- Never touch the electrical wiring of the ignition system.
- Avoid causing short-circuits in the electrical system.

WARNING

Using unsuitable or repaired fuses and bridging an electrical circuit without fuses can cause fires and severe injuries.

- Never fit fuses that have a higher fuse protection limit. Fuses must always be replaced with a new fuse which has the same amp rating (same colour and imprint) and size.
- Never repair a fuse.

- Never use a metal strip, paper clip or similar items to replace a fuse.

! NOTICE

- In order to avoid damage to the electrical system in the vehicle, the ignition, the lights and all electrical consumers must be switched off and the vehicle key removed from the ignition cylinder before changing a fuse.
- You can damage another position in the electrical system by using a fuse with a higher amp rating.
- Fuse boxes must be protected from dirt and moisture when opened. Dirt and moisture in the fuse boxes can damage the electrical system.

i A single consumer may have more than one fuse.

i Several consumers may share a single fuse.

Fuses must always be replaced with a new fuse which has the same amp rating (same colour and imprint) and size.

Opening and closing the dashboard fuse box

Remove the stowage compartment / fuse box cover → **Fig. 177** in the direction of the arrow.

! NOTICE

- Remove the covers for the fuse boxes carefully and install them again properly so as to avoid damage to the vehicle.
- Fuse boxes must be protected from dirt and moisture when opened. Dirt and moisture in the fuse boxes can damage the electrical system.

i This chapter does not refer to all the fuses located in the vehicle. These must be changed only by a Volkswagen Dealership or qualified workshop.

Fuses in the dash panel

! Please refer to **! and i** at the start of the chapter on page 193.


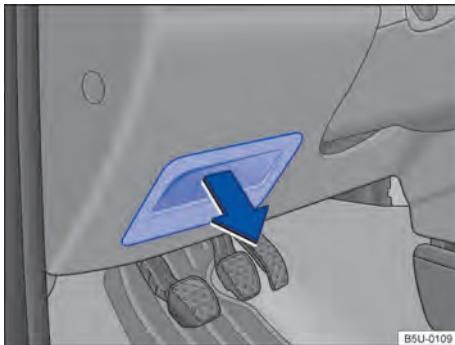


Fig. 177 On the driver's side of the dashboard: fuse box cover.

Fuse box in the dashboard

► Please refer to **►** and **●** at the start of the chapter on page 193.

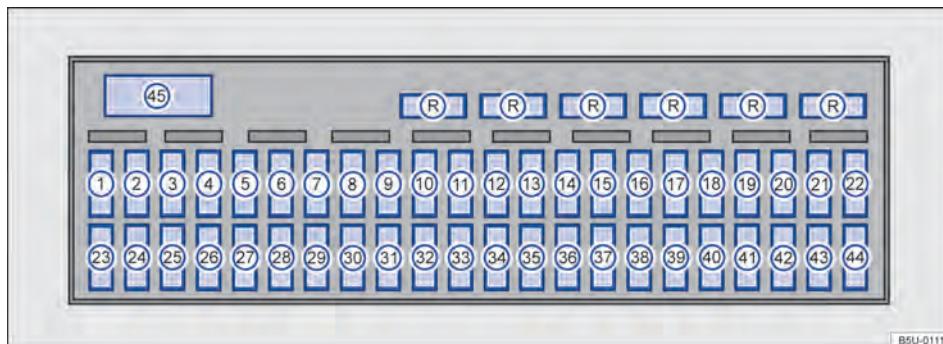

B5U-0111

Fig. 178 Fuse box.

Volkswagen recommends keeping spare fuses in the vehicles, which may be stored in the upper part of the fuse box → **Fig. 178** (R) (such as 5 A, 10 A, 15 A, 20 A, 25 A and 30 A fuses for vehicles without air conditioning or 40 A for vehicles with air conditioning system).

Some fuses may be specific to certain versions.

Locations with respective functions for equipment that may be available in your vehicle are provided below:

1	Free	19	Turn signals / Multifunction steering wheel
2	Convenience system module / Radio (vehicles equipped for radios)	20	Diagnostic socket / load compartment lighting
3	Light switch / Fog light	21	Turn signals / Brake lights
4	Free	22	Comfort system module / USB charger
5	Airbag module	23	Arrow key
6	Rear window heating	24	Instrument cluster / Electric control unit relay / Fuel pump relay
7	Ignition transformer	25	Windscreen washer pump / Windscreen wipers
8	12-volt socket in the luggage compartment	26	Injection module
9	ABS /ESC module	27	Free
10	Radio / USB charger / Rear view camera system	28	Free
11	LWR	29	Fuel pump
12	Interior lighting	30	Warm starting (E-FLEX)
13	Free	31	Right and left main beam / Main beam indicator lamp in the instrument cluster
14	Exterior electric mirror	32	Left-hand side dipped beam headlights
15	Electromagnetic air conditioning gearing	33	Reverse gear light
16	Alarm / Rain and twilight sensors	34	Instrument cluster / Cold starting system relay / Fuel pump relay / Parking distance control relay / Air conditioning relay / Engine control module / Electric interior mirror / Rain and twilight sensors
17	Central locking	35	Electric window control module / Right-hand mirror tilt down module
18	Rear seat 12 V socket	36	Light switch
		37	Horn
		38	Interior ventilation
		39	Free

40 Fuel injection valves / Clutch pedal sensor / Brake pedal sensor
 41 Lambda probe / Activated charcoal filter cleaning valve
 42 Windscreen wipers

43 Right-hand side dipped beam headlights
 44 12-volt socket on the centre console
 45 Electric control unit



Fuses in the engine compartment

Please refer to and at the start of the chapter on page 193.

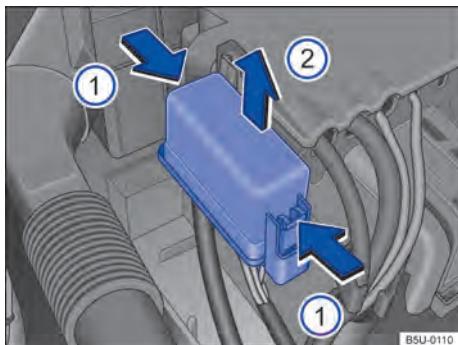


Fig. 179 On the engine compartment: fuse box cover.

Opening the fuse box in the engine compartment

- Open the bonnet → page 200.
- Press the retainers in the direction of the arrow → Fig. 179 ① to release the fuse box cover.
- Lift off the cover in the direction of the arrow ②.
- To fit, place the cover over the fuse box. Press the cover down, in the opposite direction to the arrow ②, until it clicks into place.

NOTICE

- Remove the covers for the fuse boxes carefully and install them again properly so as to avoid damage to the vehicle.
- Fuse boxes must be protected from dirt and moisture when opened. Dirt and moisture in the fuse boxes can damage the electrical system.

Fuse box in the engine compartment

Please refer to and at the start of the chapter on page 193.

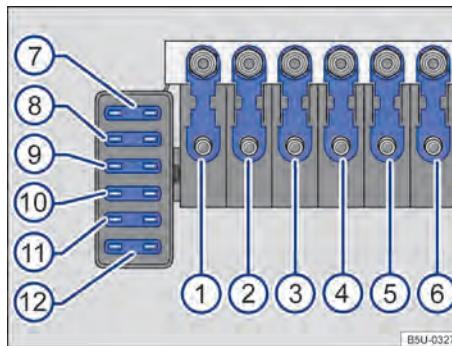


Fig. 180 Fuse box.

Fuses are located in the engine compartment, above the vehicle battery → .

Fuses in the engine compartment must only be replaced by a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Locations with respective functions and amp rating for equipment that may be available in your vehicle are provided below:

①	Alternator	175
②	Internal compartment supply	110
③	Radiator fan - 2 nd speed	40
④	Free	-
⑤	ABS / ESC	40
⑥	Warm starting (E-FLEX)	110
⑦	ABS / ESC	25
⑧	Radiator fan - 1 st speed	40
⑨	Convenience system	5
⑩	Free	-



(11) Free	-
(12) Free	-

⚠ WARNING

Before initiating any work in the engine compartment, always read and observe the warning notes → page 200, *Safety guidelines for work in the engine compartment*. The engine compartment of any motor vehicle is a dangerous area and may cause severe injuries.

Light brown 5 A

Brown 7.5 A

Red 10 A

Blue 15 A

Yellow 20 A

White or clear 25 A

Green 30 A

Orange 40 A

◀ Preparations

- Switch off the ignition, the lights, and all electrical consumers.
- Open the respective fuse box → page 194.

Detecting a blown fuse

A melted metal strip indicates that the fuse has blown → Fig. 181.

Shine a flashlight onto the fuse. This will help you to spot the blown fuse more easily.

Changing a fuse

- If applicable, take the plastic tweezers → Fig. 182 ① out of the fuse box cover.
- For *small fuses*, push on the catch ① from above → Fig. 182 A.
- For *bigger fuses*, push the catch ① onto the fuse from the side → Fig. 182 B.
- Pull out the blown fuse.
- If the fuse has blown, replace it with a new fuse of the *same* amp rating (same colour and same imprint) and *same size* → ①.
- Reinsert the cover.

⚠ NOTICE

You can damage another position in the electrical system by using a fuse with a higher amp rating. ▲

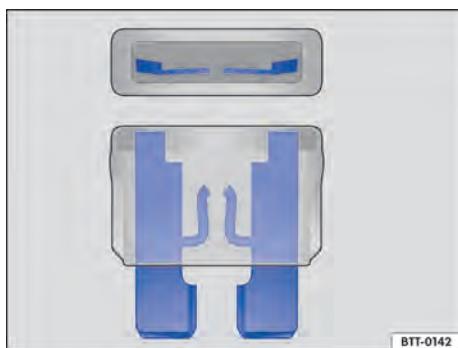


Fig. 181 Blown fuse.

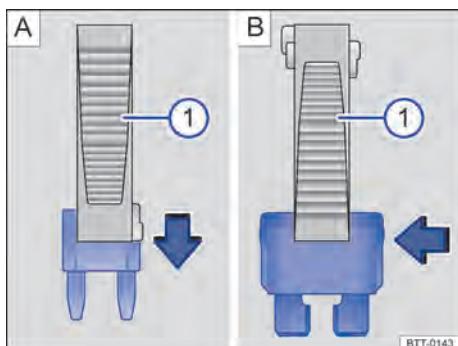


Fig. 182 Removing or fitting a fuse using the plastic pliers ①.

Colour code of fuses under the dashboard

Colour Amp rating

Lilac 3 A

Jump starting

📘 Introduction

If the engine fails to start because of a discharged vehicle battery, the battery can be connected to the battery of another vehicle to start the engine. Before using jump starting, check the window on the vehicle battery → page 213. ▶

The vehicles must not touch each other, otherwise electricity could flow as soon as the positive terminals are connected.

The discharged vehicle battery must be properly connected to the vehicle's electrical system.

The jump leads must have sufficient length to ensure proper distance between the vehicles.

⚠ WARNING

Using the jump leads incorrectly or completing the jump start procedure incorrectly can cause the battery to explode, which can lead to severe injuries. Please note the following points in order to reduce the risk of the battery exploding:

- All work on the vehicle battery and the electrical system can cause serious chemical burns, fire and electric shocks. Always read the warnings and safety information before carrying out any kind of work on the vehicle battery → page 213, *Vehicle battery*.
- The assistance providing vehicle's battery must be of the same voltage as the discharged vehicle battery (12-volt) and be approximately of the same capacity (see imprint on battery).
- Never charge a frozen or defrosted vehicle battery. A discharged vehicle battery can even freeze at temperatures of around 0° C (+32° F).
- The battery should be replaced if it has frozen or defrosted.
- A highly explosive mixture of gases is given off when jump starting the vehicle battery. Always keep fire, sparks, naked flames and lit cigarettes away from the vehicle battery. Never use a mobile telephone when the jump leads are being connected or disconnected.
- Only charge the battery in a well-ventilated space as the battery emits a highly explosive mixture of gases when the vehicle is being jump started.
- Position the jump leads so that they never come into contact with any moving parts in the engine compartment.
- Never confuse the negative and positive terminals or connect the jump leads incorrectly.
- Observe the jump lead manufacturer's instructions.

⚠ NOTICE

Please note the following in order to avoid considerable damage to the vehicle electrical system:

- short circuit can be caused if the jump leads are connected incorrectly.
- The vehicles must not touch each other, otherwise electricity could flow as soon as the positive terminals are connected.

How to start the engine using jump leads

☞ Please refer to **⚠** and **ⓘ** at the start of the chapter on page 198.

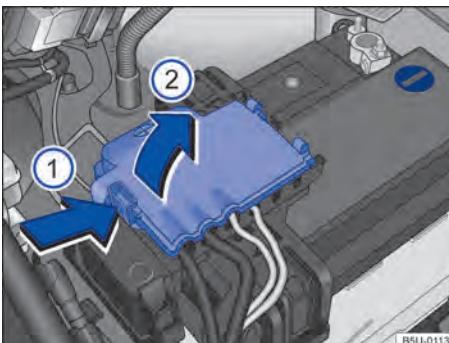


Fig. 183 Engine compartment: access to the positive battery terminal.

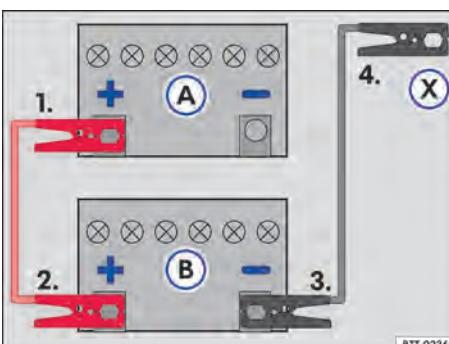


Fig. 184 Jump lead attachment diagram: discharged vehicle battery **A** and battery in the vehicle providing assistance **B**.

Key for→ Fig. 184:

- (A) Vehicle with discharged vehicle battery which is getting jump starting assistance.
- (B) Vehicle with the current supplying battery assisting jump starting.
- (X) Proper grounding point: a piece of solid metal firmly bolted to the cylinder block.

The discharged vehicle battery must be properly connected to the vehicle's electrical system.

The vehicles must not touch each other. Otherwise electricity could flow as soon as the positive terminals are connected.

Make sure the battery clamps have good metal-to-metal contact with the battery terminals.

If the engine does not start immediately, switch off the starter after about 10 seconds and try again after about one minute.

The actions should only be carried out in the specified order.

Attaching the jump leads

- Switch off the ignition in both vehicles → page 86.
- Open the positive terminal cover. To open, press the lock in the direction of the arrow → Fig. 183 (1) and move the cover to the side, in the direction of the arrow (2).
- Connect one end of the *red* jump lead to the positive terminal → Fig. 184 (+) of the vehicle with the discharged battery (A) → ▲.
- Connect the other end of the *red* jump lead to the positive terminal (+) of the battery in the vehicle providing assistance (B).
- Connect one end of the *black* jump lead to the negative terminal (–) of the battery in the vehicle providing assistance (B).
- Connect the other end of the *black* jump lead (X) to the vehicle with the discharged battery. Connect it to the screwed-in towing eye at the front, a solid metal component which is bolted on to the engine block, or to the engine block itself. However, do not connect it to a point near the vehicle battery (A) → ▲.
- Position the leads in such a way that they cannot come into contact with any moving parts in the engine compartment.

Starting the engine

- Start the engine of the vehicle which is providing assistance and let it run at idle.
- Start the engine of the car with the discharged vehicle battery and wait two to three minutes until the engine is "running smoothly".

Removing the jump leads

- Before disconnecting the jump leads, switch off the dipped beam headlights if they are switched on.
- Turn on the heating and fresh air system blowers and rear window heater (not available in some versions) in the vehicle battery with the discharged battery. This helps to minimise voltage peaks which are generated when the leads are disconnected.
- With the engines running, disconnect the jump leads in the exact reverse order to the instructions given above.
- Close the positive battery terminal cover.

WARNING

Jump starting the vehicle incorrectly can cause the battery to explode, which can lead to serious injuries. Please note the following points in order to reduce the risk of the battery exploding:

- All work on the vehicle battery and the electrical system can cause serious chemical burns, fire and electric shocks. Always read the warnings and safety information before carrying out any kind of work on the vehicle battery → page 213, *Vehicle battery*.
- Make sure there is no one inside the vehicle when connecting battery jump leads. In case of electrical failure, airbags may be accidentally engaged and cause severe or even fatal injuries to vehicle occupants.
- Always wear suitable eye protection and never lean over the vehicle battery.
- Attach the connector cables in the correct order – the positive cable first, followed by the negative.
- Never connect the negative cable to parts of the fuel system or to the brake hose/pipe.
- Non-insulated parts of the battery clamps must not be allowed to touch. Additionally, the jump lead attached to the positive vehicle battery terminal must not touch metal parts of the vehicle.

- Check the window on the vehicle battery using a flashlight if necessary. If the display is light yellow or colourless, do not jump start the vehicle. Seek expert assistance.
- Avoid electrostatic discharge in the vicinity of the vehicle battery. The gas emitted from the vehicle battery could be ignited by sparks.
- Never use jump starting to start the engine if the vehicle battery is damaged, frozen or has defrosted.

NOTICE

Incorrectly attached jump leads could result in substantial damages to the vehicle's electrical system.

Checking and refuelling

In the engine compartment

Safety guidelines for work in the engine compartment

Always park the vehicle on a levelled and stable surface before carrying out any work in the engine compartment.

The engine compartment of a motor vehicle is a hazardous area. Never carry out any work on the engine or in the engine compartment if you are not familiar with the necessary procedures and the general safety requirements, as well as without the unsuitable tools, fluids and resources available → . If necessary, such work must be carried out by a Volkswagen Dealership or qualified workshop. Serious injuries can be caused if work is carried out incorrectly.

WARNING

Unintentional vehicle movements during service work can cause serious injury.

- Never work underneath a vehicle if it is not secured against rolling away. If you are working underneath the vehicle while the wheels are on the ground, the vehicle must be on a level, the wheels must be blocked and the vehicle key must be removed from the ignition cylinder.
- If you have to work underneath the vehicle, use suitable stands to provide extra support. The vehicle jack is not sufficient for this task and can fail, which can lead to serious injuries.

WARNING

The engine compartment of any motor vehicle is a dangerous area and may cause severe injuries!

- The utmost care and attention must be paid when carrying out any work and you must follow the general safety rules. Never take any risks.
- Never do any work on the engine or in the engine compartment unless you know exactly how to carry it out. If you are uncertain of what to do, the work should be carried out

Tow starting and towing

Introduction

For technical reasons, vehicles must not be tow started. Use jump leads to start the engine instead → page 197.

For technical reasons, vehicles with a discharged battery must not be tow started. Jump start the engine instead → page 197.

Towing

Whenever it is necessary to tow your vehicle, use a specialized towing service, using tow trucks or platforms.

When using tow trucks, the vehicle must be securely fastened by the front wheels. Ensure that no gears are selected and the handbrake lever is not applied.

NOTICE

Always comply with applicable traffic laws regarding towing.

by a Volkswagen Dealership or qualified workshop. Serious injuries can result from work that has not been carried out properly.

- Never open the cover if you see steam or coolant escaping from the engine compartment. Hot steam or coolant can cause severe burns. Always wait until you can no longer notice steam or coolant coming from the engine compartment.
- Always let the engine cool down before opening the engine compartment cover.
- Hot parts of the engine or exhaust system may burn the skin.
- Before opening the engine compartment cover once it has cooled down:
 - Pull the handbrake and place the gear selector lever into neutral position.
 - Remove the vehicle key from the ignition lock.
 - Always keep children away from the engine compartment and never leave the vehicle unattended.
- The engine cooling system is under pressure when the engine is hot. Never open the cap of the coolant expansion tank when the engine is hot. Coolant may spray out and cause severe burns and injuries.
 - After cooling, turn the cap slowly and very carefully anticlockwise while exerting some downwards pressure on the cap.
 - Always protect the face, hands and arms from hot coolant or steam with a large, thick cloth.
- When refilling, do not spill any service fluids on engine components or on the exhaust system. Spilt service fluids may start fires.

⚠ WARNING

The high voltage in the electrical system can cause electric shocks, burns, serious injuries and death!

- Never short circuit the electric system. The vehicle battery could explode.
- Please note the following guidelines to help reduce the risk of an electric shock and serious injuries while the engine is running or being started:
 - Never touch the electrical wiring of the ignition system.
 - Never touch electrical wiring.

⚠ WARNING

There are rotating components in the engine compartment that can cause serious injury.

- Never touch the radiator area or fan directly. Touching the rotary blades may result in severe injuries. The fan is temperature-controlled and can start automatically, even if the engine has been switched off and the vehicle key has been removed from the ignition cylinder.
- If any work has to be performed when the engine is started or with the engine running, there is an additional, potentially fatal, safety risk from the rotating parts, such as the Poly-V or drive belts, alternator, radiator fan, etc., and from the high-voltage ignition system. Always be extremely cautious.
 - Always ensure that no body parts, jewellery, ties, loose items of clothing or long hair can be caught up in rotating engine components. Before starting work, remove any jewellery and ties, tie up long hair and pull clothes in tightly to avoid them getting caught in the engine compartment.
 - Always depress the accelerator carefully and never thoughtlessly. The vehicle can move even while the handbrake is applied.
- Always make sure you have not left any objects, such as cleaning cloths and tools, in the engine compartment. Any forgotten items can cause malfunctions, engine damage and fires.

⚠ WARNING

Operating fluids and some materials in the engine compartment are highly flammable and may cause fires and severe injuries!

- Never smoke around the engine compartment.
- Never work near naked flames or sparks.
- Never spill fluids onto the engine. They could ignite on hot engine components and cause injuries.
- Please note the following when carrying out any work on the fuel system or the electrical system:
 - Always disconnect the vehicle battery. Ensure that the vehicle is unlocked before the battery is disconnected. Otherwise, the alarm system will be activated.

- Never work in the direct proximity of heating systems, water heaters or any other open flames.

NOTICE

When refilling or changing operating fluids please ensure that the fluids are in the correct container. Incorrect operating fluids can cause serious functional problems and engine damages!

 Service fluids leaks are harmful to the environment. Regularly check the ground underneath your vehicle. If there are spots of oil or other fluids on the ground, the vehicle must be inspected by a Volkswagen Dealership.

- ✓ Apply the handbrake → page 95.
- ✓ Position the gear selection lever into the neutral position → page 88.
- ✓ Stop the engine and remove the key from the ignition lock → page 86.
- ✓ Allow the engine to cool down sufficiently.
- ✓ Children and other people should be kept well away from the engine compartment.
- ✓ Ensure that the vehicle cannot roll away unexpectedly.

WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

Preparing the vehicle for working in the engine compartment

Checklist

The following steps should always be carried out in the specified order before working in the engine compartment → :

- ✓ Park the vehicle on a levelled and stable surface.
- ✓ Depress and hold the brake pedal until the engine has stopped.

Opening and closing the engine compartment cover

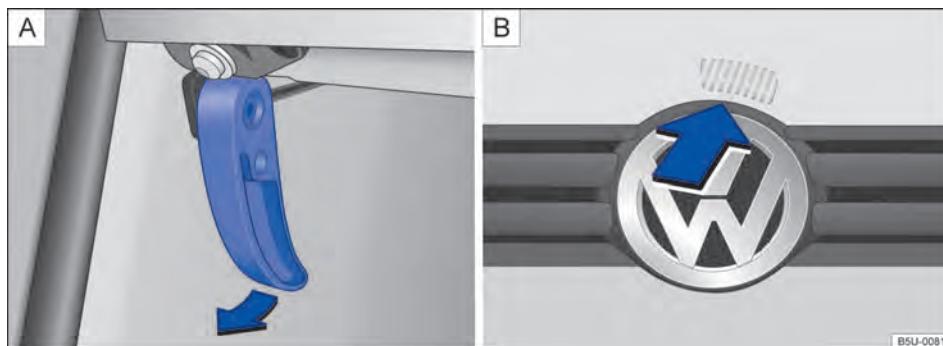


Fig. 185 **A** Bonnet release lever on the driver side footwell. **B** Bonnet release lever on the inner side of the bonnet.

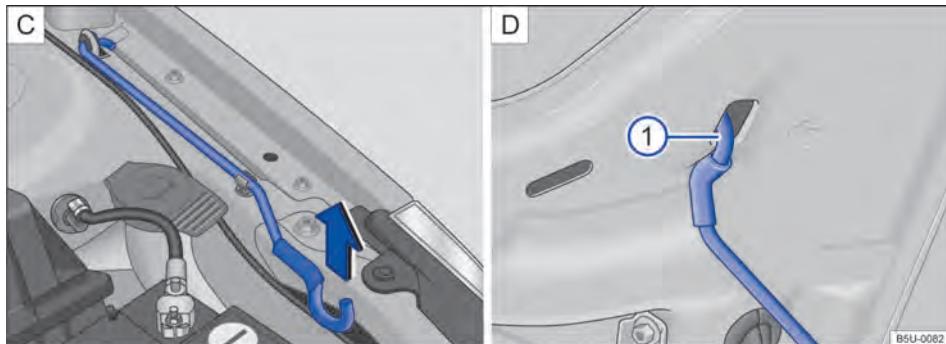


Fig. 186 **C** Bonnet stay. **D** Bonnet secured with the bonnet stay.

Opening the engine compartment cover

- Ensure that the windscreen wiper arms are positioned on the windscreen before opening the bonnet → ①.
- Pull the release lever in the direction of the arrow → Fig. 185 **A**. The bonnet is released from its lock by a spring mechanism → ▲.
- Slightly lift the bonnet and press the release lever → Fig. 185 **B** located on the inner side of the bonnet simultaneously, in the direction of the arrow, to open the bonnet.
- Take the bonnet stay out of the holder in the direction of the arrow → Fig. 186 **C** and insert it in the bonnet opening → Fig. 186 **①** **D**.

Closing the engine compartment cover

- Lift the bonnet slightly → ▲.
- Take the bonnet stay out of the holder → Fig. 186 **①** **D** and insert it in the opening in the bonnet → Fig. 186 **C**.
- Release the bonnet at approximately 20 cm from the lock – *do not* press down!

If the bonnet is not closed, open it again and close it properly.

The engine compartment cover sits flush with the body parts around it when it is closed properly.

WARNING

When the open bonnet supported by the bonnet stay, do not push or apply additional force to close the bonnet, since this could cause bonnet damages and severe injuries.

WARNING

If the engine compartment cover is not closed properly, it can open suddenly while you are driving and completely obscure your view of the road. This could lead to accidents and severe injuries.

- After closing the engine compartment cover, always check that it is properly secured. The engine compartment cover must be flush with the surrounding body panels.
- If you notice that the bonnet is not closed properly while the vehicle is in motion, stop the vehicle as soon as possible and close the bonnet.
- Open or close the engine compartment cover only when you are sure that nobody is in its path.

NOTICE

The bonnet should only be opened when the wiper arms are flush to the windscreens in order to avoid damage to the bonnet and the windscreens wiper arms.

Service fluids and consumables

All service fluids and consumables, e.g. toothed belts, tyres, coolant, engine oil, spark plugs and vehicle batteries, are being constantly perfected. For this reason, service fluids and consumables should be replaced at a Volkswagen Dealership or qualified workshop. Volkswagen Dealerships are always updated about innovations.

WARNING

Unsuitable service fluids and consumables, and the incorrect use of these fluids and consumables, can cause accidents, serious injuries, burns or poisoning.

- Service fluids must be kept in their original sealed container.
- Never store service fluids in empty food containers, bottles or any other non-original containers as people finding these containers could drink them.
- Keep children away from all service fluids and consumables.
- Always read and follow the information and warnings on the service fluid packaging.
- When using products that give off harmful fumes, always work outdoors or in a well ventilated area.
- Never use fuel, turpentine, engine oil, nail varnish remover or other volatile fluids to wash, clean or care for your vehicle. These substances are poisonous and highly flammable. They could cause fires and explosions!

NOTICE

- Only use suitable service fluids for refilling. Never use the service fluids not recommended. Failure to observe this warning can result in serious faults and engine damages!
- Optional equipment and other accessories in front of the air inlet reduce the cooling effect of the coolant. The engine may overheat at high ambient temperatures and high engine loads!

 Service fluids leaks are harmful to the environment. Regularly check the ground underneath your vehicle. If there are spots of oil or other fluids on the ground, the vehicle must be inspected by a Volkswagen Dealership.



Washer fluid



Fig. 187 On the engine compartment: windscreen washer fluid reservoir cap.

The windscreen washer fluid level should be checked regularly and topped up as necessary.

- Open the bonnet  → page 200.
- The windscreen washer fluid reservoir is identified by the  symbol on its cap → Fig. 187.
- Check whether there is enough windscreen washer fluid in the reservoir.
- To top up, mix clean water with a washer fluid recommended by Volkswagen → . Observe the dilution instructions on the packaging.
- At low temperatures, add a special antifreeze agent so that the fluid cannot freeze → .

Check the window washer reservoir capacity in → page 266

WARNING

Never mix antifreeze or other unsuitable additives into the windscreen washer fluid. An oily film may otherwise be left on the screen, compromising visibility.

- Use clean water with a washer fluid recommended by Volkswagen.
- Suitable antifreeze agents may be added to the windscreen washer fluid, if necessary.



NOTICE

- Never mix other cleaning agents with the cleaning agents recommended by Volkswagen. This may cause the components to coagulate and, as a result, clog the windscreen wiper nozzles.
- Never mix up service fluids when refilling! Failure to observe this warning can result in serious faults and engine damages!

Engine oil

Introduction

WARNING

Incorrect handling of engine oil can cause severe burns and injuries.

- Always wear eye protection when handling engine oil.
- Engine oil is toxic and must be stored out of the reach of children.
- Engine oil must be kept in the closed original container. This also applies to used oil before proper disposal.
- Never use empty food containers, bottles or other containers to store engine oil, since other people may then drink the engine oil.
- Regular contact with engine oil can damage the skin. Skin that has been in contact with engine oil should be washed thoroughly with water and soap.
- Engine oil becomes extremely hot when the engine is running and may scald skin severely. Always allow the engine to cool down.

 Leaking or spilt engine oil can pollute the environment. In order to prevent such event, replace the engine oil preferably at a Volkswagen Dealership, which is equipped with special tools and qualification to properly dispose of used engine oil.

- If engine oil or other fluid stains are found on the floor, underneath the vehicle, Volkswagen recommends inspecting the vehicle, preferably at a Volkswagen Dealership.

Engine oil specification

 Please refer to  at the start of the chapter on page 205.

VW 508 88 is the standard engine oil in your Volkswagen. This standard must be described on the oil packaging. Engine oils approved by Volkswagen are available at Volkswagen Dealerships.

When refuelling, engine oils approved by Volkswagen according to the **VW 508 88** standard can be mixed with each other.

If, in an emergency, no approved **VW 508 88** standard engine oil is available, you may temporarily use an engine oil that meets the following requirements: ACEA A3/B4 specification with the following viscosity grades: **SAE 0W 30, SAE 0W 40, SAE 5W 30, SAE 5W 40, SAE 10W 30 or SAE 10W 40**. However, we recommend seeking a Volkswagen Dealership as soon as possible for the oil change with factory approved engine oil.

Engine oil specifications are available in the product package.

Engine oils are constantly being developed and improved. Volkswagen Dealerships are always updated about innovations. That is why Volkswagen recommends having engine oil changes performed at a Volkswagen Dealership.

NOTICE

- Use only expressly Volkswagen approved engine oil specifications. Using other engine oils may cause damages to the engine!
- Do not mix additional lubricating additives to the engine oil. Damages caused by such additives are not covered by the warranty.
- Damages to the engine caused by using oil that does not meet the **VW 508 88** standard are excluded from the warranty.

Checking the engine oil level and refilling engine oil

Please refer to  at the start of the chapter on page 205.

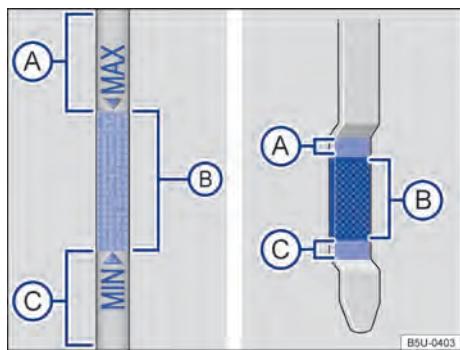


Fig. 188 Oil dipstick with markings.

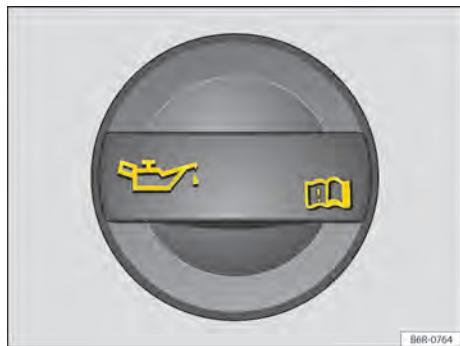


Fig. 189 On the engine compartment: engine oil opening lid.

Checklist

Carry out the steps in the specified order → :

1. With the engine at **operating temperature**, park the vehicle on a level surface to ensure that the engine oil reading is correct.
2. Switch off the engine and wait a few minutes for the engine oil to flow back into the sump.
3. Open the bonnet  → page 200.
4. Identify the engine oil filler cap and oil dipstick. The engine oil filler opening bears the  symbol on the cap → Fig. 189 and the oil dipstick has a coloured handle. If you cannot

find the cap and dipstick please contact a Volkswagen Dealership or qualified workshop.

5. Pull the dipstick out of the guide tube and wipe it off with a clean cloth → ①.
6. Insert the oil dipstick into the guide tube again as far as it will go. If the oil dipstick has a marking, it must be adjusted to the corresponding groove on the upper edge of the guide tube upon insertion.
7. Pull the dipstick out again and read the engine oil level on the dipstick → Fig. 188 as follows:
 - ①: **do not** refill oil → ①. Proceed to step 15.
 - ②: proper oil level. Refill with oil (approximately 0.5 l). Proceed to step 8 or 15.
 - ③: recommended oil **must** be refilled until level reaches region ②. Proceed to step 8.
8. After reading the oil level, push the oil dipstick back into the guide tube as far as it will go.
9. Unscrew the engine oil filler opening cap → Fig. 189.
10. Only refill with engine oils approved by Volkswagen gradually, in small quantities (up to 0.5 l).
11. To avoid overfilling, wait for approximately one minute after each pour to allow the engine oil to flow into the oil sump up to the marking on the engine oil dipstick.
12. Read the engine oil level from the dipstick again before refilling with a further small quantity of engine oil. Never overfill engine oil → ①.
13. After the refilling procedure, the engine oil level must be at least in the centre of area → Fig. 188 ②, but never above area ① → ①.
14. After refilling, screw the engine oil filler cap back on correctly.
15. Correctly insert the oil dipstick into the guide tube again as far as it will go.
16. Close the bonnet correctly  → page 200.

Check the engine oil level in → page 266.

WARNING

Engine oil can ignite if it comes into contact with hot engine components. This may cause fires, serious burns and injuries.

- If engine oil is spilt on cold engine parts it can heat up and ignite when the engine is running.
- Always ensure that the engine oil filler cap is securely tightened after refilling, and that the dipstick is properly inserted back into the guide tube. This will prevent the engine oil from draining out on to hot engine components when the engine is running.

NOTICE

- Do not start the engine when the engine oil level is above the range → [Fig. 188 A](#). Seek professional assistance immediately. The catalytic converter and the engine could otherwise be damaged!
- When refilling or changing operating fluids please ensure that the fluids are in the correct container. Incorrect operating fluids can cause serious functional problems and engine damages.

NOTICE

Use only cloths that don't shred to clean the oil dipstick, since such shredding could damage the engine.

 The engine oil level must never exceed the → [Fig. 188 A](#) region, otherwise, the oil may be aspirated by the crankcase ventilation and discharged into the atmosphere by the exhaust system. Additionally, oil may be combusted inside the catalytic converter, damaging it.

 Leaking or spilt engine oil can pollute the environment. In order to prevent such event, Volkswagen recommends replacing the engine oil preferably at a Volkswagen Dealership, which is equipped with special tools and qualification to properly dispose of used engine oil.

Engine oil consumption

 Please refer to  at the start of the chapter on page 205.

Engine oil consumption may vary from engine to engine. Due to the design of internal combustion engines, in order to adequately lubricate components, part of the engine oil is consumed during normal engine operation. Therefore, engine oil consumption may vary throughout the engine's

service life. In addition, depending on driving behaviors and vehicle use conditions, oil consumption may reach up to 0.5 l in 1,000 km. Engine oil level must therefore be checked at regular intervals – preferably when refuelling and before long journeys.

When the engine is working hard, the oil level must be kept within the → [Fig. 188 A](#) area – for instance during long motorway cruising in summer or climbing mountain passes.

Changing the engine oil

 Please refer to  at the start of the chapter on page 205.

The engine oil must be regularly renewed. Observe which service interval applies to the vehicle → page 238. Ensure that such frequency is followed, especially when the vehicle is used in extreme conditions, which requires greater frequency of such services.

The engine oil and filter must be changed by qualified workshops due to the fact that such procedure requires special tools and expertise. This also ensures proper disposal of used oil. Volkswagen recommends using a Volkswagen Dealership for this purpose.

More information on service intervals can be found at → page 238.

WARNING

If, in exceptional cases, you have to carry out an oil change yourself, please note the following:

- Always wear eye protection.
- Always allow the engine to cool down completely to avoid burns.
- Keep your arms horizontal when removing the oil drain plug with your fingers to help prevent oil from running down your arm.
- Use a suitable container when draining the used oil. It must be at least large enough to hold the entire quantity of engine oil required for refilling.
- Never store engine oil in empty food containers, bottles or any other non-original containers as people finding these containers may not know that they contain engine oil.

- Engine oil is toxic and must be stored out of the reach of children.

NOTICE

Do not mix additional lubricating additives to the engine oil. Damages caused by such additives are not covered by the warranty.

 Volkswagen recommends replacing the oil and filter preferably at an authorised Volkswagen repairer, which is equipped with special tools and qualification to properly dispose of used engine oil.

- Never dispose of old oil in locations such as gardens, woods, sewerage systems, on streets and roads, or in rivers and waterways.
- In order to completely drain used oil, use an appropriate and sufficient recipient to collect all of the engine oil; refer to → page 266.

Troubleshooting

 Please refer to  at the start of the chapter on page 205.

Warning lamps and text messages may light up and be displayed on the instrument cluster display. In addition, acoustic signals may be sounded.

Engine oil

Central warning lamp

and  **On:** engine oil pressure too low. 

Stop driving! Switch off the engine. Check the engine oil and refill if necessary → page 206. If the warning light remains lit and the oil level is suitable, *do not* drive on or keep the engine running. The engine could otherwise be damaged. Seek out assistance from an authorised Volkswagen repairer immediately.

WARNING

Failure to observe the warning lamps and text messages could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore warning lamps or text messages.

- Stop the vehicle as soon as possible and when safe to do so.

 The oil pressure warning lamp  is not indicative of the engine oil level. The engine oil level must be controlled in regular intervals, preferably whenever the tank is filled.

Engine coolant

Introduction

Never carry out any work on the engine coolant system if you are not familiar with the requisite procedures, or if you do not have access to the correct tools, operating equipment and fluids → ! In this case, all activities must be carried out by a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Serious injuries can be caused if work is carried out incorrectly.

WARNING

Engine coolant is toxic!

- Engine coolant must only be kept in sealed original containers in a safe place.
- Never store engine coolant in empty food containers, bottles or any other non-original containers as people finding these containers may then drink the engine coolant.
- The engine coolant must be stored out of the reach of children.
- Please note that the amount of correct coolant additive used must be sufficient for the lowest ambient temperature that you expect the vehicle to be exposed to.
- Coolant can freeze at extremely cold outside temperatures, causing the vehicle to break down. In this case, the internal vehicle heating will also no longer function, which may lower the body temperature of vehicle occupants with inadequate winter clothing.
- Prolonged exposure to cold and loss of body heat are hazardous factors to human health.

 Under no circumstance may old engine coolant be reused. Observe specific disposal regulations for this product.

 Volkswagen recommends changing or refilling the engine coolant and its additives at a Volkswagen Dealership, which has proper fluid disposal procedures. Never dispose of used fluids in locations such as gardens, woods, sewerage systems, on streets and roads, or in rivers and waterways.

Engine coolant specifications

 Please refer to  at the start of the chapter on page 208.

The engine cooling system is factory supplied with a mixture of **distilled water** and 40% G 12evo (TL-VW 774 L) engine coolant additive.

This mixture provides the necessary antifreeze of up to -25° C (-13° F) and protects the alloy parts of the cooling system against corrosion. The mixture also prevents scaling and raises the boiling point of the coolant.

In order to protect the coolant system, the proportion of coolant additive must *always* be at least 40%, even if antifreeze is not required in warm weather and warm climates.

If greater antifreeze is required in very cold climates, the proportion of antifreeze additive can be increased. However, the percentage of coolant additive must not exceed 60%, as this would reduce the antifreeze and the cooling effect.

When topping up the coolant, a mixture of **distilled water** and at least 40% coolant additive must be used in order to obtain the optimum corrosion protection → .

Mixing G 12evo with the engine coolants G 13 (TL-VW 774 J), G 12 plus-plus (TL-VW 774 G), G 12 plus (TL-VW 774 F) or G 12 (red colour) significantly compromises ant-corrosion properties and must be avoided.

Refer to Volkswagen Dealerships for more information on coolants approved by Volkswagen. That is why Volkswagen recommends having engine oil changes done by a Volkswagen dealership.

WARNING

Insufficient antifreeze in the coolant system can cause the engine to break down.

- Ensure that the correct engine coolant additive ratio is used based on the ambient temperature to which the vehicle is exposed.

NOTICE

 Never mix genuine coolant additives with other coolants that have not been approved by Volkswagen. Mixing with non-approved coolants could cause serious damage to the engine and cooling system.

- Brown liquid in the coolant expansion tank indicates that the engine coolant has been contaminated. The coolant must be changed as soon as possible if this is the case. Failure to observe this warning can result in serious faults and engine damages!

 Under no circumstance may old engine coolant be reused. Observe specific disposal regulations for this product.

 Volkswagen recommends changing or refilling the engine coolant and its additives at a Volkswagen Dealership, which has proper fluid disposal procedures. Never dispose of used fluids in locations such as gardens, woods, sewerage systems, on streets and roads, or in rivers and waterways.

Checking coolant level and refilling coolant

 Please refer to  at the start of the chapter on page 208.

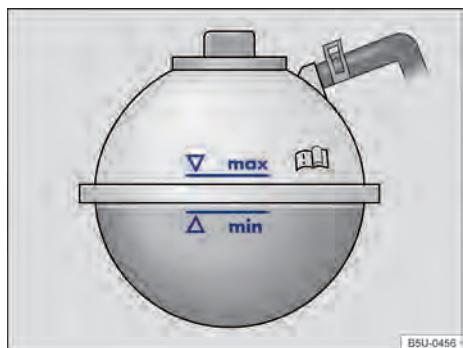


Fig. 190 On the engine compartment: marking on the coolant expansion tank.

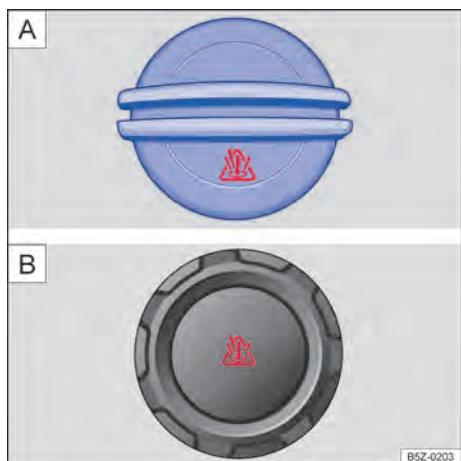


Fig. 191 On the engine compartment: **A** cap of the engine coolant expansion reservoir (variant 1) or **B** cap of the engine coolant expansion reservoir (variant 2)

The warning lamp for the engine coolant will light up if the engine coolant level is too low.

Preparations

- Park the vehicle in a flat and steady surface.
- Allow the engine to cool down .

- Open the bonnet  → page 200.
- The coolant expansion tank has the  symbol on its cap → Fig. 191.

Checking the engine coolant level

- Check the coolant level at the side marking of the expansion tank when the engine is cold → Fig. 190.
- Refill the engine coolant if the liquid level is below the minimum marking ("min"). When the engine is warm, the coolant level may be slightly above the top end of the marked area.

Refilling engine coolant

- Always protect your hands and arms from hot coolant or steam by placing a suitable cloth on the cap of the coolant expansion tank.
- Carefully unscrew the cap  anticlockwise.
- Refill only **new** coolant according to Volkswagen specifications (→ page 209) → ①.
- The coolant level must be between the marks on the expansion tank → Fig. 190. **Do not fill up over the top line of the marked area "max" → ①!**
- Firmly screw-in the cap clockwise.
- If in an emergency you do not have access to the coolant of the required specification, do not use any other coolant additive! Instead, top off with **distilled** → ① only. Then add the correct proportion of coolant additive → page 209 must be re-established as soon as possible.

WARNING

Hot steam or engine coolant can cause severe burns.

- Never open the bonnet if steam or engine coolant can be seen or heard coming out of the engine compartment. Always wait until no escaping steam or coolant can be seen or heard.
- Always let the engine cool down completely before carefully opening the bonnet. Hot parts may cause burns when touched.
- Before opening the engine compartment cover once it has cooled down:
 - Apply the handbrake and move the selector lever to position N or move the manual gear lever to the neutral position.
 - Remove the vehicle key from the ignition lock.

- Always keep children away from the engine compartment and never leave the vehicle unattended.
- The engine cooling system is under pressure when the engine is hot. Never open the cap of the coolant expansion tank when the engine is hot. Coolant may spray out and cause severe burns and injuries.
 - Turn the cap slowly and very carefully anticlockwise while exerting some downwards pressure on the cap.
 - Always protect the face, hands and arms from hot coolant or steam with a large, thick cloth.
- When refilling, do not spill any service fluids on engine components or on the exhaust system. Spilt service fluids may start fires. In certain circumstances, the ethylene glycol in the engine can catch fire.

NOTICE

- Do not fill coolant above the top of the marked area "max" → Fig. 190. Otherwise the excess coolant will be pressed out of the cooling system when the engine is hot and could cause damage.
- If a large amount of coolant has been lost, do not refill the coolant until the engine has *completely cooled*. Substantial coolant loss is an indication of leaks in the engine cooling system. The engine cooling system must be checked by a Volkswagen Dealership or qualified workshop. Failure to do so can result in engine damage!
- When refilling operating fluids, please ensure that the correct container is filled. The use of incorrect operating fluids could result in serious malfunctions and engine damage!

Brake fluid



Fig. 192 On the engine compartment: brake fluid reservoir cap.

Brake fluid will gradually absorb water from the surrounding air. The brake system will be damaged if there is too much water in the brake fluid. The boiling point of the brake fluid is also considerably reduced by the water content. Heavy use of the brakes may cause a vapour lock in the brake system if the water content is too high. Vapour locks reduce levels of braking power, considerably increase braking distance and can even cause the brake system to fail completely. Your own safety and that of other road users depends on having a brake system that functions properly at all times → .

Brake fluid specification

Volkswagen has developed a brake fluid optimised for the brake system in the vehicle. To ensure optimal operation of the brake system, Volkswagen recommends the use of **DOT 4** standard brake fluid → Fig. 192. Additionally, we recommend using original Volkswagen brake fluid.

Before using a particular brake fluid, check that the specifications printed on the container correspond to the vehicle requirements.

Suitable brake fluids may be acquired at a Volkswagen Dealership.

Brake fluid level

The brake fluid level must always be between the MIN and MAX marking on the brake fluid container or above the MIN marking → .

The brake fluid level cannot be checked accurately in all models, since engine components conceal the brake fluid container. If the brake fluid level cannot be read exactly, please seek expert technical assistance.

The brake fluid level drops slightly when the vehicle is being used as the brake pads wear and the brakes are automatically adjusted.

Changing brake fluid

The brake fluid must be changed by a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose. Only brake fluid that conforms with the required specification should be refilled.

WARNING

Brake failure or reduced braking effect can be caused by the brake fluid level being too low or by brake fluid that is too old or unsuitable.

- The brake system and brake fluid level must be checked regularly.
- Renew the brake fluid regularly.
- Heavy use of the brakes may cause a vapour lock if the brake fluid is left in the system for too long. Vapour locks reduce levels of braking power, considerably increase braking distance and can even cause the brake system to fail completely.
- Please ensure that the correct brake fluid is used. Only use brake fluid compliant with the DOT 4 standard. Any other brake fluid or a low-quality one can affect the functioning of the brakes and reduce their effectiveness. Do not use the brake fluid if the DOT 4 standard is not indicated in the fluid package.
- The refilled brake fluid must be new.

WARNING

Brake fluid is toxic.

- In order to reduce the risk of poisoning, never use bottles or other containers to store brake fluid. These containers could encourage other people to drink out of them, even if they are labelled otherwise.
- Brake fluid must always be stored in its original sealed container and kept out of the reach of children.

NOTICE

Spilt or leaked brake fluid may damage the vehicle paintwork, plastic parts, and tyres. Immediately clean spilt or leaked brake fluid over the vehicle's paintwork or other vehicle parts.

- Never mix different types of brake fluids.
- Clean the cover before removing it and placing it back in the reservoir.

 Brake fluid can pollute the environment. Collect and dispose of used fluids properly.

 Replacing brake fluids requires special procedures, equipment and knowledge, in addition to specific environmental standards.

Therefore, disposing the brake fluid and its respective package as common trash is prohibited. Applicable laws establish specific disposal procedures for these cases. For your safety and convenience, Volkswagen recommends replacing the brake fluid at Volkswagen Dealerships.



Warm starting system (E-FLEX)

Information on the warm starting system

The warm starting system will switch on automatically whenever the coolant temperature is too low and the fuel tank has a high percentage of ethanol.

The indicator lamp  will be lit in the instrument cluster upon switching on the ignition. Wait until the indicator lamp on the instrument cluster is switched off before starting the engine.

If the engine starting attempt occurs before the indicator lamp  is switched off on the instrument cluster, the lamp will flash, indicating the need to interrupt the starting process → page 86.

In case of warm starting system temperatures below 0° C, under severe engine operating conditions (e.g. weak vehicle battery, low fuel quality, unperformed engine service, exhaust system emissions indicator lamp (OBD) lit → page 180, etc), more than one starting attempt may be required.



In order to prevent starting issues with cold engine, after refilling the vehicle's fuel (replacing the current fuel in the vehicle), the vehicle must run approximately 5 kilometres in order to recognize the new fuel or mixture → page 176.

In case of failure in any warm starting system component, the indicator lamp  will light up and remain lit after the engine is started. In this case, there may be difficulties in starting the cold engine, and we recommend submitting the system to due inspection by a Volkswagen Dealership or qualified workshop.

NOTICE

- If the TOTALFLEX vehicle is immobilized by "lack of fuel", the vehicle must be refilled with the last type of fuel used - petrol or ethanol.
- If it is necessary to fill the tank with a different type of fuel, the following may occur:
 - Cold starting difficulties.
 - Considerable decrease in engine performance.
- The vehicle must run for approximately 5 kilometres to recognize the new fuel type, in order to prevent any of the scenarios above.



When filling, fuel may be spilt on the ground, polluting the environment. Always fill the at authorized filling stations with proper fluid collection and disposal systems.

Vehicle battery installation location

The vehicle battery is located in the engine compartment.

Definition of warnings on the vehicle battery



Always wear eye protection!



Electrolyte is very corrosive and caustic.
Always wear protective gloves and eye protection!



Fires, sparks, smoke, and naked lights are prohibited!



A highly explosive mixture of gases is given off when the vehicle battery is charging!



Always keep children away from acid and the vehicle battery!

WARNING

Works on the vehicle battery and the electrical system can cause severe chemical burns, fire and electric shocks. Always read the following warnings and safety information before carrying out any kind of work:

- Switch off the ignition and all electrical consumers before carrying out any work on the vehicle battery and also disconnect the negative cable from the vehicle battery.
- Children should always be kept away from electrolyte and the vehicle battery.
- Always wear eye protection.
- Electrolyte is very aggressive. It can burn the skin and can cause blindness. When working with the battery, ensure that your hands, arms and face in particular are protected from acid spillages.
- Never open a vehicle battery.
- Do not smoke and never work near naked flames or sparks.
- When handling cables and electrical equipment, avoid generating sparks and electrostatic charge.
- Never short circuit the battery poles.
- Never use a damaged vehicle battery. It can explode. A damaged vehicle battery must be replaced as soon as possible.
- A damaged or frozen vehicle battery must be replaced immediately. A discharged vehicle battery can even freeze at temperatures of around 0° C (+32° F).

Vehicle battery



Introduction

The vehicle battery is a component of the electrical system in the vehicle.

Never carry out any work on the electrical system if you are not familiar with the necessary procedures and the general safety requirements and only unsuitable tools are available → ! In this case, all activities must be carried out by a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose. Serious injuries can be caused if work is carried out incorrectly.

- Ensure there is no one inside the vehicle while replacing the battery. In case of electrical failure, airbags may be accidentally engaged and cause severe or even fatal injuries to vehicle occupants.

NOTICE

- Never disconnect the vehicle battery with the ignition switched on or the engine running, and never connect it to another battery; otherwise the electrical system and electronic components may be damaged.
- Do not allow direct sunlight onto the vehicle battery for extended periods, since the UV rays could damage the battery housing.
- If the vehicle is parked for extended periods, ensure the vehicle is not parked in open spaces in order to protect the vehicle battery from "freezing" and being damaged.

 Never install damaged or improperly sealed batteries. Dispose of batteries according to environment protection standards → page 215, *Charging, replacing, disconnecting and connecting the vehicle battery*.

 After starting the engine with a fully discharged or replaced battery, system settings (such as time, date, convenience settings and programs) may have been deprogrammed or deleted. Check and adjust settings after the vehicle battery is sufficiently charged.

Checking the electrolyte level of the vehicle battery

 Please refer to  and  at the start of the chapter on page 213.

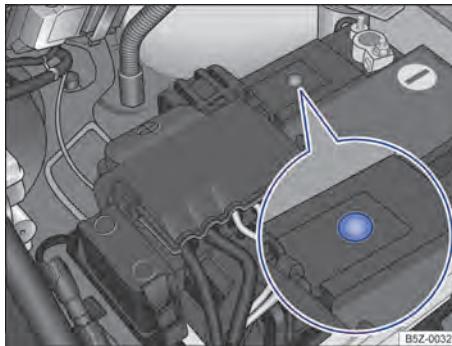


Fig. 193 On the engine compartment: example of display position on the upper side of the vehicle battery.

The electrolyte level of the vehicle battery should be checked regularly in high-mileage vehicles, in hot countries and in older vehicle batteries. The vehicle battery is otherwise maintenance-free.

Preparations

- Preparation for working in the engine compartment → page 200
- Open the bonnet  → page 202.

Checking the electrolyte level

- Ensure that sufficient light is available in order to see the colours clearly. Never use naked flames or glowing items as a light source.
- The round display → **Fig. 193** on the top side of the vehicle battery changes its colour according to the electrolyte level.
- Tap lightly on the display to eliminate air bubbles that may affect the colour.

Light yellow or without colour The electrolyte level of the battery is too low. The vehicle battery should be checked and replaced by a Volkswagen Dealership or qualified workshop.

Eventual different colours are destined to battery diagnosis at a Volkswagen Dealership or qualified workshop.

⚠ WARNING

Handling the vehicle battery may cause chemical burns, explosions or severe electrical shocks.

- Always wear protective gloves and eye protection.
- Electrolyte is very aggressive. It can burn the skin and can cause blindness. When working with the battery, ensure that your hands, arms and face in particular are protected from acid spillages.
- Never tip the vehicle battery. Electrolyte might leak from the vents and cause chemical burns.
- Never open a vehicle battery.
- In case of spilled electrolyte on the skin or eyes, wash the affected area immediately with cold water for a few minutes. Then seek medical assistance.
- In case of electrolyte ingestion, seek medical assistance immediately.

Charging the battery

The vehicle battery should be charged by a qualified workshop, as the technology used in factory-fitted batteries requires voltage-limited charging → **⚠**. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Replacing the battery

The battery has been developed to suit the conditions of its location and has special safety features. If a vehicle battery has to be replaced, discuss the electric compatibility, appropriate load capacity (A/h) for the vehicle, size and necessary servicing, output and safety requirements for the new vehicle battery with a Volkswagen Dealership before purchasing. Volkswagen recommends changing the vehicle battery in a Volkswagen Dealership.

Disconnecting the battery

Please note the following points if the vehicle battery has to be disconnected from the electrical system in the vehicle:

- Switch off the ignition and all electrical consumers.
- The vehicle must be unlocked before disconnecting the battery as the alarm will otherwise be triggered.
- First disconnect the negative cable and then the positive cable → **⚠**.

If the vehicle is stationary for a long period of time, disconnect the negative battery cable. Otherwise, the battery could be discharged by the current consumers in the vehicle, preventing the engine from starting.

Connecting the battery

- Switch off all electrical consumers and the ignition before reconnecting the vehicle battery.
- First connect the positive cable and then the negative cable → **⚠**.
- Switch on the ignition.
- Set the clock.
- Re-establish operation of the automatic window opening and closing system → page 56.

In case of issues during start-up in low gears, switch the ignition on for 30 seconds and then switch it off. Then, switch the engine on.

Various indicator lamps may light up after the vehicle battery has been connected and the ignition is switched on. Such lamps go out after a few

Charging, replacing, disconnecting and connecting the vehicle battery

 Please refer to **⚠** and **ⓘ** at the start of the chapter on page 213.

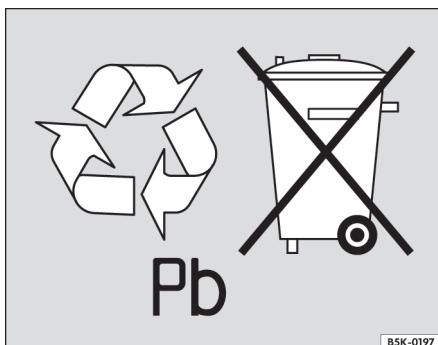


Fig. 194 Batteries contain toxic substances and must be recycled. Therefore, batteries may not be disposed in common trash; they must be returned to the reseller after replacement.

seconds. If the indicator lamps remain lit up, the vehicle should be checked by a Volkswagen Dealership or qualified workshop.

If the vehicle battery was disconnected for long periods, the system may not be able to calculate or correctly display the time when the next service is due → page 14. Observe the maximum permissible service intervals in the → page 238.

Automatic consumer deactivation

Through a smart electric management system, in case of high battery demand, different measures are adopted to prevent the battery from being discharged:

- Slow-gear rotation is increased in order for the alternator to provide more current.
- If necessary, some power consumers are limited or deactivated completely, in case of emergency.
- When starting the engine, the 12 V lighter power supply may be temporarily interrupted.

The electric management system does not always prevent the battery from being discharged. This may occur if the ignition remains switched on while the engine is turned off for extended periods, or if the indicator light remains on for extended periods, while the vehicle is parked.

What can cause the vehicle battery to discharge?

- Long periods at a standstill in which the engine is not running, especially if the ignition is switched on.
- Use of electrical consumers when the engine is switched off.

⚠ WARNING

Incorrect attachment of the battery and the use of incorrect vehicle batteries can cause short circuits, fire and serious injuries.

- Always use maintenance-free and leak proof batteries which have the same properties, specifications and dimensions as the factory-fitted vehicle battery.
- Ensure there is no one inside the vehicle while replacing the battery. In case of electrical failure, airbags may be accidentally engaged and cause severe or even fatal injuries to vehicle occupants.

⚠ WARNING

A highly explosive mixture of gases is given off when the vehicle battery is charging!

- Vehicle batteries should only be charged in well-ventilated spaces.
- Never charge a frozen or defrosted vehicle battery. A discharged vehicle battery can even freeze at temperatures of around 0° C (+32° F).
- A vehicle battery must be replaced if it has been frozen.
- Incorrectly connected cables can cause a short circuit. First connect the positive cable and then the negative cable.

⚠ NOTICE

- Only recode the radio if the battery is reconnected and the radio is switched on before the ignition. Please refer to a qualified Volkswagen Dealership to recode the radio system.
- Never disconnect or connect the vehicle battery with the ignition switched on or the engine running, and never connect it to another battery; otherwise the electrical system and electronic components may be damaged.
- Never connect any power generating equipment, such as solar panels or battery charging units to charge up the vehicle battery, to the 12-volt outlet socket. This can damage the vehicle electrical system.



Batteries may contain toxic substances such as sulphuric acid and lead. This product cannot be disposed / discarded along with common trash. There are specific legal requirements regarding the disposal / discarding of used batteries. For your safety and convenience, Volkswagen recommends replacing vehicle batteries at a Volkswagen Dealership or qualified workshop.



The acid solution and lead contained in the battery could contaminate the ground and waters if disposed of incorrectly. Consumption of lead-contaminated waters may cause high blood pressure, several gastrointestinal disorders and anaemia (weakness and drowsiness).

Troubleshooting

 Please refer to  and  at the start of the chapter on page 213.

Vehicle battery

Central warning lamp

The vehicle battery will not be charged by the alternator while the vehicle is in motion.

- Switch off unnecessary electrical consumers.
- Contact a Volkswagen Dealership.
- Have the electric system checked.

WARNING

Failure to observe the warning lamps and text messages could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore any warning lamps or text messages that appear.
- Stop the vehicle as soon as possible and when safe to do so.

NOTICE

Failure to observe the illuminated indicator lamps could lead to vehicle damages.

Wheels and tyres

Tyre monitoring system

Introduction

The tyre monitoring system warns the driver when tyre pressure is too low.

Depending on the vehicle version, the tyre monitoring system may not be available.

WARNING

The technology shipped with the tyre monitoring system cannot go beyond the limits imposed by physics and will only operate within the limitations of the system. Inadequate use of the wheels and tires may cause a sudden loss of tyre pressure, displacement of the tire treads and even their blowing up.

- Check tyre pressures regularly and always keep to the specified tyre pressure value → page 223, *Tyre pressure*. When the tyre pressure is very low, the tyre can become so hot that the tyre tread may come loose and the tyre blow up.
- Always maintain the correct tyre pressures calibrated with cold tyres according to the indicated on the sticker → page 223, *Tyre pressure*.
- The tyre pressures should be checked regularly on cold tyres. If necessary adjust the tyre pressure → page 223, *Tyre pressure*.
- Check the tyres regularly, looking for wear and tear signs.
- Never exceed the top speed and load capacity permitted for the fitted tyres.



A too low tyre pressure increases fuel consumption and tyre wear.



When driving for the first time with new tyres at high speed, they may expand somewhat and so a single tyre pressure warning may be issued.



Old tyres should only be replaced by tyres that have been approved by Volkswagen for the vehicle type.

 Do not rely only on the tyre monitoring system. Regularly check the tyres to ensure that their pressures are correct and to see whether there are signs of damage, such as holes, cuts, cracks or bubbles. Remove foreign bodies from the tread of the tyre before they penetrate the tyre interior.

Tyre Pressure Loss Indicator

 Please refer to  at the start of the chapter on page 217.

The tyre pressure loss indicator compares, assisted by the ABS sensors, the speed and, consequently the rolling circumference of each tyre, among other things. The tyre pressure loss indicator indicates on the instrument cluster a change in diameter of one or more wheels.

Changes to the diameter

The rolling circumference of the tyre can change:

- When the tyre pressure has been changed manually.
- When the tyre pressure is very low.
- When the tyre has structural damages.
- When the vehicle is loaded on only one side.
- When the wheels of one axle are heavily loaded, e.g. when carrying a very heavy load.
- Whether an emergency wheel is mounted.
- When one wheel has been changed.

The tyre pressure loss indicator  can be delayed or not display nothing under given conditions such as, for example, when the driving style is very sporty on unpaved roads,

Setting the tyre pressure loss indicator

After a tyre pressure change or after changing one or more wheels, the tyre pressure loss indicator must be reset again. This is also valid when rotating front versus rear wheels.

To reset the system the saved values must first be reset.

- Switch on the ignition.
- Access the submenu **Tyre pressures** on the display of the instrument cluster → page 14.

- When the 4 tyre pressures correspond to the prescribed values, touch the **Confirm** function pad to save the tyre pressures.
- The menu item **Return** cancels the saving of the current tyre pressures and the programming of the system.

 The system is programmed after resetting the saved values during the normal driving of the vehicle with the tyre pressures defined by the driver and with mounted tyres. After a long drive at different speeds, the set values are recorded and monitored.

With very high loads on the wheels, for example, in case of a heavy load, before the program, the pressure of the tires must be increased until reaching the recommended full load pressure → page 223

 The tyre pressure loss indicator does not work when the ESC or the ABS are damaged → page 101, *Brake support systems*.

 When driving with one emergency wheel, a malfunction warning may appear as the perimeter of the emergency wheel may be different from that of the other wheels.

Tyre pressure loss indicator troubleshooting

 Please refer to  at the start of the chapter on page 217.

on

The pressure of one or more tyres went down or the tyre suffered a structural damage.

-  **Stop driving!**

- Check all the tyre pressures and adjust → page 219.
- Replace the damaged tyres.
- Resetting the tyre pressure loss indicator again → page 218.
- Should the problem persist, seek specialized assistance.

flashes for about one minute and then remains permanently lit

System damaged.

-  **Stop driving!**

- Turn the ignition off and on again.

- Resetting the tyre pressure loss indicator again → page 218.
- Should the problem persist, seek specialized assistance.

WARNING

Different tyre pressures or very low tyre pressures may result in collapsing tyres, loss of control over the vehicle, accidents, severe injuries and loss of life.

- If the indicator lamp (✉) lights up, stop immediately and check all tyres → page 223.
- Different tyre pressures or very low tyre pressures may increase tyre wear, deteriorate stability and increase braking distance.
- Different tyre pressures or very low tyre pressures may result in a sudden collapse of the tyre, causing the tyre to blow up and the loss of control over the vehicle.
- The driver is responsible for the correct pressure in all the tyres of the vehicle. The recommended tyre pressure is always available on the sticker → page 223.
- The tyre monitoring system can only fulfil its mission when all tyres have the correct pressure when cold.
- Using incorrect tyre pressure values may cause accidents and damages to the tyres. All tyres must always have their tyre pressure adjusted to the carried load condition → page 223.
- Prior each trip, always calibrate the tyres to the correct tyre pressure → page 223.
- When travelling with very low tyre pressure, the tyres necessarily undergo more deformations. This way the tyres may get so hot that the tread may come loose, the tyres may blow up and loss of control over the vehicle may occur.
- High speeds and overload may heat a tyre in such a way that the tyre may blow-up and lead to loss of control over the vehicle.
- If the tyre pressure is too low or too high, the tyres will wear prematurely and the vehicle will not handle well.
- If the tyre is not "punctured" and is not necessary to change the wheel immediately, drive at low speed to the nearest Volkswagen dealership or specialized company, to check and correct the tyre pressures → page 219.

WARNING

Failure to observe the warning lamps and text messages could lead to your vehicle breaking down in traffic, and to accidents and serious injuries.

- Never ignore any warning lamps or text messages that appear.
- Stop the vehicle as soon as possible and when safe to do so.

NOTICE

Failure to observe the illuminated indicator lamps could lead to vehicle damages.

 With the ignition turned on, if a low tyre pressure is detected, the indicator lamp lights up (✉). In addition, an acoustic warning sounds and a text message may be exhibited.

 When a damage to the system is detected with the ignition turned on, the (✉) warning lamp blinks for a while and then stays permanently lit. In addition a text message may be exhibited.

 A long drive over unpaved roads or a sportive driving style may temporarily disable the tyre pressure loss indicator. The indicator lamp displays the malfunction, but goes off, however, when the road conditions or driving style change.

Important information on wheels and tyres

Introduction

Volkswagen recommends that work on tyres and wheels is carried out by a qualified workshop. They are familiar with the procedure and have the necessary special tools and spare parts as well as the facilities for proper disposal of old tyres. Volkswagen recommends using a Volkswagen Dealership for this purpose.

WARNING

Worn or damaged tyres cannot provide full levels of vehicle control and braking power.

- Incorrect handling of wheels and tyres can reduce vehicle safety and cause accidents and severe injuries.
- All 4 wheels must be fitted with radial tyres of the same type, size (rolling circumference) and the same tread pattern.
- New tyres will have to be run in, as they will initially have reduced grip and braking effect. Drive particularly carefully for the first 600 km in order to prevent accidents and severe injuries.
- At high and continuous speed, tyres with low pressure are excessively heated, which could cause the treads from detaching or even exploding. Always maintain the recommended tyre pressure.
- Never drive with worn tyres or tyres that are damaged (cuts, cracks or blisters). Driving with tyres in this condition can result in blown tyres, accidents and severe injuries. Worn or damaged tyres must be replaced immediately.
- Never exceed the top speed and load permitted for the fitted tyres.
- The effectiveness of the driver assist systems and brake assist systems depends on the tyre grip.
- If you notice unusual vibrations or if the vehicle pulls to one side when driving, stop the car immediately and check the wheels and tyres for damage.
- Do not use wheels or tyres if you do not know their previous history. Used wheels and tyres could be damaged, even if the damage is not visible.
- Old tyres – even if never used – may lose pressure or burst, especially at high speeds, and thus cause accidents and severe injuries. Avoid using tyres that are more than six years old. If you have no alternative, drive slowly and with extra care at all times.

 For technical reasons, it is not generally possible to use the wheels from other vehicles. This can also apply to wheels of the same vehicle type. Consult a Volkswagen Dealership, if necessary.

Handling wheels and tyres

 Please refer to  at the start of the chapter on page 219.

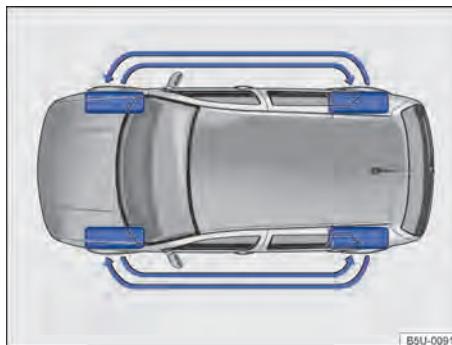


Fig. 195 Diagram showing how to swap wheels.

Tyres are the most used and most underestimated parts of a vehicle. Tyres are very important as the tyre surfaces are the only contact between the vehicle and the road.

The service life of tyres is dependent on tyre pressure, driving style, handling, and fitting.

Tyres and wheel rims are an essential part of the vehicle's design. Tyres and wheels approved by Volkswagen are specifically matched to the characteristics of the vehicle and make a major contribution to good road holding and safe handling.

Avoiding damages to the tyres

- If you have to drive over a kerb or similar obstacle, drive slowly and at a right angle if possible.
- Inspect the tyres regularly for damage such as cuts, cracks or blisters.
- Remove foreign objects that are in the outer tyre tread and **have not penetrated the inner tyre** → page 225.
- If the case, observe the warning messages of the tyres control system → page 217.
- Worn or damaged tyres must be replaced immediately → page 225.
- Regularly check the tyres for hidden damage → page 225.
- Never exceed the top speed and load permitted for the fitted tyres → page 228.

- Protect the wheels, including the spare wheel, from contact with corrosive substances, including oils, lubricants, fuel and brake fluid → .
- Replace missing valve caps immediately.

Rotating wheels

A regular rotation of the wheels as shown in the illustration → [Fig. 195](#) is recommended to ensure a uniform level of wear for the tyres. All the tyres will then last for about the same time.

Volkswagen recommends to check the need to rotate the tyres at every servicing of the vehicle, and when there is such need, that alignment and balancing be performed.

Volkswagen recommends having the wheels rotated by a Volkswagen Dealership or qualified workshop.

Storing tyres

Mark tyres before you remove them to ensure you will be able to mount them correctly when replacing (left, right, front, rear). When removed, the wheels or tyres should be stored in a cool, dry and preferably dark place. **Do not** vertically store tyres mounted on the wheels.

Tyres without wheels should be protected against dirt and stored in proper covers standing on the tread.

New tyres

- Drive particularly carefully for the first 600 km with new tyres, as the tyres have to be *run in*. Tyres that have not been run in have reduced grip →  and braking effect → .
- All 4 wheels must be fitted with radial tyres of the same type, size (rolling circumference) and the same tread pattern.
- The tread depth of new tyres may differ from manufacturing and profile modelling characteristics according to the type and make of tyre and the tread pattern.

Replacing tyres

- Tyres should be replaced at least in pairs and not individually (e.g. both front tyres or both rear tyres together) → .
- Old tyres should only be replaced by new tyres that have been approved by Volkswagen for the vehicle type. Ensure that the tyres used are correct in respect of size, diameter, load-carrying capacity and maximum speed.
- Never use tyres with an effective size that is larger than Volkswagen-approved tyres. Larger tyres could rub against the body or other parts of the vehicle.

In addition on vehicles with a Tyre Pressure loss indicator

On vehicles with tyre pressure loss control, after each mounting of a wheel, the system must be reset, regardless whether the wheel is the same that was originally mounted there till now or of a new wheel → [page 217](#).

For more information regarding the Tyre pressure control, how it works and what needs to be known → [page 217](#).

WARNING

Corrosive liquids and other substances can cause visible and invisible damage to the tyres, which can cause the tyre to burst.

- Always keep chemicals, oils, lubricants, fuel, brake fluid and other corrosive substances away from the tyres.

WARNING

New tyres will have to be run in, as they will initially have reduced grip and braking effect.

- Drive particularly carefully for the first 600 km in order to prevent accidents and severe injuries.

WARNING

Wheels must have the proper necessary freedom of operation. If the wheels do not have the necessary freedom of operation, the tyre could rub on parts of the running gear, the vehicle body and the brake system. This can lead to a fault in the brake system and to tread separation and thus to a tyre bursting.

- The actual tyre size must not exceed the tyre dimensions of manufacturers approved by Volkswagen and must not rub on any vehicle body parts.

 Old tyres must be disposed of with specific technical knowledge and equipment, based on specific standards. Therefore, we recommend visiting a Volkswagen Dealership or qualified workshop for such purpose.

 Tyre disposal requires equipment and knowledge of applicable environment protection standards. Tyres cannot be disposed / discarded along with common trash. Applicable laws establish specific disposal procedures for these cases. For your safety and convenience, Volkswagen recommends replacing tyres at a Volkswagen Dealership.

 Despite identical size details, the actual size of the various tyre makes may vary from these specified dimensions, or the tyre contours may vary considerably.

 Volkswagen-approved tyres are guaranteed to have the dimensions that are suitable for the vehicle. The salesperson will have to provide a certificate from the tyre manufacturer for other tyre makes to prove that the tyre is also suitable for the vehicle. This certificate must be stored in a safe place within the vehicle.

Wheel bolts

Wheel bolts must always be tightened with the correct tightening torque → page 232.

Wheels with bolted-on trims

Wheels may have removable trims which are attached to the wheel with self-locking bolts. Damaged trims may only be repaired by a qualified workshop. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Wheel identification

Due to legal requirements in some countries, the information on new wheels may contain some specific wheel features. The following wheel data may be available, depending on the country:

- Seal of conformity
- Rim size
- Manufacturer or brand name
- Manufacture date
- Country of origin
- Manufacturing number
- Raw material
- Part code

WARNING

The use of improper or damaged wheels can impair vehicle safety and cause accidents and severe injuries.

- Only use wheels which have been approved for the vehicle.
- Check the wheels regularly for damage and replace as necessary.

Wheels

 Please refer to  at the start of the chapter on page 219.

The design of the wheel bolts is matched to the wheels. If different wheels are fitted, the correct wheel bolts with the right length and properly shaped bolt heads must be used. This ensures that the wheels are fitted securely and that the brake system works properly → page 232.

For technical reasons, it is not generally possible to use the wheels from other vehicles. This can also apply to wheels of the same vehicle type.

Tyres and wheels approved by Volkswagen are specifically matched to the characteristics of the vehicle and make a major contribution to good road holding and safe handling.

Tyre pressure

Please refer to **⚠** at the start of the chapter on page 219.



Fig. 196 Sticker with the tyre pressures.



Fig. 197 On the inner side of the fuel tank flap: tyre pressure label.

Indications on the tyre pressure sticker → Fig. 196:

- (A) Tyre pressures for the front axle tyres.
- (B) Tyre pressures for the rear axle tyres.
- (1) Guideline: regularly check the pressure on the cold tyres.
- (2) Tyre pressure under partial load.
- (3) *Depending on the vehicle's version:* Comfort tyre pressure under partial load.
- (4) Tyre pressure under full load.
- (5) Emergency wheel tyre pressure.

The sticker only indicates the correct tyre pressures for approved tyres and is located on the inside of the fuel tank flap → Fig. 197.

According to the version of the vehicle the appearance of the sticker may vary. Additional tyre sizes may be contained → page 228.

If the tyre pressure is too low or too high, the tyres will wear prematurely and the vehicle will not handle well → **⚠**. Proper tyre pressure is particularly important at **high speeds**. Incorrect tyre pressure causes premature wear and can cause tyres to burst.

The pressure should therefore be checked at least twice a month and before starting a journey.

The given tyre pressure applies to **cold tyres**. Tyre pressure is always higher in warm tyres than it is in cold tyres.

For this reason, never reduce the pressure in warm tyres to adjust the tyre pressure. This would result in low tyre pressures that could cause the tyre to burst suddenly.

Checking tyre pressure

The tyre pressure should only be checked if the tyres have not been driven for more than just a few kilometres at low speed in the last 3 three hours.

- The tyre pressures should be checked regularly and only when the tyres are cold. Always check all the tyres, including the spare wheel. The tyre pressure should be checked at more regular intervals in colder regions, but only if the vehicle has not been moved beforehand. The tyre pressure tester must function correctly.
- The tyre pressures must be altered to suit the vehicle load.
- After correctly adjusting the tyre pressures, don't forget to put back the valve covers and if necessary, follow the information and guidelines for the configuration of the tyre pressure loss control system → page 217.

The **spare wheel** is filled to the highest tyre pressure permissible for the vehicle.

⚠ WARNING

A tyre pressure that is too high or too low may cause the tyre to suddenly lose pressure or burst while the vehicle is in motion. This could lead to severe accidents and fatal injuries.

- Low tyre pressure may cause the tyres to heat to such an extent that the tread peels off and the tyre bursts.

- Fast speeds or overloading of the vehicle can cause overheating, sudden tyre damage including tyre bursts and ripping of the tread surface and thus to a loss of control of the vehicle.
- If the tyre pressure is too low or too high, the tyres will wear prematurely and the vehicle will not handle well.
- Check tyre pressures regularly, at least twice a month, and before every long journey.
- All tyres must have the correct tyre pressure to suit the vehicle load.
- Never reduce excess pressure when the tyres are warm.

NOTICE

- When attaching the tyre pressure gauge, make sure that it does not touch the valve shaft. Otherwise, this could damage the tyre valve.
- Missing valve caps, or valve caps which are not suitable or not screwed on properly, may damage the tyre valve. Always use valve caps that comply with the factory-fitted valve cap specifications. Always screw on valve caps fully.

 Under-inflated tyres will increase fuel consumption.

 If the tyre pressure loss indicator issues a warning of low pressure on at least one of the tyres, check the tyre pressure of the tyres with a tyre pressure gage in good working order. A too low tyre pressure cannot be verified only by the visual aspect of the tyre. This also valid for low profile tyres.

 When checking the tyre pressures, be aware of the particularities of the tyre monitoring system → page 217.

Tread depth and wear indicators

 Please refer to  at the start of the chapter on page 219.

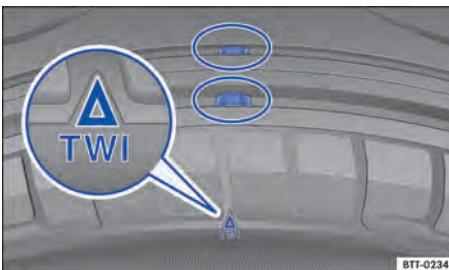


Fig. 198 Tyre profile: wear indicators.

Tread depth

Difficult driving situations demand the deepest possible tread depth for the tyres and the same tread depth for the tyres on the front and rear axles → .

In most countries, the minimum tread depth required by law is 1.6 mm (measured in the tread grooves next to the tread wear indicators). Observe any country-specific legal requirements.

Winter tyres lose a large degree of their effectiveness when the tread is worn down to a depth of 4 mm.

The tread depth of new tyres can vary according to type and manufacturer due to construction and tread design.

Tyre wear indicators

The original tyres on your vehicle have 1.6 mm high tread wear indicators running across the tread → Fig. 198. These wear indicators are positioned at set intervals around the tyre. Markings on the tyre sidewall (for instance the letters "TWI" or other symbols indicate the positions of the tread wear indicators.

Tread wear indicators show if a tyre is worn down. The tyre must be replaced at the latest when the tread depth is just before the tread wear indicator.

WARNING

Worn tyres threaten the safety of vehicle occupants and may cause loss of vehicle control and severe injuries.

- Tyres must be replaced at the latest when the tread is worn down to the tread wear indicators.
- Worn tyres have considerably less tread, particularly on wet roads, which can cause the vehicle to "glide" along the road surface (aquaplaning).
- Worn tyres reduce the possibility of controlling the vehicle well in normal and difficult driving situations and increase braking distance and the risk of sliding.

Tyre damage

 Please refer to  at the start of the chapter on page 219.

Damage to tyres and wheels is often not readily visible. Unusual **vibrations** or if the vehicle **pulls to one side**, one of the tyres might be damaged → .

- Reduce your speed immediately if you suspect that a wheel is damaged!
- Check the tyres and wheels for damages.
- If the tyre is damaged, do not drive on. Seek expert assistance.
- If there is no visible damage, drive slowly and cautiously to the closest Volkswagen Dealership or a qualified workshop in order to have the vehicle checked.

Foreign bodies in the tyre

- Leave the foreign body in the tyre if it has entered the inner tyre. However, foreign bodies that are stuck between the tyre tread blocks can be removed.
- Replaced the damaged wheel if necessary. Seek expert assistance if necessary. Volkswagen recommends using a Volkswagen Dealership for this purpose.
- Control and correct the pressure.

Tyre wear

Tyre wear is affected by several factors, such as:

- Driving style.
- Unbalanced wheels.
- Running gear setting.

Driving style – Fast cornering, heavy acceleration and hard braking all increase tyre wear. The running gear should be checked by a Volkswagen Dealership or qualified workshop if the tyres show excessive wear despite a normal driving style.

Unbalanced wheels – The wheels on new vehicles are balanced. However, various factors encountered in normal driving can cause them to become unbalanced, which results in steering vibration. Unbalanced wheels will affect levels of wear on the steering system and the suspension. In this case the wheels should be balanced again. New wheels must be balanced out prior mounting on the vehicle.

Running gear setting – incorrect wheel alignment causes excessive tyre wear, impairing the safety of the vehicle. The wheel alignment should be checked by a Volkswagen Dealership or qualified workshop if tyres show excessive wear.

WARNING

Unusual vibrations or if the car pulls to one side while driving, one of the tyres might be damaged.

- Reduce speed immediately and park the vehicle while complying with traffic laws.
- Check the tyres and wheels for damages.
- Never drive on if the wheels or tyres are damaged. Seek expert assistance instead.
- If there is no visible damage, drive slowly and cautiously to the closest Volkswagen Dealership or a qualified workshop in order to have the vehicle checked.

Spare wheel

 Please refer to  at the start of the chapter on page 219.

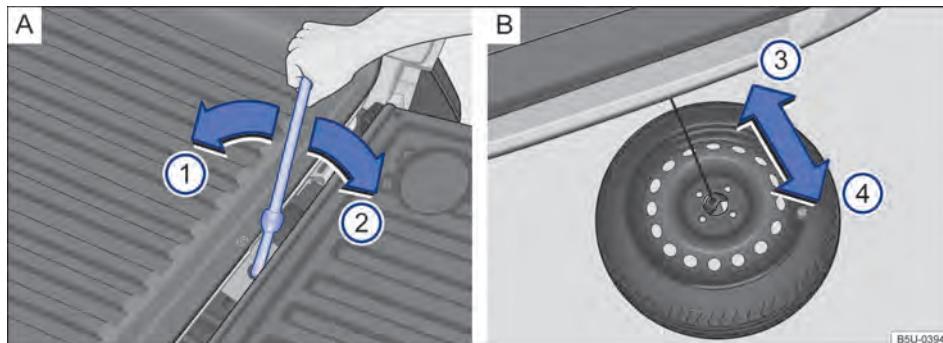


Fig. 199 **A** In the cargo compartment: access to the temporary spare wheel. **B** Under the vehicle: spare wheel entirely on the floor and removal from underneath the vehicle.



Fig. 200 On the spare wheel: remove the spare wheel cable.

The spare wheel is fastened underneath the vehicle with a cable; it must be turned downwards in order to be removed.

The spare wheel may only be removed when the vehicle is safely parked and all necessary actions and procedures are well known! Seek expert assistance if this is not the case.

Taking the temporary spare tyre from its housing

- To access the spare wheel supporting mechanism screw, open the tailgate → page 52.
- Fit the adaptor → Fig. 164 ③ and the lug wrench ② into the mechanism screw.

- Turn the lug wrench clockwise → Fig. 199 ② until the end of the mechanism's course, even after the spare wheel having completely touched the ground. The end of course is characterized when the wrench is blocked by the mechanism's stop.
- Remove the lug wrench and the adapter from the mechanism screw.
- Close the tailgate → page 52.
- Carefully pull the spare wheel, in the direction of the arrow → Fig. 199 ④, removing it from underneath the vehicle.
- Place the spare wheel in vertical position → Fig. 200.
- Remove the hook from the central wheel hole, in the direction of the arrow ⑥.

Placing the temporary spare tyre into its housing

- Place the spare wheel in vertical position, allowing the filling nozzle to face up, when the wheel is in horizontal position.
- Insert the hook through the central wheel hole, in the direction of the arrow → Fig. 200 ⑤.
- Place the spare wheel in horizontal position; ensure that the filling valve is facing up and that the rim hook is locked through the central hole, thus preventing the spare wheel from becoming loose during the procedure.

- Carefully push the temporary spare wheel, in the direction of the arrow → [Fig. 199 ③](#), placing it underneath the vehicle
- To access the spare wheel supporting mechanism screw, open the tailgate → page 52.
- Fit the adaptor → [Fig. 164 ③](#) and the lug wrench [②](#) into the mechanism screw.
- Turn the lug wrench anti-clockwise → [Fig. 199 ①](#), until the end of course of the mechanism, which is characterized by the wrench's "free" rotation.
- Remove the lug wrench and the adapter from the mechanism screw.
- Close the tailgate → page 52.

In case of difference between the spare wheel and vehicle tyres

If the spare wheel is different from the normal vehicle tyre version, for example, the former may be used only in case of emergency, temporarily and with due precautions → .

Refit the normal road wheel as soon as possible.

Observe the driving notes:

- Do not drive faster than 80 km/h (50 mph)!
- Avoid full acceleration, sudden braking and fast driving through bends in the road!
- Tyre pressure must be checked as soon as possible after fitting the spare wheel → page 223.

Tyre pressure of the spare wheel must be checked along with the normal tyres at least twice a month. The spare wheel should have the highest pressure allowed for the vehicle → page 223.

WARNING

Removing the spare wheel can be dangerous, especially when performed roadside.

- Park the vehicle on a flat and solid surface at a safe distance from the flow of traffic.

WARNING

Incorrect use of the spare wheel or temporary spare wheel can lead to a loss of control of the vehicle, to collisions or other accidents and cause serious injuries.

- Never use a spare wheel or temporary spare wheel if it is damaged or worn down to the tread wear indicators.

- Never exceed 80 km/h (50 mph). Avoid full acceleration, sudden braking and making turns at high speeds!
- Replace the spare wheel with a regular wheel as soon as possible. The spare wheel is only intended for use in short periods of time.
- The temporary spare wheel must always be secured firmly with the wheel bolts supplied by the factory.
- After fitting the temporary spare wheel, the tyre pressure must be checked as soon as possible → page 223, *Tyre pressure*.

WARNING

After changing the tyre, always ensure that the vehicle toolkit and spare wheel are properly secured in their respective housings. This measure is necessary and mandatory, and must be observed even in small trips, in order to prevent injuries to individuals inside and outside the vehicle in case of accidents.

CAUTION

Whenever it is necessary to remove or replace the spare wheel in its respective housing, use only the procedure described in this manual.

- Never use electric or pneumatic equipment when removing or installing spare wheels in its housing, in order to prevent vehicle damages.

NOTICE

After removing the spare wheel from the lower part of the luggage compartment floor, retrieve the spare wheel support mechanism cable, in case the wheel to be replaced is not installed in the housing.

 When discarding old or damaged tyres, Volkswagen recommends visiting a Volkswagen Dealership, which has all necessary equipment and technical knowledge regarding specific disposal standards for such material.

 If possible, firmly fasten the spare wheel or replaced wheel in the spare wheel support under the vehicle.

Tyre lettering

□ Please refer to  at the start of the chapter on page 219.

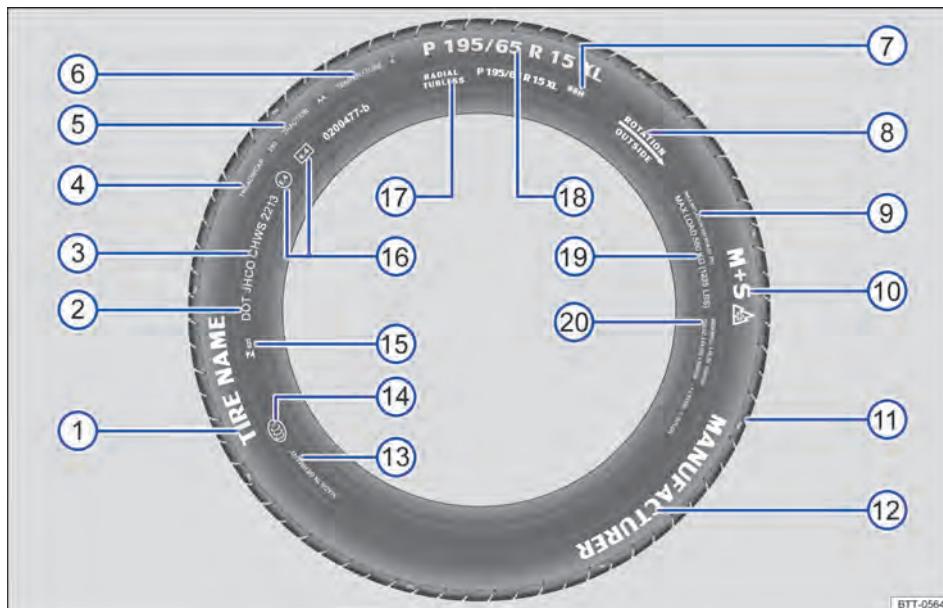


Fig. 201 International tyre lettering (example).

→ Fig. 201	Tyre lettering (example).	Definition
①	Product name	Individual tyre lettering from the manufacturer.
②	DOT	The tyre complies with the legal requirements of the Department of Transportation, responsible for tyre safety standards.
	JHCO CHWS 2213	Tyre identification number (TIN ^a) – in some cases only on the inner side of the wheel) and manufacturing date:
③	JHCO CHWS	Tyre manufacturing origin identification code and manufacturer information regarding tyre size and features.
	2213	Manufacture date 22nd week of 2013.
	TREADWEAR 280	Relative life expectancy for the tyre, based on a standard test. Tyres with a treadwear of 280 tyres wear out 2.8 times slower than regular tyres with a treadwear of 100. Tyre performance varies depending on use conditions and may significantly vary from standard values due to driving behavior, maintenance, different road characteristics and weather conditions.

Information for the end user concerning comparative values for specified basic tyres (standardised test procedure) → page 255:

→ Fig. 201	Tyre lettering (example).	Definition
⑤	TRACTION AA	Wet braking response of the tyre (AA, A, B or C). This rating is measured in certified test tracks, under controlled conditions. Tyres marked with C have low traction power. The traction rating assigned to the tyre is based on levelled track tests and does not include acceleration, lateral curves, aquaplaning, or traction under maximum load.
⑥	TEMPERATURE A	Temperature stability of the tyre at higher test speeds (A, B or C). Tyres marked with A and B exceed legal requirements. The temperature test is based on tyres with the proper pressure and excludes excess pressure. Excessive speeds, improper or excess tyre pressure may heat or damage the tyres, either separately or in combination.
⑦	88 H	Load → page 230 and speed index → page 230.
⑧	Rolling direction and arrow	Identification of the tyre's rolling direction → page 230.
⑨	OR: Outside	Identification of the tyre's outer wall → page 230.
⑩	MAX INFLATION 350 KPA (51 psi / 3,51 bar)	Limitation for maximum air pressure.
⑪	M+S or M/S or 	Denotes winter tyres (mud and snow tyres). Spiked tyres are identified with an E after the S.
⑫	TWI	Indicates the position of the Tread Wear Indicator → page 224.
⑬	Brand name, logo	Manufacturer.
⑭	Made in Germany	Manufacturing country.
⑮		Specific identification for China (China Compulsory Certification).
⑯	IT 023	Specific identification for Brazil.
⑰	E4 e4 0200477-b	Certification of conformity with international requirements with the number of the country that issued the approval. Tyres approved as per ECE regulations are marked with E, and tyres approved as per EG regulations are marked with e. This is followed by the multi-digit approval number.
⑱	RADIAL TUBELESS	Tubeless radial tyre.
⑲	P 195 / 65 R 15 XL	Size designation: P Identification for passenger vehicle. 195 Tyre width from wall to wall in mm. 65 Height/width ratio in %. R Tyre construction: radial. 15 Wheel diameter in inches. XL Heavy-duty tyres ("Reinforced").
⑳	MAXIMUM LOAD 615 KG (1235 LBS)	Maximum load per wheel specification.

→ Fig. 201	Tyre lettering (example).	Definition
	SIDEWALL 1 PLY RAYON	Tyre cradle component specifications: 1 Rayon layer (synthetic silk).
20	TREAD 4 PLIES 1 RAYON + 2 STEEL + 1 NYLON	Tread component indications. In this example, there are 4 layers under the tread: 1 layer of Rayon (synthetic silk), 2 layers of steel strap and 1 layer of nylon.

a) TIN is the tyre serial number.

Tyres with directional tread pattern

Tyres with directional tread pattern have been developed to roll in a single direction. An arrow on the tyre sidewall indicates the direction of rotation on tyres with directional tread. The direction of rotation must be followed. This is the only guarantee for optimum grip and helps to avoid aquaplaning, excessive noise and wear.

If, however, the tyre is fitted in the opposite direction to the tread pattern, you must take more care when driving as the tyre is now no longer being used according to its designation. This is particularly important on wet roads. Tyres must be replaced as quickly as possible or be fitted with the tread in the correct direction.

Tyre load capacity

The load capacity index indicates how many kilograms can be loaded onto an individual tyre (tyre load).

80	450 kg
85	515 kg
90	600 kg
91	615 kg
93	650 kg

95 690 kg

97 730 kg

99 775 kg

100 800 kg

Speed index

The speed index indicates the maximum permitted speed that may be driven when particular wheels are fitted.

P max. 150 km/h

Q max. 160 km/h

R max. 170 km/h

S max. 180 km/h

T max. 190 km/h

U max. 200 km/h

H max. 210 km/h

V max. 240 km/h

W max. 270 km/h

Y max. 300 km/h

Some tyre manufacturers use the code "ZR" for tyres with a highest permitted speed of over 240 km/h (149 mph).



Winter tyres

□ Please refer to  at the start of the chapter on page 219.

In winter road conditions winter tyres will considerably improve the car's handling. The design of summer tyres (width, rubber compound, tread pattern) gives less grip on ice and snow.

Volkswagen urgently recommends the use of winter tyres or all-year tyres on all 4 wheels of the vehicle, particularly if winter conditions are expected on the roads. Winter tyres will also improve the braking response of the vehicle and will help to reduce braking distances in winter.

weather. At temperatures below +7 °C (+45° F) Volkswagen recommends that winter tyres be fitted to the vehicle.

lose a large degree of their effectiveness when the **tread** is worn down to a depth of 4 mm. Winter tyres also largely lose their effectiveness through **ageing** – regardless of the remaining tread depth.

The following applies when using winter tyres:

- Observe any country-specific legal requirements.
- Use winter tyres on all 4 wheels at the same time.



- Only use in winter road conditions.
- Only use the sizes of winter tyre that have been approved for the vehicle.
- Winter tyres must have the same type, size (rolling circumference) and the same tread pattern.
- Observe the maximum speed permitted by the speed index → .

Speed limit

Winter tyres have a speed limitation depending on the speed index → page 230.

If you use **V-rated tyres**, the speed limits and tyre pressure will be determined by engine size. You must ask your Volkswagen Dealership about the highest permitted speed and required tyre pressure.

WARNING

Improved driving conditions due to the use of winter tyres during winter weather does not mean safety risks must not be prevented.

- Adapt your speed and driving style to suit visibility, weather, road and traffic conditions.
- Never exceed the maximum speed and load limits for fitted winter tyres.

 Reassemble summer tyres only after the winter season is over. At temperatures above +7° C (+45° F) vehicle handling is better with summer tyres fitted. They are quieter, do not wear so quickly and reduce fuel consumption.

 Volkswagen Dealerships can provide details on permissible winter tyre sizes.

Hub caps

Introduction

WARNING

Using unsuitable hubcaps and fitting the hubcaps incorrectly can cause accidents and severe injuries.

- Hub caps which are not fitted properly could become loose while the vehicle is in motion and endanger other road users.
- Do not use damaged hub caps.
- Always ensure that the flow of air to cool the brakes is not restricted or reduced. This also applies when retrofitting wheel trims. If the flow of air is not sufficient, the braking distance could increase significantly.

NOTICE

Remove hub caps carefully and fit them again properly so as to avoid damage to the vehicle.

Wheel bolt cap

 Please refer to  and  at the start of the chapter on page 231.



Fig. 202 Removing the wheel bolt caps.

 Depending on the vehicle equipment, wheel bolt caps may not be available.

- Take the wire hook from the vehicle toolkit → page 182.
- Insert the hook through the opening in the cap → **Fig. 202** and pull off in the direction of the arrow.

The caps protect the wheel bolts and must be replaced after changing the tyre.

Ensure that the caps are properly secured when fitting them. Otherwise, they could become loose while driving.

Wheel cover

Please refer to **⚠** and **①** at the start of the chapter on page 231.



Fig. 203 Removing the wheel covers.

Removing the wheel covers

- Take the lug wrench from the vehicle toolkit → page 182.
- Remove the wheel bolts. The bolt opposite to valve → Fig. 203 A serves as a guide in the fitting sequence. Therefore, remove bolt A lastly and be careful not to let the wheel cover fall when removing the remaining bolts.

Fitting the wheel covers

Fit bolt A first; position the wheel cover and fit the remaining bolts.

! NOTICE

The wheel cover is secured to the wheel and may only be removed by first removing the wheel bolts.

Changing a wheel

! Introduction

Only change the wheel yourself when the car is parked in a safe place, you are familiar with the necessary actions and safety procedures and you have access to all the correct tools! Seek expert assistance if this is not the case.

⚠ WARNING

Changing a wheel can be dangerous, especially when carried out at the side of a road. Please note the following points in order to reduce the risk of serious injuries:

- Stop the vehicle as soon as possible in a safe location. Park the vehicle at a safe distance from moving traffic in order to carry out the wheel change.
- All passengers, especially children, must be at a safe distance and away from your area of work during the wheel change.
- Switch on the hazard warning lights and set up the warning triangle to warn other road users.
- Make sure that the ground is flat and firm. If necessary use a large, strong board or similar support for the vehicle jack.
- Only change the wheel yourself if you feel confident carrying out the procedure. Seek expert assistance if this is not the case.
- Always use suitable and undamaged tools to change the wheel.
- Always switch the engine off, pull the handbrake and select a gear to reduce the risk of vehicle movement.
- The wheel bolt tightening torque should be checked with a torque wrench immediately after changing a wheel.
- After changing a wheel, immediately program the tyre monitoring system → page 217.

Preparations for changing a wheel

Please refer to **⚠** at the start of the chapter on page 232.

Checklist

The following actions must always be carried out in the given order in preparation for changing the wheel → **⚠**:

- In case of flat tyres, park the vehicle at a safest distance possible from the traffic flow, in a steady and even terrain.
- Apply the handbrake → page 95.
- Stop the engine and remove the key from the ignition lock → page 86.

Checklist (Continued)

4. Select a gear → page 88.
5. Have all occupants get out of the vehicle and placed in a safe spot away from the traffic.
6. Place a wedge on the opposite wheel, using a rock or similar object.
7. While towing trailers: unhitch the trailer from the vehicle and park it properly.
8. With loaded bed: remove luggage items.
9. Take the vehicle tools out → page 183 as well as the temporary spare tyre → page 226.
10. Remove the hub cap → page 231 and loosen the wheel screws.

⚠ WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

Wheel bolts

📘 Please refer to  at the start of the chapter on page 232.



Fig. 204 Changing the wheel: loosen wheel bolts.

Only the spanner delivered with the vehicle should be used to loosen the wheel bolts.

Only loosen the wheel bolts by approximately one turn before raising the vehicle with the vehicle jack.

If the wheel bolt is very tight, you may be able to loosen it by pushing down the end of the spanner carefully with your foot. Hold on to the car for support and take care not to slip.

Loosening the wheel bolts

- Fit the box spanner over the wheel bolt as far as it will go → **Fig. 204**.
- Hold the end of the box spanner and turn the wheel bolt approximately *one* turn anticlockwise → .

Important information about the wheel bolts

The wheel bolts were specifically designed for the factory-fitted wheels. If different wheels are fitted, the correct wheel bolts with the right length and properly shaped bolt heads must be used. This ensures that the wheels are fitted securely and that the brake system works properly.

Tightening torque for the wheel bolts

The tightening torque for wheel bolts for steel and alloy wheels is **110 Nm**. The tightening torque should be checked with a torque wrench immediately after changing a wheel.

If the wheel bolts are corroded and difficult to turn, they must be replaced and the wheel hub threads cleaned **before the tightening torque is checked**.

Never grease or lubricate the wheel bolts or the threads of the wheel hub. This could cause them to loosen while the vehicle is in motion, even if the required torque setting is used.

⚠ WARNING

Incorrectly tightened wheel bolts can loosen while the vehicle is in motion and cause accidents, serious injury, and loss of control of the vehicle.

- Only use wheel bolts corresponding to the respective wheel.
- Never use different wheel bolts.
- The wheel bolts and threads of the wheel hubs must be clean, free from oil and grease, and turn easily.
- Always use the box spanner placed in the vehicle at the factory to loosen and tighten the wheel bolts.
- Only loosen the wheel bolts by approximately one turn before raising the vehicle with the vehicle jack.

- Never grease or lubricate the wheel bolts or the threads of the wheel hub. This could cause them to loosen while the vehicle is in motion, even if the required torque setting is used.

- If the tightening torque of the wheel bolts is too low, the wheel bolts and wheels can loosen while the vehicle is in motion. The wheel bolts and threads can be damaged if the tightening torque is too high.

Lifting the vehicle with the jack

 Please refer to  at the start of the chapter on page 232.

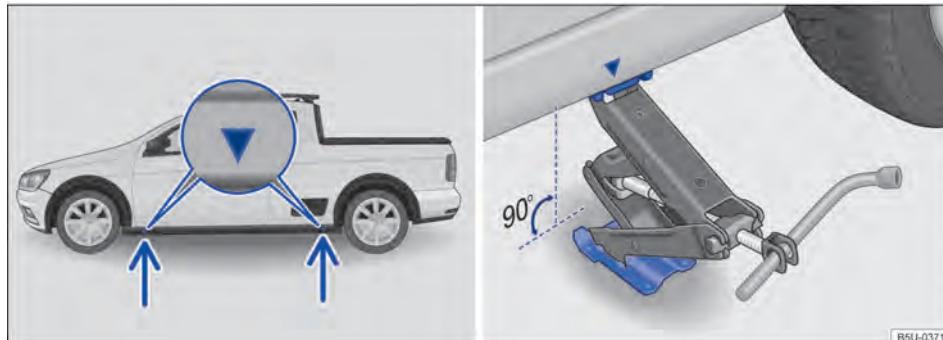


Fig. 205 Jacking points and vehicle jack at the rear left-hand side of the vehicle.

The jack may be applied only at the jacking points shown (markings on the body) → **Fig. 205**. Always use the jacking point closest to the wheel you are working on → .

The vehicle must only be lifted by the jack lifting points and after loosening the respective wheel's bolts → page 233.

Checklist

To ensure your own safety and the safety of the passenger, observe the following points in the order given → .

- Find a flat and firm surface suitable for lifting the vehicle.
- Switch off the engine. Select a gear and pull the handbrake → page 95.
- Ensure that all passengers leave the vehicle.
- Place a wedge on the opposite wheel, using a rock or similar object.
- While towing trailers: unhitch the trailer from the vehicle and park it properly.
- Loosen the wheel bolts on the wheel that is being changed → page 233.

- Find the jacking point under the vehicle → **Fig. 205** closest to the wheel that is being changed.
- Insert the tip of the wrench in the jack and hold the wrench by the hexagonal end. Raise the vehicle jack until it just fits under the jacking point of the vehicle.
- Ensure that the entire surface of the foot of the jack is resting securely on the ground and that the foot of the vehicle jack is positioned precisely below the jacking point → **Fig. 205**.
- Align the jack and, at the same time, raise the vehicle jack claw until it engages with the cross piece under the vehicle → **Fig. 205**.
- Crank the vehicle jack further until the wheel is just clear of the ground.

WARNING

Incorrect use of the vehicle jack can cause the vehicle to slip, which can lead to severe injuries. Please apply the following rules to reduce the risk of accidents:

- Only use jacks which have been approved by Volkswagen for the vehicle. Other vehicle jacks could slip out of position – this includes vehicle jacks supplied with other Volkswagen models.
- The ground must be flat and firm. Tilted or unstable surfaces can cause the vehicle to slide. If necessary use a large, strong board or similar support for the vehicle jack.
- On a hard, slippery surface (such as tiles) use a rubber mat or similar to prevent the vehicle jack from slipping.
- Fit the vehicle jack only at the points described. The vehicle jack claw must fit securely into the side member rib → Fig. 205.
- When towing a trailer, unhitch the trailer from the traction vehicle before changing the wheel.
- Never place any part of your body (e.g. arm or leg) underneath the vehicle if the latter is only supported by the vehicle jack.

- Ensure that all passengers leave the vehicle.
- If you have to work underneath the vehicle, use suitable stands to provide extra support.
- Never lift the vehicle while the engine is running or if the vehicle is parked over a slope surface.
- Never start the engine when the vehicle is raised on a vehicle jack. Engine vibrations can cause the vehicle to fall off the vehicle jack.

WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

Lifting the vehicle with the jack - Extreme version

 Please refer to  at the start of the chapter on page 232.

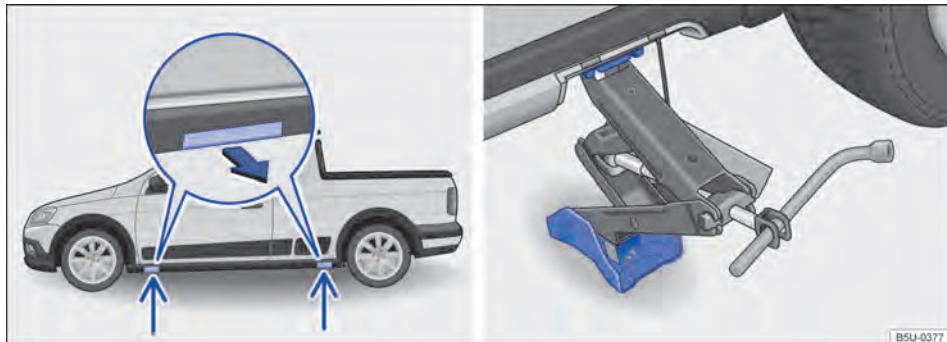


Fig. 206 Jacking points and vehicle jack at the rear left-hand side of the vehicle - vehicles with external sills.

The jack may be applied only at the jacking points shown (removable cover) → Fig. 206. Always use the jacking point closest to the wheel you are working on → .

The vehicle must only be lifted once the respective wheel's bolts are removed → page 233.

Checklist

To ensure your own safety and the safety of the passenger, observe the following points in the order given → :

1. Find a flat and firm surface suitable for lifting the vehicle.
2. Switch off the engine. Select a gear and pull the handbrake → page 95.

Checklist (Continued)

3. Block the wheel diagonally opposite using the collapsible chocks or other suitable items.
4. While towing trailers: unhitch the trailer from the vehicle and park it properly.
5. Loosen the wheel bolts on the wheel that is being changed → page 233.
6. Find the jacking point under the vehicle closest to the wheel that is being changed.
7. Remove the jacking point access cover, in the direction of the arrow → [Fig. 206](#).
8. Insert the tip of the wrench in the jack and hold the wrench by the hexagonal end. Raise the vehicle jack until it just fits under the jacking point of the vehicle.
9. Ensure that the entire surface of the foot of the jack is resting securely on the ground and that the foot of the vehicle jack is positioned precisely below the jacking point → [Fig. 206](#).
10. Align the jack and, at the same time, raise the vehicle jack claw until it engages with the cross piece under the vehicle → [Fig. 206](#).
11. Crank the vehicle jack further until the wheel is just clear of the ground.

WARNING

Incorrect use of the vehicle jack can cause the vehicle to slip off the jack, which can lead to severe injuries. Please apply the following rules to reduce the risk of accidents:

- Only use jacks which have been approved by Volkswagen for the vehicle. Other vehicle jacks could slip out of position – this includes vehicle jacks supplied with other Volkswagen models.

- The ground must be flat and firm. Soft ground or surfaces at an incline under the vehicle jack may cause the vehicle to slip off the jack. If necessary use a large, strong board or similar support for the vehicle jack.
- On a hard, slippery surface (such as tiles) use a rubber mat or similar to prevent the vehicle jack from slipping.
- Fit the vehicle jack only at the points described. The vehicle jack claw must fit securely into the side member rib → [Fig. 206](#).
- When towing a trailer, unhitch the trailer from the traction vehicle before changing the wheel.
- Never place any part of your body (e.g. arm or leg) underneath the vehicle if the latter is only supported by the vehicle jack.
- Ensure that all passengers leave the vehicle.
- If you have to work underneath the vehicle, use suitable stands to provide extra support.
- Never lift the vehicle when the engine is running, or if the vehicle is tilted to the side or on a gradient.
- Never start the engine when the vehicle is raised on a vehicle jack. Engine vibrations can cause the vehicle to fall off the vehicle jack.

WARNING

Ignoring any of the points on this important safety checklist can lead to accidents and injuries.

- Always follow the instructions on the checklist and comply with applicable safety precautions.

Changing the wheel

📘 Please refer to  at the start of the chapter on page 232.



B5U-0108

Fig. 207 Wheel replacement: wheel bolt removal sequence.

Removing the wheel

- Read the checklist → page 232.
- Loosen the wheel bolts → page 233.
- Lift the vehicle → page 234.
- Completely unscrew the loose wheel bolts using the lug wrench and place them on a clean surface.
- **In vehicles with wheel covers**, the bolt opposite to valve → Fig. 207 A serves as a guide in the fitting sequence. Therefore, remove bolt A last and be careful not to let the wheel cover fall when removing the remaining bolts.
- Remove the wheel.

Install spare wheel

If applicable, take note of the running direction of the tyre → page 217.

- Insert the spare wheel.
- *Gently* screw in the wheel bolts and tighten them.
- **In vehicles with wheel covers**, fit bolt → Fig. 207 A first; position the wheel cover and fit the remaining bolts.
- Lower the vehicle with the jack.

- Use the box spanner to tighten all the wheel bolts securely → . Do not tighten the bolts in clockwise or anticlockwise sequence. Tighten them in diagonal sequence.

- **In vehicles with central hub cap**, carefully place the hub cap over the wheel bolts → ①, press the hub cap down until you hear a “click” and ensure that the hub cap is properly fitted.

WARNING

An incorrect torque or incorrectly handled wheel bolts can lead to a loss of control of the vehicle, cause accidents and serious injuries.

- Always keep all wheel bolts and threads in the wheel hubs clean and free from oil and grease. Wheel bolts must be easy to turn and be tightened to the specified torque.

NOTICE

Volkswagen recommends special care when removing the central hub cap, since the plastic fittings may be damaged in case of excessive pressure.

 Wheel bolts must be clean and able to turn freely. Never lubricate wheel bolts.

 When changing wheels, if you notice that the bolts are corroded or worn, they must be replaced before checking the tightening torque.

After changing a wheel

📘 Please refer to  at the start of the chapter on page 232.

- Stow the spare wheel or the removed wheel securely in the housing underneath the vehicle.
- Clean the tools as necessary and place them behind the passenger seat → page 182.
- The tightening torque of the wheel bolts should be checked immediately with a torque wrench
- The damaged wheel should be replaced as soon as possible.

WARNING

After changing the wheel, always ensure that the vehicle toolkit and spare wheel are properly secured in the luggage compartment.

NOTICE

The tightening torque indicated for wheel bolts (steel or alloy) is **110 Nm** and must be ensured with a torque wrench. Volkswagen recommends using a Volkswagen Dealership for this purpose.

 On vehicles with tyre pressure loss indicator, immediately program the tyre monitoring system → page 217.

Maintenance

Service

Maintenance services and digital maintenance and warranty

The **vehicle data label** on the back cover of this instruction manual confirms the **initial release or delivery date, the delivery inspection** and thus the start of the warranty coverage for your vehicle.

 **For some markets the digital Maintenance and warranty is not available. In this case your Volkswagen Dealership will be able to inform you about its service and documentation.**

Digital electronic registration of maintenance services performed

Service vouchers will be stored in the central system memory by the Volkswagen Dealership or specialized company. Through this transparent service history documentation, performed vehicle maintenance work can be accessed at any time. Volkswagen recommends requesting, after each service performed, a printed proof of service containing data on maintenance work stored in the system.

With each new service, the previous proof of service is replaced by an updated printout.

Service

Digital Maintenance and warranty records the following information from your Volkswagen Dealership or specialist company:

- When a given service was performed.
- Whether a repair recommendation was given, as for example, whether the brake pads will have to be replaced soon.
- Which components or fluids have been renewed.
- When your next service call will be due.

WARNING

Insufficient or not performed maintenance and failure to observe the service intervals may cause vehicle stops, traffic accidents, and serious injuries.

- Have the maintenance work performed by an authorized Volkswagen dealership or specialist company.

NOTICE

Volkswagen is not liable for damage to the vehicle due to insufficient service or missing parts.

 Regular vehicle maintenance services not only serve the purpose to maintain the value of the vehicle, but also contribute to operational and traffic safety. Servicing work should therefore always be carried out in accordance with the Volkswagen maintenance guidelines.

First service

The servicing interval may be different according to the country.

Petrol engines

Service based on time or mileage

Oil Change Service

The service is carried out in accordance with the next servicing indicator, and according to whichever occurs first:

- after 1 year or every 10,000 km;
- after 1 year or every 15,000 km.

TOTALFLEX Engine

Service based on time or mileage

Standard service inspection

The service is carried out in accordance with the next servicing indicator, and according to whichever occurs first:

- after 1 year or every 10,000 km.

Information on the terms of use

The indicated service intervals are established based on **normal driving conditions**.

In case of **adverse driving conditions**, some intermediary services are required between each of the service intervals indicated.

Adverse driving conditions include the following cases:

- fuel with high sulphur content;
- frequent driving at low engine speeds with intense traffic, with extended periods operating at idling speed ("stop-and-go"; urban traffic),
- in short trajectories (below 8 km per day) or with the engine running below ideal temperatures;
- in urban routes with frequent stops;
- high ambient temperature associated to constant use of the air conditioning system
- frequent traffic in unpaved or dusty roads and highways.;
- predominant driving under environments with high levels of suspended particles (mining, cement, steelworks, marble, and saline factories, etc.),
- predominant operation towing trailers or transporting cargoes;
- vehicle operation to provide taxi services, school transportation, deliveries, special services (patrolling, escorting, ambulance, fire trucks, military use) and/or similar applications.

These conditions particularly affect the following parts:

- toothed belt;
- dust and pollen filter
- air filter;
- engine oil.

Your Volkswagen Dealership will inform you of any eventual need to perform intermediary services based on your vehicle driving conditions.

The costs of Volkswagen services may vary according to the vehicle model and equipment version, as well as additional services and inspections eventually required. Your Volkswagen Dealership will inform you of all costs (labour and material) regarding Volkswagen maintenance services.

Service scopes

Depending on the vehicle model/version, some of the scope items may not be available and/or be applicable to the vehicle.

The service scopes include all the necessary **maintenance items** to keep your vehicle in safe condition for driving and the traffic (depending

on the conditions of use and the equipment of the vehicle such as for example, engine, transmission or fluids). The maintenance service work is split between *inspection items* and *maintenance items*. You can consult your Volkswagen Dealership for a detailed overview of the necessary activities.

Inspection items

Electric system

- Battery: check
- Horn: check
- Lighting (interior and exterior): check
- Service interval display: reset

Engine / Gearbox

- Poly V-belt: check
- Engine and engine compartment components (upper and lower parts): check
- Cooling system: check
- Exhaust system: check
- Power transmission and final drive system: check

Running gear

- Coil springs and elastic stops: check
- Protective joint hoods: check
- Power steering: check
- Swivel joints/track rods: check
- Brake fluid level: check
- Shock absorbers and brake pads/discs: check
- Tyres: check
- Tyre pressure of all tyres: check
- Brake system: check

Body

- Body: check for damages and corrosion
- Window wiper blades: check
- Windscreen: check
- Underside of the vehicle: check
- Window wiping and washing system: check
- Test drive: perform

Maintenance items

In addition to the inspection items (depending on the use and the vehicle's equipment, such as engine, power transmission or fluids), other maintenance items may have to be performed on your vehicle. These items must be looked after based on the *time* and/or *mileage*.

- Additives: change/fill up
- Toothed belt/toothed belt tensioning roller: check/ replace
- Poly V-belt: replace
- Air cleaner: replace
- Fuel filter: replace (only TOTALFLEX vehicles)
- Brake fluid: replace
- Dust and pollen filter: replace
- Engine: replace filter/oil
- Spark plugs: replace

There may be changes to the service scope for technical reasons (continuous components development). Volkswagen Dealerships are always updated about innovations.



Vehicle conservation

Guidelines for the conservation of the vehicle

Regular and expert care helps to **maintain the value** of the vehicle. Proper maintenance may also be one of the requirements for the approval of warranty claims in the event of corrosion or paint defects.

Suitable care products are available from Volkswagen Dealerships.

WARNING

Car care products can be toxic and hazardous. Unsuitable care products and incorrect application of care products can cause accidents, severe injuries, burns or poisoning.

- Care products must be kept in its original sealed container.
- Read the manufacturer's instructions.
- Never store car care products in empty food containers, bottles or any other non-original containers as people finding these containers may not know that they contain care products.
- Keep children away from care products.
- The products may generate harmful fumes during use. Such products should therefore only be used outside or in well-ventilated spaces.
- Never use fuel, turpentine, engine oil, nail varnish remover or other volatile fluids to wash, clean or care for your vehicle. These substances are toxic and highly flammable.

WARNING

Incorrect care and cleaning of vehicle parts can impair the safety features of the vehicle and thus cause serious injuries.

- Vehicle parts must be cleaned according to the manufacturer's instructions.
- Only use approved or recommended cleaning products.

NOTICE

Cleaning agents that contain solvents attack the material and can cause damage.

NOTICE

Never attempt to remove dirt, mud or dust from a dry vehicle surface. Additionally, never use dry cloths or sponges in order to prevent risking the vehicle paint or windows. Dirt, mud and dust must be softened with water before they are removed.

 Environmentally-friendly care products should be used.

 Leftover car care products should not be disposed of with common waste. Read the manufacturer's instructions.

Washing of the vehicle

The longer substances such as insects, bird droppings, resinous tree sap, road dirt, industrial deposits, tar, soot or road salt and other corrosive materials remain on the vehicle, the more damage they do to the paintwork. High temperatures and strong sunlight further intensify the corrosive effect. The **underside** of the vehicle must also be cleaned thoroughly on a regular basis.

Car washes

Please observe the signs on the automatic car wash. Before using an automatic car wash, take the usual precautions, such as closing all windows and folding in the exterior mirrors, in order to avoid vehicle damages. Inform the car wash operator if there are special parts on your vehicle such as spoilers, radio aerials → ①.

The paint is so hard-wearing that the car can normally be washed without problems in an automatic car wash. However, the effect on the paint depends to a large extent on the design of the car wash. Volkswagen recommends the use of car washes without brushes.

To remove any wax residues from the windows and to prevent windscreen wipers from rubbing, please note the following points → page 243, *Cleaning windows and exterior mirrors*.

High pressure washing machine

Follow the instructions provided by the manufacturer when cleaning your vehicle using a high-pressure cleaner. This applies in particular to the **pressure and spraying distance** → ③.

Washing the vehicle with a high-pressure cleaner may cause water to enter the vehicle. Avoid using high-pressure cleaners at distances lower than 30 cm from the vehicle's surface. Using a high-pressure cleaner of over 8,000 kPa (80 bar) could damage or remove paintwork or adhesives.

Maintain sufficient distance to soft materials such as rubber hoses, insulation, and the park distance control sensors. Parking distance control sensors are located in the rear bumper → ①.

Never use **concentrated jet nozzles** or **dirt blasters** → ②.

Washing the car by hand

When washing by hand, first soften the dirt with plenty of water and rinse off as well as possible.

Then clean the vehicle with a soft **sponge**, a **glove** or a **brush**, using only light pressure. Start with the roof and work from the top to the bottom. Use a **shampoo** for very persistent dirt only.

The sponge or glove should be wrung out thoroughly at regular intervals.

Clean the wheels, sill panels etc. last. Use a different sponge for this purpose.

Vehicle paintwork conservation

Waxing protects the paintwork. As soon as water no longer forms **visible drops** on the *clean* paintwork it is time to protect it again with a good **car wax**.

Even when a **wax solution** is used regularly in the car wash, Volkswagen recommends protecting the paint with a coat of hard wax at least twice a year.

Polish the vehicle's paintwork

Polishing is only necessary if the paint has lost its shine, and the gloss cannot be brought back by applying wax.

The car must be waxed after polishing if the polish used does not contain wax compounds to seal the paint.

⚠ WARNING

Parts of the vehicle with sharp edges may cause injuries.

- Protect your hands and arms from cuts on sharp parts, for example when cleaning the underbody or the inside of the wheel housings.

⚠ WARNING

After the car has been washed, the braking effect could set in later than normal and extend the braking distance as the brake discs and brake pads will be wet, or iced up in winter.

- "Dry the brakes and eliminate ice" through careful braking manoeuvres. Proceed without putting other drivers at risk or failing to abide by legal requirements.

⚠ WARNING

Incorrect use of a high-pressure cleaner can cause visible and invisible long-term damage to tyres and other materials. This could lead to accidents and severe injuries.

- Maintain sufficient distance between the nozzle and the tyres.
- Never clean the tyres with concentrated jet nozzles ("dirt blasters"). Even at large spraying distances and short cleaning times, visible and invisible damage can occur to the tyres.

💡 NOTICE

- Water temperature should not be higher than +60 °C.
- Do not wash the vehicle in direct sunlight in order to avoid damage to the vehicle paintwork.
- The parking distance control sensors in the bumpers must be clean and free of ice to guarantee correct function. When cleaning with pressure hoses and steam cleaners, the sensors should only be sprayed briefly, always maintaining a distance of over 30 cm.
- Never clean with hard sponges, rough kitchen sponges or similar products as these can damage the surface.
- Do not clean windows that are iced over or covered in snow with a high-pressure cleaner.
- Never clean the headlights with a dry cloth or sponge. Soapy water is the preferred choice.
- Vehicle washing under cold weather: if the vehicle is rinsed with a hose, do not direct the water into the lock cylinders or the gaps round the doors, boot, or bonnet. The locks and seals could freeze.

NOTICE

Before using an **automatic washing system**, the following points must mandatorily be checked to prevent damages to the vehicle:

- Make sure that the gap between the guide rails in the car wash is sufficient to prevent damages in wheels and tyres!
- Check that the car wash is tall and wide enough for your vehicle.
- Fold in the exterior mirrors.
- In order to prevent damage to the paintwork on the engine compartment cover, fold the windscreens wipers back onto the windscreens after drying the wiper blades. Do not let them drop!

NOTICE

- In order to avoid damage, painted parts with a matt finish, plastic parts, headlight lenses and the tail lights should not be treated with polish or hard wax.
- Do not polish the paint if the vehicle is in a sandy or dusty environment or if it is dirty.

 The vehicle should only be washed in specially provided wash bays. This prevents toxic, oil, grease and fuel laden waste water from entering the sewage system. In some regions, washing vehicles anywhere else may be prohibited.

Clean and conserve the exterior of the vehicle

Cleaning windows and exterior mirrors

Moisten the windows and exterior mirrors with standard alcohol-based glass cleaner.

Dry the glass surfaces with a clean chamois leather or a lint-free cloth. Chamois leathers which have been used on painted surfaces have grease residues and are therefore not suitable for use on glass surfaces.

Use window cleaner or a silicone remover to clean off rubber, oil, grease and silicone deposits → ①.

Remove wax residues

Car washes and care products could leave **wax deposits** on the glass surfaces. Wax residue can only be removed using a special cleaning product or cleaning cloths. Wax residues can affect the windscreens wiper system's performance, in addition to causing irregular movement or excessive noises. Volkswagen recommends using a glass cleaning cloth to remove wax deposits from the windows and exterior mirrors each time the vehicle is washed.

A window cleaner specifically for removing wax will stop the blades rubbing if added to the windscreens washer fluid. Dilute the cleaner as instructed. Grease removing cleaners will not remove wax deposits → ①.

Special cleaners, glass cleaners and glass cleaning cloths are available from Volkswagen Dealerships.

Remove the snow

Use a small brush to remove snow from the windows and exterior mirrors.

Remove the ice

The best method for removing ice is to use a de-icer spray. If you use an ice scraper, **do not** move it to and from, but push it in one direction only. Moving the ice scraper backwards can cause dirt to scratch the window.

Clean chrome and aluminium parts

- Use a damp, clean, lint-free and soft cloth to clean the surfaces.
- For heavy soiling use a special **solvent-free** cleaning product.
- Polish the chrome and aluminium trim parts using a soft and dry cloth.

Cleaning steel wheels

Use an industrial cleaner to remove brake dust caught in the wheel. Steel wheels should therefore be cleaned regularly with a separate sponge.

Any damage to the paint on steel wheels should be touched up before the metal starts to rust.

Caring for and cleaning alloy wheels

Wash grit and brake dust from alloy wheels approximately **every 2 weeks**. Then use an acid-free detergent to clean the wheels. Volkswagen recommends applying a hard wax compound to the wheels approximately **every 3 months**.

If the brake dust is not removed regularly, the alloy wheel could be damaged.

Always use an acid-free detergent for alloy wheels. Car polish or other abrasive agents should not be used on the wheels.

If the protective coating is damaged (e.g. by stone impact) the damaged area should be repaired immediately.

Conserve the rubber seals

The rubber seals on the doors, windows etc. will seal better, remain flexible and last longer if they are treated at regular intervals with a suitable care product.

Use a soft cloth to remove dust and dirt from the rubber seals before applying the product.

Defrost the door lock cylinders

Volkswagen recommends the use of genuine Volkswagen spray with lubricating and anti-corrosive properties to de-ice the lock cylinders.

Protection of the underside of the vehicle

The underside of the vehicle is coated to protect it from corrosion and damage. The protective coating on the underside of the vehicle could be damaged when driving. Volkswagen recommends therefore that the protective coating on the underside of the vehicle and on the running gear should be checked regularly and repaired if necessary.

Hollow cavities

All hollow spaces exposed to corrosion are factory-fitted with long-lasting protective coating.

Such coating does not require maintenance. If, due to extremely high temperatures, a small amount of wax is melted, it may be removed using a plastic spatula and benzene.

Clean the engine compartment

The engine compartment of any motor vehicle is a hazardous area → page 200.

The engine compartment must be cleaned by a Volkswagen Dealership or qualified workshop. An incorrect cleaning procedure could possibly remove corrosion protection and damage electrical components, among others. Additionally, water could enter the vehicle interior directly via the plenum chamber → ①.

If the engine compartment is very dirty, we recommend that you always go to a qualified workshop to have it cleaned following correct procedures. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Plenum chamber

- The plenum chamber is located in the engine compartment between the windscreen and the engine and has a perforated cover. Air from outside is drawn in from the plenum chamber and is passed into the vehicle interior via the heating and fresh air or the air conditioning system.
- Leaves and other loose items must be removed from the cover of the plenum chamber at regular intervals using a vacuum cleaner or by hand.

⚠ WARNING

Dirty or misted windows reduce visibility and increase the risk of accidents and severe injuries.

- Only drive when you have a clear view through all windows.
- Ice, snow and mist must be removed from the inside and outside of all windows.

⚠ WARNING

All work in the engine compartment carries the risk of injury, scalding, accidents and fire!

- Before carrying out any work make sure that you are familiar with the requisite procedures and general safety regulations
→ page 200, *Safety guidelines for work in the engine compartment*.
- Volkswagen recommends having the work carried out by a Volkswagen Dealership.

⚠ CAUTION

Underseal and anti-corrosion coatings may ignite on the hot exhaust system or on other hot engine parts.

- Never apply underseal or anti-corrosion coatings to the exhaust pipes, catalytic converter, heat shields or other vehicle components that become hot.

! NOTICE

- Properly cleaning the windows enhances the window wiper system's performance and preservation.
- Never combine the recommended cleaning agents with other products in the windscreens washer fluid reservoir. This may cause the components to coagulate and, as a result, clog the windscreens wiper nozzles.
- Never use warm or hot water to remove snow and ice from windows and mirrors. This may cause the glass to crack!
- Never use ice scrapers on mirror lens, otherwise the chromed-coated surface will be scratched.
- The heating elements for the rear window heater (not available in some versions) are located on the inside of the rear window. Never apply stickers over the heating elements and never clean the inside of the rear window with corrosive or acidic detergents or any other chemicals.

! NOTICE

To ensure that the chrome and aluminium parts are not damaged:

- Do not clean or polish in direct sunlight.
- Do not clean or polish in sandy or dusty environments.
- Do not use any abrasive care products (e.g. cream cleaners).
- Never clean with hard sponges, rough kitchen sponges or similar products.
- Do not polish dirty surfaces.
- Do not use solvent-based cleaning products.
- Do not use any hard wax.

! NOTICE

Chrome rims or wheel covers may also have an additional varnish finish and should not be treated using chrome or aluminium cleaning agents or chrome or aluminium polish. Regular paint care and standard cleaning products must be used instead.

! NOTICE

Lock de-icers which contain substances which dissolve grease may cause the door lock cylinder to rust.

! NOTICE

Water that has entered the plenum chamber via a manual process (e.g. from a high-pressure cleaner) can cause considerable damage to the vehicle.



Before removing wax with benzene, comply with applicable safety and environment standards regarding such product.



Considering that when washing the engine, toxic waste water containing oil, grease and fuel may enter the sewerage system, the contaminated water needs to be purified by an oil separator. Therefore, the engine compartment should only be washed in extreme cases and in appropriate locations.



Cleaning and conserving the interior of the vehicle

Modern fabrics, such as dark denim, are often not colourfast. Light-coloured upholstery (soft materials or leather) is particularly sensitive to staining caused by these fabrics, even if you are careful. This is not caused by a fault in the upholstery, but by the non-colourfast nature of the garments.

Leaving stains, dirt and other deposits on the surface of vehicle components and cloth seat covers for a long time can make it difficult to clean and treat them. Stains, dirt and deposits may become impossible to remove, particularly if left for a long time.

Seat covers

Please note the following for handling and conservation of the seat covers:

- Before getting into the vehicle, close all Velcro fasteners that could touch the cloth seat covers and fabric trims. Open Velcro fasteners can cause damage to cloth seat covers and fabric trims.
- Avoid the direct contact of sharp-edged items and accessories to the upholstery and fabric trims in order to prevent damage. Accessories include zips, studs, rhinestones on clothing or belts.



- Dust and grit in the pores and seams should be removed regularly so that no permanent damage is caused to the surface of the seats by scratching.
- Always check whether garments are colourfast to prevent damage to the upholstery. This is especially important for light-coloured upholstery.

Cleaning paddings, fabric and NT - Non microfiber fabric

- Please read and follow the instructions, notes and warnings on the package before using cleaning products.
- Upholstery, fabric trims, NT - non-microfiber fabric trims, and carpeting must be regularly cleaned with a vacuum cleaner (brush tip).
- Do not use high-pressure cleaners, steam cleaners or coolant spray.
- We recommend that you use a soft sponge or commercially available lint-free microfiber cloth for cleaning jobs → ①.
- Clean NT - non-microfiber fabric surfaces with a slightly damp cotton or woollen cloth or a commercially available lint-free microfiber cloth → ①.

General surface soiling of the upholstery and fabric trim can be cleaned with standard foam cleaners.

If the upholstery and fabric trims are generally heavily soiled, consult a Volkswagen Dealership for information on suitable cleaning methods before attempting any cleaning procedure. Take the vehicle to a specialist cleaning company, if necessary.

Padding, fabric and NT - Non microfiber fabric stain treatment

When cleaning stains, it may be necessary to clean the entire surface and not just the stain itself. This particularly applies if the surface shows general signs of wear. The cleaned area could otherwise be lighter than the surrounding area. If in doubt, consult a specialist cleaning company.

Type of stain	Recommended seat cover and upholstery cleaning process
<i>Water-based stains</i> (e.g. coffee, chocolate, fruit juice or soda).	<ul style="list-style-type: none"> – First, clean the stain as quick as possible with a dry and absorbent cloth, in order to prevent the liquid from penetrating the upholstery. – For more difficult stains, moisten the sponge with an atomizer and clean the stain in circular motions. – Clean with a dry and absorbent cloth.
<i>Stubborn stains</i> , e.g. chocolate, make-up.	<ul style="list-style-type: none"> – Only use cleaning products approved by Volkswagen. – Take the vehicle to a specialist cleaning company, if necessary.
<i>Oily stains</i> , e.g. oil, lipstick.	

Conservation and treatment of natural leather covers

Please contact a Volkswagen Dealership or qualified workshop if you have any questions on cleaning and caring for the leather equipment in your vehicle.

Natural leather is a sensitive material.

- Use a leather cream with sunlight protection and impregnation properties on a regular basis and always after cleaning. The cream nourishes the leather, keeps it breathable and supple and replaces lost moisture. It also protects the surface.
- Leather should be cleaned every two to three months to remove fresh stains.
- Treat the leather with a special leather care product every six months → ①.
- Always apply cleaning and care products extremely sparingly and always use a dry cotton or woollen cloth that is lint free. Do not apply cleaning and care products directly to the leather.
- Remove fresh stains such as ink, ball-point pen ink, lipstick, shoe cream etc. as quickly as possible.
- Look after the pigment. Use a special coloured leather cream to refresh the colour where necessary.
- Wipe off excess with a soft cloth.

Cleaning natural leather covers

Volkswagen recommends that you use a damp cotton or wool cloth for general cleaning purposes.

Do not let the water soak through the leather or soak into the seams.

Please observe the following notes **before cleaning** the leather upholstery → page 246, *Cleaning paddings, fabric and NT - Non microfiber fabric*.

Type of stain	Cleaning
Stubborn stains	<ul style="list-style-type: none">– Spread the smooth soap solution^{a)} with a twisted cloth.– Absorb by pressing lightly with a dry cloth.
Water-based stains, such as coffee, tea, juice, blood, etc.	<ul style="list-style-type: none">– Remove stains while they are still moist with an absorbent cloth.– Use a cleaning product appropriate for dry stains → ⓘ.
Oily stains, such as oil, lipstick, etc.	<ul style="list-style-type: none">– Remove stains while they are still moist with an absorbent cloth.– Use a cleaning product appropriate for stains that still have not penetrated the surface → ⓘ.
Special stains, such as biro, felt tip pen, nail varnish, emulsion paint, shoe polish, etc.	<ul style="list-style-type: none">– Dry with a dry and absorbent cloth.– Clean with a special leather stain remover.

a) Smooth soap solution: two teaspoons of neutral soap in one litre of water.

Cleaning vinyl covers

Please observe the following notes before cleaning vinyl covers → page 246, *Cleaning paddings, fabric and NT - Non microfiber fabric*.

Only use water and neutral soap to clean vinyl covers.

Cleaning stowage compartments and drink holders

Some stowage compartments and cup holders have a removable rubber insert in the base.

- Moisten a clean, lint-free cloth with water and clean the parts.
- If this does not provide satisfactory results, use a special **solvent-free** plastic cleaning product.

Conserving and cleaning plastic parts, wooden decorative elements and the dash panel

- Moisten a clean, lint-free cloth with water and clean the parts.
- Treat *plastic parts (inside and outside the vehicle) and the dashboard* with a special **solvent-free** plastic cleaning and care product approved by Volkswagen → ⓘ.
- Treat *wooden trims* with a mild soap solution¹⁾.

Cleaning the seatbelts

The automatic belt will not be able to roll back properly if there is dirt on the belt and thus prevent the seat belt from working properly.

Seat belts must never be removed for cleaning purposes.

- Remove dirt with a soft brush → ⓘ.
- Carefully pull the dirty seat belt right out and leave it out.
- Clean the seat belt with a *mild*¹⁾ soap solution.
- Allow the seat belt fabric to dry completely.
- Do not allow the seat belt to roll up until it has dried completely.

WARNING

Incorrect care and cleaning of vehicle parts can impair the safety features of the vehicle and thus cause serious injuries.

- Vehicle parts must be cleaned according to the manufacturer's instructions.
- Only use approved or recommended cleaning products.

WARNING

Cleaning agents that contain solvents cause the surface of the airbag modules to become porous. In case of an accident that triggers the airbag, loose plastic parts can cause serious injury.

¹⁾ Smooth soap solution: two teaspoons of neutral soap in one litre of water.

- Never clean the dash panel or the airbag covers with cleansers that contain solvents.

WARNING

Check the condition of all seat belts regularly. Damaged belt bands or any other seat belt parts must be removed and replaced immediately by a Volkswagen Dealership. Damaged seat belts are extremely dangerous and can cause severe or fatal injuries.

- Never use chemical cleaning agents on the seat belts or their components. Additionally, seat belts may not come into contact with corrosive fluids, solvents or sharp objects. This can considerably weaken the bands.
- After cleaning, allow seat belts to dry completely before rolling them up. Otherwise the automatic belt retractors could become damaged and thus impair their function.
- Never let any foreign bodies or liquids enter the seat belt buckle slot. This could prevent the belt buckle and seat belt from working properly.
- Never attempt to repair, modify or remove the seat belts yourself.
- Damaged seat belts must be replaced immediately with new seat belts approved by Volkswagen for your vehicle type. Seat belts subjected to stress and stretched during an accident must be replaced by a Volkswagen Dealership. Replacement may be necessary even if there is no apparent damage. The belt anchorage should also be checked.

NOTICE

- Cleaning agents that contain solvents attack the material and can cause irreparable damages.
- Stains, dirt, and other deposits with corrosive components and solvents may cause irreparable damages to the material, even in case of short exposure periods.
- Stains, dirt and other deposits must be removed as quickly as possible and not allowed to dry in.
- To avoid damage, stubborn stains should be removed by a specialist cleaning company.

NOTICE

- Do not use steam cleaners as the steam pushes the soiling into the fabric and sets it.

- High-pressure cleaners and coolant sprays can damage the upholstery.

NOTICE

- Soft-bristle brushes should be used on carpets and mats only! Other surfaces could be damaged by brushes.
- When washing paste or fine detergent solutions are applied with a damp cloth or sponge, visible edges may appear on the upholstery once it has dried. These edges are usually difficult or even impossible to remove.

NOTICE

- The NT - non-microfiber fabric cannot be drenched in any circumstances.
- Do not use leather care products, solvents, wax polish, shoe cream, stain removers or similar products on NT - non-microfiber fabric.
- Do not use brushes if cleaning with liquids. This could damage the surface of the material.

NOTICE

- Never use solvents, wax polish, shoe cream, spot removers or similar products on leather.
- A stain cannot be removed if it has been left on the leather for a long time and has penetrated the surface.
- Spilt liquids should be cleaned immediately using an absorbent cloth as the leather surface and seams absorb liquids quickly.
- Protect the leather from excessive sun exposure to prevent fading.

NOTICE

Never use solvents, wax polish, shoe cream, spot removers or similar products on vinyl. These may cause the material to become hard and brittle prematurely.

NOTICE

Some car fresheners have substances in its chemical formula that may damage the structure, surface and paintwork of the vehicle's internal linings.

 Suitable care products are available from a Volkswagen Dealership.

 Volkswagen recommends cleaning stained upholstery in a qualified workshop.

 Slight colour changes of the natural leather covers due to use are normal.

Accessories, modifications, repairs and part replacement

Accessories and spare parts

Volkswagen recommends that you seek advice from a Volkswagen Dealership before purchasing accessories, spare parts or service fluids. For example, if the vehicle is to be retrofitted with accessories or if parts have to be renewed.

Volkswagen Dealerships can recommend accessories, parts and service fluids which are suitable for your requirements.

Volkswagen strongly recommends that you only use approved **Volkswagen Accessories** and **Volkswagen Genuine Parts**. These parts and accessories have been specially tested by Volkswagen for suitability, reliability and safety. Volkswagen Dealerships are also qualified to perform proper installation procedures.

Despite constant monitoring of the market, products **not approved by Volkswagen** cannot be evaluated by Volkswagen in terms of their credibility, safety and suitability for use in the vehicle. Volkswagen can therefore assume no responsibility for these parts, even if they have been approved by an official testing agency or are covered by an official approval certificate.

WARNING

Incorrectly performed repairs or modifications to your vehicle can impair the effectiveness of the airbags, cause operating failures, accidents and fatal injuries.

- Never secure or mount objects such as cup holders, telephone holders and GPS (global positioning system) on or next to the airbag covers or within the deployment zone of the airbag.
- Items which are either on or next to the airbag module covers or are in the deployment zone of the airbags can cause severe or even fatal injuries should the airbags be activated.

WARNING

Unsuitable spare parts and accessories as well as incorrectly carried out work, modifications and repairs can lead to damage to the vehicle, accidents and serious injuries.

- Volkswagen strongly recommends that you only use approved Volkswagen accessories and Volkswagen genuine parts. These parts and accessories have been specially tested by Volkswagen for suitability, reliability and safety.
- Repairs and modifications to your vehicle should only be carried out by a Volkswagen Dealership. Volkswagen Dealerships have the necessary tools, diagnostic equipment, repair information and qualified personnel.
- Never fit parts to your vehicle that are in any way different from the factory-fitted parts.
- Never secure or mount objects such as cup holders, telephone holders and GPS (global positioning system) on or next to the airbag covers or within the deployment zone of the airbag.
- Only use wheel/tyre combinations which have been approved by Volkswagen for your vehicle type.

Volkswagen recommends that all repairs and technical modifications be performed by an authorised Volkswagen Dealership with **Volkswagen Genuine Parts**.

WARNING

Incorrect repairs and modifications can cause functional problems and damage to the vehicle and impair the effectiveness of the driver assist systems. This could lead to accidents and severe injuries.

- Repairs and modifications to your vehicle should only be carried out by a Volkswagen Dealership.



Repairs and limitations in the airbag system

Repairs and modifications must always be carried out according to Volkswagen specifications → 

Modifications and repairs to the front bumper, the doors, the front seats, the roof or the body-work should be carried out by a Volkswagen Dealership. System components and airbag system sensors can be located on these vehicle components.

If you work on the airbag system or remove and install parts of the system when performing other repair work, parts of the airbag system may be damaged. The consequence may be that, in the event of an accident, the airbag inflates incorrectly or does not inflate at all.

Regulations must be observed to ensure that the effectiveness of the airbags is not reduced and that removed parts do not cause any injuries or environmental pollution. Volkswagen Dealerships are familiar with such requirements.

Any modifications to the vehicle's suspension could prevent the airbag system from working properly during a collision. For example, using tyre/ wheel combinations which have not been approved by Volkswagen, lowering the vehicle, making modifications to the suspension rate including work on the springs, struts and shock absorbers could cause the forces which are measured by the airbag sensors and sent to the electronic control unit to change. Some changes to the suspension could cause the forces measured by the sensors to increase. This can lead to the



Repairs and technical modifications

Repairs and modifications must always be carried out according to Volkswagen specifications → 

Unauthorised modifications to the electronic components or software in the vehicle may cause faults. As the electronic components are linked together in networks, these faults may indirectly affect the working of other systems. This can seriously impair safety, lead to excessive wear of components, and also compromise the vehicle's operating function.

The authorised Volkswagen repairer cannot be held liable for any damage caused by technical modifications and/or work performed incorrectly.

The authorised Volkswagen repairer cannot be held liable for any damage caused by technical modifications and repairs performed incorrectly. Such damages are also not covered by the Volkswagen warranty.

airbag system being triggered in collision scenarios where it normally would not be triggered if modifications to the suspension had not been made. Other modifications can cause the forces measured by the sensors to decrease, preventing the airbag system from being triggered when it should have been.

WARNING

Incorrect repairs and modifications can cause functional problems and damage to the vehicle and impair the effectiveness of the airbag system. This could lead to accidents and severe injuries.

- Repairs and modifications to your vehicle should only be carried out by a Volkswagen Dealership.
- Airbag modules cannot be repaired. They must be replaced.
- Never use recycled airbag components or components that have been taken from end-of-life vehicles in your vehicle.

WARNING

Modifications to the vehicle's suspension, including the use of unsuitable tyre/wheel combinations not approved by Volkswagen may cause the airbag system to work differently and increase the risk of serious or fatal injuries in the event of an accident.

- Never install any components in the suspension system that do not have the same characteristics as the original factory-fitted components.
- Never use tyre/wheel combinations that have not been approved by Volkswagen.

 Airbag system parts must never be reused in case of vehicle or component scrapping. All applicable environment disposal standards must be followed, in addition to other safety standards in effect. Volkswagen Dealerships are familiar with such requirements.

Any retrofit installation of electrical or electronic equipment in the vehicle will affect its vehicle type approval. Under certain circumstances, this can negate the type approval for the vehicle.

Volkswagen has approved the vehicle for use with two-way radios providing the following conditions are observed:

- Correct installation of external aerial.
- Maximum transmitting power of 10 watts.

An external aerial is needed to give the equipment its optimal range.

Should a two way radio need to be installed with a transmission power of more than 10 W, contact a specialized company. A qualified workshop is familiar with the technical options for retrofitting. Volkswagen recommends using a Volkswagen Dealership for this purpose.

Please observe legislation as well as the instructions and information given in the operating manuals for radio equipment.

WARNING

If radio equipment is not secured or not properly secured in the vehicle, it could be flung through the interior during a sudden driving or braking manoeuvre, or in the event of an accident. This can cause injuries.

- While the vehicle is in motion, always secure two-way radios properly outside the airbag deployment zones or stow them away safely.

CAUTION

If two-way radios that are not connected to an external aerial are used, electromagnetic radiation in the vehicle could exceed limit values and thus be a health hazard for drivers and other vehicle occupants. This also applies to external aerials which have not been correctly installed.

- Two-way radios should only be used in the vehicle if an external aerial is properly connected.

Retrofitting two-way radios

You will need an external aerial to use a two-way radio in the vehicle.

Information stored in control units

Your vehicle is factory fitted with electronic control units which are responsible for engine and transmission management. The control units also monitor the function of the exhaust system and the airbags.

These electronic control units continuously evaluate data relevant to the vehicle while the vehicle is being driven. Only this data will be stored if there are any faults recorded or any deviations from the specified values. This is generally displayed by the indicator lamps on the instrument cluster.

Special units are required to read and evaluate data stored in the control units.

Under no circumstances do such control units record conversations held inside the vehicle.

Reprogramming control units

All data for the control of components is initially stored in the control units. Some convenience functions, such as lane change flash, single door unlocking and displays, can be reprogrammed using special workshop equipment. If the convenience functions are reprogrammed, the descriptions in your vehicle wallet will no longer correspond with the original functions.

Volkswagen recommends adding the reprogramming coverage to the digital warranty and maintenance at a Volkswagen Dealership.

Information about possible reprogramming can be obtained from Volkswagen Dealerships.

Reading the vehicle fault memory

A diagnosis interface for reading the fault memories is located in the vehicle interior → . Electronic control unit status and operating data is stored in the fault memory. Additional information on stored data can be obtained from your Volkswagen Dealership or qualified workshop.

The diagnostics connection is located on the driver's side footwell, near the fuse box.

The fault memory should only be read and reset by a Volkswagen Dealership.

After correcting faults, the respective data is deleted from the fault memory. Other memory contents are successfully updated.

WARNING

Improper use of the diagnostics connection may lead to operating faults, in addition to severe accidents and injuries.

- Never read the faulty memory through the diagnostics connection yourself.
- The diagnostics connection must only be read by a Volkswagen Dealership or qualified workshop.

Using a mobile telephone in the vehicle without a connection to the external aerial

During a telephone call and when in standby mode, mobile telephones transmit and receive radio waves, also known as high-frequency energy. Current scientific literature warns us that radio waves can be harmful to human beings if they exceed certain limits. Government agencies and international committees have introduced threshold values and guidelines to ensure that electromagnetic radiation produced by mobile telephones does not pose a hazard to health. However, there is no proven scientific evidence that demonstrates that cordless telephones are absolutely safe.

For this reason, some experts are calling for a precautionary use of mobile telephones through the application of measures which reduce the level of personal exposure to electromagnetic radiation.

If a mobile telephone which is not connected to the vehicle's external aerial is used inside the vehicle, the level of electromagnetic radiation could be higher than when the mobile telephone is connected to an integrated aerial or any other external aerial.

If the vehicle is fitted with a suitable hands-free system which enables the use of innumerable additional functions of Bluetooth® compatible mobile telephones, this will comply with legal requirements in many countries which permit the use of a mobile telephone in a vehicle only if a hands-free system is used.

Mobile telephones must be located in a suitable telephone holder or be stored securely in the vehicle. If a telephone holder is used it must be securely attached to the base plate. This is the only way to ensure that the mobile telephone is securely attached to the dashboard and always within reach of the driver.

If the mobile telephone is connected to a telephone aerial integrated in the vehicle or to an external telephone aerial, the electromagnetic radiation generated by the telephone that could affect the human body is reduced. Moreover, it improves the quality of the signal.

If a mobile telephone is used in the vehicle interior or without this hands-free system, it is not safely secured in the vehicle and also not connected to the vehicle's external telephone aerial. Furthermore, the mobile telephone is not being charged in the telephone holder. It is also likely that the telephone connection will be disrupted and the signal strength will be poor.

A mobile telephone should only be used in the vehicle if it is connected to a hands-free unit. Volkswagen recommends the use of an external aerial when using a mobile telephone in the vehicle.

Bluetooth® is a registered trademark of Bluetooth® SIG, Inc.

⚠ WARNING

If a mobile phone is not secured or not properly secured in the vehicle, it could be flung through the interior during a sudden driving or braking manoeuvre, or in the event of an accident. This can cause injuries.

- Mobile telephones, other devices and telephone accessories such as telephone holders, notepads and GPS (global positioning system) must always be secured properly outside of the airbag deployment zones or be stowed in a safe place whilst the vehicle is in motion.

⚠ WARNING

If mobile telephones or two-way radios that are not connected to an external aerial are used, electromagnetic radiation in the vehicle could exceed limit values and thus be a health hazard for drivers and other vehicle occupants. This also applies to external aerials which have not been correctly installed.

- Maintain a minimum distance of 20 centimetres between the mobile phone's antenna and the heart pacemaker, since the former may interfere with the latter.
- Do not carry a mobile telephone in your breast pocket above a pacemaker.
- The mobile telephone must be switched off immediately if there is a suspicion of interference with a pacemaker or other medical devices.

Vehicle lifting points

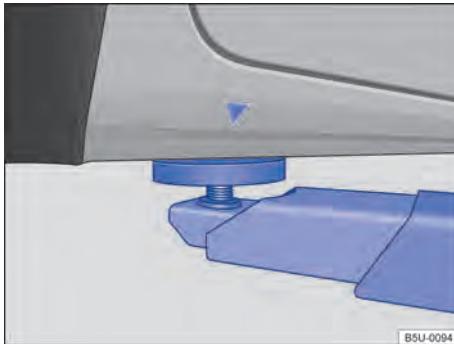


Fig. 208 Front lifting points for lifting with platform or vehicle jack.

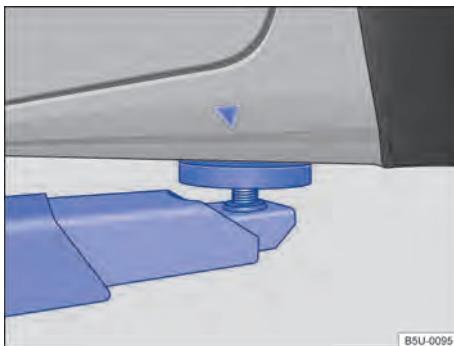


Fig. 209 Rear lifting points for lifting with platform or vehicle jack.

For vehicles equipped with external sills, the jacking point access cover must be removed before lifting the vehicle → page 232.

The vehicle may only be lifted at the points shown in the illustrations → **Fig. 208** and → **Fig. 209**. If the vehicle is not raised on the

lifting points shown, the vehicle could be damaged → ①. There is also a risk of severe injuries → .

Hydraulic lifting platforms may not be used for lifting the vehicle.

There are many precautions that have to be followed when lifting a vehicle on a lifting platform or floor jack. Do not try to lift a vehicle on a lifting platform or vehicle jack unless you have the training, knowledge and experience to be able to do so safely.

Instructions to lift the vehicle with the jack
→ page 232.

WARNING

Lifting your vehicle incorrectly with a lifting platform or vehicle jack can cause accidents and serious personal injury:

- Always read and heed the operating instructions from the lifting platform or vehicle jack manufacturer and any legal regulations before lifting the vehicle.
- All occupants must leave the vehicle before it is lifted.
- The vehicle may only be lifted at the points shown in the illustrations → **Fig. 208** and → **Fig. 209**. If the vehicle is not lifted at the points shown, it could fall off the lifting platform when work is carried out, e.g. when the engine or transmission is removed.
- The vehicle jacking points must be placed on the centre of the support surfaces of the vehicle lift and have as much contact as possible.
- Never start the engine when the vehicle is raised! The vibration of the engine could cause the vehicle to fall off the lifting point.
- If work has to be carried out underneath the lifted vehicle, secure the vehicle with suitable jack stands with a sufficient load-bearing capacity.
- Never climb up the lifting platform.
- Always ensure that the vehicle is not heavier than the lifting capacity of the lifting platform.

NOTICE

- Never lift the vehicle on the engine oil sump, the transmission or the front or rear axle.

- To prevent damage to the underside of the vehicle when lifting, rubber pads must be used. Make sure that the lifting platform arms are able to move freely.
- The lifting platform arms must not be allowed to come into contact with the sills or any other part of the vehicle.



Consumer information

Volkswagen warranty

Volkswagen Dealership Warranty

Volkswagen Dealerships provide a warranty against manufacturing defects for the vehicles sold by them.

Volkswagen Dealerships provide a warranty against manufacturing defects for new vehicles.

Please refer to your purchase agreement for more information on warranty terms and conditions.

For additional information, please contact your Volkswagen Dealership.

The warranty does not cover natural wearing, damages caused by abusive vehicle use, improper maintenance, or unauthorized modifications.

If your vehicle is not operating properly, please contact the nearest Volkswagen Dealership.

Body warranty

Volkswagen Dealerships grant vehicles they sell a warranty against puncture corrosion on the body.

In addition to the warranty terms for new Volkswagen vehicles, Volkswagen Dealerships also grant on the vehicles they sell – according to the purchase contract – a warranty against perforating body corrosion over a period of time limited to **6 years**.

In case such defects are eventually identified, they will be fully repaired by any Volkswagen Dealership free of charge.

The warranty is voided in the following cases:

- defects result from external influences or lack of proper vehicle maintenance; or
- any body defects are not repaired in a timely fashion, as per the Factory's instructions; or
- corrosion perforations result from noncompliance with the manufacturer's instructions regarding body repairs.

After conducting due body repair services, your Volkswagen Dealership will confirm due warranty coverage for corrosion perforations in the repaired area.

General information

Volkswagen offers one of the largest and most efficient Dealership Network to assist your vehicle.

Volkswagen Dealerships are equipped with cutting-edge equipment and tools designed especially for your vehicle, in addition to highly-qualified technical personnel and a wide range of vehicle parts.

All Volkswagen Dealerships abide by high-end standards recommended by the Factory. These include Service instructions, which ensure all repair activities are carried out based on optimal quality standards and in a timely fashion, guaranteeing appropriate and safe vehicle conditions.

Volkswagen Dealerships are clearly prepared to assist your vehicle. Make sure you don't miss out on all of these amenities.

Additional service offers

Mandatory inspection services

Depending on local laws, the vehicle must be submitted to periodic mandatory inspections.

In several countries, vehicles must be periodically submitted to inspections conducted by competent authorities, duly evidencing its effective and safe traffic operation and/or exhaust system conditions.

Volkswagen Dealerships are aware of all mandatory inspections and duly qualified to perform such verification services, along with an inspection service. This will save you time and money.

They will indicate aspects that require special attention in order to prevent your vehicle from being submitted to new inspections due to faults.

Volkswagen® Genuine Parts

Volkswagen® Genuine Parts are particularly designed for your vehicle and approved by Volkswagen, especially regarding safety measures. These parts accurately comply with Factory specifications regarding type, measurements, and materials. Volkswagen® Genuine Parts are the most suitable for your vehicle. Therefore, we recommend always using Volkswagen® Genuine Parts. Volkswagen does not guarantee the reliability, safety, and suitability of non-original parts.

The most essential Volkswagen® Genuine Parts are virtually always available in stock. If any specific part is not available in stock, it can usually be ordered and received in brief periods of time.

Volkswagen Dealerships offer a warranty for Volkswagen® Genuine Parts after assembly or purchase. Always keep your Volkswagen Dealership invoice for warranty purposes.

For additional information, please contact your Volkswagen Dealership.

Warranty claims regarding these parts can be filed at any Volkswagen Dealership.

In addition, Volkswagen Dealerships offer all appropriate products to maintain and care for your vehicle.

Information stickers and plates

Safety certificates, stickers and plates containing important information on operating the vehicle are factory-fitted in the engine compartment and on certain parts such as the tank flap, passenger sun visor, the driver door pillar or in the luggage compartment floor.

- Never remove or damage the safety certificates, stickers and plates. They must remain legible at all times.
- If vehicle parts bearing safety certificates, stickers or plates are removed from the vehicle, replacement safety certificates, stickers or plates with the same information must be applied properly to the new parts by Volkswagen Dealership or qualified workshop.

Safety certificate

A safety certificate on the door pillar of the driver door provides the information that all necessary safety standards and specifications of the transport safety authorities of the individual country have been met at the time of production. The month and year of production and the chassis number may also be listed.

High voltage warning stickers

There is a sticker near the engine compartment cover lock that provides a warning of the high voltage in the electrical system of the vehicle.

WARNING

Handling the vehicle incorrectly increases the risk of accident and injuries.

- Legal provisions must be followed.
- Consult the Owner's Manual.

NOTICE

Handling the vehicle incorrectly may cause damages to the vehicle.

- Legal provisions must be followed.
- Perform maintenance services as prescribed.

Original Volkswagen accessories

We recommend using original Volkswagen accessories and other accessories approved by Volkswagen.

Please follow the recommendations below when equipping your vehicle with accessories:

Only use original Volkswagen accessories or other accessories duly approved by Volkswagen, whose reliability, safety, and suitability have been duly tested for the specific vehicle model. Volkswagen does not guarantee the reliability, safety, and suitability of non-original parts.

Volkswagen Dealerships offer a warranty for original accessories after assembly or purchase. Always keep your Volkswagen Dealership invoice for warranty purposes.

For additional information, please contact your Volkswagen Dealership.

In addition to providing accurate and updated information, the Volkswagen Accessories Service also offers optional equipment assembly services by qualified personnel.

Installing the radio

Follow the recommendations below when retrofitting a radio or replacing a factory-fitted radio:

- In some versions, existing vehicle connections were designed for original Volkswagen radios, as of the model year of 2005.
- Radio devices with different connections will have to use adapting cables, which are available at Volkswagen Dealerships.
- Radios **not** covered in the Volkswagen Original Accessories Programme may require additional adaptors if the signal feed is weak.
- Radios should be installed at a Volkswagen Dealership, whose personnel is qualified and trained on technical specifications of vehicles and if there are original radios and assembly parts required from the Volkswagen Accessories Programme, as well as the fact that all activities are conducted based on factory guidelines.
- The maximum power of original factory-fitted speakers is 20 W (RMS).
- Volkswagen recommends also using speakers, assembly sets, aerials and interference suppression kits of the Volkswagen Accessories Programme. These parts were designed especially for each vehicle type.

WARNING

Never cut the connection wire, leaving it exposed. This may cause fires.

NOTICE

- Different radio connections may destroy or affect important electrical components. Eventual interferences, such as the speed signal, may cause faults in the engine, ABS system, etc.
- Simply connecting the speed signal to a radio with automatic volume adjustment from different manufacturers may cause such faults.

Headphones

When using mobile phones or other devices, consult the respective owner's manual, applicable laws and standards regarding the use of headphones. For example, driving while using headphones is prohibited in Brazil.

WARNING

When using headphones while driving, exterior acoustic signals, such as police and fire department sirens and other vehicles' horns, may not be audible and may cause accidents.

Declaration of conformity

The individual manufacturer declares herewith that the following products conform, at the time of vehicle production, with the basic requirements and other applicable laws and regulations:

Radiofrequency equipment

- Electronic immobilizer.
- Vehicle key with remote control.

Electrical equipment

- 12-volt socket.

License to use the remote control key

The remote control key, activated via radiofrequency, complies with all Brazilian approval and use criteria.

Such approval must be used to obtain use licenses in other countries.

License to use the electronic immobilizer

The electronic immobilizer, activated via radiofrequency, complies with all Brazilian approval and use criteria.

Such approval must be used to obtain use licenses in other countries.

Technical data

Guidelines on the technical data

Introduction

To check which engine a vehicle is equipped with, refer to the vehicle data sticker and vehicle license documents.

All data in the official vehicle documents take precedence over this data. All data in this manual are valid for the basic model. The figures may be different if additional equipment is fitted, for different models, for special vehicles and for other countries.

Engine

On the vehicle data sticker or in the vehicle documents it can be seen with which engine the vehicle is equipped.

Performance figures

All values apply to the basic model. Values may vary according to the quality of local fuel, vehicle equipment, load, tyre pressure, temperature, altitude and driving behaviour.

Range

All data in the official vehicle documents take precedence over this data. All data in this manual are valid for the basic model. The vehicle data sticker and official vehicle documents indicate the vehicle's engine.

The values quoted here may differ if additional equipment is fitted, for different models or for special vehicles.

The values for the kerb weight in the following table apply for the road-ready vehicle with service fluids, including fuel tank carrying 90% of total capacity and tools and spare tyre, if applicable → . The indicated gear order weight is increased due to optional equipment and additional accessories installed, which proportionally reduces the maximum permitted load.

The load includes the following weights:

- Driver and passengers.
- Luggage.

- Roof load, including the roof luggage carrier system.
- Trailer towing support load.

Gross combination weight

The listed admissible traction ratings are only applicable for altitudes of up to 1,000 m above sea level. The maximum weight of the car and trailer must be reduced by approximately 10% for every further 1,000 m in altitude.

WARNING

Ignoring or exceeding specific values and limits regarding weights, payloads, vehicle dimensions, and speed limit could result in severe accidents and injuries.

WARNING

Exceeding the permitted gross weight and axle weights may damage the vehicle and cause severe accidents and injuries.

- Actual axle loads must never exceed permitted axle loads.
- The payload and distribution of the load in the vehicle affect driving response and braking distance. Adjust your speed accordingly.
- Observing maximum weight and axle load limits is essential to ensure the safety of the driver, passengers and other road users.

WARNING

Accidents and severe injuries can occur if the maximum trailer weight is exceeded.

- Never exceed the specified maximum trailer weight.

NOTICE

The payload should be distributed as evenly as possible in the vehicle. When transporting heavy objects in the luggage compartment, they should be placed either in front of or over the rear axle in order to minimise the effect on the vehicle's handling.



Fuel consumption information

► Please refer to **⚠** and **ⓘ** at the start of the chapter on page 258.

The figures quoted for fuel consumption and emissions do not refer to any one individual vehicle. Their purpose is to enable comparisons to be made between various vehicle types. Fuel consumption does not depend exclusively on the efficiency of the vehicle, but also on the way it is driven and other non-technical factors.

Measuring fuel consumption

The vehicle consumption and emissions values were determined according to directive UE 70/220/EEC in the currently valid version and apply for the given vehicle kerb weight. The figures **do not** refer to any one individual vehicle. Two measuring cycles are carried out on a rolling road test bed to calculate fuel consumption. The test criteria are as follows:

Urban cycle The urban cycle starts with an engine cold start. Thereafter city driving at speeds between 0 and 50 km/h (0 and 31 mph) is simulated.

Extra-urban cycle In the extra-urban cycle the car undergoes frequent acceleration and braking in all gears, as in normal everyday driving. In this case the driving speed ranges from 0 to 120 km/h (0 to 75 mph).

Combined cycle The combined consumption is calculated with a weighting of around 37% for the urban cycle and 63% for the extra-urban cycle.

ⓘ Kerb weight may vary according to the respective version. This may slightly increase fuel consumption figures.

ⓘ In practical terms, fuel consumption figures may differ from those measured based on the UE 70/220/EEC guidelines.

Vehicle identification data

► Please refer to **⚠** and **ⓘ** at the start of the chapter on page 258.

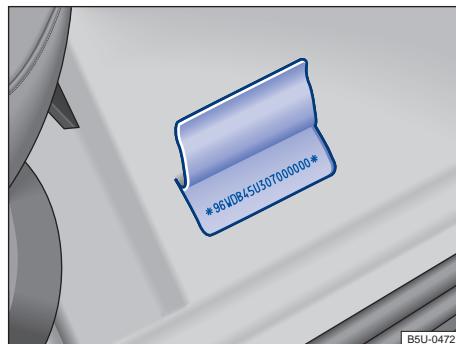


Fig. 210 In front of the front passenger seat: vehicle identification number (chassis number) on the floor, in front of the passenger seat.

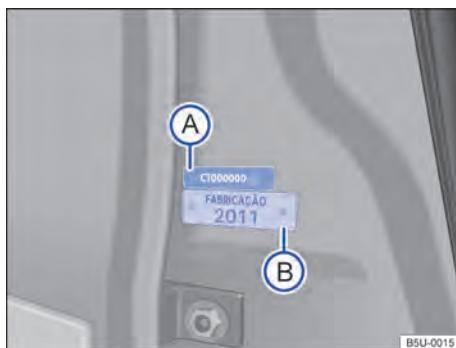


Fig. 211 On the front right door pillar: vehicle partial identification number label **(A)** and manufacturing year plate **(B)**.

Vehicle identification number (VIN - chassis number)

△ The vehicle identification number (VIN) is located on the floor, in front of the front passenger seat → **Fig. 210**.

Partial vehicle identification number (VIS – partial chassis number)

The plates (VIS) are located on the lower area of the front right door pillar → **Fig. 211 (A)** and in the engine compartment on the driver side, in the suspension strut. These plates are destroyed when removed.

Additionally, the VIS number is also available in the windscreen, rear window, and side windows.

Engine identification number

The engine identification number is located on the engine block. Open the bonnet to access the manufacturer identification sticker  → page 200.

In some regions, the engine identification number is included in the official vehicle document.

Manufacturer identification sticker

The manufacturer identification sticker is located in the front cross strut in the engine compartment. Open the bonnet to access the manufacturer identification sticker  → page 200.

Manufacturing year identification plate

The manufacturing year identification plate is located on the lower area of the front right door pillar → Fig. 211 . This plate is destroyed when removed.

Maximum cargo capacity identification label

The label containing empty vehicle weight, passenger capacity, total gross weight, and maximum traction capacity is located on the driver door column.

NOTICE

In case it is necessary to replace stickers or re-engage vehicle components, contact a local Volkswagen Dealership.

NOTICE

The plastic layer applied over the vehicle identification number (chassis number) engraving is an anti-corrosive protection that prevents transfer-

ring the number into a paper sheet. Therefore, it must not be removed under any circumstances - risk of voiding warranty against perforation due to corrosion!

Information on the air conditioning system

 Please refer to  and  at the start of the chapter on page 258.

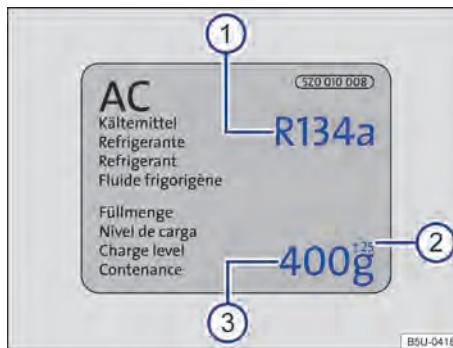


Fig. 212 Information on the air conditioning.

Key for → Fig. 212:

-  Air conditioner coolant specification.
-  Air conditioner load level tolerance.
-  Air conditioner load level

Dimensions

Please refer to **⚠** and **ⓘ** at the start of the chapter on page 258.

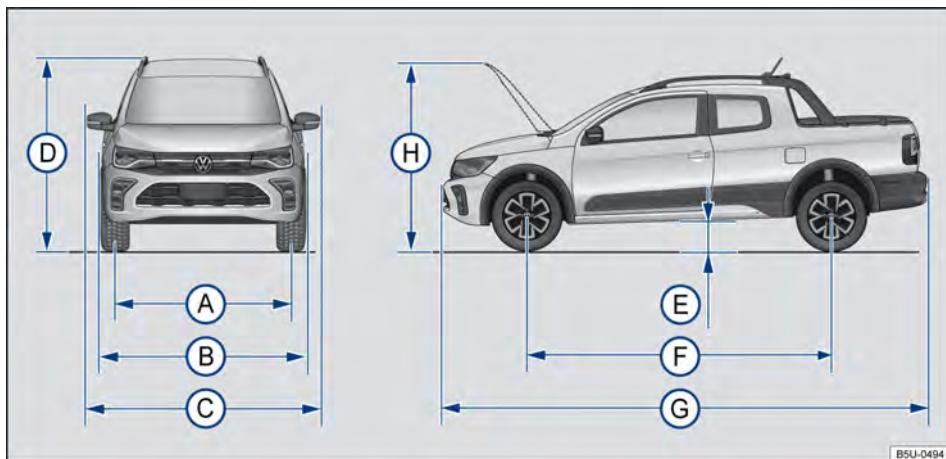


Fig. 213 Dimensions.

Table indications apply for the basic model with basic equipment.

Indicated values may vary due to wheel and tyre sizes, optional equipment, different model versions, or different accessory installations.

Key for → Fig. 213:	Single cab	Extended Cab	Double cab - Extreme version
(A) Front track ^{a)}		1,431 mm	
(A) Rear track ^{a)}	1,493 mm	1,494 mm	1,494 mm
(B) Vehicle width (<i>not including exterior mirrors</i>)		1,721 mm	
(C) Vehicle width (<i>including exterior mirrors</i>)		1,898 mm	
(D) Vehicle level (ground to roof) ^{b)}	1,520 mm	1,561 mm	1,560 mm
(E) Height of the free gap between the vehicle and the ground ^{b)}	196 mm		195 mm
(F) Clearance between axles	2,752 mm		
(G) Vehicle length	4,493 mm		
(H) Height with the bonnet open ^{b)}	1,769 mm	1,769 mm	
– Minimum vehicle rotation diameter		approximately 12.3 m	

a) Data may vary according to wheel and tyre sizes.

b) Weight in gear order, without driver and cargo.

Tailgate dimensions			
	Single cab	Extended Cab	Double cab - Extreme version
Useful floor length	1,655 mm	1,106 mm	1,106 mm
Useful top edge length	1,594 mm	1,017 mm	1,017 mm

Tailgate dimensions			
Maximum floor width	1,237 mm	1,200 mm	1,200 mm
Width between wheel boxes	1,006 mm	1,005 mm	1,005 mm
Luggage compartment height in the centre of the wheel	519 mm	519 mm	519 mm

 **NOTICE**

- Drive carefully in parking lots with long kerbs or fixed posts. Objects higher than the ground level may damage the bumper and other vehicle parts when parking.
- Carefully drive through terrain entrances, ramps, kerbs, and other objects. Lowered vehicle parts, such as the bumper, spoiler and chassis, engine or exhaust parts may be damaged in these situations.



Petrol engine

1.6 - 81 kW petrol

	Single cab	Extended Cab	Double cab - Extreme version
Engine power	81 kW (110 hp) at 5,750 rpm		
Maximum torque	155 Nm (15.8 kgfm) at 4.000 rpm		
EC		CWSA	
Cylinders, Displacement		4 cylinders, 1,598 cm ³	
Compression ratio		10,5:1	
Spark plugs		04C 905 616 ^{a)}	
Unleaded petrol free from other metallic additives (such as man- ganese)		<i>Valid only for Argentina</i> Grade 2 or Superior min. 91 ON Super i.o. 95 Normal ON 91 ^{b)}	
Gearbox type		5-gear manual gearbox (MQ 200)	
Maximum speed ^{c)}	176 km/h	174 km/h	174 km/h
Acceleration 0 - 80 km/h ^{c)}	6.6 s	6.7 s	6.8 s
Acceleration 0 - 100 km/h ^{c)}	10.2 s	10.4 s	10.5 s
Kerb weight ^{d)}	1,073 kg	1,109 kg	1,118 kg
Gross axle weight permitted (GWP)		1,740 kg	
Useful load	667 kg	631 kg	622 kg
Gross axle weight permitted in the front axle		840 kg	
Gross axle weight permitted in the rear axle		900 kg	
Roof load permitted		45 kg	
Trailer with brake, gradients up to 8%		400 kg	
Trailer without brake, gradients up to 8%		400 kg	
Gross combination weight (GCT ^{e)})		2,140 kg	



Valid only for Argentina Fuel consumption ^{f)} - Combined Euro 5 and Euro 4 legislation	7.57 l/100 km
Valid only for Argentina CO ₂ emissions	176 g/km

- a) Volkswagen part number. Use only spark plugs recommended by Volkswagen in your vehicle, in order to prevent damages to the engine and ensure compliance with applicable emissions laws.
- b) With slight reduction in performance and increase in fuel consumption, with graded increase in engine noise until detonation regulation intervention.
- c) Figures are related to the basic model. Data may vary according to the local fuel used, optional devices equipped in the vehicle, load, tyre pressure, temperature, altitude, vehicle route and driving habits.
- d) Weight for basic model without optional equipment.
- e) CMT = vehicle gross combination weight + maximum trailer weight.
- f) For reasons of vehicle registration and taxation, the fuel consumption of some engines may differ from the following indications in other countries.



TOTALFLEX engines

1.6 TOTALFLEX 78/85 kW engine

		Petrol	Ethanol
Engine power		78 kW (106 hp) at 5,750 rpm	85 kW (116 hp) at 5,750 rpm
Maximum torque		151 Nm (15.4 kgfm) at 4.000 rpm	158 Nm (16.1 kgfm) at 4.000 rpm
EC	CNXD		
Cylinders, Displacement	4 cylinders, 1,598 cm ³		
Compression ratio	11,5:1		
Spark plugs	101 905 610.C ^{a)}		
Gearbox type	5-gear manual gearbox (MQ 200)		
Engine oil specifications	as per the VW 508 88 standard		
Maximum speed ^{b)}	Single cab	176 km/h	181 km/h
	Extended Cab	175 km/h	179 km/h
Acceleration 0 - 80 km/h ^{b)}	Single cab	6.8 s	6.6 s
	Extended Cab	7 s	6.7 s
Acceleration 0 - 100 km/h ^{b)}	Single cab	10.4 s	9.9 s
	Extended Cab	10.6 s	10.1 s
Kerb weight ^{c)}	Single cab	1,076 kg	
	Extended Cab	1,102 kg	
Gross axle weight permitted (GWP)		1,740 kg	
Useful load	Single cab	664 kg	
	Extended Cab	638 kg	
Gross axle weight permitted in the front axle		840 kg	
Gross axle weight permitted in the rear axle		900 kg	



Roof load permitted		45 kg
Trailer with brake, gradients up to 8%		400 kg
Trailer without brake, gradients up to 8%		400 kg
Gross combination weight (CMT ^{d)}		2,140 kg
Maximum sound level when vehicle is stationary ^{e)}	Single cab	85.7 dB (A)
	Extended Cab	85.1 dB (A)
Rotation at idling speed ^{f)}		840 +/- 50 rpm
CO emission at idle ^{f)}		< 0.2% (max)

a) Volkswagen part number. Use only spark plugs recommended by Volkswagen in your vehicle, in order to prevent damages to the engine and ensure compliance with applicable emissions laws.

b) Figures are related to the basic model. Data may vary according to the local fuel used, optional devices equipped in the vehicle, load, tyre pressure, temperature, altitude, vehicle route and driving habits.

c) Weight for basic model without optional equipment.

d) CMT = vehicle gross combination weight + maximum trailer weight.

e) This vehicle complies with the Noise pollution act for motor vehicles (PROCONVE).

f) This vehicle complies with the Environment preservation program for motor vehicles (PROCONVE).



1.6 TOTALFLEX 78/85 kW engine - Extreme version

Double cab - Extreme version	Petrol	Ethanol
Engine power	78 kW (106 hp) at 5,750 rpm	85 kW (116 hp) at 5,750 rpm
Maximum torque	151 Nm (15.4 kgfm) at 4.000 rpm	158 Nm (16.1 kgfm) at 4.000 rpm
EC		CNXD
Cylinders, Displacement		4 cylinders, 1,598 cm ³
Compression ratio		11,5:1
Spark plugs		04C 905 607 ^{a)}
Gearbox type	5-gear manual gearbox (MQ 200)	
Engine oil specifications		as per the VW 508 88 standard
Maximum speed ^{b)}	174 km/h	178 km/h
Acceleration 0 - 80 km/h ^{b)}	7 s	6.7 s
Acceleration 0 - 100 km/h ^{b)}	10.8 s	10.2 s
Kerb weight ^{c)}		1,135 kg
Gross axle weight permitted (GWP)		1,740 kg
Useful load		605 kg
Gross axle weight permitted in the front axle		840 kg
Gross axle weight permitted in the rear axle		900 kg
Roof load permitted		45 kg
Trailer with brake, gradients up to 8%		400 kg
Trailer without brake, gradients up to 8%		400 kg
Gross combination weight (CMT ^{d)}		2,140 kg
Maximum sound level when vehicle is stationary ^{e)}		85.1 dB (A)



Rotation at idling speed ^{f)}	840 +/- 50 rpm
CO emission at idle ^{f)}	< 0.2% (max)

- a) Volkswagen part number. Use only spark plugs recommended by Volkswagen in your vehicle, in order to prevent damages to the engine and ensure compliance with applicable emissions laws.
- b) Figures are related to the basic model. Data may vary according to the local fuel used, optional devices equipped in the vehicle, load, tyre pressure, temperature, altitude, vehicle route and driving habits.
- c) Weight for basic model without optional equipment.
- d) CMT = vehicle gross combination weight + maximum trailer weight.
- e) This vehicle complies with the Noise pollution act for motor vehicles (PROCONVE).
- f) This vehicle complies with the Environment preservation program for motor vehicles (PROCONVE).



Capacities

Items	Capacities		
	Petrol engines		TOTALFLEX Engine
	1.6 with 81 kW		1.6 of 78/85 kW
	Single cab and double cab	Extended Cab - Cross version	Single cab, double cab and double cab - Cross version
Windscreen washer fluid reservoir (→ page 204)	2.4 litres		
Fuel tank (→ page 179)	approximately 55 litres, of which approximately 8 litres reserve ^{a)}		
Engine oil capacity (→ page 206)	4.5 litres		

- a) The reserve will be activated when the total tank level is reduced to approximately 8 litres of fuel.



Luggage compartment capacities

Luggage compartment capacity		
Version	Measured volume ^{a)}	Maximum theoretical volume ^{b)}
Single cab	924 litres	1,027 litres
Extended cab	580 litres	645 litres

- a) Measurement carried out with standardized blocks according to ABNT NBR ISO 3832.

- b) Theoretical measurement of the total volume of the load compartment.



Abbreviations

Abbreviation	Definition
A	Amp; electrical current measurement unit.
A/h	Ampere-hour.
A2DP	Audio transmission technology via Bluetooth® common in many manufacturers (Advanced Audio Distribution Profile).
ABNT	Brazilian Association of Technical Standards.
ABS	Anti-lock brake system.
AM	Amplitude modulation (medium wave, MW).
ANATEL	Brazilian Telecommunications Agency.
AVRCP	Audio source remote control technology via Bluetooth® common in many manufacturers (Audio Video Remote Control Profile).
bar	Bar, unit adopted to measure pressure.
BAS	Brake assist
BCM	Body Control Module.
BFM	Basic Function Module.
BT-Audio	See A2DP or AVRCP.
CD	Compact Disk (CD) is an optical memory unit used to store digital music.
CDM	Engine code.
cm³	Cubic centimetres. Unit of displacement.
CO	Carbon monoxide.
CONTRAN	National Traffic Council
dB (A)	Decibel, unit adopted to measure sound.
DIN	German Institute for Standardisation.
E-FLEX	Warm starting system.
EBV	Electronic brake variator.
ECE	Economic Commission for Europe-Regelung.
EDS	Electronic differential lock.
EPC	Engine management system (Electronic Power Control).
ESC	Electronic stability control.
ESS	Emergency brake lights (Emergency Stop Signal).
FM	Frequency modulation (ultra short wave, UKW)
GALA	Adjustment of the volume in relation to the vehicle's speed.
GRA	Cruise control system.
HDC	Hill Descent Control.
HFP	Hands-Free-Profile.
hp	Horsepower, engine power.
INMETRO	National Institute of Metrology, Standardization and Industrial Quality.
kg	Kilogram, mass unit of the International System of Units.
kPa	Kilopascal, standard pressure and tension unit of the International System of Units.

Abbreviation	Definition
kW	Kilowatt, engine power.
l	Litre, capacity unit of the metric system.
LED	Light Emitting Diode.
m	Metre, length measurement unit of the International System of Units.
mm	Millimetre, length unit equal to one thousandth of a metre.
MP3	Audio file compression format.
MQ 200	5-speed manual transmission.
NBR	Brazilian Standard.
Nm	Newton metres, unit of engine torque.
° C	Celsius Degrees; temperature measurement unit.
PDC	Park Distance Control.
PIN	Personal identification number.
PROCONVE	Vehicular emission control program.
rpm	Engine revolutions per minute.
s	Seconds, basic time measurement unit of the International System of Units.
TCS	Traction control system.
TWI	Trade Wear Indicator.
UKW	Ultra-short wave (USW), frequency modulation.
USB	Universal Serial Bus
V	Volts, electrical difference of potential measurement unit.
VIN	Chassis number (Vehicle Identification Number).
VIS	Partial vehicle identification number with the last 8 digits of the running gear (Vehicle Indicator Section).
W	Watts, mechanical or electrical, thermal flow and energy flow of radiation measurement unit.
WMA	Audio file compression format.

Index

Numbers and Symbols

1,6 81kW petrol engine	263	operating failure	78
		operating instructions	78
		temperature setting	75
		tips	78
		vents	77
A			
ABS		Air recirculation mode	77
see brake assist systems	102	air-conditioning	75
Accessories	249	operation	77
Acoustic alarms		switch off	77
light	63	Alarm system	50
Acoustic warning		interior monitoring system	51
unfastened seat belt	27	risk of false alarm	52
activated charcoal filter	181	Alterations	250, 256
Additional service offers	255	AM	125
Adjust		Ambient lighting	67
bed canvas	54	Android Auto™	
front seat	60	connect	124
Adjusting		disconnect	124
correct sitting position	26	main menu	123
Headrest	62	particularities	124
steering wheel	59	Anti-lock brake system for off-road driving (off-road ABS)	102
Adjust the playback volume	165	Anti-lock brake system (ABS)	102
Aerial	112	Anti-theft alarm system	50
Air-conditioning		description	50
air recirculation mode	75	Antifreeze	209
Airbag		Anti theft coding	116
crash detection function	36	App-Connect	121
Airbag system		main menu	122
dash panel cleaning	34	Apple CarPlay™	
description	245	disconnect	123
front airbag	35	establish connection	123
function	37	menu	122
indicator light	35	particularities	123
limitations	250	Approach sensors	118
repairs	250	Areas with risk of explosion	
turn off the front passenger airbag	38	phone	113
turn off using the switch activated by the key	38	Assemblies and insertions	250
use of child seats	38	Assist system	
vehicle conservation	245	uphill assist systems	92
wooden ornamental elements	245	Assist systems	
Airbag System		anti-lock brake system (ABS)	102
in case of airbag triggering	36	brake assist (BAS)	102
Air conditioner		electronic differential lock (EDS)	103
turn off	75	electronic stability control (ESC)	101, 104
water underneath the vehicle	78	hill descent control system	93
water vapour underneath the vehicle	78	off-road ABS	102
window heating	76	off-road mode	92
Air conditioning	74, 75	park distance control	97
air distribution	76	tire control system	217
air recirculation mode	77	traction control (TCS)	101
blower	75	tyre pressure loss Indicator	218
controls	75		
cooling mode	75		

Assumptions			
rear view camera system	100	Brake fluid	211
Audio data CD	150	specification	211
Automatic belt retractor	33	Brake light bulb	191
Automatic consumer deactivation	216	Brake pad	
Automatic driving light control	64	run-in	82
Automatic washing system	241	Brake pad run-in	
AUX	157	also see brakes	82
requirements	157	Brakes	
AUX-IN		brake fluid	211
see External audio sources	133	brake pad run-in	82
AUX-IN multimedia port	157	brake pads	82
see External audio sources	133	brake servo	83
B		changing brake fluid	212
Balance	143	fault	86
BAS		handbrake	96
see Brake assist systems	102	brake servo	101
Battery		Brake servo	83
check vehicle battery	213	Brake support system	101
replacing the battery in the vehicle key with		Brake support systems	101
remote control	46	ABS	101
Battery electrolyte	215	ASR	101
Bed		BAS	101
fixed strapping supports	168	EDS	101
Bed canvas	53	ESC	101
adjust	54	brake system	101
release	54	Brake system	
retract	55, 56	check brakes	86
Bed cover	52	troubleshooting	86
closing	53	BT Audio	158
driving with the bed cover open	84	Bulb failure	
locking	53	see Exterior lighting	187
opening	53	Buttons	116
unlocking	53	C	
Bed lighting	68	Call lists	140
Bed lighting button	68	Call voice mailbox	139
Belt height adjuster	32	Capacities	
Belt tensioner	32	cold starting system petrol reservoir	266
disposal	33	engine oil	206, 266
service and disposal	33	fuel tank	179, 266
Bluetooth		luggage compartment	266
profiles	135	window washer fluid reservoir	266
settings	142	windscreen washer reservoir	204
Bluetooth audio		Cargo stowage	167
requirements	158	Caring for the vehicle	
Bluetooth Audio	158	cleaning the window wiper blades	186
see External audio sources	134	replacing window wiper blades	186
Body warranty	255	window aerial	112
Bottle holder		Car phone	251
tailgate	109	Carrier	
Brake		mobile network carrier	160
emergency brake indicator	43	catalytic converter	180
handbrake	96	Catalytic converter	
Brake assist (BAS)	102	operating failure	181
		CD-IN	151

CD operation		39
see: MEDIA	152	39
Central locking	47	41
central locking button	49	40
indicator light	48	38
locking or unlocking from inside	49	40
mechanical locking	48	
mechanical unlocking	48	
Central locking system		241
anti-theft alarm system	50	
description	48	97
single door unlocking	48	117
Centre console	11	14, 19
Changing a wheel	232	47
lifting the vehicle	234, 235	179
preparation actions	232	
wheel bolts	233	
Changing bulbs		53
checklist	188	56
in standard headlights	189	
in the bodywork	191	
in the front bumper	190	
luggage compartment light	193	132
number plate light	192	132
preparation actions	188	
rear lights	191	
Changing gears		241
gear change indication	80	66
manual gearbox	88	73
selecting gears (manual gearbox)	88	
Changing the wheel		243
after changing a wheel	237	243
changing the wheel	237	243
Chassis number	259	204
Checking and refuelling	200	204
Checking the power steering fluid level	90	255
Checklist		255
before working in the engine compartment	202	255
changing bulbs	188	
checks when fuelling	23	
check the engine oil level	206	
fill engine oil	206	
in an emergency	43	
in case of faults	43	
lifting the vehicle with the jack	234, 235	
preparations for changing a wheel	232	
preparations for travel	23	
safe driving	23	
seat belts	30	
travels abroad	23	
Checks when fueling	23	134, 137
Check the engine oil	206	252
Child seat		252
airbag sticker	41	
securing systems	40	
securing with the seat belt	41	
weight classes	40	
Child seats		143
child seat types	39	
on rear vehicle seats	41	
standard	40	
switch off the passenger front airbag	38	
transporting children in the vehicle	40	
Cleaning		128
see Vehicle conservation	241	
Cleaning the vehicle		
sensors	97	
Clean the display		
Clock		
Close		
doors	47	
tank flap	179	
Closing		
bed cover	53	
windows	56	
Coming Home function		
Communication window		
Connection		
USB	132	
without wires	132	
with wires	132	
Conservation		
see Vehicle conservation	241	
Conservation of aluminium parts		
Conservation of chrome parts		
Consumables		
Consumer information		
Control		
basic control information	116	
RADIO	125	
Control light		
fuel level	16	
fuelling	16	
Control list		
rear view camera system	100	
Control overview		
Controls		
additional displays	121	
PHONE	134, 137	
Control units		
reprogramming	252	
Convenience closing		
electric windows	57	
Convenience functions		
reprogramming	252	
Convenience opening		
electric windows	57	
Coolant		
check engine coolant	208	
Copyright		
information	143	
Copyrights		

Crash detection function		
airbag	36	
Cruise control system	94	
operate	94	
Crystal waxing the paintwork	241	
Cup holder	108	
front centre console	108	
tailgate	109	
D		
Dashboard		
airbag system	34	
Dash panel		
airbag system	245	
cleaning	245	
Dash panel insert		
indicators	21	
menu structure	21	
operation by way of the multifunction steering wheel	22	
operation by way of the windshield wiper lever	21	
Dash panel insert operation	21	
Data recording	252	
Data recording while driving	252	
Date setting	142	
Daytime running light	63	
declaration of conformity	257	
Defrosting		
windows	76	
Device overview	116	
Media Plus (RCD 320G 2DIN)	117	
Diagnostics connector	252	
Differential lock		
see brake assist systems	103	
Digital clock	19	
Dimensions	261	
Dipped beam bulb - standard headlights	189	
Display	14, 17, 116, 117	
clean	117	
instrument cluster	17	
operate	119	
Display indicators		
time	19	
Display keyboard		
see Operation	120	
Disposal		
belt tensioner	33	
Doors	47	
emergency opening or closing	49	
Drink holder		
on the side of the rear seat	109	
Driver door		
overview	9	
Driving		
data records	252	
driving economically	81	
driving through water on roads	84	
fuel gauge	16	
fuel level too low	16	
parking on downhill inclines	95	
parking on uphill inclines	95	
preparations for travel	23	
through salt water	85	
travels abroad	23	
with environmental awareness	81	
Driving economically	81	
Driving guidelines	79	
Driving instructions		
with the spare wheel	227	
Driving in the winter		
mirror	70	
winter tyres	230	
Driving safety	23	
Driving saving fuel	81	
Driving through salt water in roads	85	
Driving through water on roads	84	
Driving with environmental awareness	81	
During a phone call	138	
Dust filter	78	
E		
E-FLEX	212	
EBV		
see Braking support systems	102	
Economical driving style	81	
EDS		
see brake assist system	103	
Electrical consumer	173	
Electrical consumers	109	
Electrical consumption	110, 111	
Electricity-consuming equipment	44	
Electric windows	56	
buttons	56	
closing	56	
convenience closing	57	
convenience opening	57	
opening	56	
operational failure	57	
roll-back function	57	
Electronic brake variator (EBV)	102	
Electronic differential lock (EDS)	103	
Electronic engine power control - EPC	180	
Electronic immobilizer	88	
Electronic stability control (ESC)	101, 104	
Emergency brake indicator	43	
Emergency brake lights	43	
Emergency breakaway cable	173	

Emergency locking		ESC	
manually locking the passenger door	50	electronic stability control (ESC)	101
Emergency opening or closing		enable and disable	104
driver door	49	see brake assist systems	101
Engine		see Brake assist systems	104
irregular engine operation	181	ESS - Emergency Stop Signal	43
noises	87	Ethanol	178
running-in	85	fuel	178
Engine and ignition		fuel gauge	16
ignition cylinder	86	Exhaust gas emission control system	180
immobilizer	88	Exterior lighting	187
non-authorised vehicle key	86	Exterior mirrors	71
start the engine	86	fold	71
stopping the engine	87	memory for reverse gear	71
unauthorized vehicle key	88	operation failure	72
engine compartment	200	towing a trailer	173
Engine compartment		Exterior temperature indicator	17
cleaning	243	External	
engine coolant	208	door handle	7
engine oil	205	External aerial	251
plenum chamber	243	External audio source	
preparation activities	202	adjust playback volume	143
vehicle battery	213	AUX	157
Engine compartment cover		Bluetooth audio	158
closing	202	on volume	165
opening	202	playback volume	165
Engine control unit	180	USB port	157
Engine coolant	208	External audio sources	
check engine coolant level	210	AUX-IN multimedia port	133
refilling	210	Bluetooth audio	134
refilling opening	210	USB connection	132
specifications	209	External data carrier	
temperature indicator	16	USB connection	132
warning light	16	External jump starting	
Engine data	263	check Jump starting	197
Engine identification number	260	External mirrors	
establish	260	vehicle conservation	243
Engine oil	205	F	
changing	207	Fader	143
check the engine oil	206	Fault memory	252
complete	206	Faults	
consumption	207	protect the vehicle	42
engine oil filler	206	Favourites (speed dial buttons)	141
oil dipstick	206	Features	
specification	205	approach sensors	118
Engine speed	15	with engaged reverse gear	80
Entry template		Filling the tank	
see Operation	120	ethanol	179
Entry template (rocker switch)	120	petrol	179
Environmental impact note		with ethanol	179
fuel	177, 178, 179	with petrol	179
Environment preservation program		Fire extinguisher	44
CO emission	259	First service	239
slow-gear rotation	259	Fixed strapping supports	168
sound level	259		
EPC - Electronic engine power control	180		

FM	125, 267
Fog light	64
Fog light bulb	190
Freio	
brake support system	101
Frequency range	
AM	125
change	118, 125
FM	125
select	118, 125
Front	
stowage compartment	106
Front airbag	
check airbag system	37
Front passenger airbag	
check airbag system	34
turn off using the switch activated by the key	38
Front seat	60
fuel	176
Fuel	
environmental impact note	177, 178, 179
ethanol	178
petrol	178
problems	181
Fuel consumption	
driving economically	81
what increases consumption?	181
Fuel gauge	16
control light	16
petrol or ethanol	16
fuel handling safety guidelines	176
Fuelling	
checks when fuelling	23
control light	16
fuel gauge	16
fuelling and fuel types	177
Fuel quality	181
Function buttons	
MEDIA main menu	130
operate	119
PHONE main menu	137
pop-up window	119
RADIO main menu	125
selection boxes	119
Fuses	193
changing	197
colour code	197
dash panel	194
detecting a blown fuse	197
engine compartment	196
fuse box in the dashboard	195
fuse box in the engine compartment	196
preparations for changing	197
G	
Gear change indicator	80
General information	255
Glove compartment	107
GRA	94
Guidelines for the conservation of the vehicle	241
Guidelines on the technical data	258
H	
Handbrake	96
Head light lever	63
Headlights	
international trips	65
Headphones	257
Headrest	62
Head restraints	61
Heating	74, 75, 77
operating instructions	77
Heating and air conditioning	74
High pressure washing machine	241
Hill descent control system	93
Hollow cavities	243
Horn	11
Hour setting	19
Hub cap	
wheel bolt cap	231
Hub caps	231
wheel cover	232
I	
Identification number	259
Identification sticker	259
Ignition	86
check engine and ignition	86
non-authorised vehicle key	86
Ignition key	
consult the vehicle key	45
Ignition turned off	
post-operation (Timeout)	118
Immobiliser	
malfunction	88
In an emergency	42
checklist	42
faults	42
making you and your vehicle safe	42
warning lamps	42
In case of emergency	
warning triangle	44
Indicator lamp	
ABS	104
braking support systems	104
ESC	104
seat belt	27

turn signals	66	license to use the remote control key	257
tyre monitoring system	218	Lifting platform	253
Indicator lamps		Lifting the vehicle	
overview	13	checklist	234, 235
Indicator light		jack	234, 235
airbag system	35	with the jack	234, 235
central locking	48	Light	
Indicators of the display		acoustic alarms	63
Warning and information texts	19	daytime running light	63
Indicators on the dash panel insert display	21	fog light	64
information on the air conditioning system	260	functions	64
Information on the warm starting system	212	head light lever	63
Information stored in control units	252	instrument lighting	67
Initial settings	142	light's switch	63
Insert the SD card	117	side light	63
Installing the radio	257	switch lighting	67
Instructions for use	115	switch off	63
Instrument cluster	10, 14	switch on	63
display	14, 17	turn signal lever	63
indicator lamps	13	lighting	
instruments	14	Turn signals	63
service interval display	20	Lighting	
symbols	13	Driving light	63
warning lamps	13	main beam	65
Instruments	14	troubleshooting	66
Interior light	67	Lights	63
Interior mirror	70	AUTO	64
Interior monitoring system	51	Load capacity index	229
International trips		Loading	
headlights	65	cargo stowage	167
iPad	133	driving with the bed cover open	84
iPhone	133	luggage compartment	166
iPod	133, 158	roof carrier	171
		stowing cargo	166
J		strapping eyelets	168
Jump starting	197	towing	174
K		Luggage compartment	166
Key		luggage compartment access step	169
consult the vehicle key	45	luggage compartment light	67
Keyboard		sliding strapping supports	169
see Operation	120	Luggage compartment access step	169
Knobs	116	Luggage compartment capacity	166
		Luggage compartment socket	111
L		M	
lambda probe		Main beam bulb - standard headlights	189
Lamp		Main menu	
Coming Home	66	Android Auto™	123
interior lights	67	App-Connect	122
Leaving Home	66	MEDIA	130, 152
reading lights	67	PHONE	137, 160
Leaving Home function	66	RADIO	125, 145
License to use the electronic immobilizer	257	SETUP	164
		Maintenance	238

Malfunction		
immobiliser	88	
park distance control	97	
tyre monitoring system	218	
Mandatory inspection services		
Manual gearbox		
see also Changing gear	88	
see also Shift gears	88	
Manually locking the passenger door	50	
Mats	79	
MEDIA	150	
audio data structure	129, 151	
audio file CD	129	
AUX	157	
AUX-IN multimedia port	133	
back	154	
bitrate	129	
Bluetooth audio	134, 158	
CD playback	151	
change media source	131	
Change track	131	
changing folders	154	
changing tracks	154	
copyrights	128	
displays	130	
external data carrier to USB	132	
forward	154	
forward and back	131	
function buttons	130	
iPod, iPad, iPhone	133	
limitations	128	
main menu	130, 152	
media mode	128	
media source selection menu	131	
MIX	156	
Mix function	130	
MP3 files	129, 150	
notes	150	
playback mode	130, 156	
playback sequence	129, 151	
playlists	128, 150	
prerequisites	129	
REPEAT	156	
Repeat function	130	
requirements	150	
SCAN	156	
select data storage unit	131	
selection menu	153	
select track	131	
settings	132	
switch media source	153	
text notes and messages	151, 152	
track information	155	
USB port	157	
WMA files	129, 150	
Media operation		
see: MEDIA	152	
Media Player		
BT audio	158	
Media source		
Memory levels		
Menu		
Apple CarPlay™	122	
Metal-coated windscreens		
Mirror		
areas with no visibility	70	
blind spot	70	
Mirrors		
exterior	71	
folding	72	
interior mirror	70	
right-hand exterior mirror operation	71	
Mix function		
Mobile network carrier		
carrier	160	
Mobile phone		
use without external aerial	252	
Modifications		
Multifunction steering wheel		
Multimedia playback		
SD card	132	
Multimedia port		
N		
New engine		
Noises		
brake assist system	104, 105	
engine	87	
tyres	231	
NT - non microfiber fabric		
Number of seats		
O		
Octane number		
Odometer		
off-road ABS		
see Brake assist systems	102	
Off-road mode		
Oil		
check engine oil	205	
Oil dipstick		
On-board computer		
Open		
doors	47	
tank flap	179	
Opening		
bed cover	53	
windows	56	
Opening or closing the rear vent window		
Open radio stations list		

Operating failure		Parking and manoeuvring	95
air conditioning	78	Parking distance control	
catalytic converter	181	operating failure	98
parking distance control	98	using high pressure washing machine	241
radio feed	109, 113	warning message	99
rain sensor	69	Parking light	66
twilight sensor	64	Park Pilot	97
Operation		see Park distance control	97
access and search lists	119	Partial odometer	14
basic operating information	119	Particularities	
display	119	absence of functions	115
display keyboard	120	Android Auto™	124
entry template	120	Apple CarPlay™	123
function buttons	119	lower radio volume	99
park distance control	98	parking distance control	98
pop-up window	119	volume reduction	115
scroll	119	water vapour underneath the vehicle	78
scroll pointer	119	Part replacement	249
selection boxes	120	Passenger compartment	10
text entry	119	Pedals	26, 79
turn on and off	120	Petrol	178
operational failure		additives	178
electric windows	57	fuel	178
Operation failure		fuel gauge	16
electric exterior mirrors	72	types	178
Original Volkswagen accessories	256	Petrol engine	263
Overall guidelines	23	PHONE	
Overseas		A2DP	135
extended permanence	85	areas with risk of explosions	113
vehicle sales	85	Bluetooth profiles	135
Overview		Bluetooth settings	142
centre console part	116	call lists	140
driver door	11	call voice mailbox	139
driver's side	9	connecting mobile phones paired to the radio	
front view	10	162	
indicator lamps	6	contacts	139
instruments	13	contacts list	139
menu structure	14	during a phone call	138
passenger side	21	enter phone number	139
rear view	12	favourites (speed dial buttons)	141
roof headliner	8	function buttons	138
side view	12	functions with connected mobile phones	162
turn signal and main beam lever	7	HPF	135
warning lamps	63	main menu	137, 160
Overview of the convenience consumers	112	mobile phone pairing	136
Overview of the vehicle		operation description	135
front view	6	overview	160
rear view	8	pairing mobile phones to the radio	161
side view	7	pairing the mobile phone up	136
P		phone controls	134, 137
Park distance control	97	safety instructions	158
operation	98	select	139
Park Distance Control		settings	141
representation on the display	98	special precaution areas	113
Parking	95	switching off phone controls	136
		symbols and displays	138

user profiles	162	frequency bands	145
user profile settings	142	function buttons	125, 126
Phone controls		main menu	125, 145
see PHONE	134	memory levels	148
Physical principles of a frontal collision	28	pre-tuning buttons	126
Placing the temporary spare tyre into its housing	226	radio data system RDS	126
Plates	256	radio operation	125
Playback		radio text (RDS)	126
AUX-IN	133	SCAN	128, 147
external data carrier (USB)	132	settings	128
MEDIA	130	setting the station frequency	146
memory card	130	station buttons	126, 149
track	131	Radio buttons	118
Playing		Radio feed	
RADIO	125	aerial	112
Plenum chamber	243	operating failure	109, 113
Polishing	241	Radio stations	
Pollen filter	78	pre-tuning	126
Pollutant filter	78	Radio text (RDS)	
Pop-up window		see RDS	126
see the function buttons	119	Rain sensor	
Post-operation (timeout)	118	operating failure	69
Power steering	90	RDS	
checking the power steering fluid level	90	radio text	126
Pre-tuning buttons	126	regional RDS	126
Preparation actions		station names	126
changing a wheel	232	Reading light	
changing bulbs	188	Rear lights	
vehicle battery	214	changing bulbs	191
Preparation activities		Rear seat	
check the engine oil	206	Rear view	
complete engine oil	206	see Rear view camera	99
prior each travel	23	Rear view camera	
working in the engine compartment		control list	100
Preparation procedures		Enabling and disabling	100
check engine coolant level	210	parking	101
refilling the engine coolant	210	Representation on the display	100
Preparations for travel	23	Rear window defrost function	
Prerequisites		Rear window wiper blade	
for CDs	129	cleaning	185, 186
for files and data storage units	129	replacing	185, 186
for SD cards	129	Reduction of exhaust gases	
for USB data storage units	129	problems	181
R		Release	
Radio		bed canvas	54
Composition Touch (R 340G)	257	Release the temporary spare tyre cable	
open radio stations list	125	Remount the temporary spare tyre cable	
RADIO		Removing ice	
changing frequency ranges	118	Removing snow	
changing the frequency band	125	Removing wax residues	
changing the station	145	Renew bulbs	
displayed radio station names	146	see Exterior lighting	187
displays and symbols	126	Repairs	
	127	airbag system	249, 250
		lifting platform	250
			253

plates	256	Seat belt	
stickers	256	automatic belt retractor	33
Repeat	130	seat belt status indicator	27
Repeat function	130, 156	warning lamp	27
Representation on the display		Seat belt roll-back function	33
Park Distance Control	98	Seat belt routing	31
Reprogramming control units	252	Seat belts	26
Requirements in		belt height adjuster	32
CDs	150	belt routing	31
Retract	55, 56	checklist	30
bed canvas		cleaning	245
Retrofitting		fastening	30
car phone	251	not fastened	28
two-way radio	251	roll-back function	33
Reverse gear driving support		seat belt tensioner	33
see Rear view camera	99	twisted seat belts	30
Revolution counter	14	unfastening	30
Right-hand exterior mirror operation	71	using	30
Right-hand turn signal bulb - standard headlights	189	Seat belts protect	29
Rims		Seat belt tensioner	33
cleaning	243	Seat covers	245
Rocker switch	120	cleaning NT - non microfiber fabric	245
Roll-back function		cleaning the fabric cover	245
electric windows	57	cleaning the padding	245
Roof rack	170	conserving and cleaning the natural leather	245
use the supports	170	seat cover handling	245
Rubber seals	243	vinyl	245
Run-in		Seats	24, 60
tyres	221	front seat	60
Running-in		See text entry	
engine	85	see Operation	120
first kilometres	85	selection boxes	
		see the function buttons	119
S		Selector button	118
Safety equipment	36	Select (phone number)	139
Safety instructions		Service	238
phone	158	Service fluids	204
Safety recommendations	113	Service interval display	20
SCAN		Service scopes	239
media playback	156	Set	
radio	128	hour	19
RADIO	128	Settings	142
radio operation	147	Bluetooth	142
see SCAN	147	factory settings	142
Scroll		media	132
see Operation	119	PHONE	141
Scroll pointer		radio	128
see Operation	119	system	142
SD card		user profile	142
compatibility and technical data	129	volumes	143
prerequisites	129	Settings Menu	19
supported SD files	129	Setting the clock	
Search lists		digital clock	14
see Operation	119	Side light	63
		Side light bulb	191
		Side light bulb - standard headlights	189

Single door unlocking	48	Steering wheel	59
Sitting		adjusting	59
adjusting the headrest	62	unilateral traction	225
adjusting the steering wheel position	59	vibration	225
correct sitting position	26	Stickers	256
Installing the headrest	62	Stopped in traffic	
number of seats	24	protect the vehicle	42
Removing the headrest	62	stowage compartment	106
Sitting position		between the rear seats	107
incorrect position	25	driver side	106
Sliding headliner	73	front passenger side	107
Sliding strapping supports	169	glove compartment	107
Slow-gear rotation	259	rear centre console	107
Socket	109	Stowing cargo	166
Sockets		Strapping eyelets	168
12 Volts	110, 111	Sun visors	73
Softkeys		Support load	
see the function buttons	119	loading the trailer	174
Sound level	259	Support systems	
Sounds		cruise control system	94
warning lamps and indicator lamps	13	electronic brake variator (EBV)	102
Sound settings	143	GRA	94
Spare fuel canister	177	rear view camera	99
Spare key		Switch activated by the key	
consult the vehicle key	45	turn off the front passenger airbag	38
Spare parts	249	switching the turn signals on and off	63
Spare wheel	226	Symbols	
driving instructions	227	see Indicator lamps	13
Special precaution areas	113	see Warning lamps	13
Specificities		Synchronize vehicle key	47
AUX playback	133	Systems	
displays	121	ABS	102
engine jolting	181	anti-lock brake system (ABS)	102
folding mirrors	72	automatic driving light control	64
irregular engine operation	181	BAS	102
parking	96, 104, 262	brake assist (BAS)	102
prolonged downtime	47	cruise control system	94
radio feed	112	EBV	102
towing a trailer	174	EDS	103
Speed index	230	electronic brake variator (EBV)	102
Starter assist		electronic differential lock (EDS)	103
see Assist systems	92	electronic stability control	104
Starting the engine with jump leads		electronic stability control (ESC)	101
how to	198	ESC	101, 104
jump leads	198	GRA	94
Start up of the system		hill descent control system	93
Station		off-road ABS	102
SCAN	128	off-road mode	92
scanning for stations	128	TCS	101
Station buttons	126, 149	traction control (TCS)	101
Station names		tyre monitoring system	217
see RDS	126	tyre pressure loss indicator	218
Steering assistance	89	uphill assist system	92

T		
Tachometer (Rev counter)	15	Total odometer 14
Tailgate		Towing 172, 200
bottle holder	109	a trailer 174
cup holder	109	connecting 173
Taking the temporary spare tyre from its housing	226	emergency breakaway cable 173
Tank flap		engaging 173
check tank flap	179	exterior mirrors 173
ethanol	179	headlight adjustment 174
petrol	179	loading 174
TCS		parking distance control 98
see brake assist systems	101	rear lights 173
Technical data	258	retrofitting a towing bracket 175
1,6 81kW petrol engine	263	support load 174
capacities	179, 204, 206, 266	technical requirements 172
CO emission	259	things to note 200
dimensions	261	towing a trailer 174
engine oil specification	205	trailer load 174
identification sticker	259	Towing a trailer 172
luggage compartment capacity	168, 266	check towing 172
petrol engine	263	Towing bracket 175
roof load	171	retrofitting 175
slow-gear rotation	259	Tow starting 200
sound level	259	things to note 200
TOTALFLEX engines	264	Tow starting and towing 200
type plate	259	towing 200
tyre pressure	223	Track list 131
Vehicle data sticker	259	Track scan 156
Technical modifications	250	see: SCAN 156
lifting platform	253	Traction 229
plates	256	Traction control (TCS) 101
stickers	256	Trailer load 174
Telephone		loading the trailer 174
see: PHONE	158	Transporting 166
Temperature display		cargo stowage 167
engine coolant	16	driving instructions 84
Temperature indicator		driving with the bed cover open 84
exterior temperature	17	loading the trailer 174
Text notes and messages		roof carrier 171
CD playback	151	stowing cargo 166
media playback	152	strapping eyelets 168
Thawing the door lock cylinder	243	towing 172
Thawing the locks	243	towing a trailer 174
Things to note		Transporting children in the vehicle 39, 40
towing	200	Travels abroad 23
tow starting	200	checklist 23
Tightening torque		Tread depth 224
wheel bolts	233	Tread depth and wear indicators 224
Timeout	118	Treadwear 228
Time setting	142	Troubleshooting 50
TIN	228	12 V vehicle battery warning lamp 217
Toolkit		airbag deployment 50
check vehicle toolkit	182	airbags system 35
TOTALFLEX engines	264	alternator warning lamp 217
		braking support systems 104
		check engine oil level 208
		cruise control system (GRA) 95

engine oil level sensor	208	User profile	
engine oil pressure	208	settings	142
front passenger front airbag disabled	35		
ignition lock	88		
immobiliser	88		
re-establishing the one touch closing and opening operation of the windows	58		
start button	88		
Turn off			
radio	118		
Turn on	118		
Turn signal and main beam lever	63		
Turn signal light bulb	191		
Turn the main beam on and off	65		
Twilight sensor			
operating failure	64		
Two-way radio	251		
Type plate	259		
Tyre damage	225		
Tyre load capacity	230		
Tyre monitoring system	217, 218		
indicator lamp	218		
malfunction	218		
tyre pressure loss indicator	218		
Tyre pressure	223		
checking	223		
spare wheel	223		
Tyre pressure loss control system			
tyre pressure	223		
Tyre pressure loss indicator			
replace tyre	221		
Tyres			
check wheels and tyres	217		
see wheels and tyres	219		
Tyres with directional tread pattern	230		
Tyre wear	225		
Tyre wear indicators	224		
U			
UKW			
Unit code			
see Anti-theft coding			
Uphill assist system	92		
USB			
connecting an external data carrier	132		
iPad controls	133		
iPhone controls	133		
iPod controls	133		
supported USB data storage units	129		
USB connection	132		
disconnect the connection	132		
unreadable	132		
USB port	157		
iPod	158		
V			
Valve caps			224
Vehicle			
locking or unlocking from inside	49		
protection in case of faults	42		
stopping on downhill inclines	95		
stopping on uphill inclines	95		
Vehicle battery			213
automatic consumer deactivation	216		
battery electrolyte	215		
charging	215		
check electrolyte level	214		
connecting	215		
discharge	47		
discharged	44, 86		
discharging	216		
disconnecting	215		
installation location	213		
preparation actions	214		
replacing	215		
starting the engine with jump leads	198		
symbol definition	213		
Vehicle conservation			241
aluminium parts	243		
automatic washing system	241		
chrome parts	243		
cleaning the seat belts	245		
cleaning the wheels	243		
dash panel	245		
engine compartment	243		
exterior	241		
external mirrors	243		
fabric covers	245		
high pressure washing machine	241		
hollow cavities	243		
interior	245		
manual wash	241		
natural leather	245		
NT - non microfiber fabric	245		
paddings	245		
paintwork of the vehicle	241		
plastic components	245		
rubber seals	243		
seat cover handling	245		
Thawing the door lock cylinder	243		
vehicle underbody protection	243		
washing the vehicle	241		
windows	243		
wooden ornamental elements	245		
Vehicle data sticker			259
Vehicle delivery			239
Vehicle identification data			259
Vehicle identification number			259

Vehicle jack	232	W	
Vehicle key	45	Warm starting	212
consult the vehicle key	45	Warm starting system	
spare key	45	information on the warm starting system	212
troubleshooting	47		
Vehicle key with remote control		Warning lamp	
replacing the battery	46	brake system	104
Vehicle lifting		braking support systems	104
lifting platform	253	seat belt	27
with lifting platform	253		
Vehicle lifting points	253	Warning lamps	
Vehicle maintenance		overview	13
airbag module (dash panel)	245	Warning light	
cleaning the stowage compartment	245	engine coolant	16
cleaning the wiper blades	185	Warning lights	42
replacing wiper blades	185	Warning triangle	44
vinyl	245	Washer fluid	
Vehicle modifications	249	check	204
plates	256	replenish	204
stickers	256		
Vehicle sale	4	Washing	
Vehicle sales		manual	241
in other countries / continents	85	with high pressure washing machine	241
Vehicle toolkit	182	Washing the vehicle	
Vehicle tool kit		folding mirrors	72
contents	184	What happens to passengers who have not fastened their seat belts	
Vehicle toolkit		28	
stowage	183, 184		
toolkit access	183, 184	Wheel bolts	232, 233
Vehicle underbody protection	243	cap	231
Ventilation	75, 77	tightening torque	233
operating instructions	77		
Ventilation and heating system		Wheels	222
controls	75	bolted-on trims	222
operating instructions	77	identification	222
temperature setting	75		
Vents	77	Wheels and tyres	217, 219
Vent window	58	avoiding damages	220
Voice command		changing a wheel	232
Android Auto™	124	check wheels and tyres	220
Apple CarPlay™	123	foreign bodies in the tyre	225
Volkswagen Dealership Warranty	255	identification	228
Volkswagen Information System	19	new tyres	221
Volkswagen® Genuine Parts	256	replacing tyres	221
Volume		run-in	221
AUX-IN	143	serial number	228
Bluetooth audio	143	spare wheel	226
define external audio sources	143	speed index	229, 230
maximum volume when turning the device		storing tyres	221
on	143	technical data	228
traffic report	143	tread depth	224
volume reduction	115	tyre damage	225
Volume control	118	tyre identification number (TIN)	228
		tyre lettering	228
		tyre load capacity	230
		tyre pressure	223
		tyres with directional tread pattern	230
		tyre wear	225
		tyre wear indicators	224
		unbalanced wheels	225
		valve caps	224
		wheel alignment fault	225

wheel balancing	225
wheel rotation	221
wheels	222
winter tyres	230
Window activation	56
Windows	
defrosting	76
see Window activation	56
Window wiper blades	
cleaning	186
replacing	186
Windscreen washer	68
Windscreen washers	
windscreen washer lever	68
windscreen wiper	
rain sensor	69
Windscreen wiper	68
Windscreen wiper blades	
cleaning	185, 186
replacing	185, 186
Windscreen wipers	
windscreen wiper lever	68
Winter driving	
fuel consumption	82
towing	172
Winter tyres	230
speed limit	231
wiper blades	185
Wiper blades	
cleaning	185
replacing	185