

# 15 INCHES LIGHT UP BLUETOOTH SOUNDBAR



## INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE**

### **Getting Started**

- Remove the product from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

## **Package Contents**

- Portable Bluetooth Soundbar
- USB charging cable
- Aux cable
- Instruction Manual


## **Key Features**

- Bluetooth Soundbar with color changing LED lights
- Connects to Bluetooth enabled devices; stream wireless music
- Color changing LED lights
- Multi-function: Bluetooth, Micro-SD card slot, USB slot, Aux-jack & built-in mic for hands-free calls
- 2 x 3W speakers with loud sound and bass
- Portable & suitable for all occasions
- Built-in rechargeable battery - 3.7V / 1200mAh
- Charging cable included

## **SAFETY INSTRUCTIONS**

- Keep the soundbar away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the soundbar if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the soundbar.
- Do not use the soundbar if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the soundbar with wet hands.
- Do not put objects into any of the openings.
- Keep the soundbar free from dust, lint etc.
- Do not use this soundbar for anything other than its intended use.
- Keep the soundbar out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) should not be exposed to excessive heat, such as sunshine, fire or the like.

## **Description of Parts**

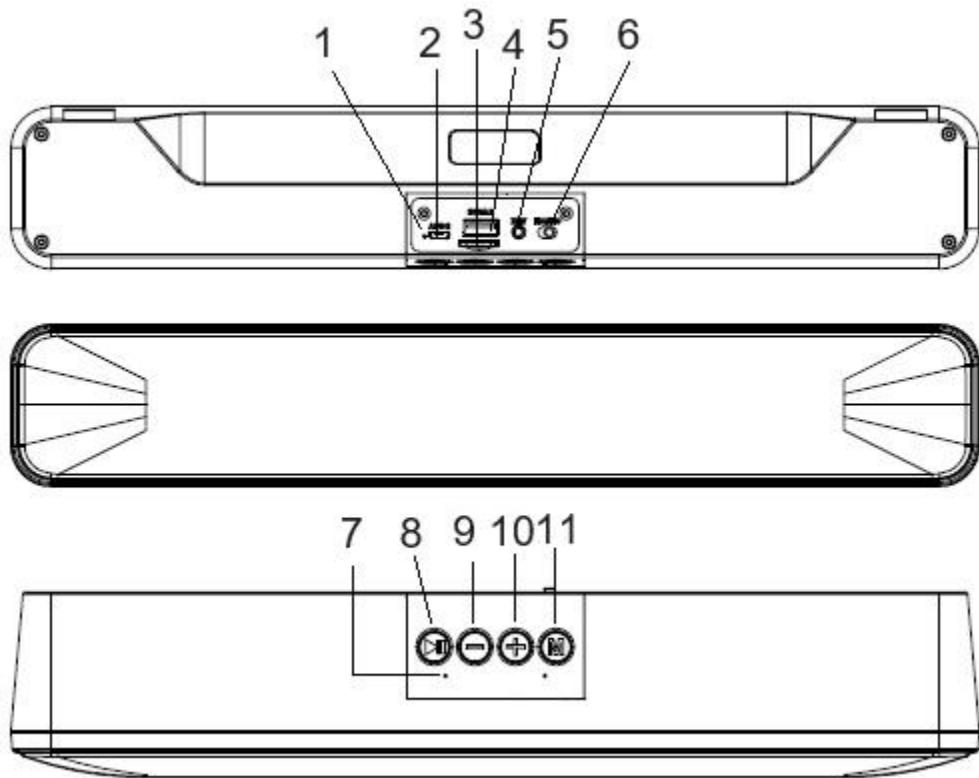

1	Charging LED Indicator
2	Charging Port
3	Micro SD (TF) Card Slot
4	USB Slot
5	Aux Port
6	On/Off Switch
7	Built-in Mic
8	Play/Pause/ Scan / Phone Button
9	Skip Backward/Volume Decrease - Button
10	Skip Forward/Volume Increase + Button
11	Mode/Light Button

## INSTRUCTIONS FOR USE

### Charging the Soundbar

The soundbar has a built-in rechargeable battery. When the battery is drained, the soundbar will turn OFF automatically. Please recharge the battery every time it after it is drained.

Plug one end of the included USB charging cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes about 3-4 hours to fully charge the soundbar. Once the soundbar is fully charged, the LED Light will turn OFF.

It is recommended to fully charge the soundbar before its first use.

### **Turning ON/OFF the Soundbar –**

Before Turning ON the soundbar, please ensure that it is fully charged.

Slide the Power ON/OFF switch to turn the unit on/off.

### **Connect using Bluetooth Technology**

- Slide the Power ON/OFF switch to turn on the unit. You will hear an indication tone, and color changing LED turns on, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to the manufacturer's instructions for enabling Bluetooth on your device.
- Search for available Bluetooth devices and you will find “**SL Soundbar**” – Pair it with this device.
- You might be prompted with “Pair with **SL Soundbar**?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- If required, enter the password “0000” to pair with the device.
- Once paired successfully, you will hear another indication tone.
- You can now stream wireless music on your soundbar through your source device.

### **Stream Wireless Music**

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Soundbar to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Long press the + button to increase the volume
Decrease Volume	Playing music	Long press the - button to decrease the volume
Pause	Playing music	Short press the Play/Pause button will pause the music
Play	Pausing	Short press the Play/Pause button will resume the music
Previous track	Playing music	Short press the Skip Backward button will return you to the previous track
Next track	Playing music	Short press the Skip Forward button will take you to the next track

(Note: The above functions can be used in Bluetooth mode only. An indication tone will alert you when the volume is adjusted to the maximum level.)

### **Talking using the Bluetooth Soundbar**

Please ensure that you are paired with the Bluetooth Soundbar to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject incoming call	Incoming Call	Long press the Phone button

End Call	Incoming Call	After your phone conversation, short press the Phone button
Increase Volume	During a call	Press and hold the + button to increase the volume
Decrease Volume	During a call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

### Stream music from USB or Micro SD (TF) Card

- Turn ON the soundbar.
- Insert the USB drive or Micro SD (TF) Card preloaded with songs into the USB slot or Micro SD (TF) Card Slot of the soundbar respectively. soundbar would automatically start playing songs from the USB drive or Micro SD (TF) Card.  
*Note: USB or Micro SD (TF) Card not included.*
- To Skip Track Forward – Short press the Skip Forward button.
- To Skip Track Backwards – Short press the Skip Backward button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.
- Long press + to increase the volume or - to decrease the volume.

**Note:** USB / Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3. USB Flash Drive or Micro SD (TF) Card not included.

### Listening to Music using AUX-In

- Turn ON the soundbar.
- Plug the 3.5 mm Aux-in cable (included) into the AUX-In port of the soundbar, and plug the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
- Select your favorite song at the source device to play.

**(Note:** While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

### Color Changing LED light Mode (LEDs are not replaceable)

1. Turn ON the device.
2. Short press the Light button each time to change 8 different color changing light patterns (including off light mode).

### Tips!!

1. Long press the “Mode button” to switch between different functions of the soundbar – Bluetooth / Aux / USB-Micro SD (TF).
2. When the soundbar is not in use, turn OFF in order to save battery power.

### Specifications

Bluetooth® Version: 5.3  
Wireless Streaming Range: 33 feet  
Speaker output: 2 x 3W  
Size: L15" x D3" x H2.5"  
Weight: ~16.7 Oz  
Power Input: DC 5V  
Charging Time: about 3-4 hours  
Play time: Up to 3 hours (max volume)  
Built-In Rechargeable Battery: 3.7V / 1200mAh  
USB / Micro SD (TF) Card: Supports up to 32GB, supports music file format: MP3  
(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

## Troubleshooting

Problem	Possible Cause	Solution
<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
<b>Sound distorted</b>	Battery nearly dead	Charge Battery.
<b>No sound at all.</b>	Source (Tablet, Mobile Phone, Laptop.) turned off. Soundbar turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the soundbar on. Adjust volume source. Play media from source.

## Care and maintenance

Read the following recommendations before using the Bluetooth soundbar. By following these recommendations, you can ensure long-lasting enjoyment of the product for years to come.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the unit in fire as it will result in an explosion.
- Avoid contact with sharp objects to prevent scratches and damage.
- Prevent the unit from falling onto the floor to avoid potential damage to its internal circuitry.
- Refrain from attempting to disassemble the unit unless you possess the necessary professional expertise, as improper handling may result in damage.

## FCC Instructions

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**NOTE:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **Limited Warranty**

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90-day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90-day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.