 


Controller operation for movement

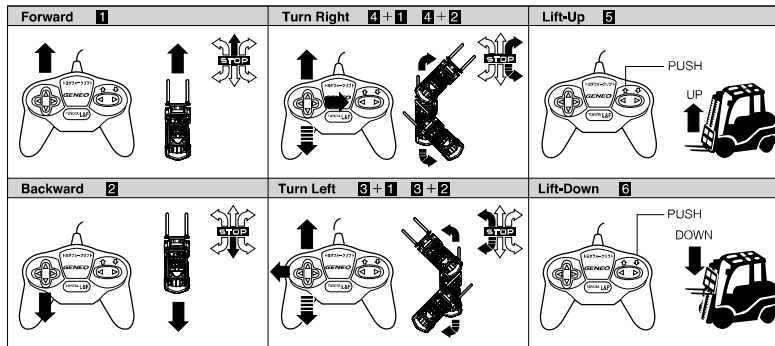

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

For parents to read:

1. This product is not suitable for children under 14 years old due to small parts which may be hazardous. Please retain this information for future reference.
2. Do not use rechargeable battery as it may cause excessive heat, fire, leakage, or even explosion.
3. Use LR03-size batteries only (non-rechargeable type).
4. Non-rechargeable batteries are not to be recharged.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. The supply terminals are not to be short-circuited.
7. Make sure to insert batteries with correct (+) and (-) polarity.
8. Make sure to switch off the toy after each play and remove batteries.
9. Do not use new and old batteries together. Do not mix different brands or different kinds of batteries.
10. Exhausted batteries are to be removed from the toy.
11. Do not short-circuit the toy, as it will cause danger.
12. If the toy gets wet, dry it up and stop playing to avoid short-circuit and causing hazards.
13. Do not put it into fire or water.
14. Do not put the toy near hot or damp places, for example, heater or bathroom.
15. Do not bend the antenna, this may cause sharp points and the child may get hurt.
16. Do not put finger, hair, or clothes into the shaft or rotating parts of the toy.
17. Always play in safe places only.

Dongguan Humen Lichengda mould and metal product factory
Xinshapu Industrial Huaidi Humen Town Dongguan City Guangdong
Province China.

 
NOT SUITABLE FOR CHILDREN UNDER 14 YEARS OLD

2.4GHz

Instructions

RADIO CONTROL TOYOTA FORKLIFT 8FG/8FD25 GENEO

Contents: Forklift x1, Controller x1, Pallet x1,
Cone x4, Miniature Carton x1

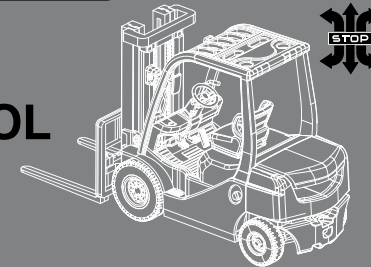


Battery placement

1. Remove the battery cover (seat) of the vehicle and place 3 pieces of "LR03" (AAA) battery with correct (+) and (-) polarity as shown. Put the battery cover (seat) back after adding batteries.
2. Remove battery cover from backside of the controller, put a piece of 9V(6F22) battery with correct (+) and (-) polarity. Put the battery cover back after adding battery.


BATTERY REQUIRED

 LR03(AAA) x 3
9V (6F22) x 1

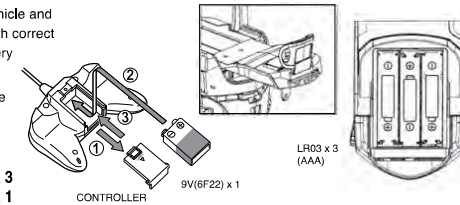

How to play

 1. Switch on the vehicle by the ON/OFF switch of the vehicle. The vehicle is now ready for motion. (The transmission range might be varied, depending on conditions of batteries and transmission environment.)
2. Use the 4-way buttons (left side) to control movement of vehicle, and use the 2-way buttons to control the up and down motions of the lift.
3. Steering trim adjusts straight move. Slightly adjust straight move by turning left or right.

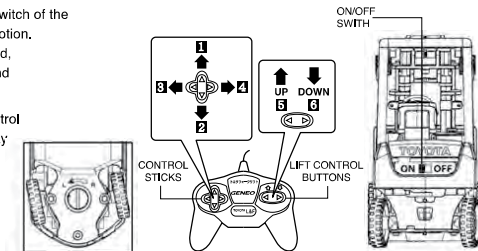

WARNING

1. Do not play in the street or in crowded places.
2. As this toy uses radio waves of low energy level, transmission range may become short when being played in sheltered areas e.g. under the table. In situation that the unit cannot function, try at a different place or at a later time.
3. As this toy contains sophisticated, delicate parts, please pay attention to the following:
 - Do not disassemble the control unit or the vehicle.
 - Do not play under rain, in the water, under extreme strong sunlight or on thick carpet.
 - Do not apply strong shock to the toy or drop it from height.
 - Do not put the toy near heater or hot areas.
4. Unexpected out-of-control motions may result when two vehicles are being played together. Keep distance from one another to avoid interference.
5. When battery level gets low, it may result in incorrect motions. In such case replace all batteries with new ones.
6. Do not keep pressing up or down button, when forklift is on top or bottom, which will cause malfunction.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.