



WIRELESS PLAYER / FM RADIO / ALARM CLOCK & WIRELESS CHARGING

Model: YW-017



Instruction Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

FCC Warning

FCC ID: 2AOW9-YW-017

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

 
This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Main Location Controls


TOP VIEW

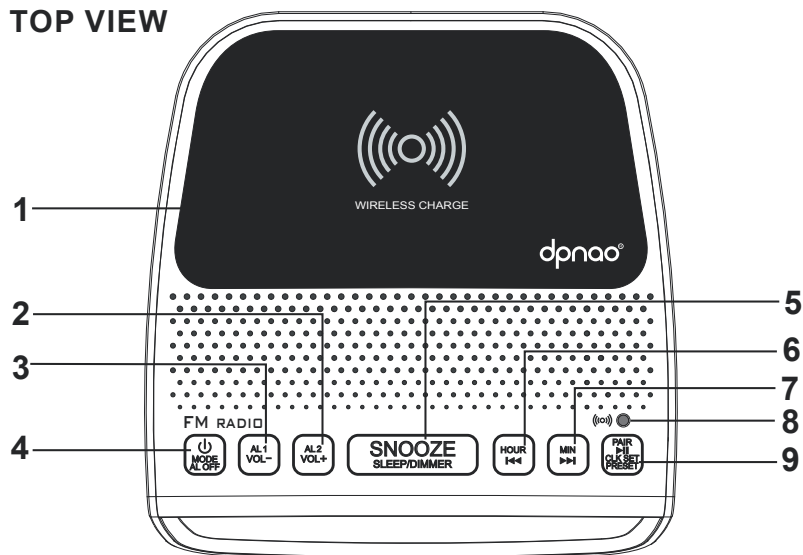

FRONT VIEW

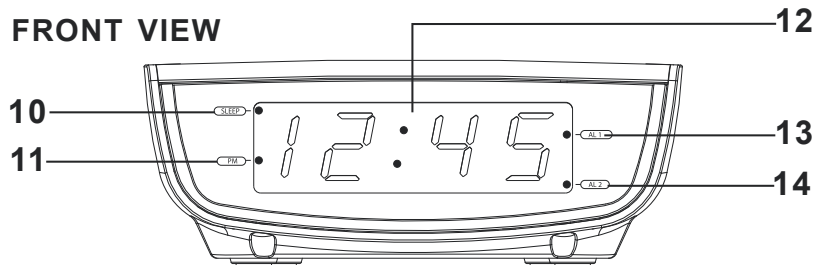 

REAR VIEW

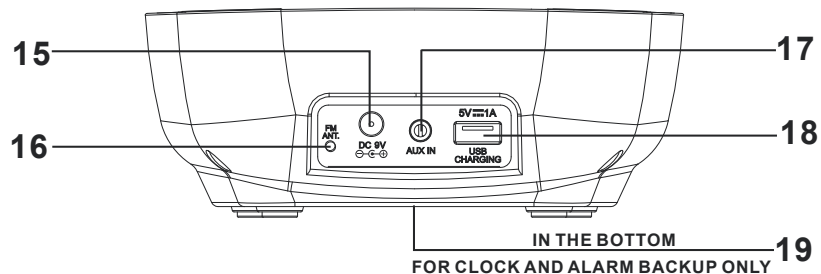 

Main Location Controls

1. WIRELESS CHARGING AREA
2. AL2 / VOL+ (Alarm 2 set) Button
3. AL1 / VOL- (Alarm 1 set) Button
4.  POWER / MODE / AL OFF(Alarm Off) Button
5. SNOOZE / SLEEP / DIMMER Button
6. HOUR  Button
7. MIN  Button
8. WIRELESS CHARGING Indicator
9. PAIR /  / CLK SET / PRESET(Radio) Button
10. SLEEP Indicator
11. PM (PM time) Indicator
12. LED DISPLAY
13. AL1 (Alarm 1) Indicator
14. AL2 (Alarm 2) Indicator
15. DC IN Jack
16. FM ANTENNA
17. AUX IN Input Port
18. USB CHARGING Port
19. BATTERY COMPARTMENT (For clock and alarm backup only)

 
Setup

Connect power adapter

1. Connect power adapter follow the figure.
2. After connection, the unit is in clock mode.

NOTE: In any time, long press the  POWER button to clock mode.

PLUG THE ADAPTER BODY TO AC OUTLET

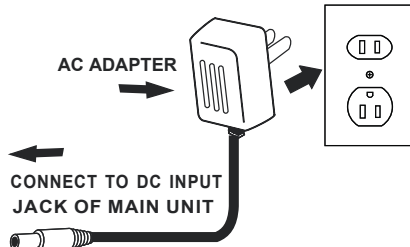

Select sound source

Press the MODE button repeatedly to select different sound source below:
BT (Wireless) / RADIO (FM) / AUX In (Audio In / Line In)

 
Using volume

Press the **VOL +** or **VOL -** Buttons to increase or decrease the volume sound.

Battery Operation

This unit operates on 2 X 'AAA' size (UM-4) batteries (not included) for clock time / alarm setting backup only.

NOTE: The Battery not support the unit main power.

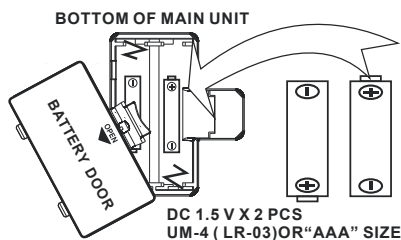

1. Remove the BATTERY door by carefully pushing batteries cover follow OPEN direction. The battery door can then be lifted away.
2. Following the polarity diagram as shown on the bottom cabinet insert 2 batteries and close the door.
3. Use only the size and type of batteries specified. For battery performance and longer operating time, we recommend the use of alkaline-type batteries.
4. Do not mix old and new batteries.
5. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
6. If the unit is not to be used for an extended period of time, remove the batteries.
7. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture.
8. Do not dispose of batteries in fire, batteries may leak or explode.

Radio Operation

Automatic Scan radio station

1. Long press the  POWER button to clock mode and press MODE button repeatedly to select RADIO mode.
2. When unit turn to radio mode, the display will show radio frequency.
3. Press and hold the PRESET button 5 seconds to scan through the frequency band and memory the station in preset.

Scan radio station

1. In radio mode, press and hold the  or  SKIP buttons to search stations automatic forward and backward.
2. Press the  or  SKIP button to search stations manually forward and backward.

NOTE: If FM reception is weak, fully extend the wire antenna and vary the position and location of the antenna until you find the strongest signal

Using Radio Presets

You can preset up to 20 **FM** stations for easy access as follows:

1. Long press the  POWER button to clock mode and press MODE button repeatedly to select RADIO mode.
2. Tune the station you wish to preset.
3. Hold the PRESET button until "P01" appear and flash on the display.
4. Press the  or  SKIP button to select preset location and press the PRESET button once to confirm.
5. Repeat steps 2 through 4 to preset up to 20 stations.

Recall preset station

1. Press the PRESET button once, the preset station show on display.
2. When preset station show, press the  or  SKIP button to search store preset which you wish to play.

Using Aux In (Audio In / Line In) for Connect to external device

1. Long press the  POWER button to clock mode and press MODE button repeatedly to select AUX mode.
2. Plug the audio cable to AUX jack on the unit.
3. Plug the other end of audio cable to external device aux out / audio out / line out / phone out jack.
4. After turn on power of your external device, the external device will sound out from your unit speaker.



Set the Actually Time

After plug in the power, the unit show the clock time (in clock mode) on display.

1. Long press the  POWER button to enter clock mode. The clock time will be show on display.
2. Hold the CLK SET button until the display “12-hr” or “24-hr” digits blink
3. Press the  or  button to set the 12 / 24 hour time format and press the CLK SET button once to confirm.
4. Press the HOUR button to set the hour time and press the MIN button to set the minute time and press the CLK SET button to save all time setting.

Set the Alarm Wake Up Time

You can set 2 different alarm wakes up time on the unit.

1. Long press the  POWER button to enter clock mode. The clock time will be show on display.
2. Hold the AL1 button until the display alarm digit blink
3. Press the HOUR button to set the alarm hour time and press the MIN button to set the alarm minute time.
4. After hour / minutes setting, press the AL1 button to confirm, the alarm sound icons will flash show on the display. (bb-Alarm sound, F-FM radio)
5. Press  or  button to select the wake up option (Alarm or FM Radio).
6. Press the AL1 button to confirm and save all setting.
7. The AL2 setting procedures are same as AL1
8. When alarm coming, the alarm wake source will be sounding.

NOTE:

- Make sure the alarm 1/ alarm 2 source icon light on.
- Not set the Alarm 1 and alarm 2 on same wake time

Wake to FM Radio

1. Make sure your radio station is set to the one you want to wake up to. The unit will play the last radio station you listened to when the wake time is reached. The volume need to set to the desired sound level.
2. The Radio will automatically turn on when the alarm time is reached. The corresponding AL1 or AL 2 icon will blink.
3. The alarm will sound for 60 minutes and then turn off automatically if the SNOOZE button is not pressed
4. To stop the radio sound immediately, press the AL OFF (Alarm off) button

Wake to Beeping Alarm

1. The Beeping Alarm will automatically turn on when the alarm time is reached. The volume need to set to the desired sound level.
2. The corresponding AL1 or AL2 indicator will blink
3. The beep alarm will sound for 60 minutes and then turn off automatically if the SNOOZE button is not pressed.
4. To stop the beep alarm sound immediately, press AL OFF (Alarm off) button

Stop the alarm sound

When alarm sound coming, press the AL OFF (Alarm off) button to stop the alarm sound and it will be auto repeat to next day.

Deactivate the alarm - Cancel the alarm wake up time

1. Long press the  POWER button to enter clock mode. The clock time will be show on display.
2. Press more times the AL1 / AL2 button until the alarm indicator light off (the alarm not coming).
3. If you want activate the alarm, press more times the AL1 / AL2 button until the alarm indicator light on.

Using the Snooze Function

1. When the alarm wake up, press the SNOOZE button once.
2. After pressing, the alarm will be delayed for 9 minutes and then come again. The clock indicator and AL1/AL2 indicator will flash for indication.
3. This manual snooze operation can be repeated again and again.

Using SLEEP Function

1. Whilst listening to the Radio, BT (Wireless) or AUX mode, press the **SLEEP** button will continue to play the sound for the time set in sleep setting (the SLEEP indicator will light and display show 15), the unit will then automatically switch off after a certain time and it go from 15-00 minutes.
2. Set the sleep time timer: When sleep running, press the **SLEEP** button repeatedly to select different sleep time (15, 30, 45, 60 min)
3. Cancel the sleep function: Press the **SLEEP** Button more times to select OFF, wait for 3 seconds to confirm. The **SLEEP** indicator disappears.

Dimmer Function

Setting display brightness.

1. Long press the  POWER button to enter clock mode. The clock time will be show on display.
2. Press and hold the **DIMMER** button repeatedly to set High / Low / Off brightness for display.
3. When the unit in off brightness, press any buttons to turn on the display at Low brightness for 10 seconds.

Reset the unit to factory setting

Long press **PLAY** button 5 seconds when the unit first power up.

Listening to Wireless

Pairing with mobile / tablet

1. Long press the  POWER button to clock mode and press MODE button repeatedly to select BT (Wireless) mode.
2. The word "bt" will flash quickly on the display and unit will enter pairing mode.
3. When pairing, remain within 10 feet of the unit.
4. On your Wireless device, select the "YW-017" in your Wireless settings to pair.
5. When successfully paired and connected, a chime will sound and the display will show "bt" to solid on.

Playing Audio Wirelessly

1. After pairing successful, press  / PLAY button of main unit or external device to start playing music.
2. Press  /  buttons of unit or external device to other track to play.
3. After selection, audio played through the connected Wireless device will now be heard through the speakers.

NOTE:

- When a phone call is received than the music will be stop playing until the phone call is completed, the music will automatically resume. (If the unit cannot play, press the  / PLAY button again).
- After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or your find it is unable to connect, repeat the above steps or press and hold the **PAIR** button 3 seconds again.

Using USB Charging Your Smartphone

 
Connect a USB cord for external device battery charging (DC5V, 1000mA)

1. Install the adapter follow SETUP page
2. Insert plug of USB cable (not include) into **USB** charging port on the unit.
3. Connect other end charging **USB** socket of your external device (Personal Player / Mobile Phone).
4. After connection, the external device batteries will start charging.
5. Disconnect the USB cable as soon as it is fully charged.

NOTES:

Don't connect USB charging port of unit to computer USB sockets.

Don't connect USB charging port of unit to other USB charger.

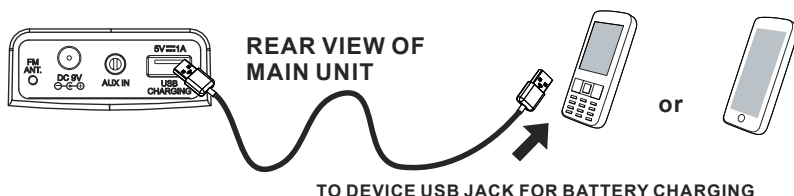


Using USB Charging Your Smartphone

The unit is compatible with mobile / devices which support the wireless charging.

1. Install the adapter follow SETUP page
2. Place the smart phone on the WIRELESS CHARGING AREA
3. WIRELESS CHARGING Indicator will be light. If indicator light off, you move your mobile / device until indicator light on
4. Take away your smart phone from the WIRELESS CHARGING AREA as soon as the smart phone is fully charged.

NOTE:

 - Make sure your smart phone compatible wireless charging
- In order to get more effective for wireless charging, please take off the protective case from the mobile phone.
- The above description is applicable to most wireless charging mobile phone, but there may have discrepancies depending on the power consumption of different mobile phones and versions of the operating system.

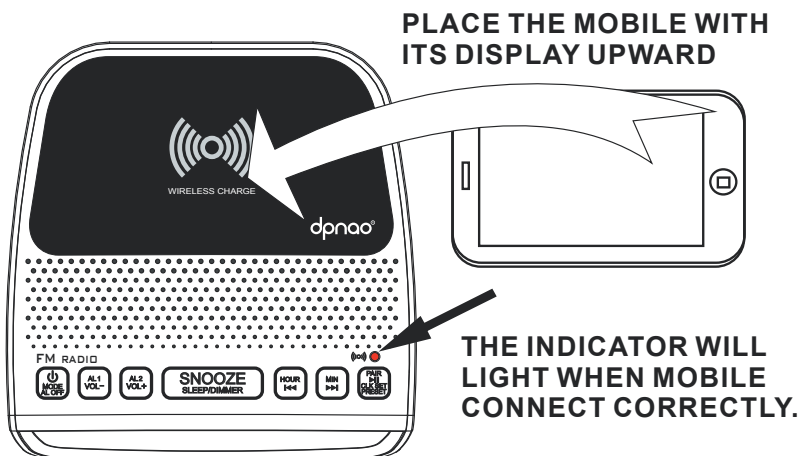

Specification

AC Power Adapter Connect DC Jack	Use included adapter AC~ Input 100-240V 50/60 Hz , DC Output 9V , 2000mA
Wireless Charging	Fast Charging (9W)
Loud Speakers Spec	28 mm, 2 Watt , 8 Ohm

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.