

70g书纸正反面 中文正面

315 mm

101 mm

<div>8BitDo®</div> <div>Ultimate 2C Wired Controller<div>English</div></div>	
<div><div><div>Home</div><div>view button</div><div>LSB, LTS</div><div>mapping button</div><div>D-pad</div><div>mapping indicator</div><div>status LED</div><div>menu button</div><div>star button</div><div>RSB, RTS</div></div><div><div>RB</div><div>RT</div><div>R4</div><div>LB</div><div>LT</div><div>L4</div></div></div>	
<div>Windows<div></div></div>	
<div><div><div><div>Required system: Windows 10(1903) or above.</div></div><div><div>Wired Connection</div><div>Hold the X button while connecting the controller to the USB port of your device, and wait till the controller is successfully recognized by your Windows device, the Status LED will stay solid.</div></div><div><div>Android<div></div></div><div><div>Required system: Android 9.0 or above.</div><div>OTG support is required on your Android device, please contact your manufacturer for more information.</div></div></div><div><div>Wired Connection</div><div>Hold the B button while connecting the controller to the USB port of your device, and wait till the controller is successfully recognized by your Android device, the Status LED will stay solid.</div></div></div></div>	
<div><div><div><div>Turbo Function<div></div></div><div><div><div>D-pad, View, Menu, Home buttons are not supported.</div><div>The turbo settings will not be saved permanently and will revert to default settings after the controller is powered off or disconnected.</div></div><div><div>Turbo Mode</div><div>Turn on: Hold the button you would like to assign the turbo functionality, then press the Star button to enable the Turbo Mode, the Mapping indicator will blink rapidly.</div><div>Turn off: Hold the button you would like to deactivate the turbo functionality, then press the Star button to disable the Turbo Mode, the Mapping indicator will turn off.</div></div><div><div>Auto Turbo Mode</div><div>Turn on: Hold the button you would like to assign the turbo functionality, then press the Star button twice to enable the Turbo Mode, the Mapping indicator will blink rapidly.</div><div>Turn off: Hold the button you would like to deactivate the turbo functionality, then press the Star button to disable the Turbo Mode, the Mapping indicator will turn off.</div></div></div><div><div>L4 / R4 Configuration</div><div><div>The Mapping indicator will blink continuously when the configured button is pressed.</div><div>Hold the L4 / R4 button + the button you would like to configure, then press the Mapping button to complete the configuration. Repeat the same procedure to cancel the configuration.</div></div></div></div></div></div>	
<div><div><div>Firmware Update</div><div><div>Please visit support.8bitdo.com to access the Ultimate Software V2.</div></div></div><div><div>Support<div></div></div><div><div>Please visit support.8bitdo.com for further information & additional support.</div><div></div></div></div></div>	

<div>8BitDo®</div> <div>猎户座二代青春版有线手柄<div>中文</div></div>	
<div><div><div>Home 键</div><div>视图键</div><div>左摇杆</div><div>左摇杆按键</div><div>映射键</div><div>方向键</div><div>状态指示灯</div><div>菜单键</div><div>星号键</div><div>右摇杆</div><div>右摇杆按键</div><div>热键指示灯</div></div><div><div>右肩键</div><div>右扳机键</div><div>R4</div><div>左肩键</div><div>左扳机键</div><div>L4</div></div></div>	
<div>Windows<div></div></div>	
<div><div><div><div>* 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。</div></div><div><div>有线连接</div><div>按住 X 键 不放并使用 USB 线将手柄连接到 Windows 设备的 USB 端口，等待系统识别完成后 状态指示灯 常亮。</div></div><div><div>Android<div></div></div><div><div>* 要求 Android 设备系统版本为 Android 9.0 或更高版本。</div><div>* 要求 Android 设备支持 OTG 功能并启用，详情请咨询设备制造商。</div></div></div><div><div>有线连接</div><div>按住 B 键 不放并使用 USB 线将手柄连接到 Android 设备的 USB 端口，等待系统识别完成后 状态指示灯 常亮。</div></div></div></div>	
<div><div><div><div>连发功能<div></div></div><div><div><div>* 方向键、视图键、菜单键、Home 键 不支持连发。</div><div>连发功能不会保存，关机或断开连接后恢复默认。</div></div><div><div>连发</div><div>按住功能键，再按下 星号键 可开启连发，热键指示灯 快速闪烁。</div><div>按住功能键，再按下 星号键 可关闭连发，热键指示灯 熄灭。</div></div><div><div>自动连发</div><div>按住功能键，再按 2 下 星号键 可开启自动连发，热键指示灯 快速闪烁。</div><div>按住功能键，再按下 星号键 可关闭自动连发，热键指示灯 熄灭。</div></div></div><div><div>配置 L4、R4 键</div><div><div>* 已配置的按键使用时 热键指示灯 会持续闪烁。</div><div>按住 L4键 或 R4 键 + 需要配置的按键，再按下 映射键 完成配置。按住 L4 键 或 R4 键，再按下 映射键 可取消此功能。</div></div></div></div></div></div>	
<div><div><div>固件更新</div><div><div>请访问 app.8bitdo.cn 获取精英软件 V2 使用。</div></div></div><div><div>技术支持<div></div></div><div><div>请访问 support.8bitdo.cn 了解详细信息。</div><div></div></div></div></div>	

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment