

GQ3060

User Guide

Contents

I. CAUTIONS ON MOBILE PHONE USE.....	4
1.1 INTERFERENCE.....	4
1.2 REASONABLE USE.....	4
1.3 QUALIFIED MAINTENANCE SERVICE	4
1.4 WATER-RESISTANCE.....	4
1.5 EMERGENCY CALLS.....	4
2 PRECAUTIONS FOR USE OF BATTERY	4
3 CAUTIONS FOR CHILDREN.....	4
II. START TO USE	5
3.1 To INSERT SIM CARD(S):	5
3.2 CHARGE THE BATTERY	5
III. BASIC FUNCTIONS	6
1. LOCK AND UNLOCK THE SCREEN	6
2. MAKE IT YOURS	8
3. SWITCH TO RECENTLY USED APPLICATION	14
4. MAKE A CALL	15
5. CALL LOG.....	16

6. ANSWERING PHONE CALLS AND REJECTION	17
7. ADD A CONTACT	18
8. SEND AND RECEIVE MESSAGE(S)	19
9. BROWSER THE WEB.....	21
10. ENJOY MUSIC	21
11. DOWNLOAD APPLICATIONS FROM PLAY STORE	22
12. MANAGE APPLICATIONS	23
13. APPLICATIONS & UTILITIES	24
14. SETTINGS	24

I. Cautions on mobile phone use

1.1 Interference

All phones may be interfered, which affect phone calls.

1.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

1.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

1.4 Water-resistance

Your device is non water-resistant. Keep it dry.

1.5 Emergency calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dialer icon.

2 Precautions for use of battery

2.1 Do not dispose of batteries near or in a fire to avoid dangers.

2.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

3 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

II. Start to use

3.1 To insert SIM card(S):

Insert the SIM card correctly in the card slot(s) (See figure below), suggest switch off the phone when you insert SIM card.

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switch off the phone when you insert SIM card.

Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

3.2 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen display 'Battery is full', thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display ' Battery is full '. It generally takes 4 hours to charge the battery. During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging. .

Cautions: Charge the phone in a well ventilated place in which the temperature is between -10℃

to +55°C. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

III. Basic functions

1. Lock and unlock the screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then swipe up for unlock.

No SIM card



Tue, 22 Feb

11
33

 


2. Make it yours


2.1 Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press home screen and Modify Wallpaper.



2.2 Long press **Home** screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then loosen your hold finger.

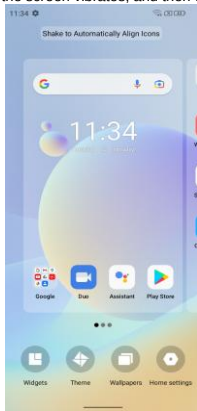

 
Long press and hold the widget or icon you want to move. Once the phone vibrates, don't loosen your hold on the icon. Drag the widget or icon to a new location on the screen. Press and hold on an icon till the phone vibrates, and drag the widgets or icon to the trash for remove!

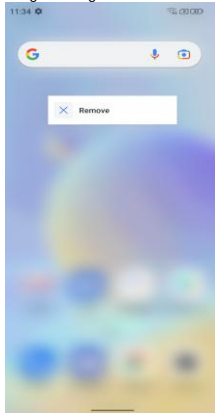

Swipe left and enter to appaction list.





 2.3 Notification Bar: At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call or something in the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing “Back”.

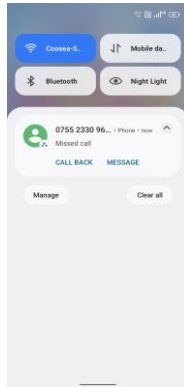


2.4 Android™ and computer connection

  If you connect your phone to PC via USB, you can find the USB options, choose This Device file Transfer option, you can see your phone memory in PC, this is same function like USB storage.

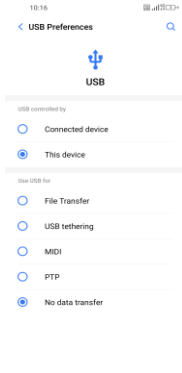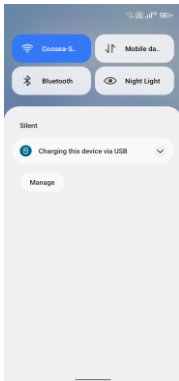

3. Switch to Recently Used Application

 Press menu key.

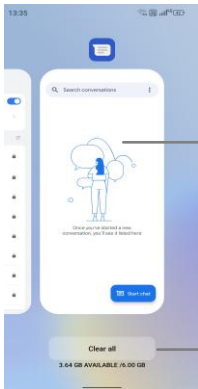


Touch and slide this place can choose to open the history application

Touch this icon to close all history application


4. Make a call

 Click  and enter a complete phone number to make a call. Your phone supports smart search.

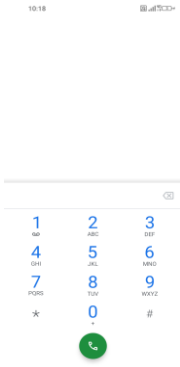

Swipe to right to view Call history and Contacts.

 5. Call log

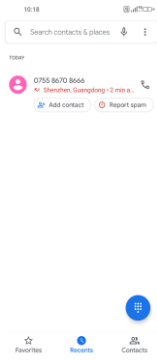

Press the number if you want to see the details , send message or call back, there are three options for you.

Press the number, you can view the contact details, send a message or call back.

6. Answering phone calls and rejection

When there is an incoming call, you can drag the icon up or down to answer or hang up it directly.



Call from

0755 8670 8666

Shenzhen, Guangdong

 Reply

Swipe up to answer

 


Swipe down to reject

7. Add a contact

Touch  to enter contact

Touch  to add a new contact



No contacts yet



10:19

× Create contact Save ⋮

 First name

Last name

 Company

 Phone

Label
Mobile

 Email

Label
Home

[More fields](#)

Click here to add new contact and in this page press menu key to enter menu view, setting, etc.

8. Send and Receive message(s)



Touch  enter to messaging, touch “Start chat”.



Tap this icon to select desired contact from phone

 


Touch to switch the digital input and symbols

Press space or a punctuation mark to enter the highlighted suggestion

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in blue

Tap  to add "Attach" including Pictures, Videos, Audios, etc to send MMS.SMS

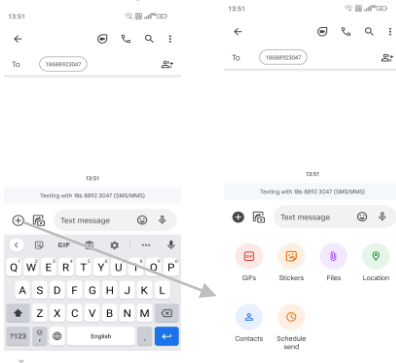

When a new message comes, you can read by dragging notification panel and click the message, or entering Message to read it directly.
Long press one of the all message threads, you can delete it".

9. Browser the Web

9.1 Set up Internet/Data connection

 
Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired WAP account.

9.2 Switch on Data connection or Wi-Fi

To browse the web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it browse the web.

10. Enjoy music


When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.

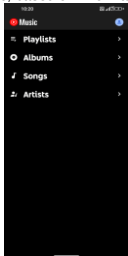

11. Download applications from Play Store


11.1 Add Google™ account

 11.2 Enter play store and download apps

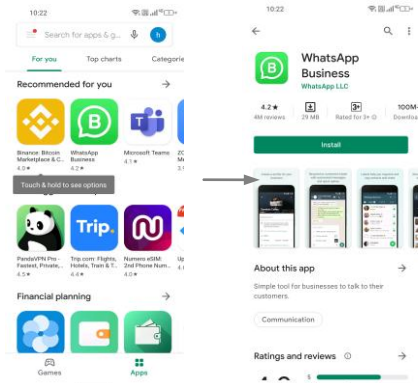

12. Manage Applications

 Enter Setting > App.
You can see app info.

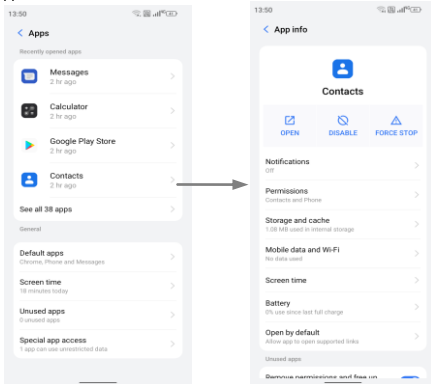

13. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities, such as Gmail, Email, Play Store. Before accessing the applications, please turn on the data connection or connect to wifi.

14. Settings

 
 
14.1 Wi-Fi

Open Wi-Fi, search nearby Wi-Fi and connect it, then you can use Internet or download apps for free.



14.2 Bluetooth


Open Bluetooth, connect to other phone, you can share something like music, photos, movies etc to other people.

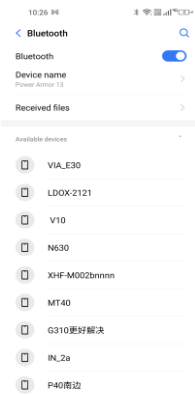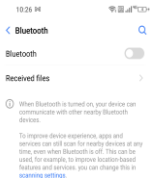

14.3 Security



Screen lock.

 There are four screen lock ways for you to choose :Slide, Pattern, PIN, Password.

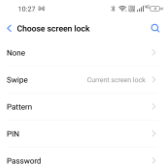



14.4 Face ID

  Click Settings - Security and Location - Face Unlock, follow the prompts ,after completing the face recording, you can use the face unlock function.

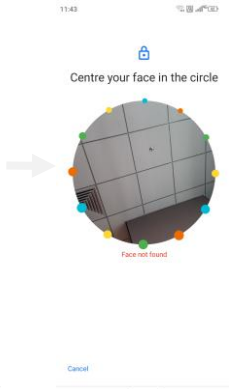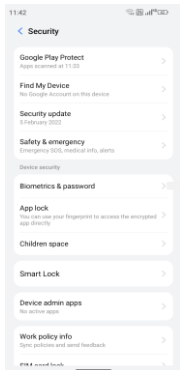

14.5 Fingerprint

  Click Settings - Security and Location - fingerprint, follow the prompts ,after completing the fingerprint recording, you can use the fingerprint unlock function.

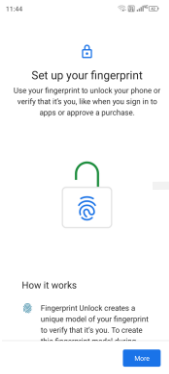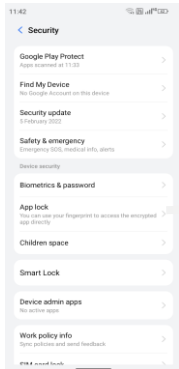

Warning:

1. Use carefully with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

2. CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



3. The product shall only be connected to a USB interface of version USB2.0.

4. Adapter shall be installed near the equipment and shall be easily accessible.

5. Operation temperature: -10~40°C.

6. The plug considered as disconnect device of adapter.

7. SAR: The device complies with RF specifications when the device used at 0.5cm from your body (SAR limit 2.0 W/Kg). The device is in compliance with the requirements.

8. Accessories information:

Model: UF83PD3301

Input: 100-240V~50/60Hz 0.8A

Output: 5.0V ---3.0A 15.0W

or 9.0V ---3.0A 27.0W or 11.0V ---3.0A 33.0W

or 12.0V ---2.5A 30.0W or 15.0V ---2.0A 30.0W

or 20.0V ---1.5A 30.0W

PPS: 3.3V-11.0V ---3.0A 33.0W Max

Restrictions in the 5 GHz band:

According to Article 10 (10) of Directive 2014/53/EU, the packaging shows that this radio equipment will be subject to some restrictions when placed on the market in Belgium (BE), Bulgaria (BG), the Czech Republic (CZ), Denmark (DK), Germany (DE), Estonia (EE), Ireland (IE), Greece (EL), Spain (ES), France (FR), Croatia (HR), Italy (IT), Cyprus (CY), Latvia (LV), Lithuania (LT), Luxembourg (LU), Hungary (HU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Romania (RO), Slovenia (SI), Slovakia (SK), Finland (FI), Sweden (SE), Turkey (TR), Norway (NO), Switzerland (CH), Iceland (IS), and Liechtenstein (LI).

The WLAN function for this device is restricted to indoor use only when operating in the 5150 to 5250 MHz frequency range.

	ES	LU	RO	CZ	FR	HU	SI
	DK	HR	BE	BG	DE	EE	IE
	EL	IT	Cy	LV	LT	SK	MT
	NL	AT	PL	PT	FI	SE	TR
	NO	CH	IS	LI			

Declaration of Conformity (DoC)

We, **Shenzhen Gotron Electronic CO.,LTD.**

7B01, Building A, Block 1, AnhongjiTianyao Plaza, Longhua District, Shenzhen City, Guangdong Province China

Declare that the DoC is issued under our sole responsibility and belongs to the following product(s):

Product Type: Mobile Phone
Trademark: ulefone
Model Number(s): Armor 20WT, Armor 20W, Armor 20W Pro, Armor 20 Pro,
Armor 20W Lite, Armor 20 Lite

(Name of product, type or model, batch or serial number)

System components:

PIFA Antenna: BT/Wi-Fi2.4G:1.1Bi; WIFI5.2G:1.2dBi; WIFI5.8G:1.4dBi; GPS:1.2dBi

GSM900: -2.19dBi, DCS1800:-0.18dBi; WCDMA Band I : -0.13dBi, Band VIII: -2.19dBi;

LTE: B1: -0.13 dBi; B3: -0.18dBi; B7: 1.06 dBi; B8: -2.19 dBi;

B20: -0.86 dBi; B28:-1.45 dBi; B38: 1.47 dBi; B40: 0.25 dBi;

Adapter:

Model: UF83PD3301

Input: 100-240V~50/60Hz 0.8A

Output: 5.0V 3.0A 15.0W

or 9.0 3.0A 27.0W or 11.0V 3.0A 33.0W

or 12.0V 2.5A 30.0W or 15.0V 2.0A 30.0W

or 20.0V 1.5A 30.0W

PPS:3.3V-11.0V 3.0A 33.0W Max

Manufacturer: Guangdong Beicom Electronics Co., Ltd.

Rechargeable Li-ion Battery:

Model: 3060; Specification: DC 3.85V, 10850mAh;

Manufacturer: Shenzhen Hua Tian Tong Technology Co., Ltd.

USB Cable: 100cm;



The object of the declaration described above is in conformity with the essential requirements of the relevant Union harmonization legislation: Radio Equipment Directive RED (2014/53/EU).

The following *harmonized* standards and technical specifications have been applied:

HEALTH & SAFETY (Art. 3(1)(a)):

EN 50360:2017; EN 50566:2017; EN 62209-1:2016; EN 62209-2:2010; EN 62479:2010

EN 62368-1:2014+A11:2017

EMC (Art. 3(1)(b)):

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-3 V2.1.1 (2019-03)
ETSI EN 301 489-17 V3.2.4 (2020-09)
ETSI EN 301 908-13 V13.2.1 (2022-02)
ETSI EN 301 489-52 V1.2.1 (2021-11)
EN 55032:2015+A1:2020
EN 55035:2017+A11:2020
EN IEC 61000-3-2:2019+A1:2021
EN 61000-3-3:2013+A2:2021

Radio Spectrum (Article 3.2):

EN 301 511 V12.5.1 (2017-03);
EN 301 908-1 V13.1.1 (2019-11);
EN 301 908-2 V13.1.1 (2020-06);
EN 301 908-13 V13.2.1 (2022-02);
EN 300 328 V2.2.2 (2019-07);
EN 301 893 V2.1.1 (2017-05);
EN 300 440 V2.2.1 (2018-07);
EN 303 345-1 V1.1.1 (2019-06);
EN 303 345-3 V1.1.1 (2021-06);
EN 303 413 V1.2.1 (2021-04);

Notified Body Involved:

Notified body involved: TÜV Rheinland LGA Products GmbH, 0197, RT 60168738 0001 and <Notified body name, Notified body number, Certification number>

Notified Body:	TÜV Rheinland LGA Products GmbH
Notified Body Number:	0197
Activity Performed:	Module B/C on Article 3.1a, 3.1b, 3.2 and 3.3

RF Specification:

Function	Operation Frequency	Max RF output power:	Limit
BLE	2402MHz~2480MHz	-5.73 dBm	20 dBm.
BT(BR+EDR)	2402MHz~2480MHz	6.57 dBm	20 dBm.
WIFI 802.11b/g/n(HT20/40)	802.11b/g/n(20MHz): 2412~2472MHz; 802.11n(40MHz):2422~2462MHz	15.84 dBm	20 dBm.
Wi-Fi 5.2G(802.11a/n20/n40/a c20/ac40/ac80)	802.11a/ n20/ac20:5180MHz~5240MHz 802.11 n40/ac40:5190MHz~5230MHz 802.11ac80:5210MHz	9.83 dBm	23 dBm.
Wi-Fi 5.8G(802.11a/n20/n40/a c20/ac40/ac80)	802.11a/ n20/ac20:5745MHz~5825MHz 802.11 n40/ac40:5755MHz~5795MHz 802.11ac80: 57750MHz	9.79 dBm	13.98 dBm.
GSM/GPRS/EGPRS 900	TX(Uplink):880M-915MHZ; RX(Downlink):925M-960MHZ	32.64 dBm	class 4 (33±3dBm)
GSM/GPRS/EGPRS 1800	TX(Uplink):1710M-1785MHZ; RX(Downlink):1805M-1880MHZ	30.22 dBm	class 1 (30±3dBm)
WCDMA B1	TX(Uplink):1920-1980MHZ; RX(Downlink):2110-2170MHZ	23.33 dBm	24 (dBm) +1,7/-3,7 (dB)
WCDMA B8	TX(Uplink): 880-915MHZ; RX(Downlink):925-960MHZ	23.17 dBm	24 (dBm) +1,7/-3,7 (dB)
LTE FDD B1	TX(Uplink):1920-1980MHZ; RX(Downlink):2110-2170MHZ	23.91dBm	23(dBm) ±2
LTE FDD B3	TX(Uplink) :1710-1785MHZ; RX(Downlink):1805-1880MHZ	23.8 dBm	23(dBm) ±2
LTE FDD B7	TX(Uplink) :2500-2570MHZ; RX(Downlink):2620-2690MHZ	24.3 dBm	23(dBm) ±2
LTE FDD B8	TX(Uplink): 880MHz to 915 MHz RX(Downlink): 925 MHz to 960 MHz	23.89 dBm	23(dBm) ±2
LTE FDD B20	TX(Uplink) 832MHz~862MHz; RX(Downlink)791MHz~821MHz	23.92dBm	23(dBm) ±2
LTE FDD B28	TX(Uplink): 703 MHz to 748MHz; RX(Downlink): 758 MHz to 803 MHz	23.67dBm	23(dBm) ±2
LTE TDD Band 38	Uplink & Downlink 2570 MHz to 2620 MHz;	24.26dBm	23(dBm) ±2
LTE TDD Band 40	Uplink & Downlink 2300MHz~2400MHz;	24.26 dBm	23(dBm) ±2
NFC	13.56MHz	15.7 dBuA/10m	60 dBuA/10m
DMR	400MHz-480MHz	--	--

FM	Rx(Downlink): 87.5MHz~108MHz	--	--
GPS	Rx(Downlink): 1.57542GHz	--	--

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The maximum SAR values tested on this device when used in its normal position at the ear and when used close to the body (at a minimum distance of 5mm/0mm) are:

Max SAR Value(W/kg)	10-g Head	0.532W/kg
Limit is 2.0(W/kg) for 10-g	10-g Body	0.919 W/kg
Limit is 4.0(W/kg) for 10-g	10-g Member DAS	2.701 W/kg

Technical file held by: Shenzhen Gotron Electronic CO.,LTD.

7B01, Building A, Block 1, AnhongjiTianyao Plaza, Longhua District, Shenzhen City, Guangdong Province China

Signed for and on behalf of: Shenzhen Gotron Electronic CO.,LTD.

Name and Title: Bing Tang/Manager

Address: 7B01, Building A, Block 1, AnhongjiTianyao Plaza, Longhua District, Shenzhen
City, Guangdong Province China

Bing Tang

Signature of Authorized Person

2023-03-14