

Troubleshooting

Phenomena	Solutions
No sound	1. Make sure the power cord be connected properly to AC outlet. 2. Check volume control knob. 3. Check and make sure the sound source be in the state if playback 4. Check speaker system's connection.
No Bass	Check Bass connection knob.
No treble	Check speakers system connection.
No sound from LFor RF	Check the input connection of speakers. Check the output connection of speakers.
Remote control invalid or insensitive	1. Replace batteries in case of low power. 2. Blocked off by big articles. 3. Inadequate distance and angle. Remote control longest work distance is 6 meters, and no more than 30 degree from front panel axes.

Note: Do not disassemble this unit unless a qualified technician does.

The warranty certificate

Name	
Address	
Model No	
Day of purchase	
Name of outlet	
Trouble-shooting	
Solution	

Remarks:

Our products are covered by a twelve months free warranty. Please keep this warranty certificate together with the original invoice and present them when service is required. This warranty does not apply if damage caused by accident, misuse malicious acts, etc.

CAUTION
Allow 0.5M Distance
From Dispaly!

CAUTION
Risk Of Electric
Shock, Do Not Open

For improvement purposes, specifications and functions are subject to

2.0 CH ACTIVE SPEAKER SYSTEM

USER'S MANUAL

Carefully read instructions to operate this unit properly,
and keep this manual for further reference



To all customers

Thank you for choosing our multimedia sub-woofer speaker! Your choice of this product indicates that you're a devotee of acoustic production, we appreciate your patronage and take pride in this high quality products.

In order to make your unit exert all its power, we suggest that you take a time to read through this manual before you operate your system. Thus, it will acquaint you with operating features and system-connection considerations so that your listening pleasure will be enhanced right from the start.

Unpacking

Unpack the unit carefully and check the packing list:

- 1. Main bass speaker.....1
- 2. Sub speaker.....2
- 3. Signal cord.....1
- 4. Manual.....1
- 5. Remote control.....1
- 6. Connection wire.....1

Examine the unit for any possible shipping damage. We recommend that you retain the original carton and packing materials for future use.

Safety precautions

Please read instructions, carefully to operate the unit properly.

- 1. keep the unit free from moisture allow for sufficient heat dispersion. Upon detection. Abnormal phenomena, unplug the power cord immediately.
- 2. Never disassemble or modify the unit in any way by yourself when malfunction occurs. Refer to the qualified technicians or our easytrouble shooting instead.
- 3. Make sure all the connections be proper.
- 4. Make sure the unit located on a flat surface or ground.
- 5. Keep the unit free from water. Do not place vase or such liquid container instrument on it.

Designations of unit parts

Remote Control System

- 1. Mute key
- 2. Power standby
- 3. Number selection key
- 4. All light on/off
- 5. Mode of the light on unit
- 6. Volume up
- 7. Previous program
- 8. Next program
- 9. Volume down
- 10. Play/Pause program
- 11. Input mode
- 12. EQ key
- 13. The flash mode of light
- 14. The rotational mode of light
- 15. Bass up/down
- 16. Treble up/down
- 17. ECHO adjustment
- 18. MIC volume adjustment

REAR PANEL

- 1. MIC input
- 2. USB input
- 3. TF card input
- 4. Audio input
- 5. DC 13.5V input
- 6. Play/Pause key
- 7. ECHO adjustment
- 8. Light on/off
- 9. Previous program
- 10. Input mode
- 11. MIC volume adjustment
- 12. EQ key
- 13. Next program
- 14. Previous program/Power

FRONT PANEL

- 10. 11. 12. 13. 14.

DVD /VCD/CD/MP3 PLAYER OR OTHER AUDIO EQUIPMENT

- 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18.

System Connection

- 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18.

AUX MODE

- 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18.

Note: RECOMMEND YOUR DVD PLAYER OR SOUND SOURCE WITH DTS AND AC-3 DIS CODE FUNCTION WITH MANY THANKS!

FCC ID: 2AOYNJP-510

Guangzhou Yufeng Electronic Co., Ltd

Model name: 2.0 CH ACTIVE SPEAKER SYSTEM

Model No.: JP-510

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.