



AUGMENTED REALITY LASER GAME

AGES 8+

CONTENT

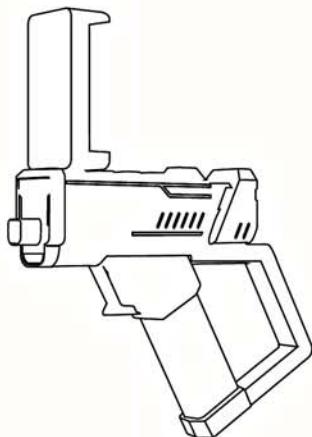

Augmented Reality Blaster

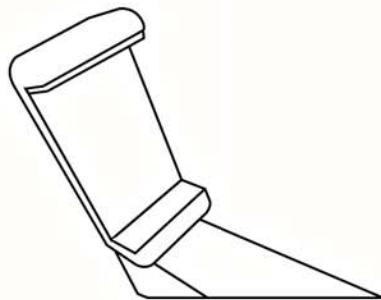

Smartphone Mount

BATTERIES & CHARGING

The blaster uses 2 "AAA" 1.5V batteries (not included)

1. Use a Phillips or Cross screwdriver to open the battery compartment on the grip of the blaster.
2. Insert the batteries following the diagram inside the battery compartment.
3. Close the battery compartment and tighten the screw.

DOWNLOADING THE APP

1. Scan the correct QR code to the right to download the AR Blaster app from Google Play™ or the The App Store®.
2. Turn on Bluetooth® on your smartphone.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



SAFETY WARNINGS: PLEASE READ BEFORE USE

- Not intended for children under 8 years of age.
- Use this product only for its intended use.
- Always be aware of your surroundings while using this item.
- Do not expose to extreme temperatures and moisture.
- Do not leave game unattended when not in use.
- This game has no user serviceable components. Do not disassemble.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

Model No.: 1006041

Distributed by and ©2018 MerchSource, LLC. Irvine, CA 92618. All rights reserved.
For technical support, please call 1-800-374-2744.

Printed in China



Scan for Android App
in Google Play™



Scan for iOS App in
The App Store®



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in Bluetooth® wireless technology or 3.5 mm stereo mini plug to connect.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws

**KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS
IMPORTANT INFORMATION FOR FUTURE REFERENCE.**

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.