


VINTAR

USER MANUAL

60W 2.1 BLUETOOTH SOUNDBAR

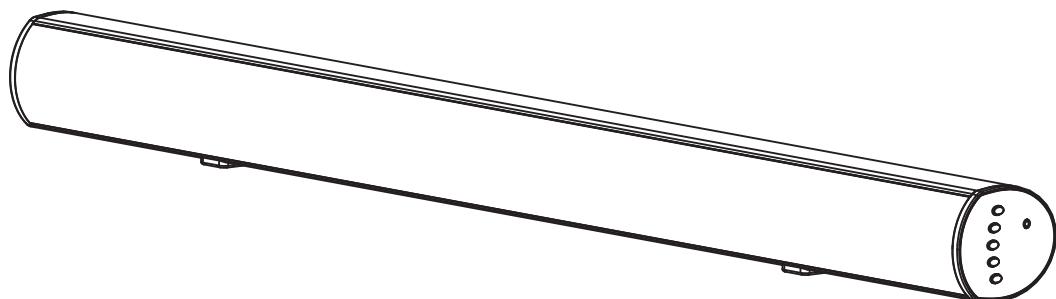

MODEL: VINTAR-0039

Safety Instructions & Warnings




WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

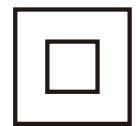

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- WARNING: Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
- WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

- If the remote control supplied with this product contains a coin/button cell battery and the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside and part of the body, seek immediate medical attention.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

FCC Radiation Exposure Statement

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

1 Welcome

2 Your 60W Soundbar

- 2.1 In The Box
 - 2.2 Side & Rear View
 - 2.3 Remote Control
-

3 Quick Setup

- 3.1 Sitting Your Soundbar
 - 3.2 Connecting Up Your Soundbar
 - 3.3 AC Power Connection
 - 3.4 Installing the Remote Control Batteries
 - 3.5 Using the Remote Control
-

4 Daily Use

5 Wall Mounting

6 Connection Instructions

- 6.1 Connecting TV/DVD via Aux Cable
 - 6.2 Connecting VIA LINE IN Cable
 - 6.3 Connecting VIA OPTICAL Cable
-

7 Set Up

- 7.1 Connecting your Sound Bar to your TV
 - 7.2 Via Headphone Connection
 - 7.3 Connecting to a mobile device
 - 7.4 Via Digital Connection
-

8 Useful Information

9 Troubleshooting

10 Technical Specifications

1 Welcome

Thank you for choosing this product. Each of our projects have been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your music!

100% SATISFACTION GUARANTEE - We provide 24-month warranty and friendly customer service, ,welcome to contact us on Amazon any time.

2 Your 60W Soundbar

2.1 In The Box


Carefully remove your Soundbar from the box.

Inside the box you will find:


- 60W Soundbar
- 3.5mm LINE IN Cable
- RCA Cable
- OPTICAL Cable
- AC Power Adapter
- Remote Control (1 x CR2032 Battery Supplied)
- Screws and Mountings for Attaching the Soundbar to the Wall
- Instruction Manual

2.2 Side & Rear View


SIDE

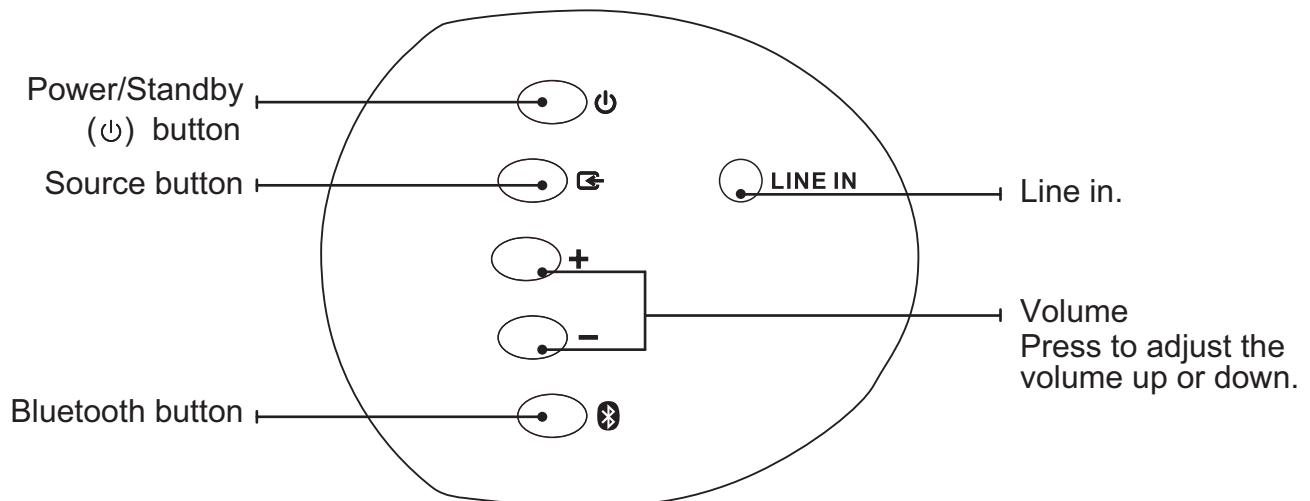

REAR

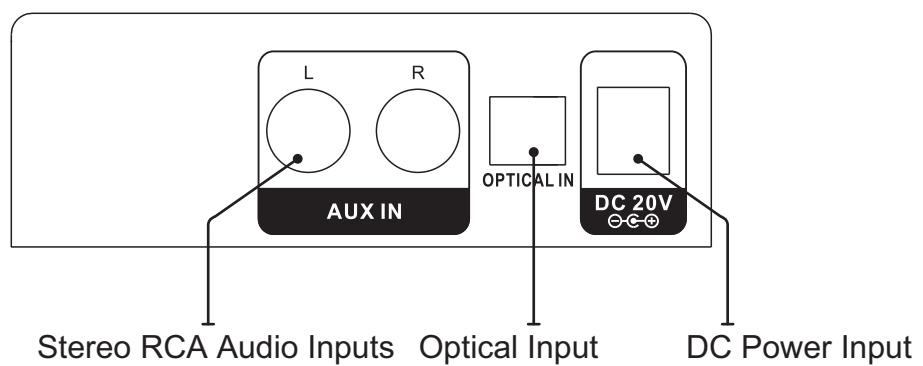

2.3 remote control

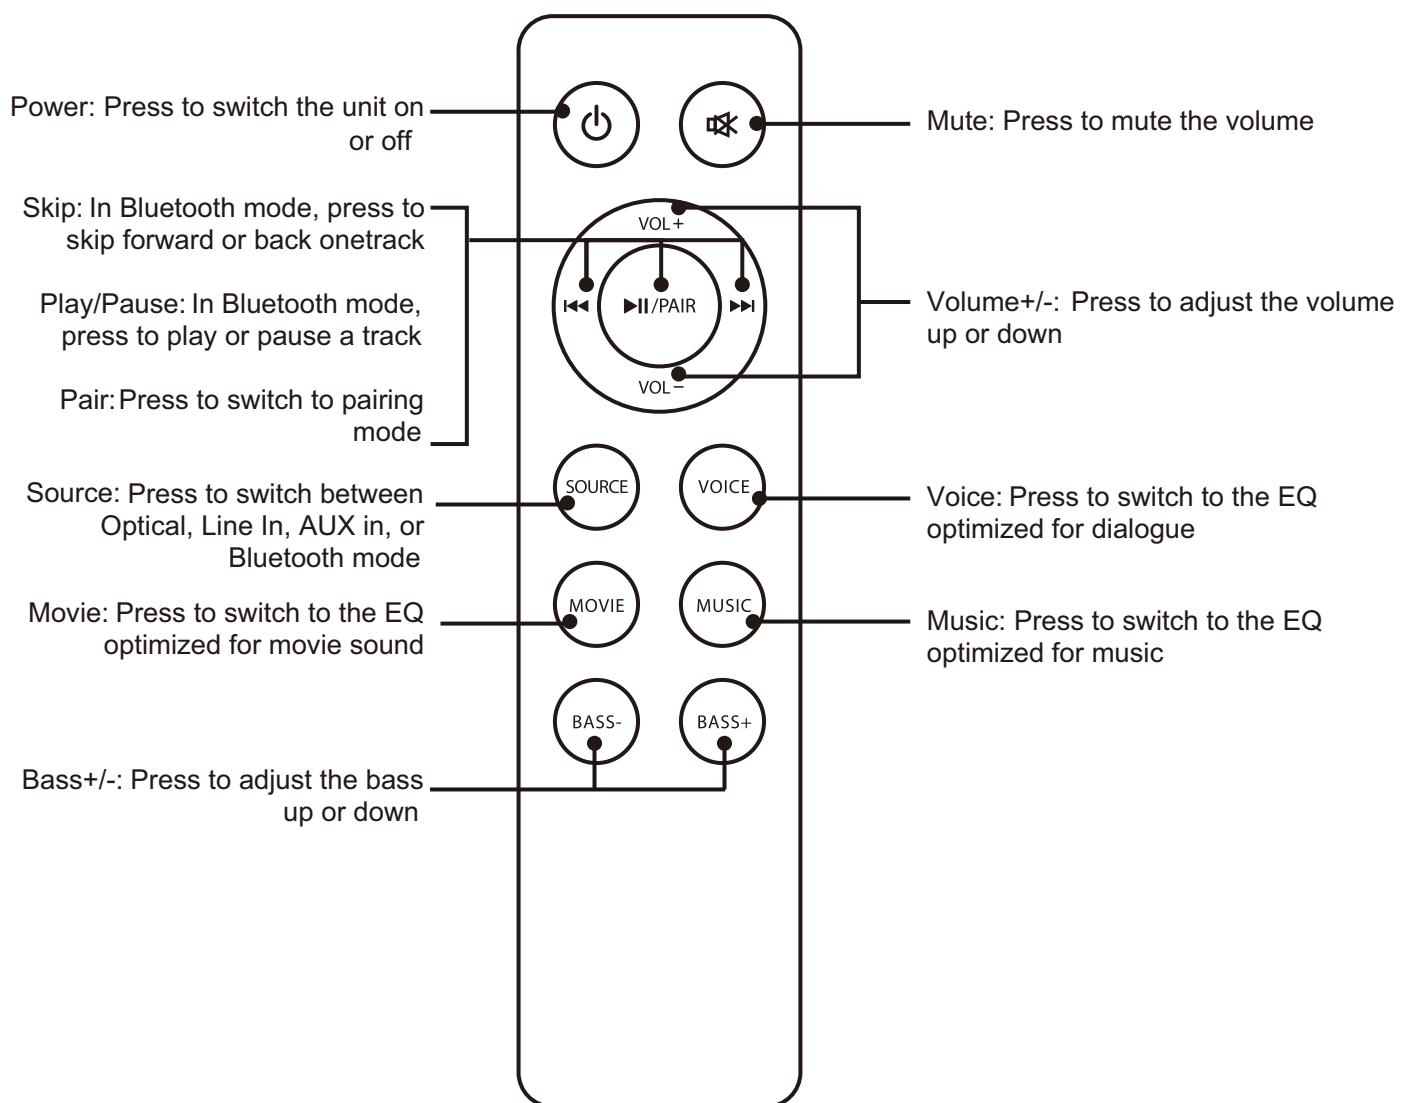

3 Quick Set Up

3.1 Siting your Soundbar

You can stand your Soundbar on a level surface or attach it to the wall using the screws and mountings provided.

3.2 Connecting Up Your Soundbar

Connect the applicable audio cables (provided) to either the AUX IN or LINE IN ports on the Soundbar and connect the other ends to the AUX OUT, LINE OUT or HEADPHONES ports on your TV or other device.

Please note that if connecting via a headphones port on your external audio device the volume control of that device will affect the sound output on the Soundbar.

3.3 AC Power Connection

Plug the power cable into the AC input socket at the rear of the Soundbar. Connect the mains adapter to the power socket and turn the power on.

3.4 Installing the Remote Control Batteries

Open the battery cover of the Remote Control and insert the battery (supplied) so that the `+' mark on the battery matches the `+' mark inside the remote control. Replace the battery cover.

To use the Remote Control, simply direct it towards the front of the Soundbar and press the desired buttons.

DON'T FORGET! When replacing the batteries make sure that you use the same size and type.

3.5 Using the Remote Control

Please note that your Remote Control may not function:

1. At a distance or more than 5m from the Soundbar.
2. At an angle of more than 30° from the centre of the Soundbar.
3. If there is an obstacle between the Remote Control and the Soundbar.
4. When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote sensor on the Soundbar.

4 Daily Use

We have divided this user guide into separate sections, so that you can find the information you are looking for easily. This section covers the day to day functions that you will use most.

Turning On and Off

When you apply power to the Soundbar the red LED illuminates to indicate that it is in standby mode. To exit standby mode and turn the Soundbar on:

Press and hold the  button until the green LED illuminates.

Switching the Soundbar to standby

When you have finished using your Soundbar you can switch it to standby mode to save power.

Press and hold the  button until the red LED illuminates.

Selecting an Input Mode

You can use the  button to select the desired input mode.

Selecting AUX IN

- ① Make sure that you have plugged one end of the cable provided to the AUX IN ports on the Soundbar and the other end to the AUX OUT ports on the external audio device (for example TV or DVD player).
- ② Press and hold the  button on the Soundbar, or alternatively press and release the  button on the Remote Control so that the green LED is illuminated.
- ③ Press and release the  button on the Soundbar, or alternatively press the **SOURCE** button on the Remote Control to choose the AUX IN mode so that the white LED is illuminated.
- ④ Power on the external audio device and use as normal.
- ⑤ You can increase or decrease the volume by using the volume buttons on either the Soundbar or Remote Control.

Daily Use Continued...

Selecting LINE IN

- ① Connect one end of the 3.5mm LINE IN cable (supplied) to the LINE OUT output on the external audio device (for example MP3 player) and the other end of the cable to the LINE IN port on the Soundbar.
- ② Press and hold the  button on the Soundbar, or alternatively press and release the **SOURCE** button on the Remote Control to choose the LINE IN mode so that the green LED is illuminated.
DON'T FORGET! If the Soundbar is in Bluetooth mode, the blue LED will flash. Press the LINE button on the Remote Control so that the green LED illuminates to select LINE IN mode, or press and release the  button on the Soundbar until the green LED is illuminated.
- ③ Power on the external audio device and use as normal.
- ④ You can increase or decrease the volume by using the volume buttons on either the Soundbar or Remote Control.

Selecting Bluetooth

- ① Turn on the Soundbar and either press the BT button on the Remote Control or Press and hold the  button on the Soundbar until the blue LED flashes.
- ② Turn on the external Bluetooth device and enter the search mode.
- ③ Your Soundbar has the name 'VINTAR-0039-SoundLink'.
- ④ If prompted enter the code '0000' to pair the external Bluetooth device with your Soundbar.

Other Settings

You can use the Remote Control to turn on and alter the settings on your Soundbar.

- BASS.** Use the + or - Bass buttons on the Remote Control to adjust the low frequency Bass settings as required.
- MUSIC.** Press the MUSIC button on the Remote Control to select the optimum Soundbar setting for music.
- MOVIE.** Press the MOVIE button on the Remote Control to select the optimum Soundbar setting for movie audio.
- VOICE.** Press the VOICE button on the Remote Control to select the optimum Soundbar setting for dialogue.

5 Wall Mounting

Safety

- Before drilling into wall surface, check for hidden cables or pipes.
- Wear safety goggles and dust mask when drilling.
- The use of a residual current device (RCD) is recommended when working with power tools.

Tools & fixings required

Drill fitted with masonry drill bit


Screwdriver

Pencil


Ruler

Spirit level

1. Choose a suitable location for the soundbar away from areas where it will get wet or knocked. Check that the audio cables will reach the connected device / TV, the supply cable will reach the electrical socket and that it will not become a trip hazard.
2. Place the soundbar in the desired position and using a spirit level check that the soundbar is level.
3. Make a light pencil mark on the wall at the top edge of both fixing brackets. The mark should be positioned directly above each bracket. Note the mounting points on the soundbar are offset (one is 245mm from the end, the other is 194mm from the other end) so you should use the soundbar as a template to get the right mounting positions.
4. Place the soundbar away from the work area and then mark two fixing points 5mm below the light pencil marks for the screws. These marks should be 501mm apart and level. Before drilling, use a spirit level to check that the fixing points marked are level.

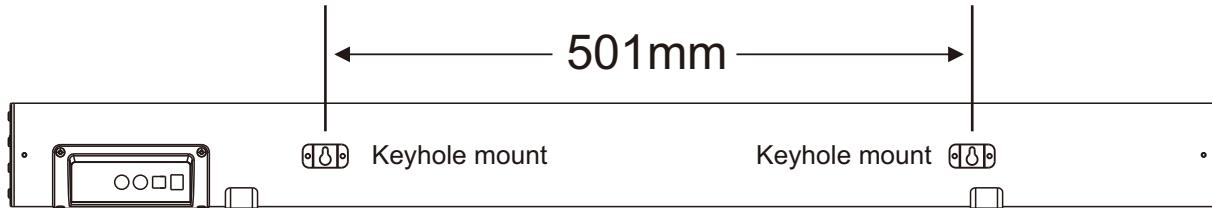

5. If fixing to a solid masonry wall, use a masonry drill bit, drill holes to a depth of approximately 39mm and insert the wall plugs. Insert the screws into the wall plugs and drive home the screws until the heads stand proud of the wall by about 1mm.

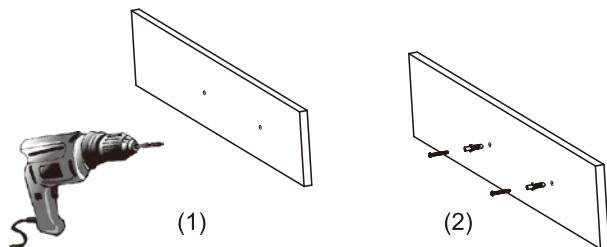

6. If fixing to timber, follow the directions above, but only drill a small pilot hole for each screw and do not use the wall plugs provided.
7. If fixing to hollow plaster board walls, use a drill bit suitable for wood and replace the wall plugs with wall anchors appropriate for the application. Locate the fixing points into wall studs and cross braces where possible. Locate the soundbar onto the screw heads and check that the screws are fully engaged into the keyhole mount before releasing your hold.


CARE AND MAINTENANCE

Wipe external surfaces with a soft cloth. If the soundbar cabinet is very dirty, unplug from the mains supply and use a damp cloth soaked in a weak solution of washing up liquid and water. Allow to dry thoroughly before reusing.

6 Connecting Instructions

6.1 Connecting TV/DVD via Aux Cable


1. Connect one end of the RCA cable to the back of the soundbar and the other end to your TV or DVD player.
2. Press the “  ” Button on the side of the soundbar until the indicator light on the front of the unit is solid white.
3. Adjust volume to the desired level.

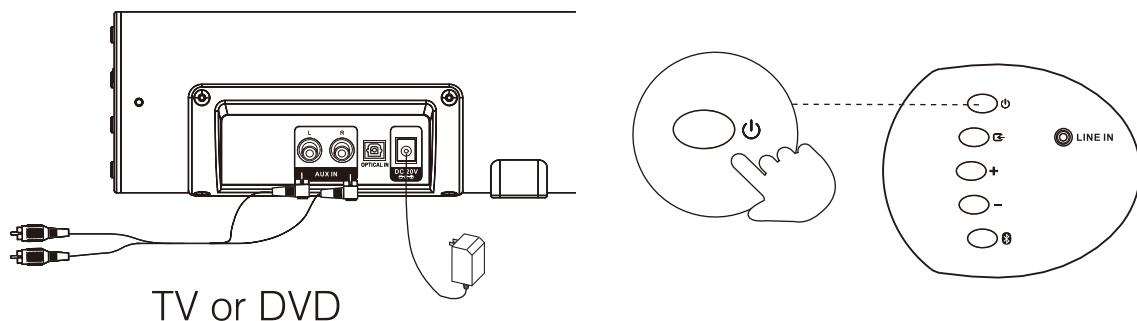

6.2 Connecting VIA LINE IN Cable

Play music from your device through the line in connection on the soundbar.

1. Connect one end of the 3.5mm line in cable to the port on the side of the soundbar and the other end to your device.
2. Press the “  ” Button on the side of the soundbar until the indicator light on the front of the unit is solid green.
3. Adjust volume to the desired level.

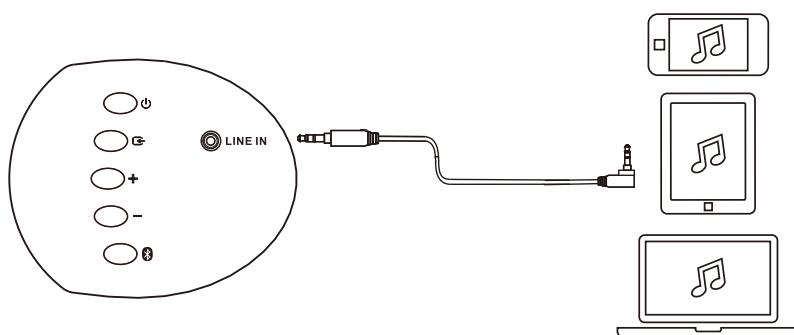


DID YOU KNOW?

You can play music wirelessly through your soundbar using a bluetooth enabled device.

1. Press the “  ” button on the side of the soundbar until the blue light on the front of the unit flashes.
2. Connect to the soundbar by switching on bluetooth on your device and select < VINTAR-0039-SoundLink > from the list.


The indicator light on the soundbar will turn solid blue when the devices are connected.

3. Control the sound level from your mobile device.

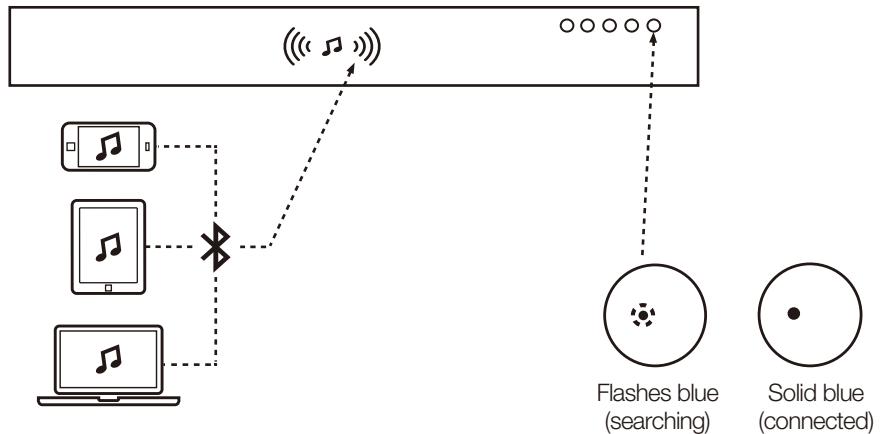

6.3 Connecting VIA OPTICAL Cable


1. Connect one end of Optical cable to the back of the soundbar and the other end to the OPTICAL OUTPUT of your TV.
2. Press and hold the **Power** button on side panel or **Power** button directly on the remote control to switch on the unit.
3. Press the OPTICAL button on the remote control to switch to SPDIF Mode or Press and hold the **Source** button on main unit repeatedly to select the SPDIF mode. The mode indicator LED will turn orange.
4. Using the native controls on your connected device, make sure the audio settings are set to PCM or Optical Audio and are turned On. Adjust volume to the desired level.

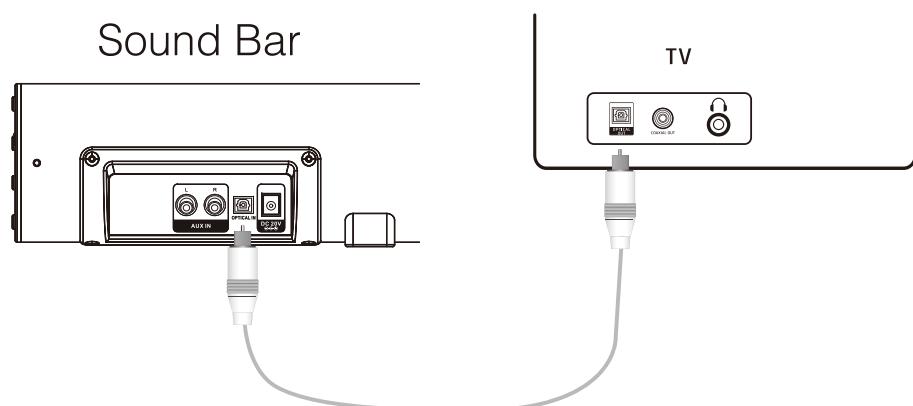

7 Set Up

7.1 Connecting your Sound Bar to your TV


Via RCA Phono Cable Connection (Recommended). This is the best connection method if it's available on your TV.

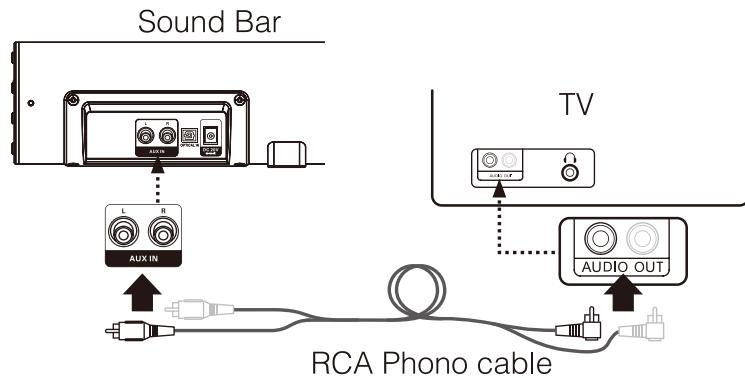

7.2 Via Headphone Connection


This is a universal connection method and most TV's have a headphone socket.

Note: Turn up the volume on your TV to around mid way and use the Sound Bar Remote Control to adjust the volume.

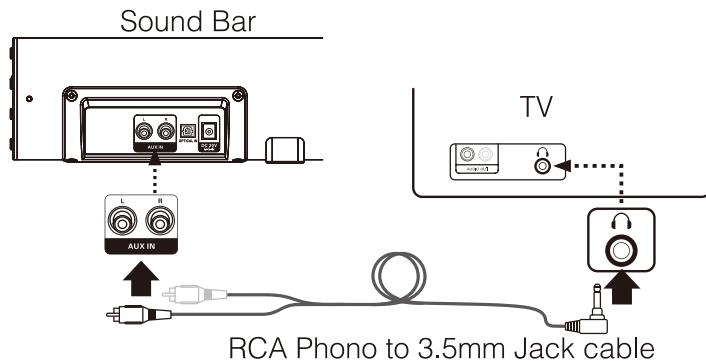


7.3 Connecting to a mobile device

Play music from your Smartphone, Tablet or MP3 Player via the LINE IN connection.

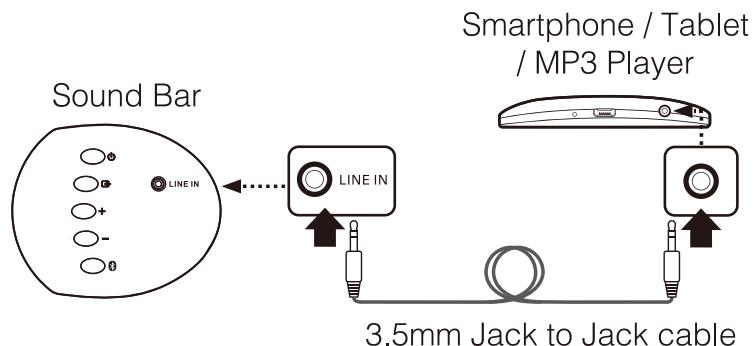

7.4 Via Digital Connection

You can connect soundbar to your TV optical cable if your TV has the appropriate connections.

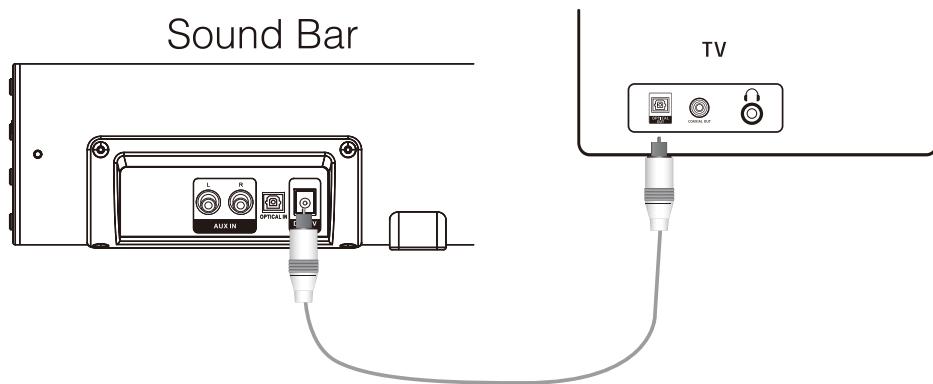

8 Useful Information

ⓘ Sound Interference

RCA Phono and Headphone 3.5mm LINE IN cables could be subject to sound interference. Please route cables carefully and not near mains cables.

ⓘ TV Speaker not disabled

If the sound is still coming out of the TV speaker then you may need to disable the TV speakers and then enable the audio feature.

This can be done via the TV Settings menu (consult your TV User Guide).

* Bluetooth Connection

This technology is to enable you to connect your Smartphone or Tablet to the Sound Bar for playback of your music library. This connection method is not compatible with Bluetooth enabled Smart TVs.

9 Troubleshooting

If a fault occurs, first check the points listed below before taking the Soundbar for repair. Do not dismantle the Soundbar as there is a risk of electric shock.

If you are unable to rectify a problem by following these hints, consult your dealer or service centre.

WARNING: Under no circumstances should you try to repair the Soundbar yourself, as this will invalidate the warranty.

Problem	What to do
Soundbar does not respond (no power).	<ul style="list-style-type: none">Check the mains power cable and make sure it is plugged into a suitable power outlet.Check that the mains power supply is switched on.Connect the power to a different power outlet.
No sound	<ul style="list-style-type: none">Check the Soundbar volume control is not at minimum.Check that the Soundbar is not set to MUTE.If you are connecting to the Soundbar using a headphones port on your external audio device then check the volume is turned up on that device
The Remote Control does not work.	<ul style="list-style-type: none">Replace the battery.Make sure there are no obstacles obscuring the Soundbar.
No sound in Bluetooth mode.	<ul style="list-style-type: none">Check that the Soundbar is paired with a Bluetooth device. If prompted enter the code '0000'.

10 Technical Specifications

Model Number	VINTAR-0039
Power Source of Soundbar	DC 20V 3A
AC Adapter	Input: AC 100-240V~, 50/60 Hz, 1.5A Max Output: DC 20V 3A
Power Source of Remote Control	DC 3V, 1 x CR2032 Battery (supplied).
Power Consumption	Maximum 60W
Audio Power	Left Channel 20W, Right Channel 20W
Impedance	Left Channel 8Ohm, 20W Max Right Channel 8Ohm, 20W Max SUB Channel 2 x 8Ohm, 25W Max
Bluetooth Specification	BT2.1+EDR
Frequency Bands	2402-2480 MHz
Eirp Power(Max.)	0dBm
Speaker Power	40W
Operating Distance	up to 10 m

