

## Stereo Mode

### How to Link Your Earbuds:

1. Pick up the two earbuds from the charging case, they will be powered on and paired automatically, and the right earbud (**main earbud**) will enter into pairing mode.
2. Search and select “T2” on your smart phone to finish your settings, there will be a voice prompt of “connected”.

Note: It's Bluetooth Version 5.0 with auto power on auto power off, in order to avoid any wrong operation, please do not press any button after taking the earbuds out from the charging case. We suggest that only take out the right earbud (main earbud) to finish the pairing first, then take out the left earbud, it will pair with the right earbud automatically and enter into stereo mode.

\*In case of wrong operation, cause the two earbuds could not pair with each other, we need to reset the earbuds to clear the pairing memories as the following steps: a) Manual shutting down-long press the buttons for 5 seconds to power off the two earbuds; b) Long press the two earbuds up to **20** seconds until the two earbuds finish resetting; c) Put back the two earbuds into the charging case; d) Pick up the two earbuds from the charging case, the right earbud(main earbud) will enter into pairing mode automatically for you to pair with your mobile phone.

### 3. Power off

Put back the two earbuds into the charging case, they will auto power off and start to charge .(or press and hold power button of anyone of the earbuds to 5 seconds until the red indicators shine for 1 second, with the voice prompt of “Power off”.)

Notice: If the battery of the charging case is too low, when put back into the case, the earbuds can NOT power off automatically. We can power off them by manual operation, or charge the case.

## Mono Mode

### How to Link Your Earbud:

1. Pick up anyone of the earbuds from the charging case, be sure to remain another one in the charging case, it will power on and enter into pairing mode automatically, search and select “T2” on your smart phone to finish your settings, with the voice prompt of “connected”, then you can use the earbud separately.

Note: If you picked up two earbuds from the charging case, they will preferentially pair with each other, and only the right earbud (main earbud) will enter into pairing mode, thus your mobile phone can only source the right earbud. Furthermore, if any one of the earbuds put back into the charging case, or manual shutdown, another one will also be powered off simultaneously.

### 2. Power off

Press and hold the power button up to 5 seconds until the red indicator shines for 1 second, with the voice prompt of “Power off”.

## Calling

### 1. Answer / End a Call

Short press the power button to answer an incoming call;

Short press the power button to end a call when you are on the phone.

### 2. Reject a Call

Press and hold the power button up to 2 seconds to reject an incoming call.

### 3. Volume Control

Volume+: double press the right earbud to increase the sound volume.

Volume-: double press the left earbud to reduce the sound volume.

## Audio Playing

### 1. Press the power key to play or pause the music.

### 2. Long press 2 seconds the power key of the left earbud to the next track.

### 3. Long press 2 seconds the power key of the right earbud to the previous track.

## Voice Assistant

Triple-press the power button of any earbud to activate the voice assistant (Siri or others) with voice prompt.

Note: please make sure your mobile device supports this function.

## Charging

It takes 1.5 hours to charge the earbuds fully. When the earbuds are fully charged, the indicators of the case will turn off.

It takes 1.5 hours to charge the case fully. When the case is fully charged, the indicator of the case will turn off.

## Battery Indicator

The feature of battery indicator is that the charging case indicates how much battery is remaining. This is a very useful function especially when you wonder if you need to charge the case.

One of the following actions will trigger this function:

1. Open the cover of the case;
2. Pick up the earbud from the case;
3. Put back the earbud in the case;
4. Charge the case or earbuds.

The three LED indicators correspond to different battery levels:

1 indicator flash: 0-33%

2 indicators flash: 33%-66%

3 indicators flash: 66%-100%

## Specification

Version: 5.0

Support HFP, HSP, AVRCP

Charging Case Dimension: 67.6(L)\*38.6(W)\*30.7(H) mm

Earbud Dimension: 21.5(L)\*18.5(W)\*26.6(H) mm

Support iPhone/iPad/Huawei Battery Indication

Range: 10M

Water Proof: IPX6

Battery Capacity:

Earbuds: 60mAh each

Charging Case: 500mAh

Talk/Music time: 6H

Voice Assistant: Siri,etc.

#### Questions and Answers

Q: Why can't left and right earbuds connect to each other? Why can't earbuds connect to some devices?

A: Reset your earbuds and try again, which can solve most of connecting issues. (Reset: as described above, power off the two earbuds first, then long press the two earbuds button for 20 seconds until you hear all the voice prompt Power On, Pairing mode, and two times music sound, then power on again.)

Q: Why does audio signal delay?

A: First of all, latency may be caused by the earbuds or the smart phones. Some smart phones are not compatible well with wireless headphones. If you find audio signal delays, please check your smart phones if the same thing happened to other wireless earbuds.

Q: Why does signal interruption occur in some situations, such as along railway, in airport?

A: Generally, there are plenty of cables underlying in the place mentioned above, which are more likely to produce electromagnetic interference and result in signal interruption.

Notice: it is healthy to reduce your exposure in the electromagnetic radiation.

Q: When put into the charging case, why the earbuds do not power off automatically?

A: If the battery of the charging case is completely used up, when put back into the case, the earbuds can NOT power off automatically, please charge the case.

B: Switch contact not so good, just press the earbuds to contact them properly.

#### FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.