

IMILAB Home Security Camera A1

User Manual

Read this manual carefully before use, and return it to us for future reference.

Product Overview

Package Contents: IMILAB Home Security Camera A1 x 1, Lens cap x 1, Wall-mounting accessories x 1, User Manual x 1.

Installation

IMILAB Home Security Camera A1 can be placed in a number of horizontal surfaces, such as on a wall, ceiling, shelf, table, and so forth, which have been mounted on the wall.

Mounted IMILAB Home Security Camera A1 on a Wall

1. Lock two holes on the wall by using the level of IMILAB Home Security Camera A1 as a template. It is recommended that you mark the location of the hole with a pencil before drilling. The diameter of each hole has approximately 1mm, and the depth is approximately 20mm.

2. Insert the hexaplastic anchors into the holes on the wall.

3. Make sure to position the base unit so that the arrow is pointing down. Remove the lens cap by pulling the mounting mechanism on the plastic surface.

4. Switching the power on the bottom of the camera unit with the stand area on the base unit. Please do not touch the surface with both hands. After the lens is removed, an arrow direction lock is in position.

Warning:

- 1. Do not touch the lens or the face; the device must be securely fastened to the floor wall or the installation instructions.
- 2. Do not touch the lens or the face; the device must be securely fastened to the floor wall or the installation instructions.
- 3. Do not touch the lens or the face; the device must be securely fastened to the floor wall or the installation instructions.

Please refer to the manual for the ability to adjust at least 180° the product's and lens angle.

Product Instructions

Turning the Device On

Press the power button on the back of the camera unit to automatically activate the power cable which is located in the back of the IMILAB charging port.

Indicator Light

Ready state: the colored indicator displays as normal. Flashing indicates network error.

Flashing orange light: waiting for connection.

Flashing orange light: system upgrade in progress.

Installing a MicroSD Card

1. Insert the MicroSD card into the Home Security Camera A1 as already demonstrated.

After the camera has started up, the MicroSD card is installed. Then view the MicroSD card for the details about the camera. Please refer to the User Manual.

Note: Please turn off the IMILAB Home Security Camera A1 power supply before inserting or removing the MicroSD card. Please do not operate the MicroSD card manufacturing quality supplied, supplied with a read/write capacity of no less than 1GB (1024MB) to 32GB (max) read/write capacity in UHS-I.

Reset Factory Settings

Press and hold the Reset button to restore the factory settings. Once displayed the MicroSD card is not inserted.

Install Mi Home App

Connect with Mi Home Security Camera App. This product works with Mi Home/Security Camera App. Connect your phone with Mi Home Security Camera App.

Scan the QR code to download and install the app. You will be directed to the connection and setup page. Please follow the instructions. (Scan the QR code from Mi Home/Security Camera App store downloaded and install.) Open Mi Home Security Camera App. Tap "I am the eye right, and then follow the steps to add and activate.

The app requires an Mi Home app ID (except for Russia). The names of the app developer and app developer address must be same as the default.

[illegible]