

<h1>Home Digital Audio System</h1> <h2>Operator's Manual</h2> <p>Model:ET-1860S</p> <ul style="list-style-type: none"> <li>Before using this product, please read this Manual carefully</li> <li>Keep this Manual properly for future reference</li> </ul>	<p><b>Dear customers:</b></p> <p>Thanks very much for your attention on and trust for our products. We are honored to provide you a set of high-quality multimedia audio system. Improper use of the product many cause danger or unnecessary trouble. For sake of better use of the product, please read this Manual carefully before using the product.</p> <p><b>I Attenions</b></p> <ul style="list-style-type: none"> <li>Place this machine in a cool, dry and clean place free from vibration. Do not put any object such as vases full of liquid on the machine.</li> <li>Serious collision may damage the machine; please handle with it carefully.</li> <li>Do not open the housing or try to change or repair any circuit of the machine, otherwise the warranty for the product will become invalid automatically.</li> <li>Cut off the power before unit connecting or disconnecting.</li> <li>To protect the cables, please hold the connector when connecting or disconnecting cables instead of holding them directly.</li> <li>Use only soft and dry cloth to clean the machine. No diluent or other similar liquid can be used to clean the machine.</li> <li>Please confirm that the power source is of AC 220V/50Hz specified for the machine. Excessively low power may impair the performance of the machine and power higher than 110V may cause damage to the machine.</li> </ul> <p>The maximum output voltage of the machine is 220V. Do not touch its socket when connecting it to power grid.</p>	<p><b>III Technical Parameters</b></p> <ul style="list-style-type: none"> <li>Output power: 15W (main unit), 20W (subwoofer)</li> <li>Loudspeaker unit: 2"×2 (main unit), 5"×1 (subwoofer)</li> <li>Sensitivity: &gt;60dB</li> <li>Frequency range: 110Hz~16KHz</li> <li>Distortion factor: &lt;0.1% at 1w</li> <li>SNR: &gt; 65dB</li> <li>Dimension of loudspeaker box: marked on the packing box</li> </ul> <p><b>IV Troubleshooting</b></p> <table border="1"> <thead> <tr> <th>Troubles</th> <th>Troubleshooting</th> </tr> </thead> <tbody> <tr> <td>No power supply</td> <td>Check whether the small plug of the power source adapter is connected to the main unit or whether power source plug is connected</td> </tr> <tr> <td>No sound</td> <td>Check whether the volume is turned to the minimum Check whether the Mute key is turned on</td> </tr> <tr> <td>Remote control does not work</td> <td>Check whether the battery power is low; if yes, replace the battery Check whether the remote control receiver on the main unit is sheltered</td> </tr> <tr> <td>No sound when Bluetooth is connected for the first time</td> <td>Check whether Bluetooth is paired with the machine</td> </tr> </tbody> </table>	Troubles	Troubleshooting	No power supply	Check whether the small plug of the power source adapter is connected to the main unit or whether power source plug is connected	No sound	Check whether the volume is turned to the minimum Check whether the Mute key is turned on	Remote control does not work	Check whether the battery power is low; if yes, replace the battery Check whether the remote control receiver on the main unit is sheltered	No sound when Bluetooth is connected for the first time	Check whether Bluetooth is paired with the machine	<p>If the trouble cannot be resolved after the above checks, contact a qualified technician to check and repair the machine rather than overhauling it by yourself.</p> <p><b>Warning</b></p> <table border="1"> <tr> <td></td> <td><b>Warning</b> Only professional serviceman can open the rear housing</td> <td></td> </tr> </table> <p>Warning: High voltage, do not open it. Electric shock risk: Do not open the cover or rear housing. Repair or other operation must be conducted by professional.</p> <p><b>1</b></p> <p><b>2</b></p> <p><b>3</b></p>		<b>Warning</b> Only professional serviceman can open the rear housing																																
Troubles	Troubleshooting																																														
No power supply	Check whether the small plug of the power source adapter is connected to the main unit or whether power source plug is connected																																														
No sound	Check whether the volume is turned to the minimum Check whether the Mute key is turned on																																														
Remote control does not work	Check whether the battery power is low; if yes, replace the battery Check whether the remote control receiver on the main unit is sheltered																																														
No sound when Bluetooth is connected for the first time	Check whether Bluetooth is paired with the machine																																														
	<b>Warning</b> Only professional serviceman can open the rear housing																																														
<p><b>Product Features:</b></p> <ul style="list-style-type: none"> <li>Remote control</li> <li>USB</li> <li>Support Bluetooth</li> <li>3.5mm audio input</li> </ul> <p><b>Accessories:</b></p> <ul style="list-style-type: none"> <li>Remote control</li> <li>Audio cable</li> <li>User's Manual</li> </ul> <p><b>(Remote Control) Battery Installation</b></p> <p>Battery loading and unloading:</p> <ol style="list-style-type: none"> <li>Open the battery cover as shown in above figure to unload the <u>_____</u> (model number) battery.</li> <li>Replace the unloaded battery for a new one.</li> <li>Restore the battery cover.</li> </ol> <p>Notes on the use of remote control:</p> <ol style="list-style-type: none"> <li>Check if <u>_____</u> battery (ies) have been loaded before using the remote control.</li> <li>If the remote control does not work, check whether the battery energy is sufficient. If not, replace the battery. If the remote control still cannot work after the battery is replaced, consult a professional serviceman for troubleshooting.</li> <li>When using the machine, please direct the remote control at remote control sensor on the main unit.</li> <li>When using the remote control, please keep it about 8m away from the main unit with an angle of 30 degrees.</li> </ol> <p><b>LED Indicator</b></p> <table border="1"> <thead> <tr> <th>Indicator</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Red </td> <td>Bluetooth</td> </tr> <tr> <td>Red </td> <td>LINE</td> </tr> <tr> <td>Red </td> <td>USB</td> </tr> </tbody> </table> <p>Remark: The above functions may differ from different models, and are for reference only.</p> <p><b>Remote Control</b></p> <table border="1"> <thead> <tr> <th>Remote controlmarks</th> <th>Descriptions</th> <th>Remote controlmarks</th> <th>Descriptions</th> </tr> </thead> <tbody> <tr> <td>Standby </td> <td>Start up or shut down the machine</td> <td></td> <td>USB/BT: Pause and play LINE:Mute</td> </tr> <tr> <td>Mute </td> <td>Mute and unmute</td> <td></td> <td>Replay of single track and all tracks</td> </tr> <tr> <td>Volume+ </td> <td>Increase volume</td> <td>Mode</td> <td>Cyclic switching of Line, Bluetooth and USB audio input</td> </tr> <tr> <td>Volume- </td> <td>Decrease volume</td> <td>EQ</td> <td>Cyclic switching of 5 different sound field modes</td> </tr> <tr> <td></td> <td>Previous track</td> <td></td> <td>Next track</td> </tr> </tbody> </table> <p>Remark: The above functions may differ from different models, and are for reference only.</p>	Indicator	Status	Red	Bluetooth	Red	LINE	Red	USB	Remote controlmarks	Descriptions	Remote controlmarks	Descriptions	Standby	Start up or shut down the machine		USB/BT: Pause and play LINE:Mute	Mute	Mute and unmute		Replay of single track and all tracks	Volume+	Increase volume	Mode	Cyclic switching of Line, Bluetooth and USB audio input	Volume-	Decrease volume	EQ	Cyclic switching of 5 different sound field modes		Previous track		Next track	<p><b>Fixing Way</b></p> <p>We recommend installation by professionals.</p> <p><b>Descriptions of Input Interface and Main Unit Button (Optional)</b></p> <p></p> <p>Subwoofer output DC-15Vinput LINE input USB input</p> <p></p> <p>External subwoofer output interface DC 15V power source input interface LINE/headset input interface 1G-32G USB input interface</p> <p><b>Panel marks</b></p> <table border="1"> <thead> <tr> <th>Panel marks</th> <th>Descriptions</th> <th>Panel marks</th> <th>Descriptions</th> </tr> </thead> <tbody> <tr> <td>Standby/MODE</td> <td>Start up or shut down the machine Cycle switching of LINE,BT and USB audio input</td> <td></td> <td>USB/BT: Pause and play LINE:Mute</td> </tr> <tr> <td>Volume+/NEXT</td> <td>Increase volume/NEXT</td> <td>Volume-/PREV</td> <td>Decrease volume/PREV</td> </tr> </tbody> </table> <p>Remark: The above functions may differ from different models, and are for reference only.</p>	Panel marks	Descriptions	Panel marks	Descriptions	Standby/MODE	Start up or shut down the machine Cycle switching of LINE,BT and USB audio input		USB/BT: Pause and play LINE:Mute	Volume+/NEXT	Increase volume/NEXT	Volume-/PREV	Decrease volume/PREV	<p><b>USB</b></p> <p>A USB flash disk is needed (excluded in the list of accessories)</p> <ol style="list-style-type: none"> <li>Insert the USB flash disk in the USB interface.</li> <li>Press Sound Source Switching key repeatedly or the USB key on the remote control to switch to USB mode, then the red indicator will keep on or show .</li> <li>Ensure that your USB flash disk is stored with MP3 audio.</li> <li>If your USB flash disk is stored with MP3 audio, you can play it with the machine.</li> <li>USB devices must be operated with the remote control.  : pause/ play;   previous track and next track; Replay: replay single track by pressing Replay key once or all tracks by pressing Replay key twice.</li> </ol> <p><b>LINE IN</b></p> <p>A 3.5 audio connecting cable is needed (included in the list of accessories)</p> <ol style="list-style-type: none"> <li>Connect one end of the 3.5 audio connecting cable to the audio output interface and the other end to the 3.5 LINE input interface of the machine.</li> <li>Press the Sound Source Switching key repeatedly or the LINE key on the remote control to switch to LINE mode, then the red indicator will keep on or show .</li> <li>Make sure that the audio setting of sound source is in "Connecting to Sound Equipment" status.</li> <li>Play your sound source equipment with the machine.</li> </ol>	<p><b>Bluetooth</b></p> <p>Initial pairing of Bluetooth</p> <ol style="list-style-type: none"> <li>Press the Standby key on the machine or the Standby key on the remote control to start the machine. After the machine is started, the white indicator will keep on or show .</li> <li>Press Sound Source Switching key repeatedly, or the Bluetooth key on the remote control to switch to Bluetooth mode, then the red indicator will blink or .</li> <li>Turn on the Bluetooth of your device and search Tzumi Soundbar and then click pairing. If the pairing is successful, the machine will make a prompt sound to indicate that your device can automatically connect to the machine.</li> <li>Ensure that your Bluetooth device has been paired with the machine.</li> <li>Play your sound source equipment with the machine.</li> </ol> <p><b>FCC Statement</b></p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.</p> <p>If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the equipment and receiver.</li> <li>Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &amp; your body.</p>
Indicator	Status																																														
Red	Bluetooth																																														
Red	LINE																																														
Red	USB																																														
Remote controlmarks	Descriptions	Remote controlmarks	Descriptions																																												
Standby	Start up or shut down the machine		USB/BT: Pause and play LINE:Mute																																												
Mute	Mute and unmute		Replay of single track and all tracks																																												
Volume+	Increase volume	Mode	Cyclic switching of Line, Bluetooth and USB audio input																																												
Volume-	Decrease volume	EQ	Cyclic switching of 5 different sound field modes																																												
	Previous track		Next track																																												
Panel marks	Descriptions	Panel marks	Descriptions																																												
Standby/MODE	Start up or shut down the machine Cycle switching of LINE,BT and USB audio input		USB/BT: Pause and play LINE:Mute																																												
Volume+/NEXT	Increase volume/NEXT	Volume-/PREV	Decrease volume/PREV																																												