

HOW TO USE

- Your iBall Wireless Trailer Hitch Camera is equipped with a rechargeable lithium ion battery. Before first use, charge the camera for 8 hours. During periods of limited usage, charge the unit for 8 hours every 30 days to obtain peak battery performance. To charge, simply lift side tab and insert supplied USB charger cable. Then connect the cable to a USB Charger (not included). A solid red light will indicate the unit is charging. A green light indicates the battery is fully charged.
- Plug the monitor into any 12v auxiliary port. Press the  to turn ON/OFF the monitor. The monitor settings can be adjusted for brightness, contrast and saturation by pressing the menu button. Use the  arrows to adjust the desired settings. The camera orientation can be adjusted by pressing the picture rotate button (#4).
- To Power on the Camera, press and hold  for three seconds. A blue light on the front of the camera will indicate the system is on, but not yet connected to the monitor. Once connected to the monitor, the light will change to purple. Place the camera on any magnetic surface. Use the side adjustment knobs to adjust the viewing angle.

SPECIFICATIONS:

Camera

Digital Wireless Frequency

100' Transmission Distance (without obstruction)

Weather Resistant

Lithium Ion Rechargeable Battery (charge using supplied USB cable)

Magnetic Mounting

120° Field of View

Monitor

3.5" Color LCD Monitor

Weather Resistant

12v Auxiliary Power Supply

6" Adjustable Gooseneck

Helpful tips:

- It is not recommended to leave the camera attached to your vehicle while traveling at high speeds, as road vibration may cause the magnetic bond to fail.
- While the camera is weather resistant, it is not recommended to submerge for an extended period of time.

PROBLEM:	CAUSE:	SOLUTION:
Poor image quality/ static	Cause 1: Distance between camera and monitor too far Cause 2: Environmental interference Cause 3: Low camera battery, weak 12v monitor connection	Solution 1: Move the camera closer to the monitor Solution 2: Move away from buildings or objects that may be affecting wireless signal Solution 3: Charge the camera battery, check 12v connection
Problem: Camera will not turn on/off	Cause 1: Power button not being held down long enough Cause 2: Low camera battery	Solution 1: Firmly hold power button for at least three seconds Solution 2: Charge camera for eight hours
Problem: Monitor will not turn on	Cause 1: 12v outlet is not supplying power Cause 2: 12v connection is not secure Cause 3: Blown fuse in monitor 12v power plug	Solution 1: Try another 12v outlet Solution 2: Firmly secure the power plug into the outlet Solution 3: Replace the fuse (3A 250v) by turning the fuse cap (#6) counterclockwise
Problem: Camera will not stick to vehicle	Cause 1: Non-ferrous surface	Solution 1: Mount camera to iron surface, such as the receiver hitch

For additional technical support, please visit our website:

www.iballhitchcam.com or call us at (877)-298-2055