



封面

工艺: 骑马钉 书纸70g 页数:16P
料号: 98-01-2510 成品尺寸:125* 170mm

DAY'S NEW

2.4G/Bluetooth Dual-mode Wireless TV Headphone

DB100

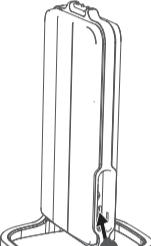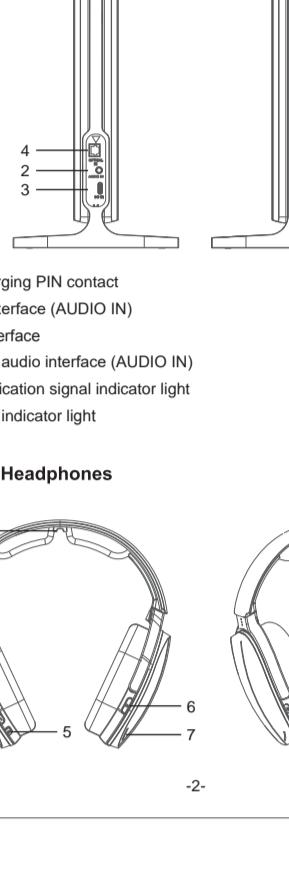


User Manual


Please scan QR code and watch video guide

Product Overview


Overview of the Charging Dock/Transmitter

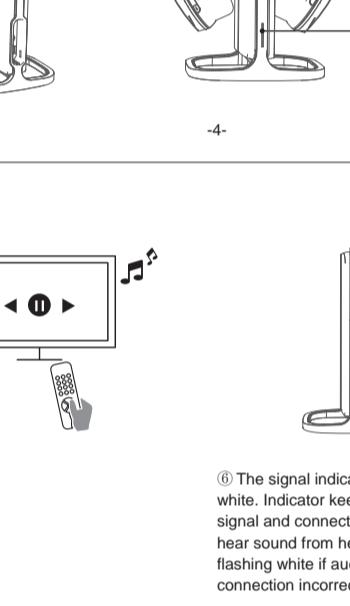


Overview of the Headphones

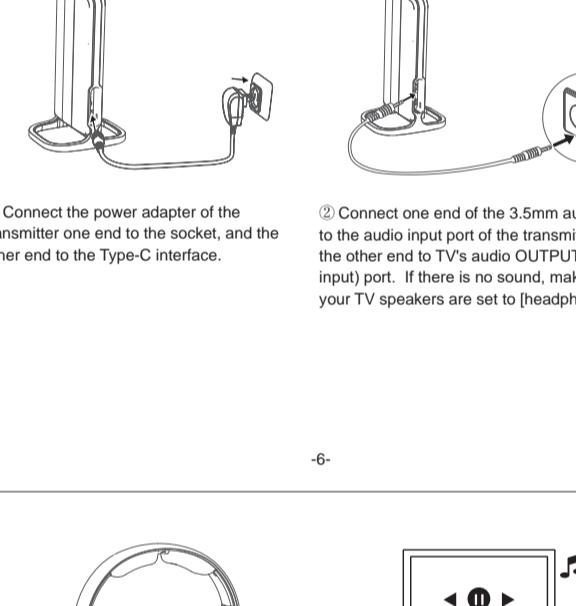

How to Charge the Headphones

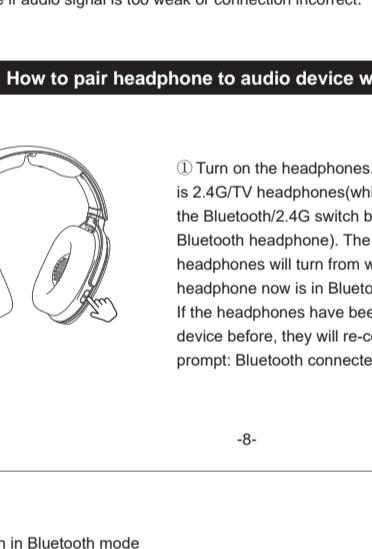


① Connect the charging dock to a power source.
② Place the headphones on the charging dock. Make sure the charging contacts under the headband match well with the charging pins on the charging dock.
③ The charging indicator on the charging dock keeps flashing green once charging starts, and it stops flashing and stays green when the headphones are fully charged.

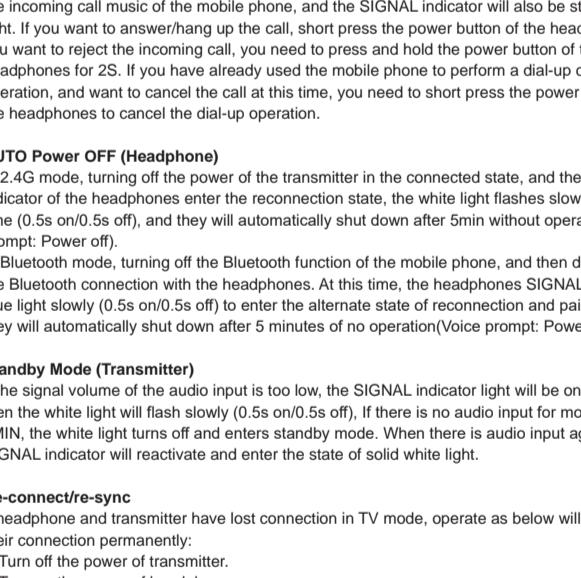

④ Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator).
⑤ The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

Connect the Transmitter to a TV with a 3.5mm Audio-out Port

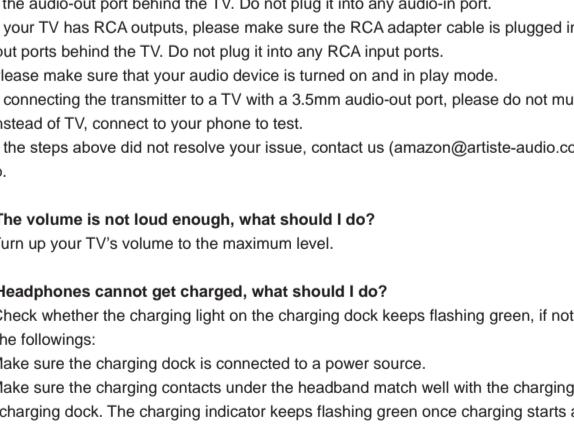

① Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.
② Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUT/PUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

③ Turn on the headphones. Default mode of the headphones is 2.4G/TV headphones(white indicator).

④ Play sound

In the Box

Headphones

① Type-C interface AC/DC

Charging Dock

② RCA-Female 3.5mm cable

③ 3.5mm Audio Cable

④ Optical TOSLINK Audio Cable

⑤ User Manual

-1-

1. Charging PIN contact

2. Volume up button

3. Volume down button

4. SIGNAL indicator

5. Bluetooth/2.4G switch button

6. Power button

7. Power indicator light

8. Headphones cover on/off button (R side)

QuickGuide of LED Indicators

	Power on	The power indicator on the right ear cup stays red.
Headphone	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.


-3-

Notes:

- ① Fully charge the headphones before the first-time using.
- ② A complete charging cycle takes about 3 hours, and the headphones can play 9 hours on a full charge.
- ③ If the battery is almost drained, you will hear beeps every minute in the headphones. The headphones will automatically shut down after 5 minutes.
- ④ If the headphone power is not turned off before charging, signal will be disconnected during charging.

How to Connect the Transmitter to TV

Connect the Transmitter to a TV with Optical Output Port

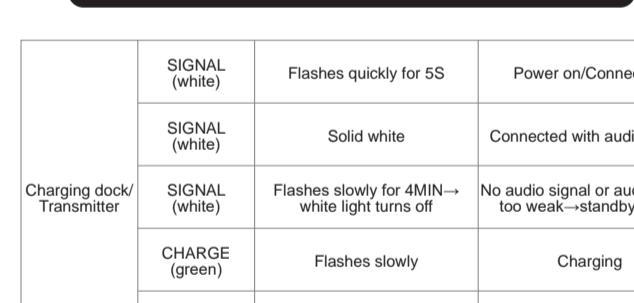


① Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.
② Remove the plastic caps of optical cable.
③ Connect one end of the optical cable to the OPTICAL IN port of the transmitter and the other end to TV's optical OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [PCM].
④ Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator).

-5-

⑤ The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

Connect the Transmitter to a TV with 3.5mm Audio-out Port

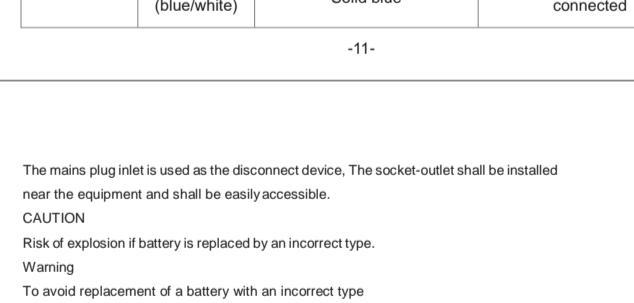

① Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.
② For pairing new audio device, turn on Bluetooth of your device and find [DB100] in AVAILABLE DEVICES and connect it. The SIGNAL light on the transmitter will be solid blue and you will hear 'Bluetooth connected' when pairing is successful.

-7-

③ To pair new audio device with Bluetooth, you could disconnect the paired device on Bluetooth setting or clear Bluetooth pairing record on headphone. Press and hold the power button for 8S when headphone turned off. Then you can pair new audio device with headphone.

Introduction to Operation

- ① Play Music (Bluetooth mode)
Play/Pause: Short press the power button
Next song: Press the volume + button 1S
Previous song: Press volume - button 1S
Volume +(2.4G mode/Bluetooth mode): Short press the volume + button to increase the volume step by step (When the volume level reaches the maximum, the headphones will announce "Maximum volume")
Volume -(2.4G mode/Bluetooth mode): Short press the volume - button to reduce the volume step by step (When the volume level reaches the minimum, the headphones will announce "Maximum volume")
• Voice Assistant (Bluetooth mode)
Double-click the power button to turn on the Siri or voice assistant of the phone (provided that the headphones are connected to the phone via Bluetooth), and double-click the power button again to turn off Siri or voice assistant.
- ② Voice Assistant (Bluetooth mode)
Double-click the power button to turn on the Siri or voice assistant of the phone (provided that the headphones are connected to the phone via Bluetooth), and double-click the power button again to turn off Siri or voice assistant.

-9-

LED Indicators Guide

	SIGNAL	Flashes quickly for 5S	Power on/Connecting
Charging dock/ Transmitter	(SIGNAL)	Solid white	Connected with audio signal
	(SIGNAL) (white)	Flashes slowly for 4MIN- white light turns off	No audio signal or audio signal too weak--standby mode
	(CHARGE)	Flashes slowly	Charging
Headphone	(CHARGE)	Solid green	Fully charged
	Power (red)	Solid red	Power on
	Power (red)	Red light turns off	Power off
	Power (red)	Flashes slowly	Low battery
	Power (red)	Flashes five times	Unpair with audio device
	SIGNAL (blue/white)	Solid white	Connected in TV mode
	SIGNAL (blue/white)	Flashes slowly in white	Connected in TV mode (transmitter off--distance)
	SIGNAL (blue/white)	Flashes quickly in white	Pairing in TV mode
	SIGNAL (blue/white)	Flashes slowly in blue	Switch to Bluetooth mode/exceeding distance
	SIGNAL (blue/white)	Solid blue	Connected

-11-

封底