


Qinuo Electronics Co.,Ltd

Remote Key

HU198P14

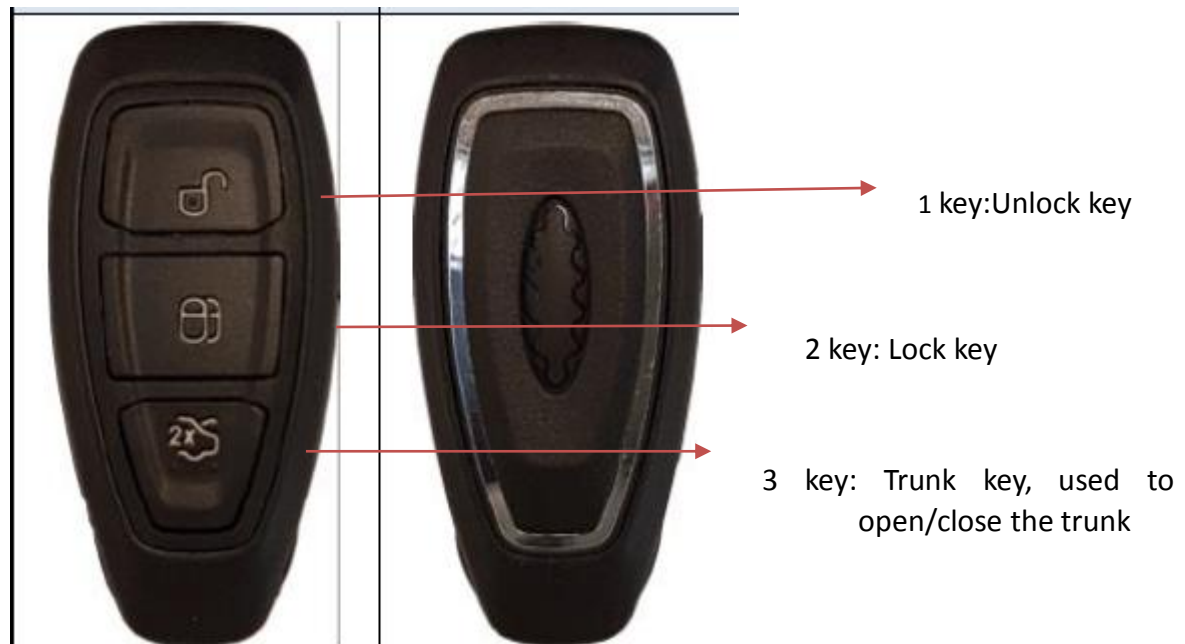

Operation instructions

1. After matching the key to the car, press 1 the unlock key for 2 seconds to open the door and press 2 the lock key for 2 seconds to close the door.
2. The ignition key is used to manually unlock and start the car.

Product parameters

Rated voltage	DC 3V
Working current	<5mA
Operating voltage	1.8V~3.6V
Transmit power	>-20dbm
Key operation force	200±50g
Operating temperature	-5° C +45° C
Stand-by current	<1uA
transmitting frequency	433.92M±75KHZ
Modulation	FSK
Battery	CR2032
Key durability	More than 100,000 times

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.