

BUILD YOUR OWN REMOTE CONTROL FOAM AIRPLANE

Components:

 
 
 
 
 
1. Plane Wings
2. Plane Keel
3. Control and Power Module
4. Remote Control
5. USB Charging Cable
6. Spare Propeller
7. Adhesive Tabs
8. Stickers

Charging:

1. Connect the charging cable to the power socket on the Control Module. The plug is directional. Do not force.
2. Plug the USB end into any standard 5V USB port or charger.
3. The red light in the USB plug will remain lit until the module is fully charged.
4. A full charge takes 45-60 minutes for up to 8 minutes of flight.

Assembly:

1. Assemble the plane upside down. Insert the tabs in the keel (fuselage) into the slots on the wings. The keel goes underneath the wings. The winglets on the end of the wings point upward when in flight.
2. Secure the keel to the wings using the clear adhesive tabs. Make sure the keel is at right angles to the wings. The clips themselves should go on the front of the plane. Slide it all the way up to the end of the clips. The clips themselves should go on either side of the keel.
3. Press the shaft connecting the Control and Power Modules between the raised braces on the wings. Secure with a clear adhesive tab placed just in front of the braces.
4. Decorate the plane with the stickers as desired.

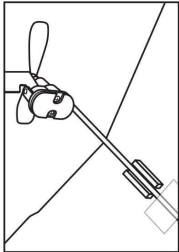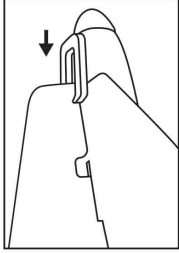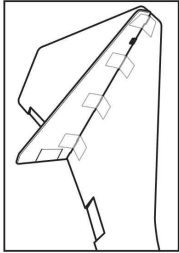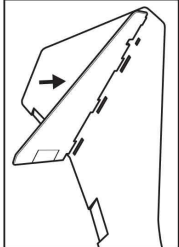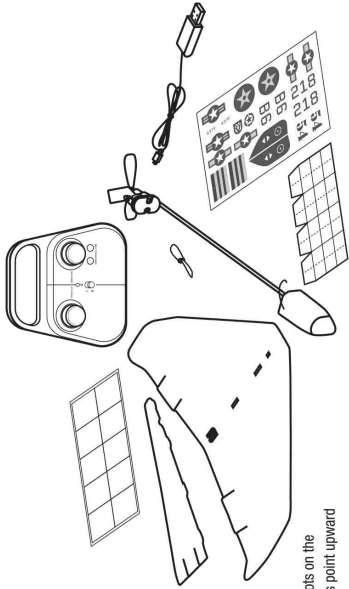

Rechargeable Battery Warning:

- This product contains batteries that are non-rechargeable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Recharge battery after it has been charged by an adult.
- Adult supervision is required when the battery is being charged.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Do not attempt to disassemble or dispose of battery according to federal, state, and local laws
- Keep these instructions for future reference.

FAO® and FAO Schwaz® names and logos are trademarks or registered trademarks. All rights reserved.

www.fao.com

Distributed by ©2018 MerchSource, LLC, Irvine, CA 92618.

For customer support please call 1-888-387-6533.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, in whole or in part, without the written permission of MerchSource, LLC. No part of this manual is to be reproduced, in whole or in part, without the written permission of MerchSource, LLC. No part of this manual is to be reproduced, in whole or in part, without the written permission of MerchSource, LLC. No part of this manual is to be reproduced, in whole or in part, without the written permission of MerchSource, LLC.

Printed in China

BUILD YOUR OWN REMOTE CONTROL FOAM AIRPLANE

 
 
 
Operation:

PAIRING

1. Fully charge the Plane.
2. Turn on the Remote. The LED status light will flash rapidly.
3. Turn on the Plane. The switch is located above the charging port.
4. When the light on the Remote stops flashing and remains on, the Plane is paired with the Remote and is ready for flight.

Flight:

- Keep the Plane – especially propeller – away from face, hair and jewelry while in use. Do not pick up Plane while propeller is spinning. Do not aim at people or animals. In case of entanglement, turn Plane and Remote off. Remove propeller by sliding off shaft to untangle.
- The throttle controls the speed. Move it forward for maximum power, or all the way down to turn off the motor.
 - To launch, move the throttle to maximum power (all the way up) and throw like a paper airplane.
 - Climb or dive by using the throttle.
 - Use the right joystick to make the Plane turn left or right.
 - If the Plane constantly drifts one way or the other, use the directional trim buttons to bring it back to center. If the Plane drifts left, push the right trim button, and vice-versa.

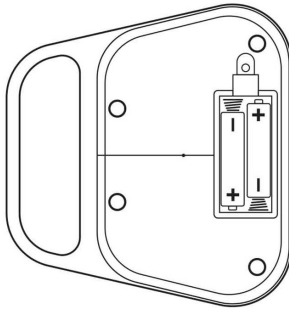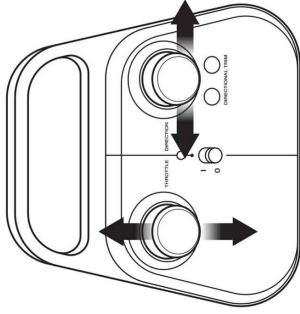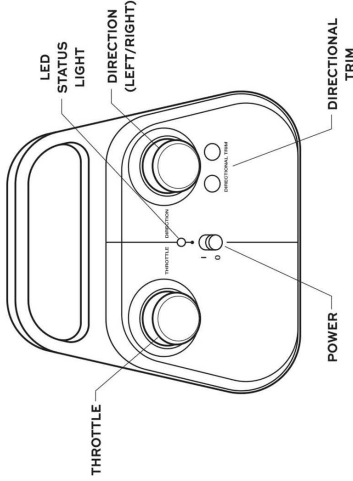

INSERT 2 "AAA" 1.5V BATTERY INTO REMOTE
AS SHOWN IN THE DIAGRAM

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Dispose of batteries properly. Improper disposal of the batteries may explode or leak.
- Remove battery before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.