

# **HOLIDAY SYMPHONY™**

## **MUSIC LIGHT SHOW**

Music Conductor Speaker

Model: HS-RF

FOR INDOOR AND OUTDOOR USE

# NOTE

The Music Conductor Speaker is required for the Holiday Symphony Light Shows. It is either purchased separately or included in combo sets by retailers.

READ AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH TO USERS, ESPECIALLY CHILDREN.

# WARRANTY

Thank you for your purchase of Polygroup® products! We do hope that you are happy with what you received, but we know sometimes it is necessary to exchange or return an item. Therefore, Polygroup® offers a 30-day limited warranty on this product.

We are happy to repair your defective item or replace it with an item that is equal to the purchase price, given that:

- You are the original purchaser for products purchased directly from an authorized retailer or wholesaler of Polygroup® products;
- The item was purchased within the last 30 days;
- The item was purchased during its intended season;
- Proof of purchase can be provided;
- The item is in its original packaging.

If you meet these requirements, please contact us at [email] [warranty@polygroup.com](mailto:warranty@polygroup.com) or at [phone] 1-888-919-0070 so that we may forward you a quality assurance form.

\* Note: Warranty is not extended to items that are purchased from seasonal stores as they generally sell items with an "all sales final" policy.

Warranty is also not extended to close-out, factory seconds, or resold products [i.e. garage sales, online auctions, or online retailers not purchased directly from Polygroup®].

Any issues with items purchased from these types of vendors/sellers will need to be addressed through them.

# WARNING

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper or any materials not part of the product when in use.
12. This product can be used by children over 8 years old, and by people with reduced physical, sensory or mental capabilities, given that they have the right supervision or instructions concerning the use of the product in a safe way and understanding the hazards involved. Children should not play with the product. Cleaning and user maintenance should not be done by children without supervision.
13. Risk of fire: the supply cord, adapter, plugs and/or connectors cannot be replaced or modified. If either is damaged, the product should be scrapped.
14. Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.
15. Read and follow all instructions that are on the product or provided with the product.

## SAVE THESE INSTRUCTIONS.

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

# CAUTION

To reduce the risk of fire or electric shock:

- Do not install on trees having needles, leaves or branches covering of metal or materials which look like metal;
- Do not mount or support cords or cables in a manner that can cut or damage wire insulation;
- Use only the adapter provided with this product;

# TECHNICAL SPECIFICATIONS

USA & Canada Version:

AC Adapter

Input: 120 V / 60 Hz, 0.34 A

Output: DC 5V, 3A

Australia Version:

AC Adapter

PRI: 220-240 V / 50-60 Hz, Max: 0.38 A

 
SEC: Urated = 5 V, Prated = 12.5 W

# USE & CARE INSTRUCTIONS


1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, loose connections, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

# SETUP INSTRUCTIONS


1.

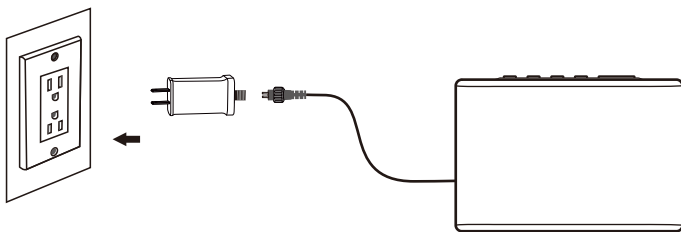

 2.

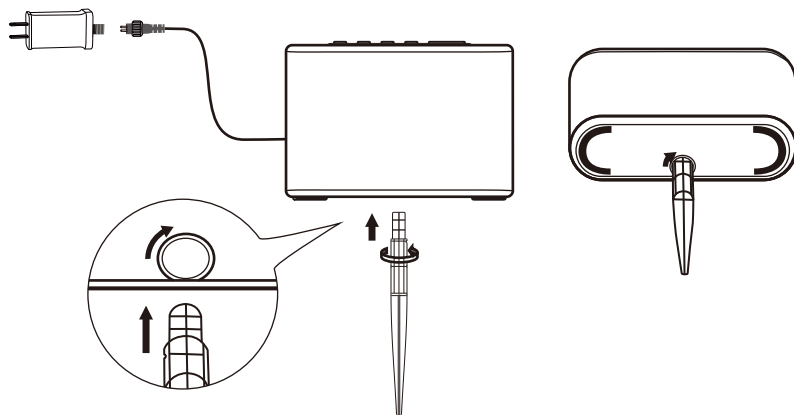

 3.

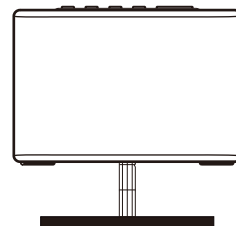

1. Indoor use: Connect the music conductor to the adapter and plug it in to the wall outlet.


2. Outdoor use:

Attach the ground stake to the base of the music conductor and lock tight.

Push the stake into the ground (soil/lawn) at your desired spot and plug adapter in to the wall outlet.

NOTE: If you need to use an extension cord to extend the connection to your Music Conductor Speaker, please use any common high-voltage extension cord. For outdoor use, the extension cord must be waterproof and raintight to ensure a safe connection.

# CONTROL PANEL

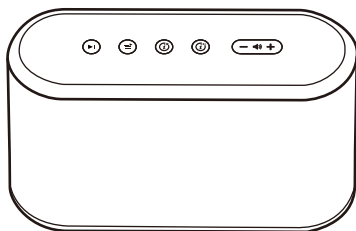 

Simply select the light effects and light shows with the control panel of the Music Conductor Speaker.

## Play Next

 
Press this button to skip to the next song. Once pressed, the button light will be on for 2 seconds.

## Interval Mode

Press this button to play intermedia [silent light effect cycle] in between songs/light shows. The button light will be on when this mode is active. Each intermedia is designed with different lighting effects to correspond to each song/light show.

## Volume Down

Press once to decrease the volume by one level. A total of 10 levels [0 to 9] can be adjusted.

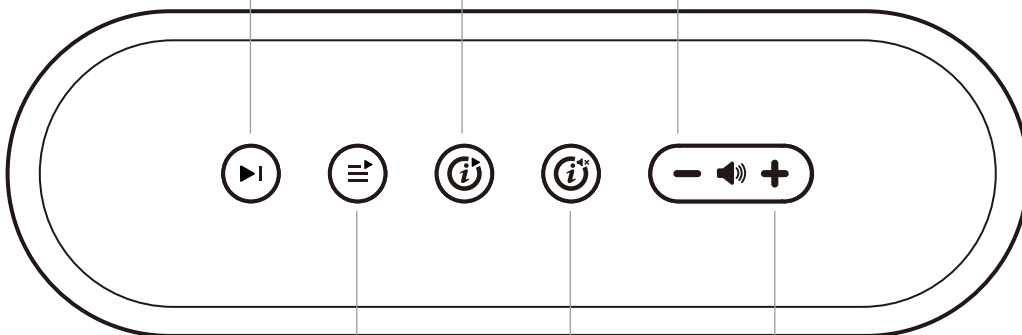

## Playlist Mode

Press this button to play all 7 songs/light shows in sequence repeatedly. The button light will be on when this mode is active.

## Intermedia Mode

Press this button to play intermedia [silent light effect cycle] only. The button light will be on when this mode is active.

## Volume Up

Press once to increase the volume by one level. A total of 10 levels [0 to 9] can be adjusted.

Playing Mode Combinations with Buttons   and 

| No. | Playlist Mode | Interval Mode | Intermedia Mode | Sequence                                                                                                                      |
|-----|---------------|---------------|-----------------|-------------------------------------------------------------------------------------------------------------------------------|
| 1   | OFF           | OFF           | OFF             | Repeatedly play a single song/light show being selected.                                                                      |
| 2   | OFF           | ON            | OFF             | Repeatedly play the selected song/light show, with its corresponding intermedia played for 10 minutes in between.             |
| 3   | OFF           | OFF           | ON              | Repeatedly play a single intermedia being selected.                                                                           |
| 4   | ON            | OFF           | OFF             | Repeatedly play 7 songs/light shows in sequence.                                                                              |
| 5   | ON            | ON            | OFF             | Repeatedly play 7 songs/light shows in sequence, with intermedia corresponding to each song played for 10 minutes in between. |
| 6   | ON            | OFF           | ON              | Repeatedly play 7 intermedia in sequence, with each intermedia last for 2 minutes.                                            |

Songs/Light Shows List:

1.

Carol of the Sugar Plums
2.

Deck the Halls
3.

Disco Nutcracker
4.

Joy to The World/O Come All Ye Faithful
5.

 
We Wish You a Merry Jingle Bells
6.

Russian Dance
7.

Toys on the Housetop

AUX OUTLET

Songs can be played via an external speaker. Open the AUX outlet cover on the rear and connect the conductor speaker to an external speaker with a 3.5 mm audio cable. Once connected to an external speaker, there will be no sound output from the conductor speaker.

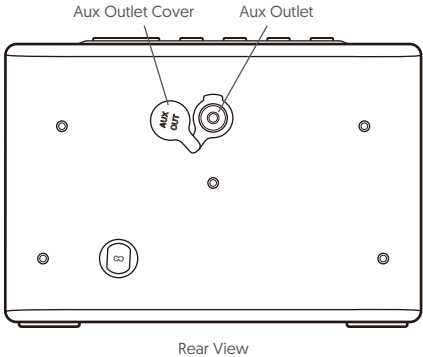



Polygroup® Trading Limited  
Unit 606, 6th Floor, Fairmont House,  
No.8 Cotton Tree Drive,  
Central, Hong Kong

### FCC notices:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

POLYGROUP SERVICES N.A. INC.  
303 SW 16th Street, Suite 5, Bentonville, AR, 72712, USA  
www.polygroupstore.com

### Notices de la FCC :

AVERTISSEMENT : À noter que des changements ou des modifications non expressément approuvés apportés à ce produit par la partie responsable de la conformité peuvent entraîner l'annulation du droit d'usage de l'équipement par l'utilisateur.

REMARQUE : Cet appareil est conforme à la section 15 des règlements de la FCC. Fonctionnement sujet aux deux conditions suivantes :

- (1) Ce dispositif ne doit pas provoquer du brouillage nuisible, et
- (2) Ce dispositif doit tolérer tout brouillage reçu, notamment celui qui pourrait perturber son bon fonctionnement.

Cet équipement a été testé et jugé conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles du FCC. Ces limites visent à assurer une protection raisonnable contre les interférences nocives d'une installation résidentielle. Cet équipement génère, utilise et peut irradier de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément au mode d'emploi, peut causer de l'interférence nocive pour les communications radios. Il n'y a cependant aucune garantie relative à l'absence d'interférences dans une installation donnée. Si cet équipement cause des interférences nocives pour la réception radio ou télé, ce qui est déterminé en allumant et en éteignant l'appareil, l'utilisateur devrait essayer de corriger le problème en appliquant une ou plusieurs des mesures suivantes :

Réorienter ou relocaliser l'antenne de réception.  
Éloigner davantage l'équipement et le récepteur.  
Brancher l'équipement dans une prise d'un circuit différent de celui auquel le récepteur est branché.  
Consulter le détaillant ou un technicien en radio/télévision expérimenté pour obtenir de l'aide.

POLYGROUP SERVICES N.A. INC.  
303 SW 16th Street, Suite 5, Bentonville, AR, 72712, USA  
www.polygroupstore.com

### Avisos de la FCC:

ADVERTENCIA: Cualquier cambio o modificación a este producto que no haya sido aprobado por la parte responsable del cumplimiento podría invalidar la autoridad del usuario para manejar el equipo.

AVISO: Este equipo cumple con los requisitos de la Sección 15 de las Normas de la FCC. Su funcionamiento está sujeto a dos condiciones:

- (1) este dispositivo no puede provocar interferencias perjudiciales y
- (2) este dispositivo debe aceptar las interferencias que se reciban, incluidas aquellas que puedan provocar un funcionamiento no deseado.

Se ha probado este equipo y se comprobó que cumple con los límites para un dispositivo digital de Clase B, de acuerdo con la Sección 15 de las Normas de la FCC. Estos límites han sido diseñados para proporcionar una protección razonable ante interferencias perjudiciales en una instalación doméstica. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede provocar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no hay ninguna garantía de que no se produzcan interferencias en una instalación determinada. Si este equipo produce interferencias perjudiciales en la recepción de radio o televisión, lo que se puede determinar apagando y encendiendo el equipo, se aconseja al usuario que intente corregir las interferencias tomando una o varias de las siguientes medidas:

Cambiar la orientación o la ubicación de la antena receptora.  
Aumentar la distancia entre el equipo y el receptor.  
Conectar el equipo a una toma de alimentación de un circuito distinto de aquel al que está conectado el receptor.  
Consultar con el distribuidor o con un técnico de radio y televisión experimentado para obtener asistencia.

POLYGROUP SERVICES N.A. INC.  
303 SW 16th Street, Suite 5, Bentonville, AR, 72712, USA  
www.polygroupstore.com

# ISED Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference;
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

# Déclaration ISED

Ce dispositif contient de(s) émetteur(s)/récepteur(s) sans licence conforme(s) à la norme d'exemption de licence pour les RSS de Innovation, Sciences et Développement économique Canada.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

# Declaración ISED

Este dispositivo contiene transmisores y/o receptores exentos de licencia que cumplen con las Normas estándar de radiocomunicación (RSS por sus siglas en inglés) sobre exención de licencias del Departamento de Innovación, Ciencia y Desarrollo Económico de Canadá.

Su uso está sujeto a las dos condiciones siguientes:

- (1) Este aparato no debe causar interferencias;
- (2) Debe aceptar cualquier interferencia recibida, incluyendo aquellas que puedan causar un funcionamiento indeseado en el aparato.