




180°Panoramic Camera


Quick Operation Guide

Packing List

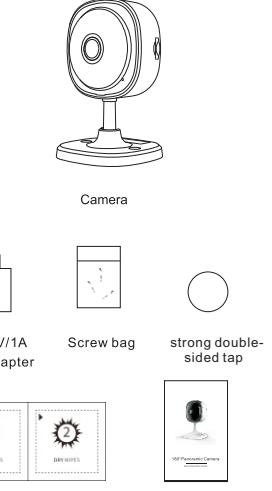

Camera, DC 5V/1A A/C Adapter, Screw bag, strong double-sided tape, Screen Cleaning Wipes, Quick Operation Guide

Camera Specifications

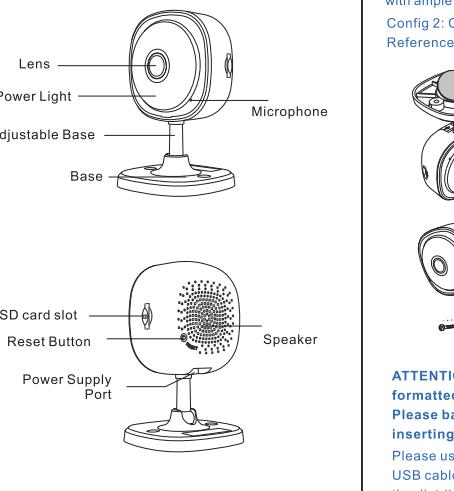

Lens, Power Light, Adjustable Base, Base, SD card slot, Reset Button, Power Supply Port, Speaker

Device Installation

Config 1: Camera can be set on any hard flat surface with ample space.
Config 2: Camera can be mounted to the wall. Reference steps below for further instructions:

- 1 Paste our strong double-sided tape on the base of the camera (As shown by the picture), then mount our camera on a smooth surface.
- 2 Or screw our camera onto the wall

ATTENTION: The SD card will be automatically formatted when it is inserted into the SD card slot. Please back up any data from the SD card before inserting it into the camera to ensure no data is lost. Please use only the included power adapter and micro USB cable as the camera's power source. Please contact the distributor/retailer where the camera was originally purchased to buy additional A/C adapter accessories if needed.

Download APP

For Android users, download the Danale APP from the Google Play store by searching "Danale".



For iPhone users, download the Danale APP from the App Store by searching "Danale".



Sign-up and Create APP Account

- 1 Open the Danale APP and click the "Sign-up" button. Enter the mobile number or email you would like to use, click "Next", and wait to receive the verification code that was sent to your mobile phone or email.
- 2 Enter the verification code you received into the designated area, click "Next", and set the account password (click the small eye to see the password entered). Click "OK" to complete account registration.

Add Camera


After camera has A/C adapter connected and plugged in, please wait for the camera to state "Welcome! Your camera has started; please take a moment to setup your Wi-Fi connection through the App". And the power light flashes blue now. Open Danale APP and use the registered account to login into the APP, then click the "+" to add the camera.

180°Panoramic Camera

After submitting the WiFi credentials, the application will open the "search Devices" page. This page will search for and find your IP camera. Once found, select the camera and wait for the camera's audio prompt "Wi-Fi setup success", your camera is being connected to the internet.. Please wait "Your camera is now online. Please add your camera in the App" Once the search is complete and your camera is found, click the "add" button to add the camera.(Note: If the "add" button is missing for the camera or shows that the camera has been added already but the account is not yours, please contact customer service for assistance).

Due to different network speeds, 60-100 seconds may be needed to find your camera ID.


APP Function List

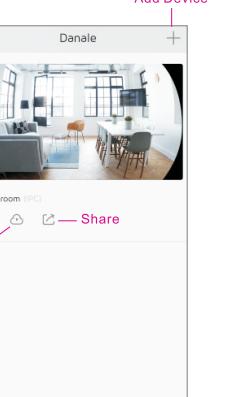

Add Device, Alarm, Messages, Playback, Share

Add Device: add the needed device
Alarm Messages: Review the motion detection alarm message
Playback: playback the cloud video record from the camera
Share: share the camera with another user


Icon Description

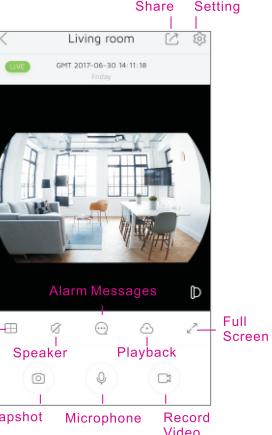

Share, Setting, Add Device, Alarm, Messages, Playback, Snapshot, Microphone, Record Video, Image Switch, Speaker, Full Screen

Share: share the camera with another user
Speaker: Turn-on/turn-off the listening function
Alarm Messages: Review the motion detection alarm message
Playback: playback the cloud video record from the camera
Microphone: turn-on/turn-off the microphone function on the camera for two-way communication

Two-way Communication

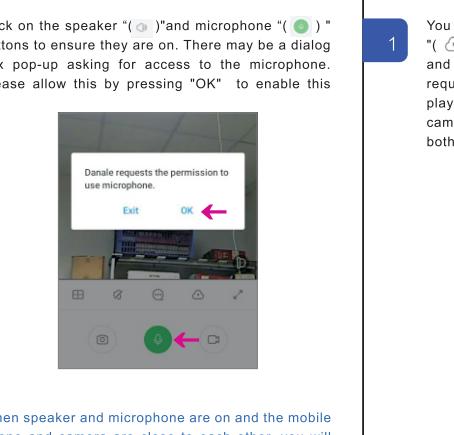

Speaker, Microphone, Record Video, Snapshot, Full Screen

When speaker and microphone are on and the mobile phone and camera are close to each other, you will experience audio feedback. To avoid this, please keep an adequate amount of distance between the mobile phone and camera when using the speaker and microphone for two-way communication.

Note: After pressing the mic button, it will turn green to indicate it is on and it will stay on until pressed again.

Playback

- 1 You can access video playback by clicking on the "()" and microphone "()" buttons to ensure they are on. There may be a dialog box pop-up asking for access to the microphone. Please allow this by pressing "OK" to enable this
- 2 Click on the tab labeled "SD card video" to view the SD card video playback page. The device automatically plays the earliest video files of the day. Drag the time-line to the left or right to select the time to play. Click on the date to the right of the time-line to select a date to view video playback.

Device Share

- 1 Click the share button "()" to share the device. Choose "Manual Input", input the other user's account name (mobile phone or email), and click "Message" in the menu to see the permission request. Click "Agree" to accept the video sharing request.
- 2 Other users accept sharing requests by clicking the "()" in the APP main interface and click "Message" in the menu to see the permission request. Click "Agree" to accept the video sharing request.

Video quality and image rollover adjustment

In the device main screen, click "()" to view full screen mode of camera's live feed. Click "()" to open the "Video Quality" and "Change Screen View" adjustment window. To adjust the video quality, drag the slider to the right to increase clarity and to the left to decrease clarity. To change screen view, select one of the four listed options for the desired affect.

Q & A

1. Is it normal for the camera to get warm?
The camera heats up when it is on, especially when the infrared lights are on at night. This is normal - the working temperature range is -50°F - 113°F.

2. What should be avoided when camera is in use?
Please avoid placing the camera lens towards or close to glass or other reflective objects, as the reflected light will cause the image to appear overexposed nearby and dark in the distance. Please make sure there are no objects/barriers obstructing the views from the camera as this will impact the viewing angle and image quality.

3. How can I fix the camera if it becomes disconnected or goes off-line?
Please check to ensure that the A/C adapter of the camera is plugged in and functioning normally. If the A/C adapter is working, check to make sure the Internet is properly connected. If the Internet is not working, contact your Internet service provider. If the Internet is working, check to make sure your WiFi credentials are properly entered into the application. If the WiFi credentials have changed, please reset camera using the reset tool, and go through camera setup process again.

4. To avoid unnecessary damage, do not send products with SD card/ battery/ hard disk/ cable, it will beyond our obligation if lost.

Warranty

Thank you for using our products!
Please read below details before installation:
1. The warranty is 1 year once purchased (manufacture date is based on the ID in products). During warranty period, if there is any problem caused by product quality, we promise to fix it for free.
2. Below situation can not be listed for warranty:
Breakdown caused by installed in wrong environment
Improper installation/ operation/ unauthorized maintenance/ modifying/ accident/ force majeure, and any failure caused by outside environment.
Beyond warranty period.
Products code can not be configured out or not matched.
Failure not related to products quality/design/ technical/ manufacture.
3. Company will take some charge if products can not meet warranty condition.
4. To avoid unnecessary damage, do not send products with SD card/ battery/ hard disk/ cable, it will beyond our obligation if lost.

QC PASS

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

.