

**blackweb**<sup>TM</sup>

**INSTRUCTION MANUAL**

**15" PA speaker**



## INDEX

OPERATION.....	1
INSTRUCTIONS.....	2
CONTROLS LOCATION.....	3
REMOTE CONTROL.....	5
SPECIFICATIONS.....	5
IMPORTANT SAFETY INSTRUCTIONS.....	6
PACKAGE.....	7



- CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK.
- THIS PRODUCT MUST BE EARTHED.
- NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

## OPERATION


1. Prior to switching on, turn volume down to minimum.
2. Connect to audio source to the appropriate input socket.
3. Connect to the mains supply.
4. Switch on the audio source, followed by the active speaker.
5. Set the volume with the applicable control.
6. Adjust the bass + treble.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## INSTRUCTIONS

- Do not overload the speaker cabinet to avoid damage to the speakers.
- Do not place an open fire (candle etc) on top or next to the box – FIRE HAZARD.
- Connect to an earthed mains outlet of 115V/230V~60Hz/50Hz.
- For indoor use only. If the box is used outdoors, you need to make sure that no humidity can enter the box.
- When not in use, unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- The box can be hung. Use only strong and approved mounting material. During the mounting, make sure that nobody is standing below the mounting area.
- Do not place liquids on the box and protect it against humidity. Humidity can shorten the life time considerably.
- Only use suitable means of transportation if you want to move the box –BEWARE OF YOUR BACK!!
- Always unplug the unit during a thunderstorm or when it is not in use.
- If the unit has not been used for a long period of time, condensation can occur inside the housing. Please let the unit reach room temperature prior to use.
- Never try to repair the unit yourself. It does not contain any user serviceable parts.
- Run the mains lead in such a way that nobody can fall over it and nothing can be put in it.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of the reach of children.

## CONTROLS LOCATION

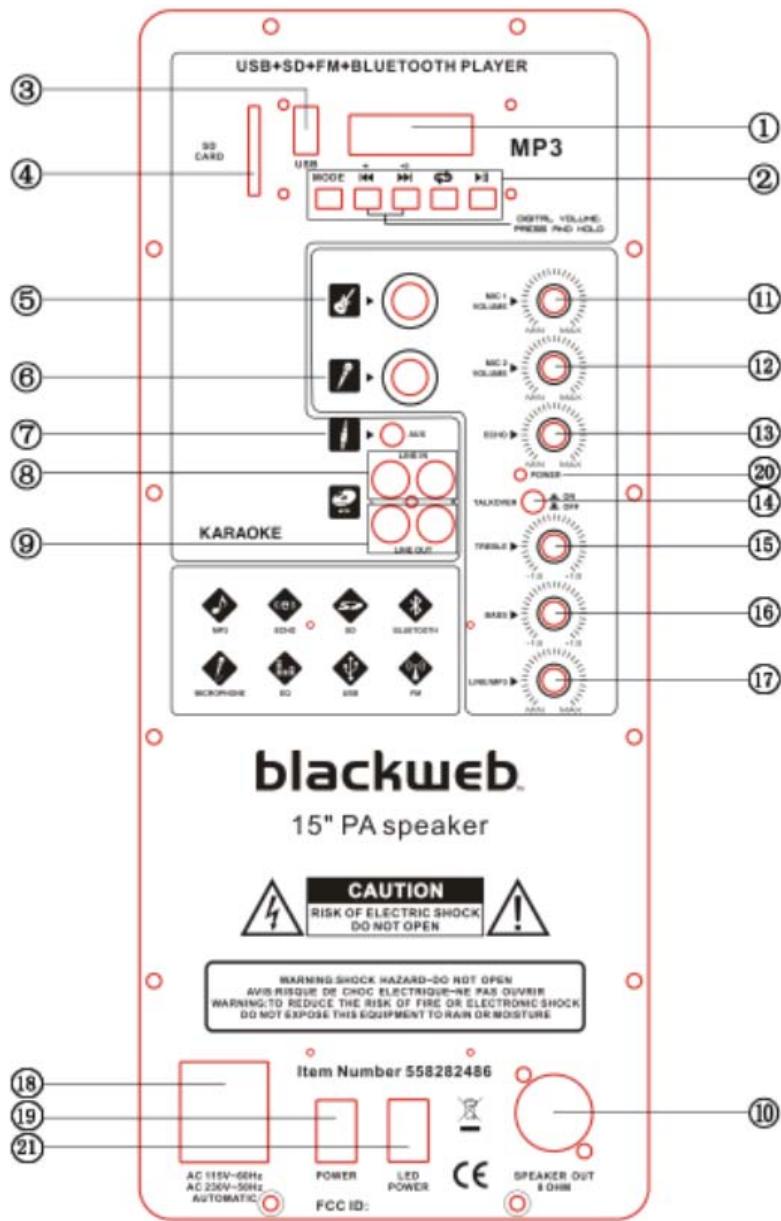

## Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Warning: Changes or modifications made to this device not expressly approved by **JUMBOAUDIO ELECTRONICS CO., LTD** may void the FCC authorization to operate this device.

wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.


- 10) Protect the power cord from being walked on or pinched particularly at plug, convenience receptacle, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storm or when unused for a long period of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged; liquid has been spilled or object has fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Package includes:

- 1 x active speaker box
- 1 x remote control
- 1 x power cord
- 1 x wired microphone
- 1 x instruction manual

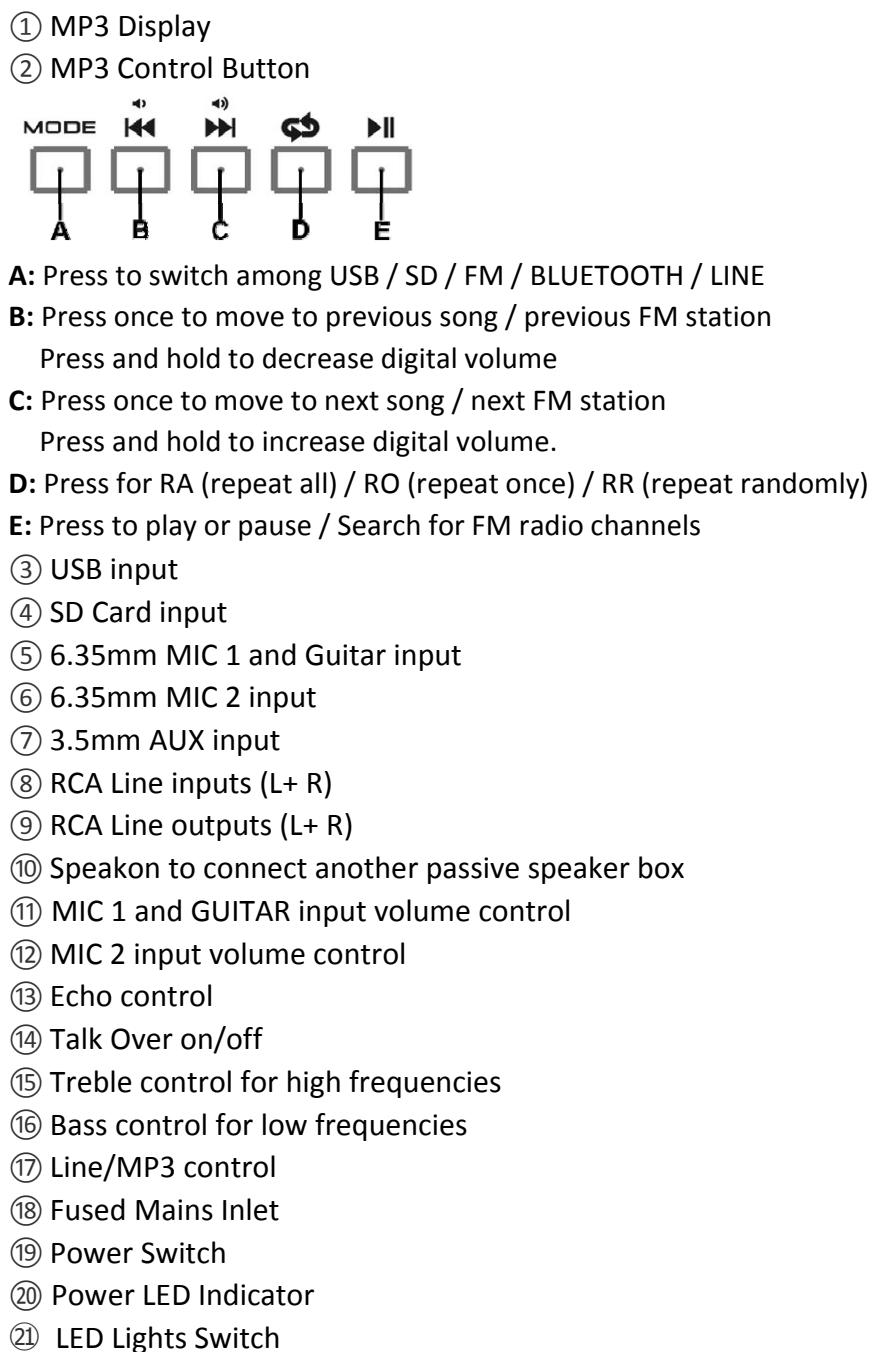

## REMOTE CONTROL

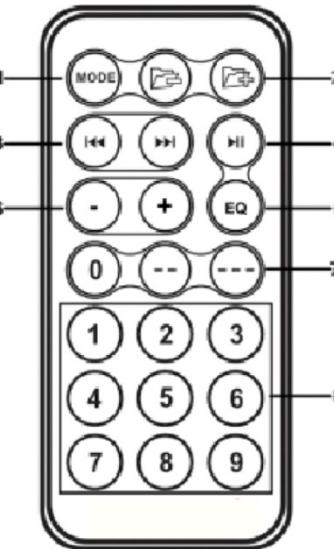

1. Select MP3 player audio source:  
USB device / SD memory card / FM / Bluetooth / Line
2. Back / forward track file
3. Back / forward track song
4. Stop / play
5. Select EQ options
6. Decrease / increase volume
7. Directly selector
8. Buttons selection

Battery: 3V Button Cell (included)

## IMPORTANT SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE SCANS TO BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL	The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## SPECIFICATIONS

Mini 15" Speaker Box	
System	active 2-way full range
Woofer	Mini 15"
Tweeter	1"
RMS	120 watts
PMPO	12,000 watts
Impedance	8 ohm
Frequency Range	55-18K Hz
Sensitivity	94±2 dB
Connector	6.35mm / 3.5mm / RCA / Speakon

## Important Safety Instructions:

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiator, heat register, stove, or other apparatus (including amplifier) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one